
MODEL USER GUIDE

VIRTUAL DESIGN &

INEIGHT 

Information in this document is subject to change without notice. Companies, names and data used in examples are fictitious.

Copyright ©2024 by InEight. All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express permission of InEight.

Microsoft Windows, Internet Explorer and Microsoft Excel are registered trademarks of Microsoft Corporation.

Although InEight Model has undergone extensive testing, InEight makes no warranty or representation, either express or implied, with respect to this software or documentation, its quality, performance, merchantability, or fitness for purpose. As a result, this software and documentation are licensed “as is”, and you, the licensee are assuming the entire risk as to its quality and performance. In no event will InEight be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use the software or documentation.

Release 23.12
Last Updated: 07 February 2024

CONTENTS

0.1 InEight Model Overview	21
0.1.1 Easily Share Models and Information	21
LESSON 1 – INSTALLATION	23
1.1 Installation	24
1.1.1 Steps	24
Install the InEight Model desktop application	24
1.2 Plugins	24
1.3 Launch Model	25
1.3.1 Model not integrated with InEight Platform	25
1.3.2 Model integrated with InEight Platform	25
1.3.3 Considerations	25
1.4 Model cache	26
1.4.1 Move cache to a new location	27
1.4.2 Considerations	27
1.4.3 Steps	27
Moving your existing InEightModel_Cache folder	27
Lesson 1 Review	28
Lesson 1 Summary	28
LESSON 2 – PROJECTS	29
2.1 Create a project	30
Create a project integrated with InEight Platform	30
Create a project not integrated with InEight Platform	30
2.2 Load a Project	31
2.2 Step by Step 1 – Load a Project	32
2.2.1 Manage sync	33
2.2.2 Remove projects from cache	34

2.3 Create a New Project from Template	35
2.3.1 Considerations	36
2.3.2 Steps	37
Create a New Project from Template	37
Lesson 2 Review	38
LESSON 3 – MODEL STREAMS	41
3.1 Model streams overview	41
3.2 Config Settings	42
3.2.0.1 Overview - Configuring Model Streams Parameters tab	47
3.2 Step by Step 1 – Config Settings - Parameters	48
3.2 Step by Step 2 – Config Settings - Scale / Rotate / XYZ	51
3.2 Step by Step 3 – Config Settings - Rename Model Stream	53
3.2 Step by Step 4 – Config Settings - Link to a different Model Stream ...	55
3.3 Export Settings	60
3.3.0.1 Export Settings options:	60
3.3.1 Steps	61
Export Settings	61
3.4 Model Revisions	63
3.4.0.1 Model with Same Name	63
3.4.0.2 Model with a Revised Name	64
3.4 Step by Step 1 – Resolve Model Conflict	65
3.5 Analyze Model Changes	67
3.5 Step by Step 1 – Analyze Model Changes	69
LESSON 4 – PROJECT STRUCTURE	73
4.1 Project Structure Overview	74
4.1.1 Project Structure Panel	74
4.2 Organize Model Streams	76
4.2 Step by Step 1 – Create Groups	76
4.2 Step by Step 2 – Delete Groups	80
4.2 Step by Step 3 – Creating a Model Stream Placeholder	82
4.3 Model Stream Management	84
4.3 Step by Step 1 – Change the Active Model Stream Revision	84
4.3 Step by Step 2 – Update Model Stream Revisions	87
4.3 Step by Step 3 – Disable Model Streams	87
4.3 Step by Step 4 – Remove Model Streams	88
4.3 Step by Step 5 – Adding Model Streams from Other Projects	90
4.3 Step by Step 6 – Publish a Model Stream into a Placeholder	92

4.4 Model Stream Permissions	99
4.4 Step by Step 1 – Apply Permissions to Groups	100
Lesson 4 Review	103
Lesson 4 Summary	103
LESSON 5 – USER INTERFACE	105
5.1 Viewer Interface	106
5.1.1 Docking Panels:	107
5.2 Show Model Spots	111
5.2 Step by Step 1 – Show Model Spots	112
5.3 Navigation	113
5.3.0.1 First Person Navigation	116
5.4 Selection	117
5.4.0.1 Right Click Menu	123
5.5 Selection Mode	127
5.5.1 Selection Mode Indicator	128
5.5.2 Selection Mode - Last Object	128
5.5.3 Selection Mode - First Object	128
5.5.4 Selection Mode - IWP	129
5.5.5 Selection Mode - CWP	130
5.5.6 Selection Mode - Element	131
5.5.7 Selection Mode - Tag	132
5.6 Hot Keys	133
5.7 User Settings	143
5.7.1 Settings...	144
5.7.2 Mouse / Keyboard Mapping	144
5.7.3 Choose Default Zoom Behavior	145
5.7.4 Coordinate Display Units	146
5.7.5 Background Color	147
5.7.5.1 Choose Selection Display Style	148
5.7.6 Invert Scroll Wheel in First Person	148
5.8 Create New Markup	149
5.9 Grids	151
5.9 Step by Step 1 – Toggle on or off grids	152
Lesson 5 Review	153
Lesson 5 Summary	153
LESSON 6 – PROJECT UPDATES AND HISTORY	155
6.1 Command History	156
6.2 Project Updates	157

6.3 Project History	159
Lesson 6 Review	163
Lesson 6 Summary	163
LESSON 7 – TAGS AND OBJECTS	165
7.1 Tags and Objects Overview	166
7.1.1 Tags and Objects Panel	166
7.1.1.1 Objects Tab	166
7.1 Step by Step 1 – Toggle Model Streams Visibility	169
7.1.1.2 Tags Tab	169
7.2 Create and Edit Tags	171
7.2.1 Manually Create and Edit Custom Tags	171
7.2 Step by Step 1 – Creating Tags	172
7.2.2 Delete a Tag	176
7.2 Step by Step 2 – Deleting Tags	177
7.3 Create and Edit Dynamic Tags	177
7.3 Step by Step 1 – Creating Dynamic Tags	178
7.3 Step by Step 2 – Editing a Dynamic Tag	183
7.4 Assign and Remove Tags	183
7.4.1 Assigning Tags	183
7.4 Step by Step 1 – Assigning Tags	183
7.4.2 Removing Tags	185
7.4 Step by Step 2 – Removing Tags	186
7.5 Copy Metadata from Model to Excel	186
7.5 Step by Step 1 – Copy Metadata from Model to Excel	187
7.6 Tag Data Exporter	188
7.6 Step by Step 1 – Export Tag Data to CSV file	188
7.7 Import Tags from Excel	195
7.7 Step by Step 1 – Import Tags from Excel	196
7.8 Select Model Objects Via Excel	201
7.8 Step by Step 1 – Select Model Objects via Excel	202
7.9 Create Tables of External Data	203
7.9.1 Identify the model Unique ID	203
7.9 Step by Step 1 – Identify the model Unique ID	204
7.9.2 Add information to Generic Table	208
7.9 Step by Step 2 – Add information to Generic Table	208
7.9.3 Import information to Generic Table	210
7.9 Step by Step 3 – Import information to Generic Table	210
7.9.4 Refresh existing table data	211

7.9 Step by Step 4 – Refresh existing table data	212
7.9.5 Close Database Tables	212
7.9 Step by Step 5 – Close database tables	213
Lesson 7 Review	214
Lesson 7 Summary	214
LESSON 8 – DATA TRANSFORMATION OPERATIONS	215
8.1 Data Transformation Operations (DTO) Overview	215
8.1.1 DTO tab	216
8.1.2 Selector tab	217
8.1.3 Actions tab	218
8.2 Create a DTO	219
8.2.1 DTO Tab	219
8.2.1.1 Add a DTO Group Folder	219
8.2.1.2 Add a DTO	220
8.2.1.3 Rename a DTO	221
8.2.2 Selector Tab	221
8.2.3 Actions Tab	225
1.1 DTO Examples	227
1.2 Clean up and normalize model data	227
1.2.1 Group similar models into a tag	227
1.2.2 Convert dimensional text data into a number	230
1.2.3 Convert inches to feet	235
1.2.3.1 Convert text format to number format	235
1.2.3.2 Convert piping length from inches to feet	237
1.3 Identify and add additional model data	239
1.3.1 Identify model data	239
1.3.1.1 Identify and use AG/LB Piping	239
1.3.1.2 Identify and use AG/SB	241
1.3.2 Add weight to steel members using length	243
1.3.2.3 Convert weight from pounds to tons	245
1.4 Concatenate model data	246
1.4.1 Make unique tag values for multiple objects	246
1.5 Parse model data	249
1.5.1 Parse system information	249
1.6 Quantify model data	253
1.6.1 Extract quantities from model	254
1.6.1.1 Quantities by Count	254
1.6.1.2 Quantities by area	256
1.6.1.3 Quantities by volume	258

1.6.1.4 Quantities by tag	260
1.6.1.5 Access quantities via Excel	262
1.7 Validate Model Data	263
1.7.1 Validate model data is compliant	263
1.7.1.1 Validate specific model data exists	263
1.7.1.2 Validate model data for specific format	265
LESSON 2 – STYLES	271
2.1 Styling Overview	272
2.1.1 Launch Styling Menu	272
2.2 Create and Manage Style Sets	273
2.2 Step by Step 1 – Create a Style Set	275
2.2 Step by Step 2 – Edit a Style Set	276
2.2 Step by Step 3 – Delete a Style Set	279
2.3 Create and Edit Styles	279
2.3 Step by Step 1 – Create a New Style	280
2.3 Step by Step 2 – Edit a Style	287
2.3 Step by Step 3 – Set a Style as a Default	288
2.3 Step by Step 4 – Delete a Style	289
2.4 Apply Styles to Tags	289
2.4 Step by Step 1 – Apply a Style to a Tag	290
2.5 Assign Styles Using Excel	292
2.5 Step by Step 1 – Color Excel Cells	293
2.6 Style Legend	297
Lesson 2 Review	300
Lesson 2 Summary	300
LESSON 3 – MASTER PRESETS	301
3.1 Master Presets Overview	302
3.1.1 Master Preset Editor	302
3.1.2 Reset Workspace	303
3.1.3 Right Click Menu Features	304
3.2 Create and Manage Master Presets	306
3.2 Step by Step 1 – Creating a Master Preset	306
3.2.1 Master preset object visibility maximum dialog box	307
3.2 Step by Step 2 – Editing a Master Preset	309
3.2 Step by Step 3 – Editing a Master Preset - Model View	310
3.2 Step by Step 4 – Deleting a Master Preset	312
3.3 Organize Master Presets	312

3.3 Step by Step 1 – Grouping Master Presets	313
3.3 Step by Step 2 – Set a Master Preset as the Project Default	315
3.4 Share and Export Master Presets	316
3.4 Step by Step 1 – Sharing a Master Preset	317
3.4 Step by Step 2 – Exporting Master Presets	318
Lesson 3 Review	319
Lesson 3 Summary	319
LESSON 4 – COORDINATION - CLASH MANAGER	321
4.1 Clash Manager Overview	322
4.2 Create and Manage Coordination Rules	323
4.2.1 Considerations	323
4.2.2 Steps	323
Create a coordination rule	324
Edit a coordination rule	326
Export rules	328
Import rules	328
4.3 Tolerance Settings	329
4.3.1 Steps	330
Create rules for Expand, Sphere, and Cylinder tolerance settings	330
4.4 Create and Interrogate Clash Results	333
4.4.1 Considerations	333
4.4.2 Steps	334
Create clash results	334
4.5 Create and Manage Coordination Rule Groups	337
4.5.1 Considerations	337
4.5.2 Steps	337
Create a coordination rule group	338
Export rules groups	339
4.6 Show Duplicate Objects	340
4.6.0.1 Export duplicate objects	341
Lesson 4 Review	342
Lesson 4 Summary	342
LESSON 5 – COORDINATION - ISSUE MANAGER	343
5.1 Issue Manager Overview	344
5.2 Create and Manage Coordination Issues	345
5.2.1 Considerations	345
5.2.2 Steps	345
Add folders and sub-folders to organize issues	345

Create a non-geometric clash issue	345
Create a coordination issue from clash results	346
Add markup	348
Edit an issue	348
Import issues	349
Export issues	350
Update issues	352
Delete a coordination issue	352
5.3 Coordination Issue Reporting	352
Access Issues via Excel Plugin for Reporting	353
Lesson 5 Review	356
Lesson 5 Summary	356
LESSON 6 – ARCHIVE	357
6.1 Archive Overview	358
6.1.1 Archive Library	360
6.1.1.1 Library Tab	360
6.2 Manage Documents	361
6.2 Step by Step 1 – Import Documents	361
6.2 Step by Step 2 – Download Documents	363
6.2 Step by Step 3 – Organize Documents	365
6.2 Step by Step 4 – Delete Documents or Folders	365
6.2 Step by Step 5 – Accessing Document Information	367
6.2 Step by Step 6 – Apply Permissions to Folders	368
6.2 Step by Step 7 – Search Documents	371
6.3 Create and Manage Labels	371
6.3 Step by Step 1 – Create and Apply a Label to a Document	371
6.3 Step by Step 2 – Apply an Existing Label to a Document	375
6.3 Step by Step 3 – Apply or Remove Labels within the Document Info area	377
6.3 Step by Step 4 – Filter Documents by Labels	379
6.4 Link and Manage Docs to Tags	380
6.4 Step by Step 1 – Link Documents to Tags	381
6.4 Step by Step 2 – Associate a Specific Page within a PDF document to a Tag	382
6.4 Step by Step 3 – View and/or Remove an Object Tag Link via the Document Information Window	384
6.4 Step by Step 4 – View and/or Remove a Document Link via the Selection Tab	385

Lesson 6 Review	387
Lesson 6 Summary	387
LESSON 7 – SELECTION INFO	389
7.1 Selection Info Overview	390
7.1.1 Selection Information Panel	390
7.1.2 General Tab	391
7.1.3 Tags Tab	391
7.1.4 Style Tab	393
7.1.5 Documents Tab	394
7.1.6 Object Properties Tab	396
7.1.7 Linked Data	397
7.1.7.1 Selection Filter	398
Lesson 7 Review	400
Lesson 7 Summary	400
LESSON 8 – SECTIONING	401
8.1 Sectioning Overview	402
8.1.1 Sectioning Panel	402
8.1.2 Sectioning Icon	403
8.2 Create and Apply Sectioning	404
8.2 Step by Step 1 – Apply Sectioning Using the Set Box	404
8.2 Step by Step 2 – Apply Sectioning by Dragging and Dropping a Tag	406
8.2 Step by Step 3 – Apply Sectioning by the Offset	407
8.2 Step by Step 4 – Move Sectioning Panes with Grips	407
8.2 Step by Step 5 – Reset the Sectioning Box to Model Boundary	408
8.2 Step by Step 6 – Use Sectioning with Master Presets	409
Lesson 8 Review	411
Lesson 8 Summary	411
LESSON 9 – MEASUREMENTS	413
9.1 Measurements Overview	414
9.1.1 Measurement window	414
9.2 Apply and Manage Measurements	416
9.2 Step by Step 1 – Enter Measurement Mode	417
9.2 Step by Step 2 – Take a Measurement	417
9.2 Step by Step 3 – Delete a Measurement	421
9.2 Step by Step 4 – Clear Measurements	421
9.2 Step by Step 5 – Organize Measurements	422
Lesson 9 Review	426

Lesson 9 Summary	426
LESSON 10 – MODEL EXPORTS	427
10.1 IFC Export	427
10.1 Step by Step 1 – IFC Export	428
10.2 OBJ Export	429
10.2 Step by Step 1 – OBJ Export	430
LESSON 11 – MODEL-BASED TAKEOFF	433
11.1 Model-based Takeoff Overview	433
11.1.1 Model and Estimate integration	433
11.1.2 Requirements for Model and Estimate integration	434
11.2 Model to Estimate integration	435
11.2 Step by Step 1 – Estimate to Model integration	435
11.2.1 Model integration configuration	436
11.2 Step by Step 2 – Run Model DTOs	437
11.2.2 Sync Model Quantities in Estimate	441
11.2 Step by Step 3 – Sync Model quantities	441
11.2.3 Select and frame Model objects	443
11.2 Step by Step 4 – Select and frame Model objects	443
11.2.4 User Defined Fields	444
11.2 Step by Step 5 – Rule setup UDF fields 12 and 13	445
11.2 Step by Step 6 – Rule setup UDF fields 12 through 15	446
LESSON 12 – ELEMENTS	449
12.1 Elements Overview	450
12.1.1 Elements Panel	450
12.2 Create and Manage Elements	452
12.2 Step by Step 1 – Create an element	453
12.2 Step by Step 2 – Create elements from a selection of objects	458
12.2 Step by Step 3 – Create elements from the tags	461
12.2 Step by Step 4 – Edit an element	461
12.2 Step by Step 5 – Unlink objects from an element	462
12.2 Step by Step 6 – Delete an element	463
Lesson 12 Review	464
Lesson 12 Summary	464
LESSON 13 – ADVANCED WORK PACKAGING & WORKFACE	
PLANNING	465
13.1 Work Packaging Overview	465

13.1.1 AWP Panel	466
13.2 Creating & Managing CWA, CWP & IWP	468
13.2 Step by Step 1 – Create a Construction Work Area (CWA)	469
13.2 Step by Step 2 – Create a Construction Work Package (CWP)	471
13.2 Step by Step 3 – Create a Installatoin Work Package (IWP)	474
13.2 Step by Step 4 – Deleting AWP Structure	476
13.2 Step by Step 5 – Filter AWP Structure	477
14.1 User management	478
14.2 User management	478
LESSON 15 – ADMIN TOOLS	479
15.1 Introduction	479
15.1.1 Browser compatibility	479
15.2 Login	480
15.2.1 Log-in Options	481
15.2.1.1 Username and Password Credentials	481
Reset password	481
15.2.1.2 SSO by Microsoft	482
15.2.1.3 SSO by Google	483
15.2.2 Switch account	483
15.3 Slide-out Panel	484
15.4 Projects	485
15.5 User Access Overview	487
15.6 User Account Management	488
15.6.1 Users & groups tab	489
15.6.1.1 Users	489
15.6.1.2 Create single sign-on or password user	490
Add user	491
15.6 Step by Step 1 – Add user	491
Edit user	492
15.6 Step by Step 2 – Edit user	492
Activate user	492
Deactivate user	492
Reset a user's password (SSO off)	492
Set a user's temporary password (SSO off)	492
Delete a pending user	492
Resend activation email (SSO off)	493
15.6.1.3 Groups	493
Add a group	493
Delete a group	493

Rename a group	493
15.6.2 Project permissions tab	493
15.6.3 Export	495
16.1 Model mobile	497
16.2 Overview	497
16.2.1 Considerations	513

STEP-BY-STEP PROCEDURES

Install the InEight Model desktop application	24
Moving your existing InEightModel_Cache folder	27
Create a project integrated with InEight Platform	30
Create a project not integrated with InEight Platform	30
2.2 Step by Step 1 – Load a Project	32
Create a New Project from Template	37
3.2 Step by Step 1 – Config Settings - Parameters	48
3.2 Step by Step 2 – Config Settings - Scale / Rotate / XYZ	51
3.2 Step by Step 3 – Config Settings - Rename Model Stream	53
3.2 Step by Step 4 – Config Settings - Link to a different Model Stream	55
Export Settings	61
3.4 Step by Step 1 – Resolve Model Conflict	65
3.5 Step by Step 1 – Analyze Model Changes	69
4.2 Step by Step 1 – Create Groups	76
4.2 Step by Step 2 – Delete Groups	80
4.2 Step by Step 3 – Creating a Model Stream Placeholder	82
4.3 Step by Step 1 – Change the Active Model Stream Revision	84
4.3 Step by Step 2 – Update Model Stream Revisions	87
4.3 Step by Step 3 – Disable Model Streams	87
4.3 Step by Step 4 – Remove Model Streams	88
4.3 Step by Step 5 – Adding Model Streams from Other Projects	90
4.3 Step by Step 6 – Publish a Model Stream into a Placeholder	92
4.4 Step by Step 1 – Apply Permissions to Groups	100
5.2 Step by Step 1 – Show Model Spots	112
5.9 Step by Step 1 – Toggle on or off grids	152
7.1 Step by Step 1 – Toggle Model Streams Visibility	169
7.2 Step by Step 1 – Creating Tags	172
7.2 Step by Step 2 – Deleting Tags	177

7.3 Step by Step 1 – Creating Dynamic Tags	178
7.3 Step by Step 2 – Editing a Dynamic Tag	183
7.4 Step by Step 1 – Assigning Tags	183
7.4 Step by Step 2 – Removing Tags	186
7.5 Step by Step 1 – Copy Metadata from Model to Excel	187
7.6 Step by Step 1 – Export Tag Data to CSV file	188
7.7 Step by Step 1 – Import Tags from Excel	196
7.8 Step by Step 1 – Select Model Objects via Excel	202
7.9 Step by Step 1 – Identify the model Unique ID	204
7.9 Step by Step 2 – Add information to Generic Table	208
7.9 Step by Step 3 – Import information to Generic Table	210
7.9 Step by Step 4 – Refresh existing table data	212
7.9 Step by Step 5 – Close database tables	213
2.2 Step by Step 1 – Create a Style Set	275
2.2 Step by Step 2 – Edit a Style Set	276
2.2 Step by Step 3 – Delete a Style Set	279
2.3 Step by Step 1 – Create a New Style	280
2.3 Step by Step 2 – Edit a Style	287
2.3 Step by Step 3 – Set a Style as a Default	288
2.3 Step by Step 4 – Delete a Style	289
2.4 Step by Step 1 – Apply a Style to a Tag	290
2.5 Step by Step 1 – Color Excel Cells	293
3.2 Step by Step 1 – Creating a Master Preset	306
3.2 Step by Step 2 – Editing a Master Preset	309
3.2 Step by Step 3 – Editing a Master Preset - Model View	310
3.2 Step by Step 4 – Deleting a Master Preset	312
3.3 Step by Step 1 – Grouping Master Presets	313
3.3 Step by Step 2 – Set a Master Preset as the Project Default	315
3.4 Step by Step 1 – Sharing a Master Preset	317
3.4 Step by Step 2 – Exporting Master Presets	318

- Create a coordination rule 324
- Edit a coordination rule 326
- Export rules 328
- Import rules 328
- Create rules for Expand, Sphere, and Cylinder tolerance settings 330
- Create clash results 334
- Create a coordination rule group 338
- Export rules groups 339
- Add folders and sub-folders to organize issues 345
- Create a non-geometric clash issue 345
- Create a coordination issue from clash results 346
- Add markup 348
- Edit an issue 348
- Import issues 349
- Export issues 350
- Update issues 352
- Delete a coordination issue 352
- Access Issues via Excel Plugin for Reporting 353
- 6.2 Step by Step 1 – Import Documents 361
- 6.2 Step by Step 2 – Download Documents 363
- 6.2 Step by Step 3 – Organize Documents 365
- 6.2 Step by Step 4 – Delete Documents or Folders 365
- 6.2 Step by Step 5 – Accessing Document Information 367
- 6.2 Step by Step 6 – Apply Permissions to Folders 368
- 6.2 Step by Step 7 – Search Documents 371
- 6.3 Step by Step 1 – Create and Apply a Label to a Document 371
- 6.3 Step by Step 2 – Apply an Existing Label to a Document 375
- 6.3 Step by Step 3 – Apply or Remove Labels within the Document Info area ... 377
- 6.3 Step by Step 4 – Filter Documents by Labels 379
- 6.4 Step by Step 1 – Link Documents to Tags 381

6.4 Step by Step 2 – Associate a Specific Page within a PDF document to a Tag	382
6.4 Step by Step 3 – View and/or Remove an Object Tag Link via the Document Information Window	384
6.4 Step by Step 4 – View and/or Remove a Document Link via the Selection Tab	385
8.2 Step by Step 1 – Apply Sectioning Using the Set Box	404
8.2 Step by Step 2 – Apply Sectioning by Dragging and Dropping a Tag	406
8.2 Step by Step 3 – Apply Sectioning by the Offset	407
8.2 Step by Step 4 – Move Sectioning Panes with Grips	407
8.2 Step by Step 5 – Reset the Sectioning Box to Model Boundary	408
8.2 Step by Step 6 – Use Sectioning with Master Presets	409
9.2 Step by Step 1 – Enter Measurement Mode	417
9.2 Step by Step 2 – Take a Measurement	417
9.2 Step by Step 3 – Delete a Measurement	421
9.2 Step by Step 4 – Clear Measurements	421
9.2 Step by Step 5 – Organize Measurements	422
10.1 Step by Step 1 – IFC Export	428
10.2 Step by Step 1 – OBJ Export	430
11.2 Step by Step 1 – Estimate to Model integration	435
11.2 Step by Step 2 – Run Model DTOs	437
11.2 Step by Step 3 – Sync Model quantities	441
11.2 Step by Step 4 – Select and frame Model objects	443
11.2 Step by Step 5 – Rule setup UDF fields 12 and 13	445
11.2 Step by Step 6 – Rule setup UDF fields 12 through 15	446
12.2 Step by Step 1 – Create an element	453
12.2 Step by Step 2 – Create elements from a selection of objects	458
12.2 Step by Step 3 – Create elements from the tags	461
12.2 Step by Step 4 – Edit an element	461
12.2 Step by Step 5 – Unlink objects from an element	462

12.2 Step by Step 6 – Delete an element	463
13.2 Step by Step 1 – Create a Construction Work Area (CWA)	469
13.2 Step by Step 2 – Create a Construction Work Package (CWP)	471
13.2 Step by Step 3 – Create a Installatoin Work Package (IWP)	474
13.2 Step by Step 4 – Deleting AWP Structure	476
13.2 Step by Step 5 – Filter AWP Structure	477
15.6 Step by Step 1 – Add user	491
15.6 Step by Step 2 – Edit user	492

This page intentionally left blank.



0.1 INEIGHT MODEL OVERVIEW

InEight Model is a platform for model and information aggregation that hides the complexity of managing versions and sharing information across teams.

Import, contribute, modify, and recall models and information in a variety of ways. InEight Model supports BIM to FM, coordination, field management, design renderings, visual scheduling, sensor monitoring, and more. Collect and reuse data throughout the design, construction, and operations phases without the current limitations of: managing file types, delays in uploading and downloading files, version control, reentering data, and the difficulties of managing numerous point-solution applications.

0.1.1 Easily Share Models and Information

When an internet connection is available, you are able to share models, information, documents, visual styles, and much more with other users. We store your data on our servers and sync it to your local hard drive whenever you're online. Offline, your project data is kept in a central location on your computer. When you're ready share, login and sync online. As teammates sync and share, you can choose to view and interact with the information that only pertains to you

This page intentionally left blank.



LESSON 1 – INSTALLATION

Lesson Duration: 30 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Install InEight Model
- Install plugins
- Launch InEight Model

Topics in this Lesson

1.1 INSTALLATION

InEight Model is cloud-hosted software with a Microsoft Windows-based application focused on 3D model content. Model is not a model-authoring environment; rather, it provides the capability to transform engineering and architectural models into construction and owner models.

The Model Windows application is supported by plug-ins and a locally stored cache folder (InEightModel_Cache). Before you download and run the Model application on your desktop, review the "[Client System and Mobile Device Requirements Specification](#)".

NOTE Local admin permissions are required to install InEight Model.

1.1.1 Steps

Install the InEight Model desktop application

1. Open <https://ineight.com/ineight-software-downloads/> in your web browser.
2. Under InEight Model, select **Model Installer - Download** to begin downloading the **InEightModel-64bit.exe** file to your downloads folder.
3. After the download is complete, double-click the file to run the application.

1.2 PLUGINS

Model content is added to InEight Model either from an authoring application using plugins or through IFC import. Each model imported to InEight Model is considered a Model Stream. The plugins listed below are installed as part of Model Application installation and updated with Model application, with the exception of the Excel plugin.

Excel plugin (Windows)	Excel provides a means to add custom data into InEight Model and a means for visual reporting.
Revit plugin (Windows)	The Revit plugin provides a means for exporting models from Revit into InEight Model.
AutoCAD plugin	The AutoCAD plugin provides a means for exporting models from

(Windows)	AutoCAD into InEight Model.
Navisworks plugin (Windows)	The Navisworks plugin provides a means for exporting models from Navisworks into InEight Model.
IFC import (Windows)	The IFC import provides a means for importing IFC (Industry Foundation Class) type files into InEight Model.

1.3 LAUNCH MODEL

1.3.1 Model not integrated with InEight Platform

In Model (not integrated with Platform) you can create projects, user accounts, assign permissions, and assign users to projects. When you create a new user, the user receives an email with login information.

To launch Model, you can click the Model icon on your desktop or select Model from the Windows Start menu. At the login screen, you can enter the login information provided in the email. You can also sign in using single-sign-on (SSO).

After you sign in, the Load Project dialog window shows the projects that you have been assigned to. Select a project to open.

InEight Model has online and offline capabilities which can be toggled at the login screen and within the application. The best practice is to sign in online to ensure your local cache data is up to date with the latest project information, and then use Model offline when needed.

1.3.2 Model integrated with InEight Platform

In Model (integrated with Platform) you can create projects, user accounts, and assign permissions. When you create a new user, the user receives an email with SSO login information.

To launch Model, you can click the Model icon on your desktop or select Model from the Windows Start menu. At the login dialog box, you can sign in using your SSO information provided in the email.

After you sign in, the Load Project dialog window shows all Model projects created in Platform.

1.3.3 Considerations


You must have administrative permissions

1.4 MODEL CACHE

Model stores your project's data in a local folder named cache. The cached project data is accessible when you are offline. To use the project offline, it is recommended to sign in online to sync the latest project information.

The default cache location is %localappdata%/InEight/Model/**cache** directory.

If your existing installation is not in the default location, switching to the default path is highly recommended. To view your current path and update the default location click the ellipsis in your sign in screen > Settings > **Cache Path**. You can then select a new location.

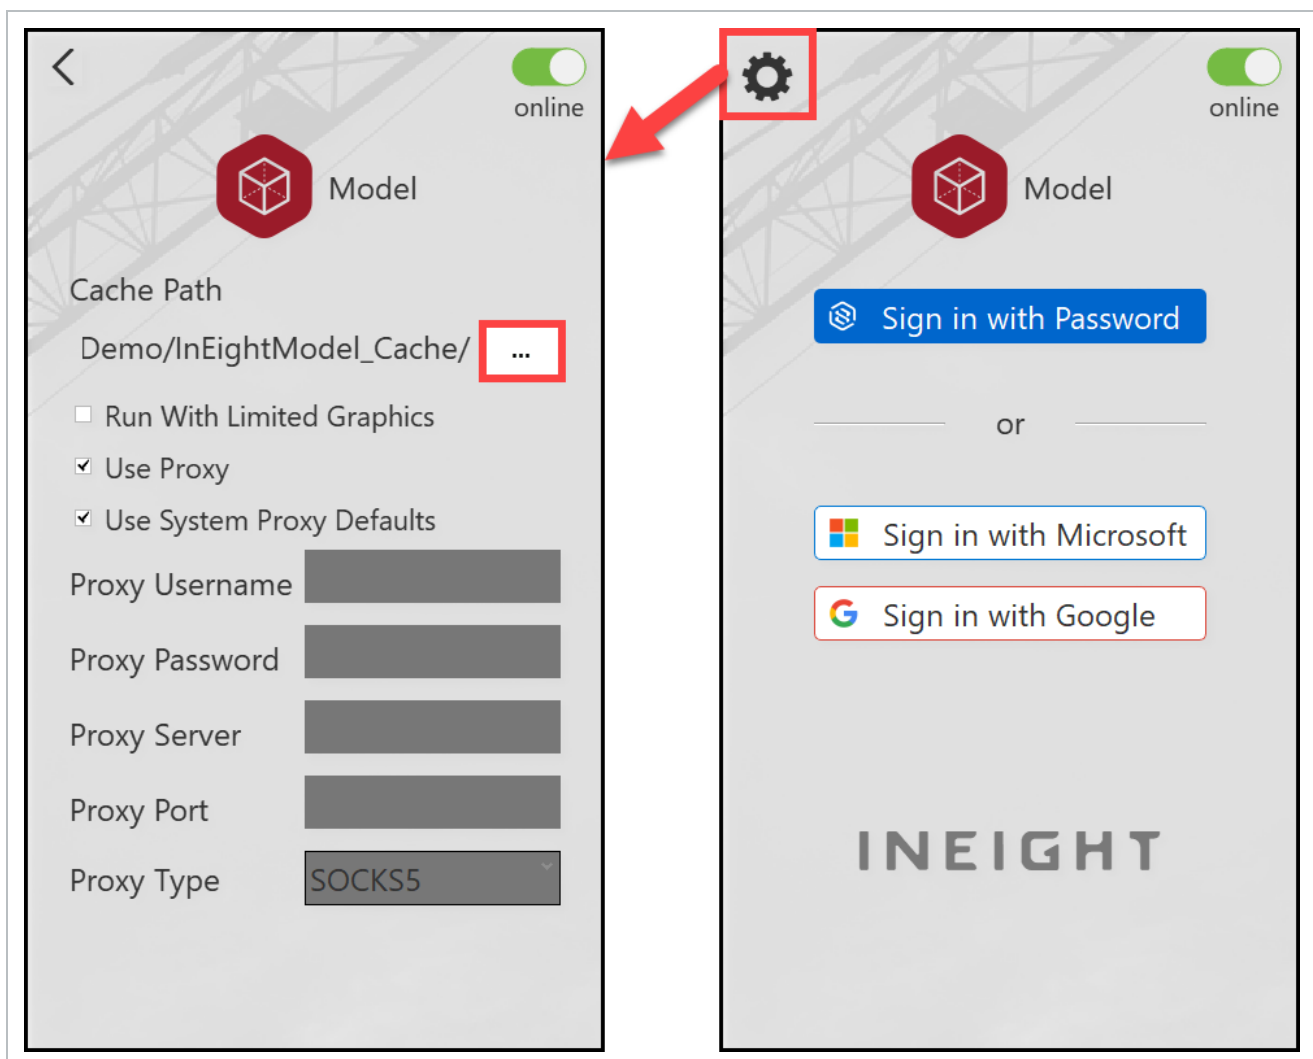

The cache must remain local on the computer and cannot be synced live to external locations.

NOTE

Do not delete your InEight Model cache folder. In rare instances you can delete the folder to fix cache issues.

1.4.1 Move cache to a new location

If you installed Model before 23.10, you can change the location of your InEightModel_Cache folder in Settings > **Cache Path**. Changing the location of your cache folder without moving your existing cache folder data will force Model to recache the project data. This can be time-consuming depending on the number of projects and their size.

1.4.2 Considerations

- The registry key located in Computer\HKEY_CURRENT_USER\SOFTWARE\InEight\Model\Cache defines the path of where the InEightModel_Cache folder resides. Updating the path in the registry will not relocate the existing cache folder to a new defined location
- If the cache folder is deleted, Model must re-cache the project data. This can be time-consuming.

1.4.3 Steps

Moving your existing InEightModel_Cache folder

To move your existing Model cache folder, do the following recommended process. The process must be done on the local machine of each user.

1. Open Windows File Explorer, and then create a new folder or open the new folder location.
2. Open another Windows File Explorer window, and then select your existing InEight Mode_Cache folder location.
3. Move your existing InEightModel_Cache folder into the new location.
4. Launch the InEight Model application.
5. Click the **Settings** icon in the login window, and then change the Cache Path to the new location.
6. Sign in to InEight Model.

Lesson 1 Review

1. What should you do **prior** to downloading and installing InEight Model?
 - a. Delete your authoring tool from your computer
 - b. Check your system's requirements
 - c. Download the correct plugin for your authoring tool
 - d. None of the above

2. What does InEight Model offer to support authoring tools?
 - a. AutoCAD plugin
 - b. Revit plugin
 - c. IFC importer
 - d. Navisworks
 - e. All of the above

3. You can create a new model from InEight model.
 - a. True
 - b. False

Lesson 1 Summary

As a result of this lesson, you can:

- Install InEight Model
- Install plugins
- Launch InEight Model



LESSON 2 – PROJECTS

Lesson Duration: 20 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Create and load projects

Topics in this Lesson


2.1 CREATE A PROJECT

Create a project integrated with InEight Platform

When Model is integrated with InEight Platform, all projects are created in Platform.


Create a project not integrated with InEight Platform

1. From the top menu, select **File > New Project**.

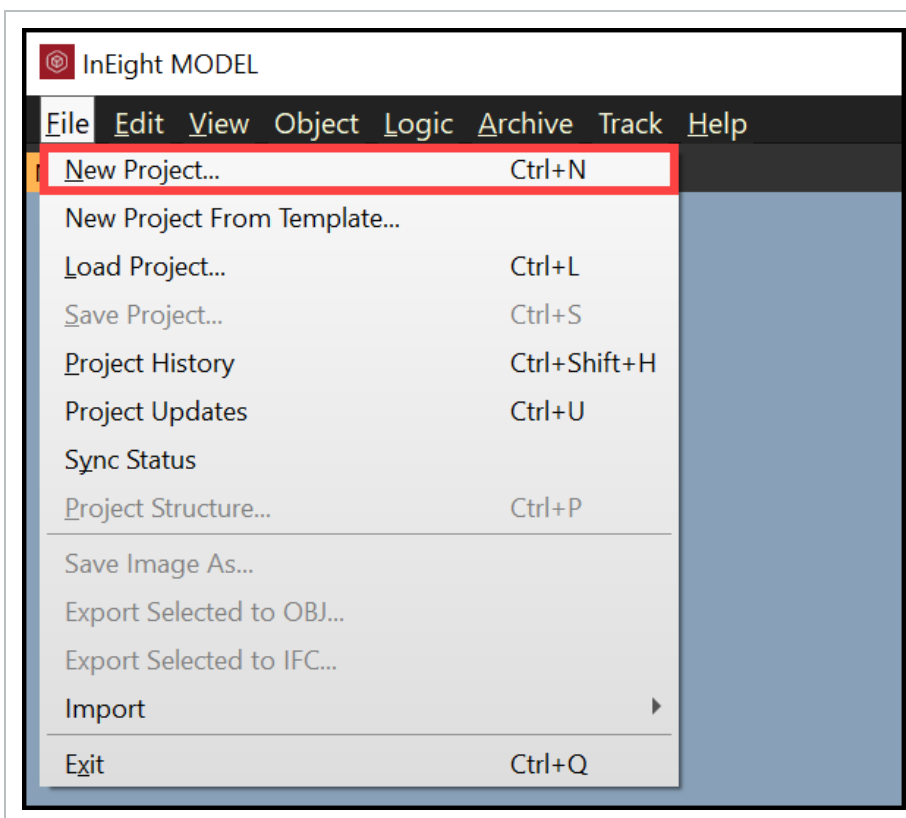

- The New Project dialog box opens.
2. Name the new project.
 3. Click **OK**.

- The creation in progress dialog opens.

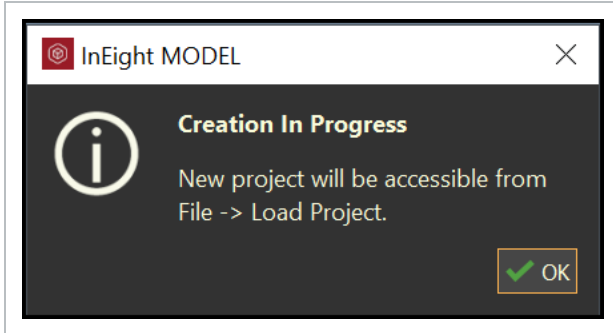

4. Click **OK**.

NOTE After a project is created it cannot be renamed.


2.2 LOAD A PROJECT

Logging into an account provides access to projects in that account. To access a specific project, you first must load it.


NOTE InEight Model integrated with InEight Platform will show all projects listed in Platform in the Load Project dialog box.

2.2 Step by Step 1 — Load a Project

1. Select File > Load Project....

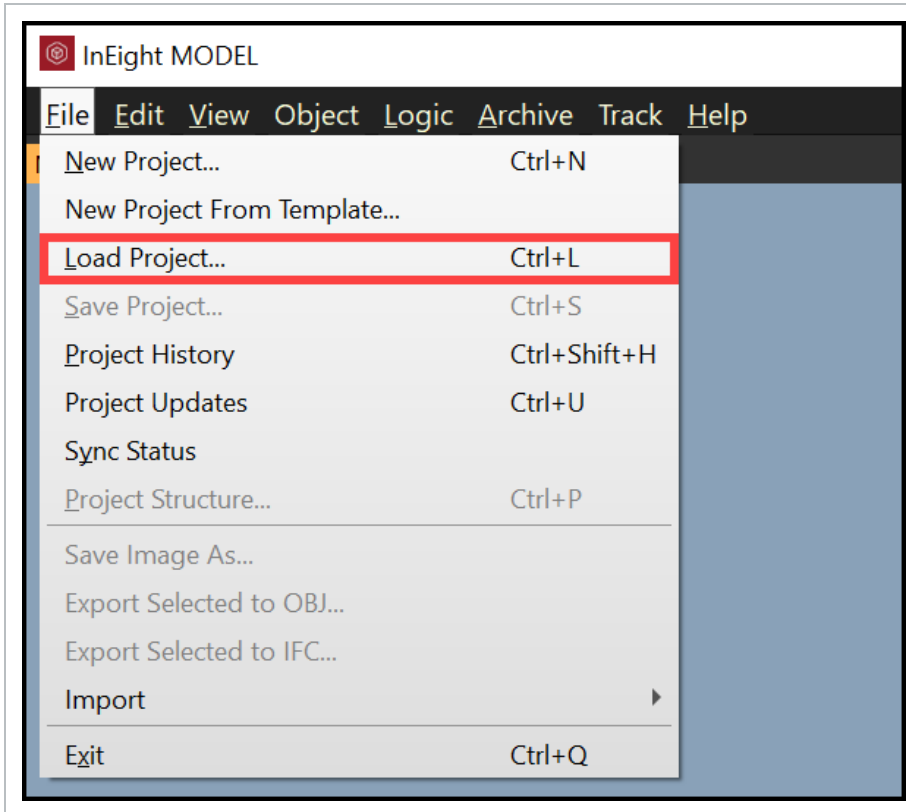

- The Load Project dialog box opens and shows all projects you have access to.
2. Select a project.
 3. Select **OK**.

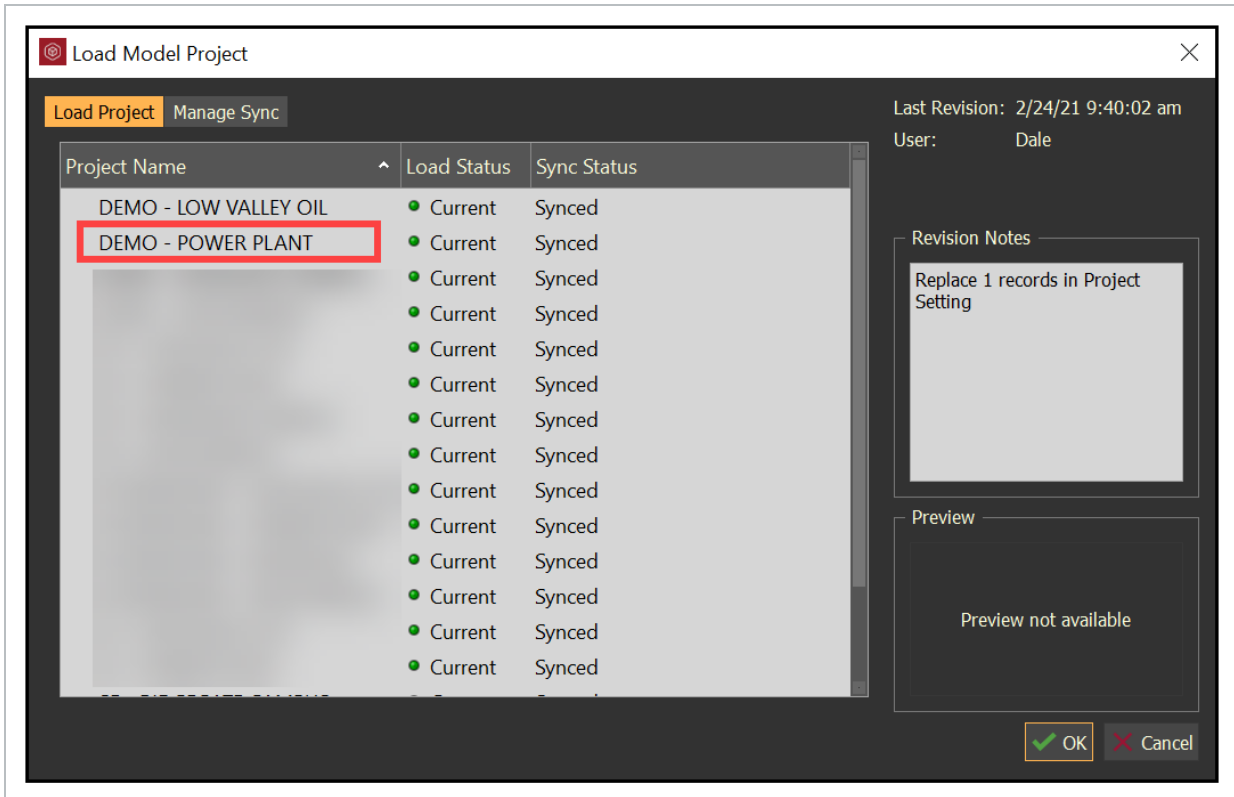


Right-click on a project. This provides additional options:

- Set as Highest Priority: This pushes the project to the top of the list when projects are being Synced.
- Stop Syncing
- Hide Project From All Users: Administrators only have this functionality

2.2.1 Manage sync


You can only open models that have been cached to your computer. Manage Sync allows you to select and reorder the projects you want to sync. After projects are synced, they are synced into the InEightModel_Cache folder.

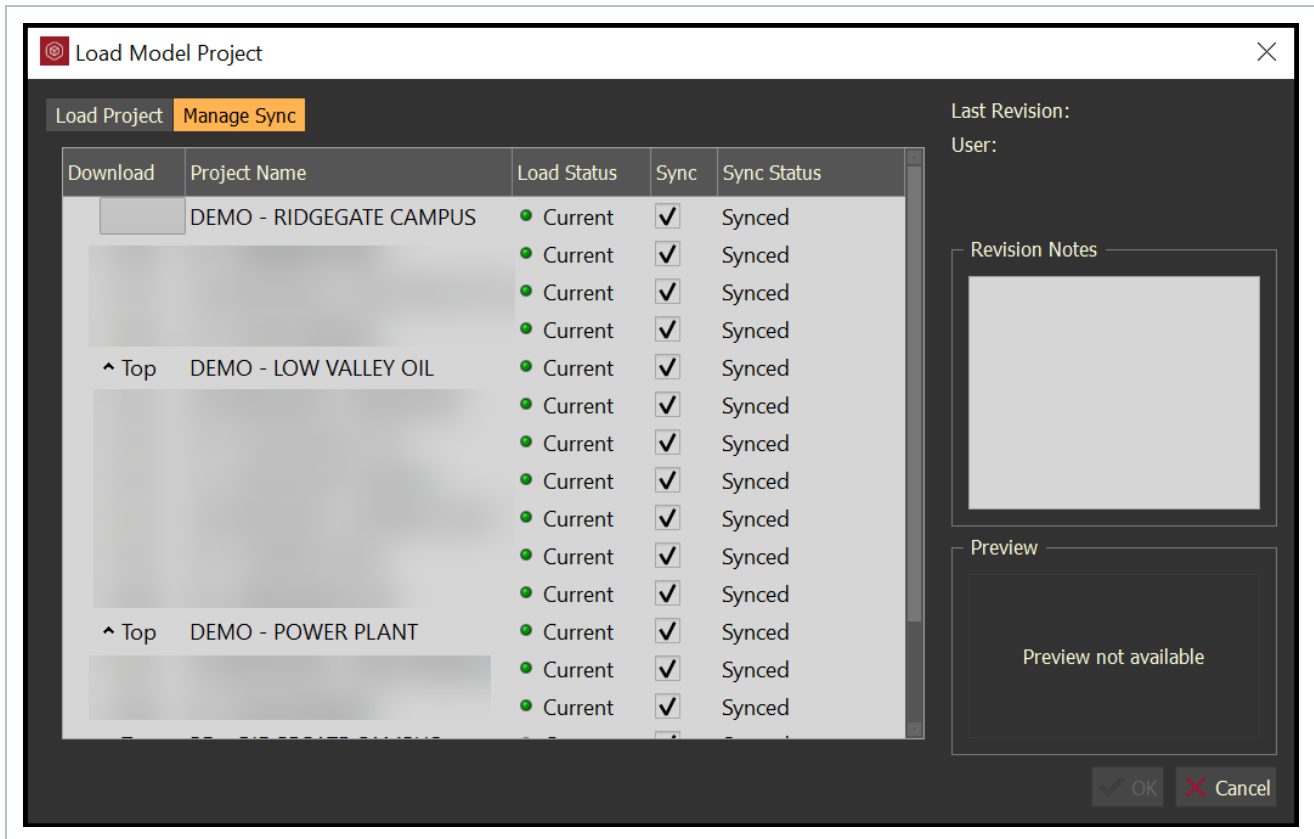

- Download column: select on **^ Top** to move a project to the top of the list to be synced first
- Sync column: If Sync is checked, then the project will sync. If Sync is un-checked then the project will not sync

2.2.2 Remove projects from cache

You now can free up disk space by using the Remove project from cache option. When you finish working on a project, remove the project from your cache in the Load Model Project > **Load Project** tab. Right-click on a project from the list, and then select **Remove Project from Cache** to remove the projects cache.

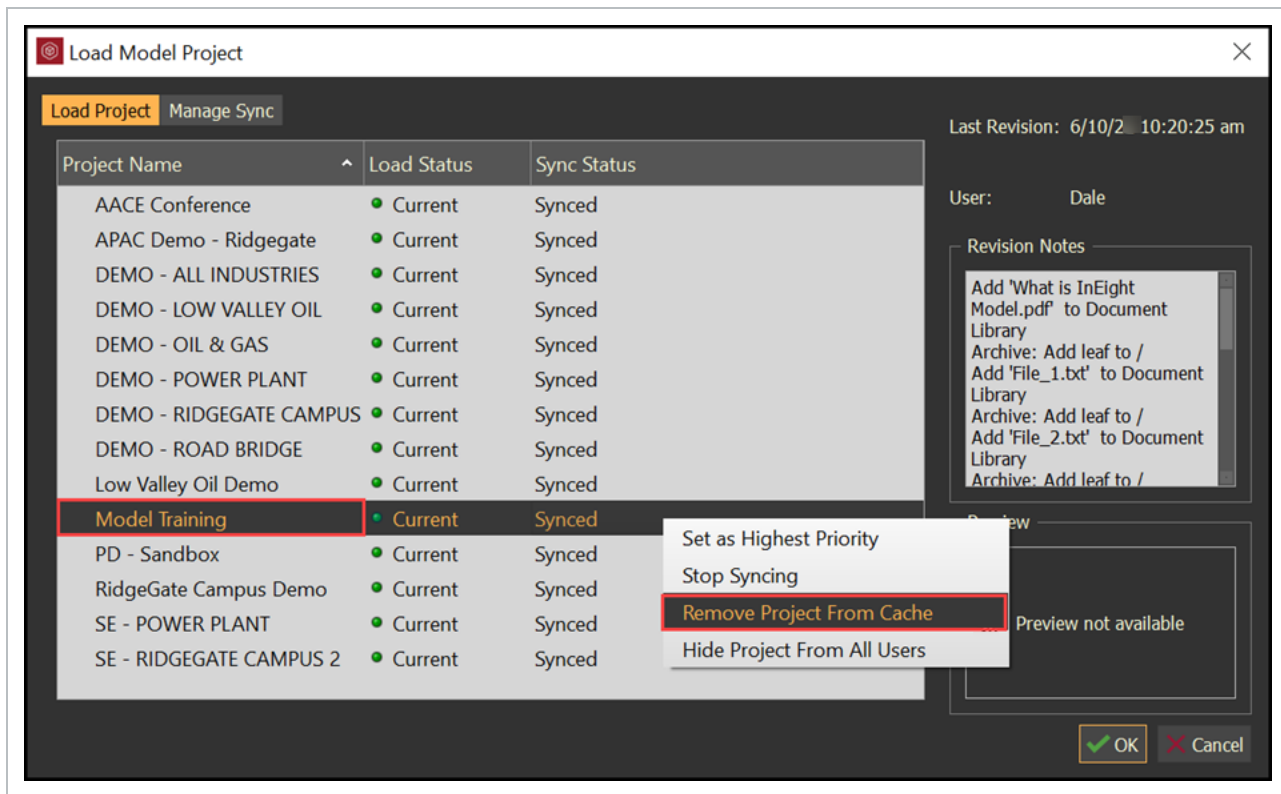**NOTE**

You must exit InEight Model once a project has been removed before accessing and working in another project.

2.3 CREATE A NEW PROJECT FROM TEMPLATE

In Model (not integrated with InEight Platform) you can create new projects from existing projects as a template. The following items, if existing in the template project, will be created with the new project:

- **Project Structure:**
 - The Project Structure folder structure will be present in the new project.
 - No existing model streams will be present in the new project.
- **Master Presets:**
 - The Master Preset folder structure will be present in the new project.
 - No existing Master Presets will be present in the new project.
- **Styles:**
 - All existing Style Sets with assignments to existing and non-existing tags will be present in the new project.

- All existing customer Styles will be present in the new project.
- **Tags:**
 - All existing custom tags will be present in the new project.
- **Archive Library:**
 - The Archive Library folder structure will be present in the new project.
 - No existing documents or labels will be present in the new project.

NOTE

InEight Model integrated with InEight Platform does not provide a means to create a Model specific project from a template.


2.3.1 Considerations

- You must have admin permissions to create new projects.
- You can use projects as templates when Model is not integrated with InEight Platform.


2.3.2 Steps

Create a New Project from Template

1. Select File > New Project from Template.

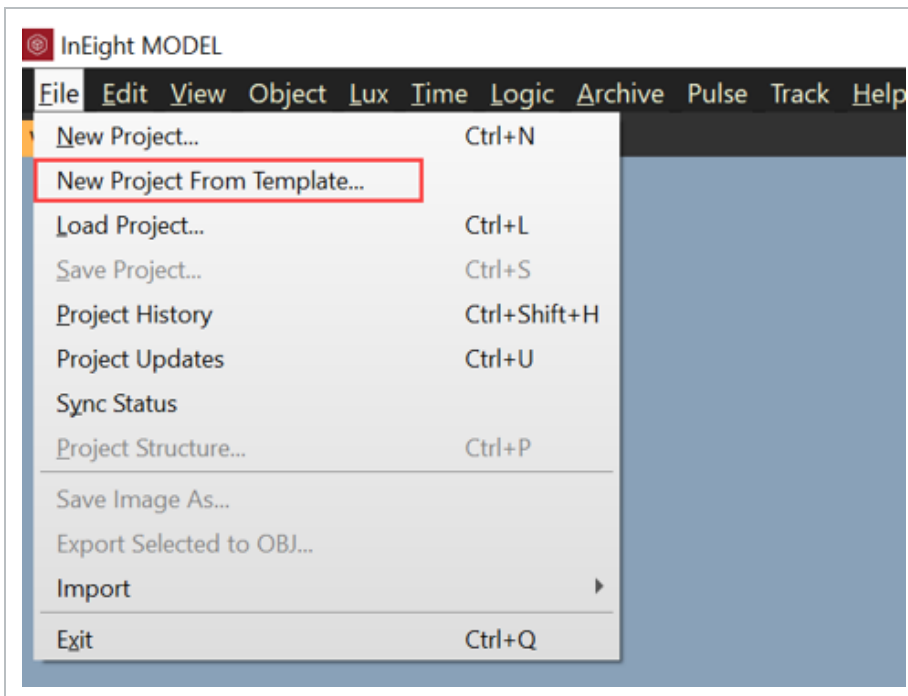

- The New Project dialog box will open
2. Type in the name of the **New Project**.

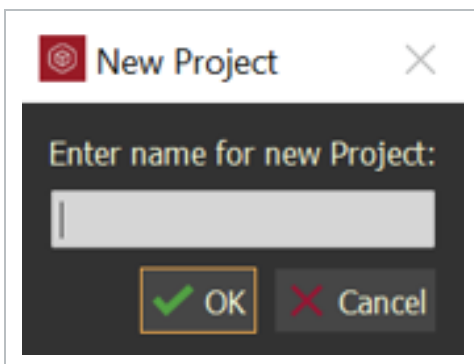


- The Template Project dialog box will open.


3. Select the project to use as the desire **Template**, then click **OK**.



- A validation dialog box will open

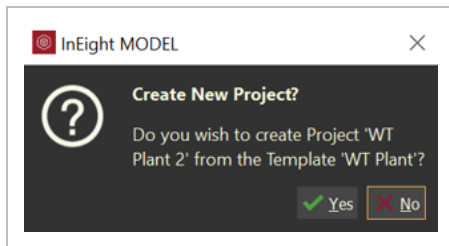

4. Click **Yes**, if the information is correct.

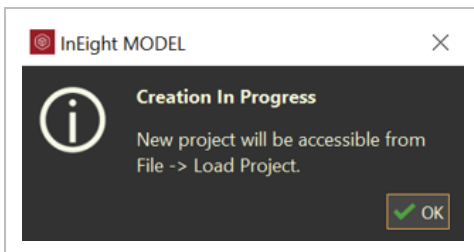

5. Click **OK**, then load your new project

Lesson 2 Review

1. Before you can import a model, you should first create a project.
 - a. True
 - b. False
2. The Manage Sync folder allows you to sync projects to your _____.
 - a. Model Library
 - b. Cache Folder

c. Model Stream

d. Plugin Folder

As a result of this lesson, you can:

- Create and load a project

This page intentionally left blank.

LESSON 3 – MODEL STREAMS

3.1 MODEL STREAMS OVERVIEW

A model that is published (imported) into InEight Model is referred to as a Model stream, whether they are exported from a design application or imported from a design file type using plugin tools.

Each plugin tool has standard tags that are included in every published model as shown in the following tables:

Revit

Tag category	Tag value
Model Stream	<model name>
Tag_Level	<level names>
Tag_PhysicalType	Window, Floor, Door, etc.
Revit_Family_Type	<Family Instance names>
Revit_Function	<Walls and Floors>
Material Name - CAD	<face material names>

AutoCAD

Tag category	Tag value
Model Stream	<model name>
ACAD Block	<block names>

AutoCAD (continued)

Tag category	Tag value
ACAD Layer	<layer names>
ACAD Material	<material names>

IFC

Tag category	Tag value
Model Stream	<model name>
IFC Class	<IFC class names>
IFC Layer	<IFC layer names>
IFC Material	<IFC material names>
IFC Name	<IFC name names>


3.2 CONFIG SETTINGS

Config Options gives you the ability to define the parameters, or metadata, that will export along with the geometry, as well as providing some advanced options for applying various transformations.


The **Config Options** column in the **Model Exporter** will report three different states.

1. **Basic** - Indicates the Config Options have not been defined by you. This is the default state of an unpublished Model Stream.
2. **Previous** - Uses the same Config Options as a previous export. This indicates that you're updating an existing Model Stream and not publishing a new one. The settings are pulled from the previous project and are not dependent on the Model Stream being updated from the same computer, or even by the same user.
3. **Custom** - Indicates that the Config Options have been modified during your current session.


TIP Config Options can be configured in bulk by multi-selecting the listed Model Files in the Model Exporter window then clicking within any of the Config Options field that corresponds with your selection.

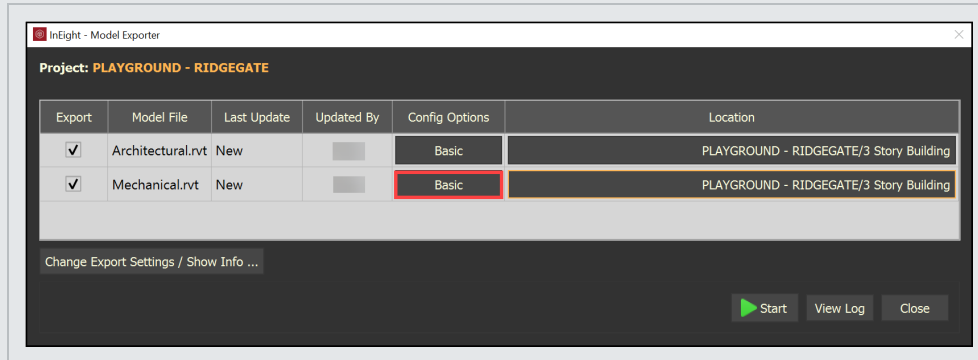


The Parameters tab in the Config Options window allows the user to define what metadata will be exported along with the geometry. The Basic Tags are also displayed along the top of the search bar. Basic Tags will be included in every export regardless of configuration.

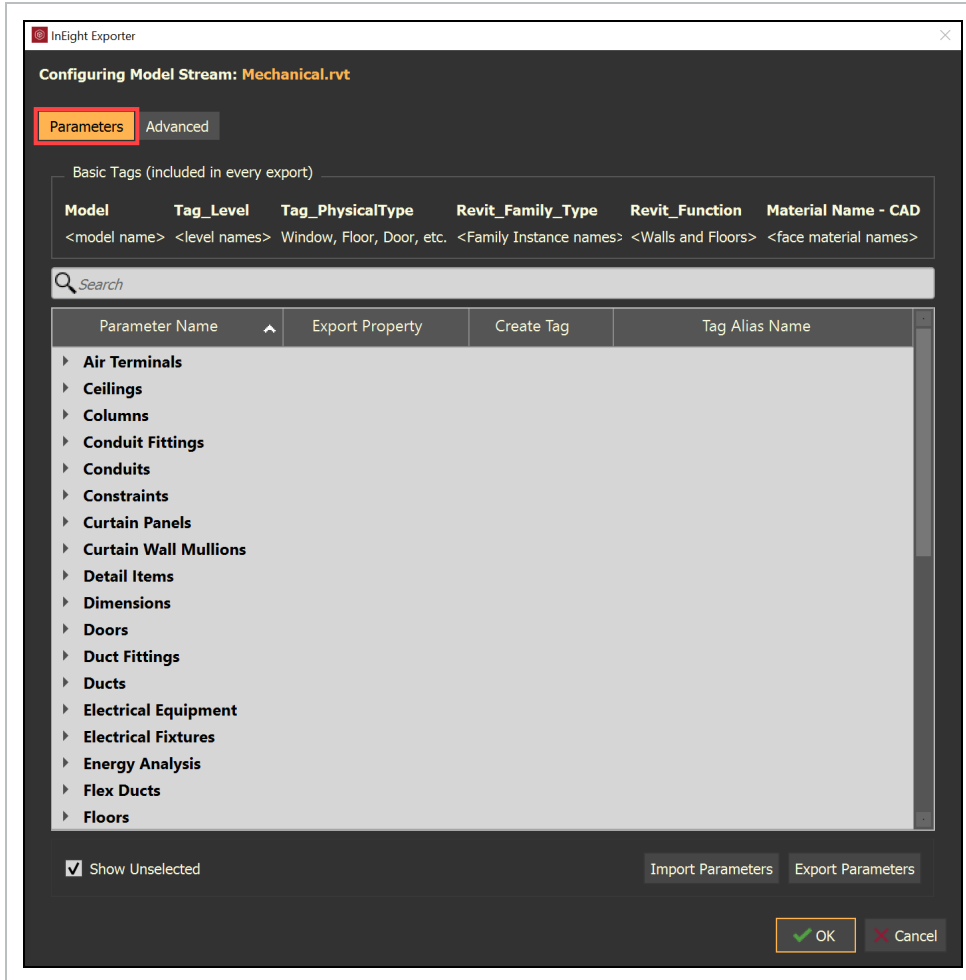


Choose your desired tags and/or properties by expanding a category and checking the box next to a value. In the image below, we see that the Voltage and Wattage for the Electrical Equipment will be exported as a tag and that the Length and Volume for Structural Columns will be exported as properties. Additionally, clicking in the **Click to rename...** field in the Tag Alias Name column, the Length of the Structural Columns has been renamed to Cut Length. Renaming these values is a quick and easy way to achieve consistency when pulling geometry and metadata from files authored by various different organizations that may be using different values to represent the same data.

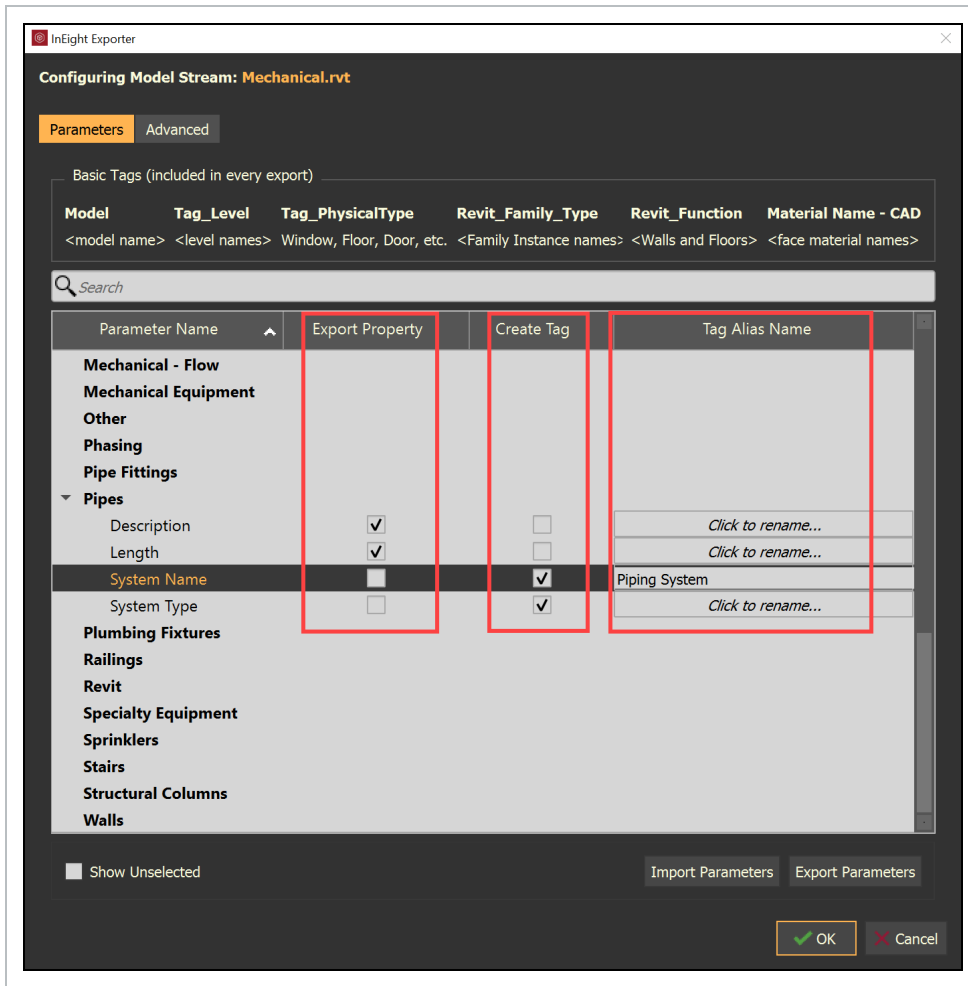


With the **Show Unselected** box checked (in the bottom left corner), all available parameters will be displayed. With the **Show Unselected** box un-checked, only the selected parameters will be displayed, this allows the user to easily view the current configuration.

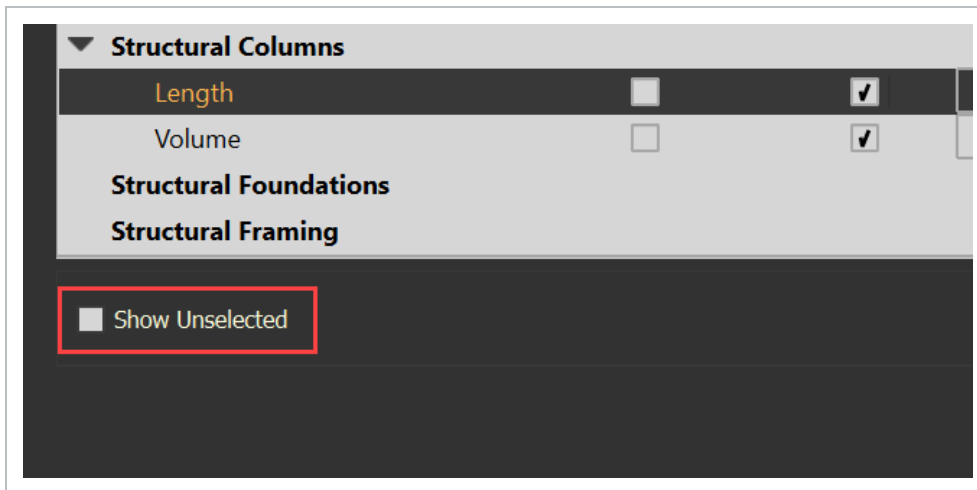

Use the **Import Parameters** and **Exporter Parameters** buttons to save your configuration to a local file or to import a previously saved configuration.

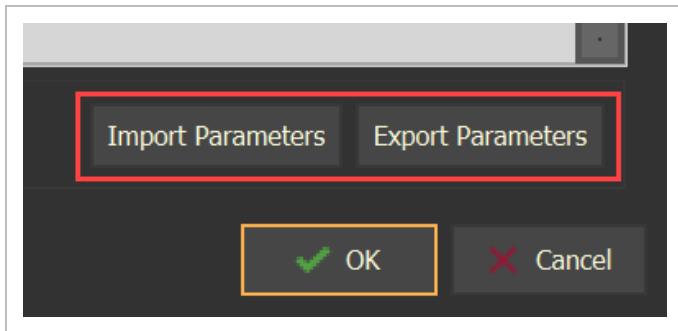

The **Advanced** tab allows Scale, Rotate, and Translate (move) options upon export. Settings configured in the Advanced Options are retained in future model updates.

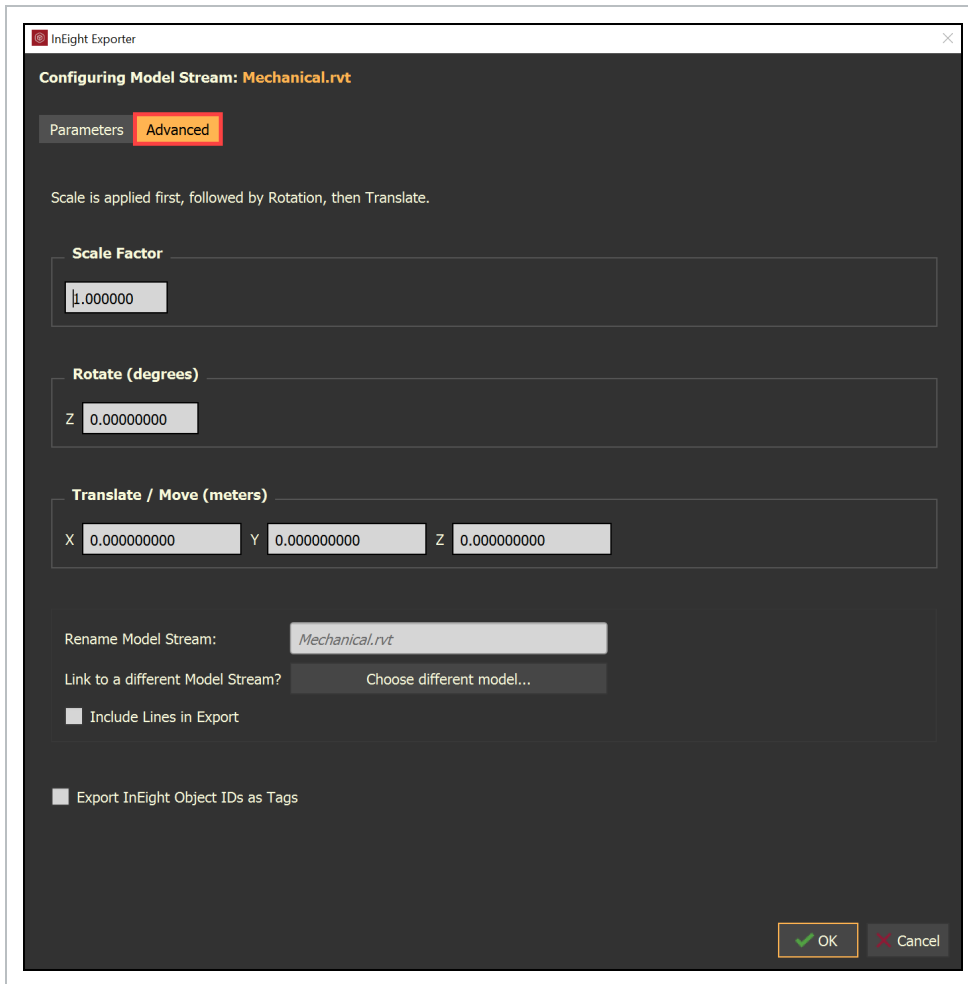

To change the name of the Model Stream simply click in the **Rename Model Stream** field and enter the desired name.

If desired, check the **Include Lines in Export** box to include 2D and 3D line work.


- **Scale, Rotate and Translate / Move** provides a way to adjust the model as needed up export
- **Rename Model Stream** provides a way to rename the model file upon export
 - The new name will appear in the Objects panel and as a value within the Tag Category "Model"
- **Include Lines in Export** provides a way to include 2D and 3D line work upon export

3.2.0.1 Overview - Configuring Model Streams Parameters tab

Item		Description
1	Parameter Name	Displays the Property Set Name and the Property Name of the metadata.
2	Export Property	Will export the Property Name with the existing value for each model object.
3	Create Tag	Will utilize the Property Name to create a Tag name with the existing value for each model object.
4	Tag Alias Name	Provides the capability to control what the Tag name is during the export of the model.
5	Export Parameters	Once the desired "Export Property", "Create Tag," and "Tag Alias Name" columns have been selected and filled out, then select Export Parameters to save these settings to use on similar models.
6	Import Parameters	If previous parameters have been exported, then select Import Parameters to populate Parameters.

3.2 Step by Step 1 — Config Settings - Parameters

1. Within the Model Exporter window, select **Basic**.

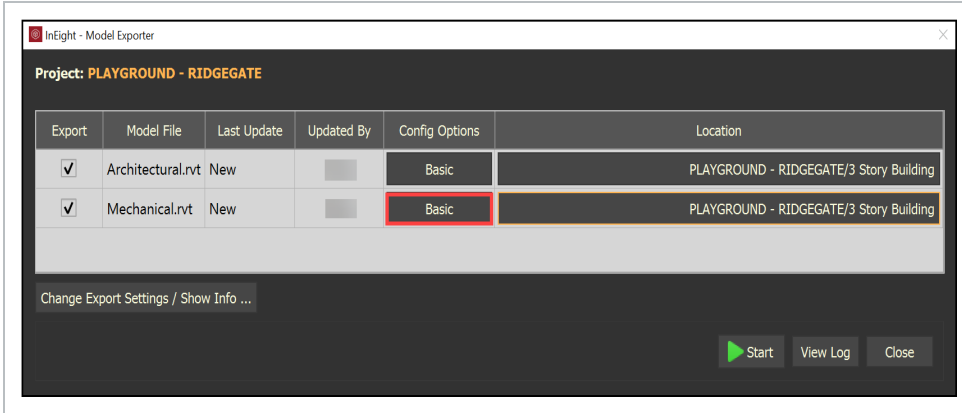


- The Config Options window opens with the initial focus on parameters


NOTE

The Parameters tab in the Config Options window allows the user to define what metadata will be exported along with the geometry.

The Basic Tags are also displayed along the top of the search bar. Basic Tags will be included in every export regardless of configuration.

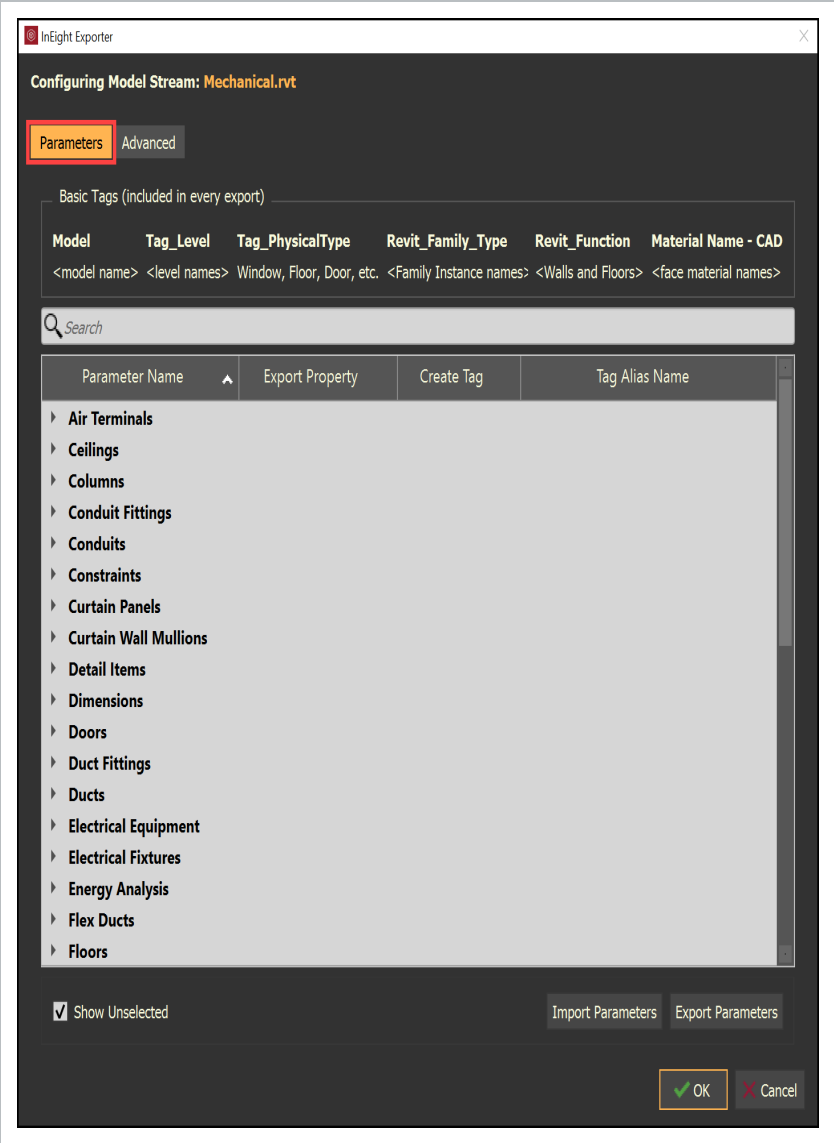

2. Select the desired tags and/or properties to export with the Model Stream.

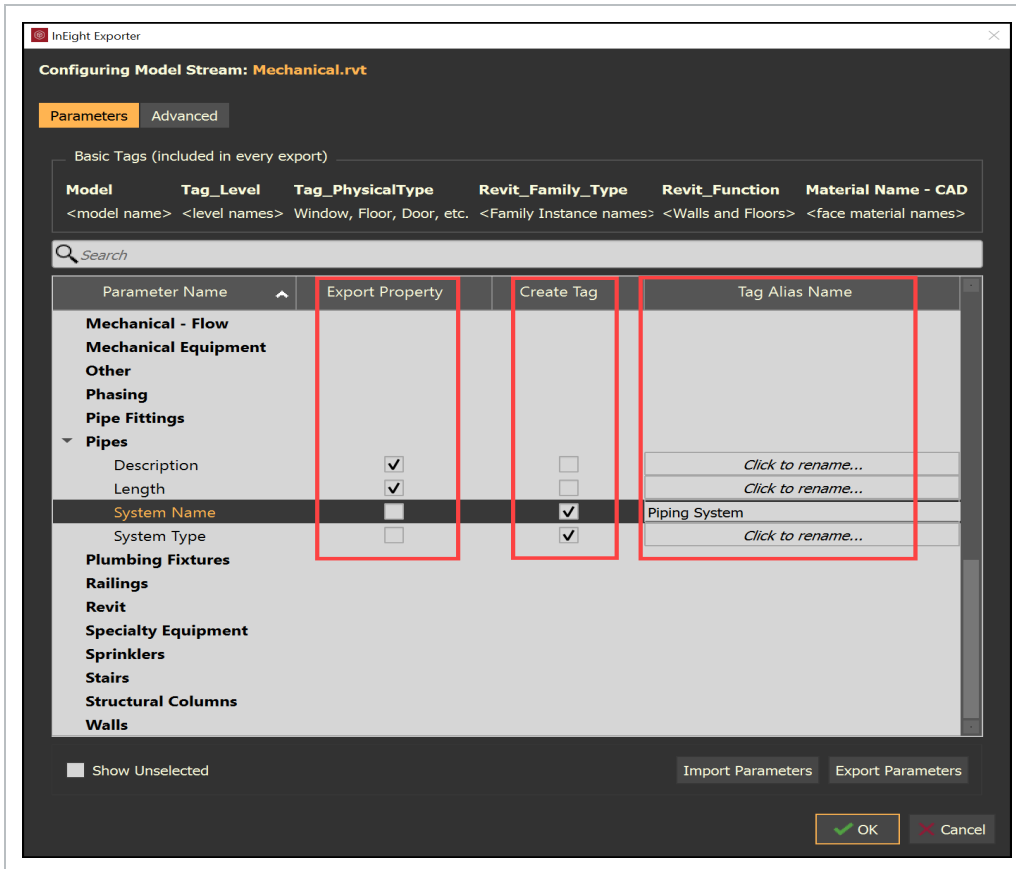


- **Create Tag** will create a tag category and tag value metadata for the relative model objects
 - Column Location Mark, Length and Volume will be the tag categories within InEight Model
- **Export Property** will create property category and property value metadata for the relative model objects
 - Fire Rating and Manufacturer will be the Property Categories within InEight Model
- **Tag Alias name** will rename the Category name
 - Length will be renamed to Cut Length during the export
 - Renaming these values is a quick and easy way to achieve consistency when pulling geometry and metadata from files authorized by different organizations that may be using different values to represent the same data

3. Select or unselect **Show Unselected**.



4. Select **Import Parameters** or **Export Parameters**.

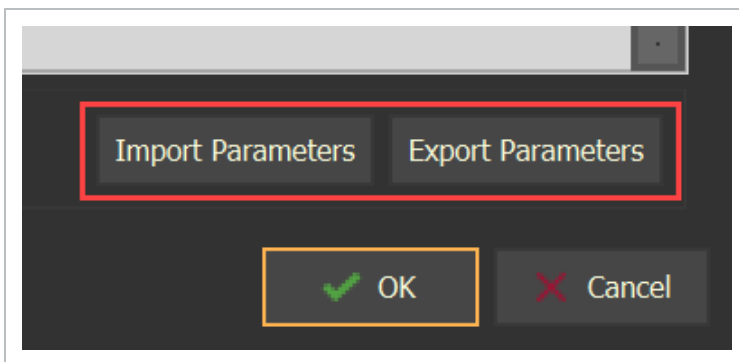

5. Select **OK** when you have completed.

3.2 Step by Step 2 — Config Settings - Scale / Rotate / XYZ

1. Select the **Advanced** tab from the Model Exporter.

- The Advanced tab shows options to manipulate the model.
- If the Scale Factor, Rotate, and/or the XYZ are needed to adjust the model then they

are applied in the displayed order from top to bottom (Scale Factor > Rotate > XYZ).

InEight Exporter

Configuring Model Stream: **Mechanical.rvt**

Parameters **Advanced**

Scale is applied first, followed by Rotation, then Translate.

Scale Factor

1.000000

Rotate (degrees)

Z 0.00000000

Translate / Move (meters)

X 0.000000000 Y 0.000000000 Z 0.000000000

Rename Model Stream:

Link to a different Model Stream?


Include Lines in Export

Export InEight Object IDs as Tags

2. Add a scale factor to adjust the scale of the model as needed.
3. Add a Rotation angle by degrees as needed.
4. Add X, Y, and Z coordinates as needed.
5. Click **OK** when done with Config Options.

3.2 Step by Step 3 — Config Settings - Rename Model Stream


1. Select the **Advanced** tab from the Model Exporter.
 - The model file name might change if the designer or architect puts a revision status or date on the file name with every version.
 - The Rename Model Stream lets you rename the model stream without changing the model file name and provides a consistent model stream name for all end users to access.

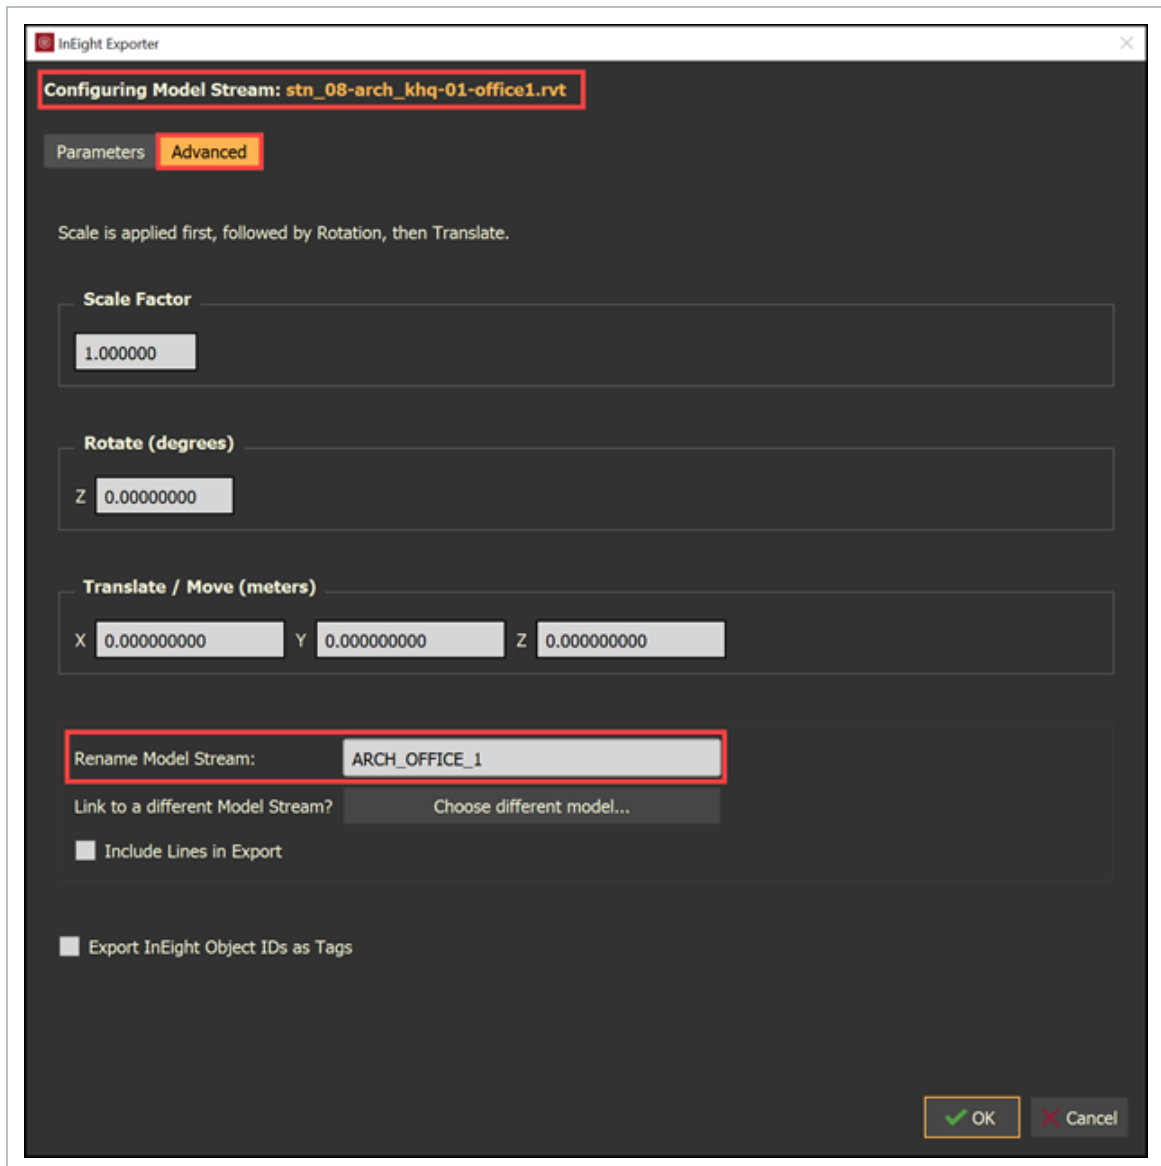

2. Type a Model Stream Name.


3. Click **OK** when done with Config Options

- The Project Structure shows the Renamed Model Stream and, in the Revision History, shows the Model Stream Source File name.

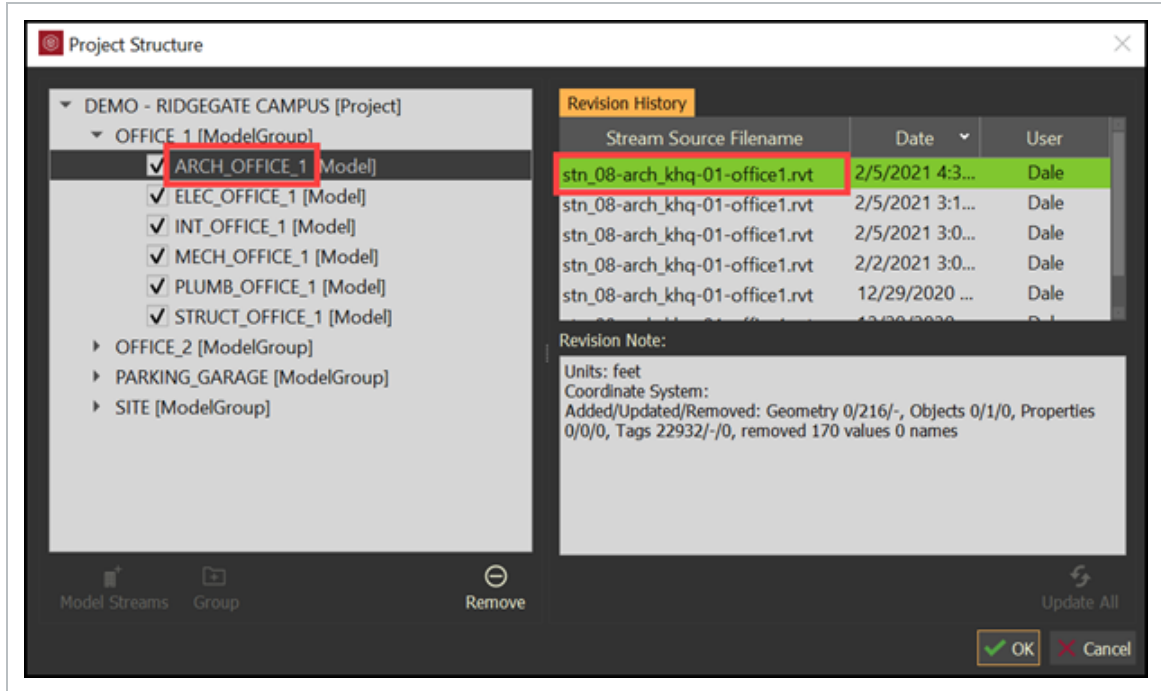


- The Tags and Objects panel shows the Renamed Model Stream in the Object tab for

the project team to use throughout the project.

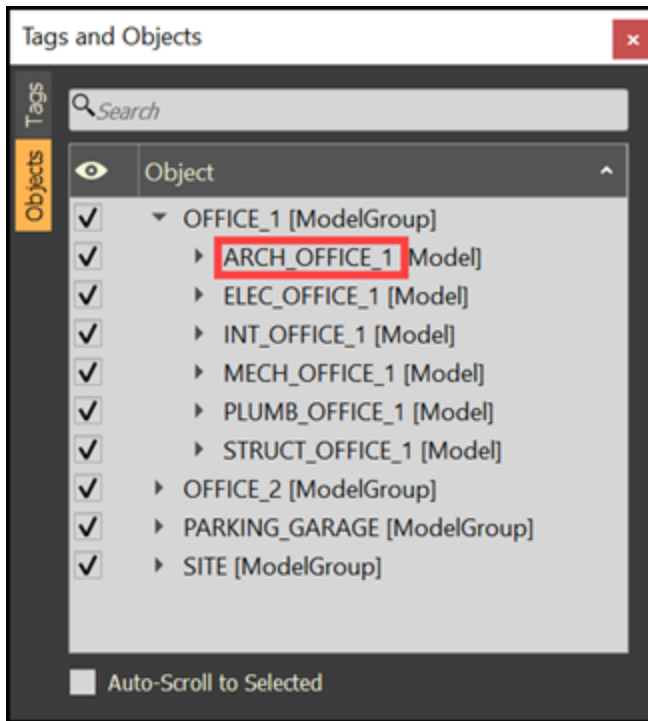


3.2 Step by Step 4 — Config Settings - Link to a different Model Stream


1. In the Model Exporter, you might see a message of “Resolve Model Conflict...**” in the Location column. This is a result of multiple models loaded with similar names. Click **Resolve Model Conflict...****

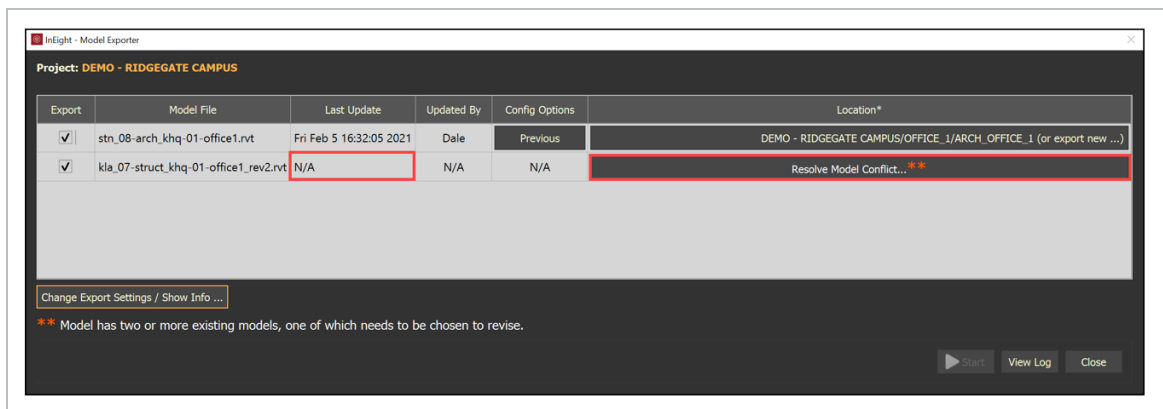

2. If the model stream is not shown, then click **Export as New...**

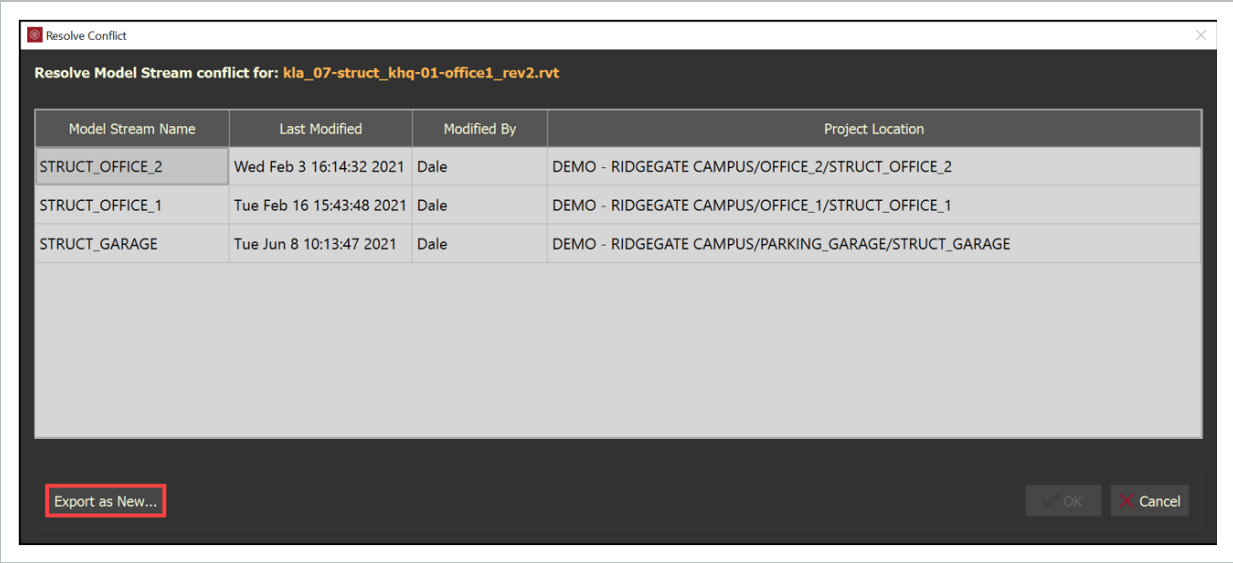


3. Choose a location.
 - You can only select the parent level or a group level location.

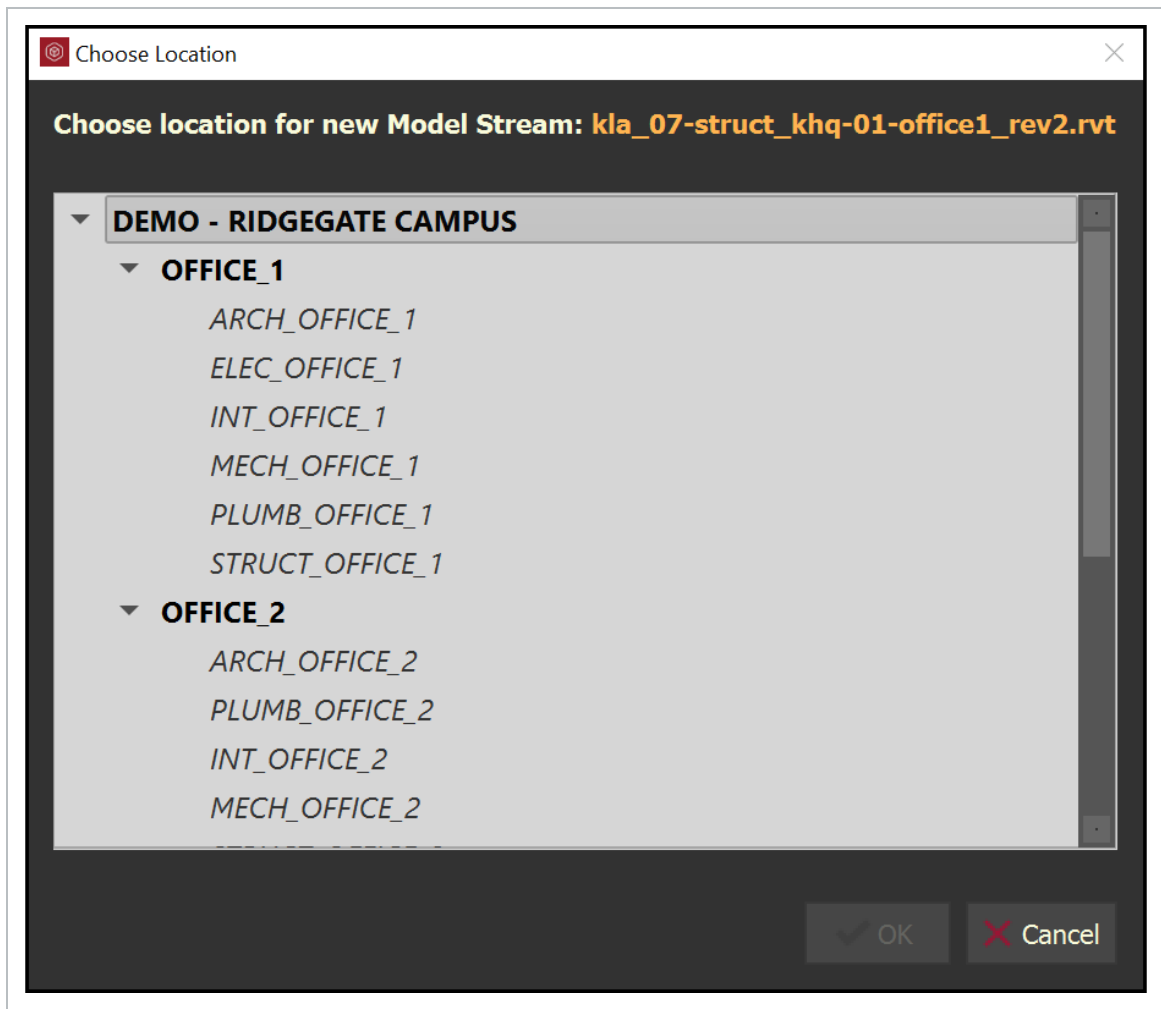


4. Click **OK** to close the Choose Location dialog box.
5. Click **OK** to close the Resolve Conflict dialog box.

6. Click **Basic** in the Config Options column.

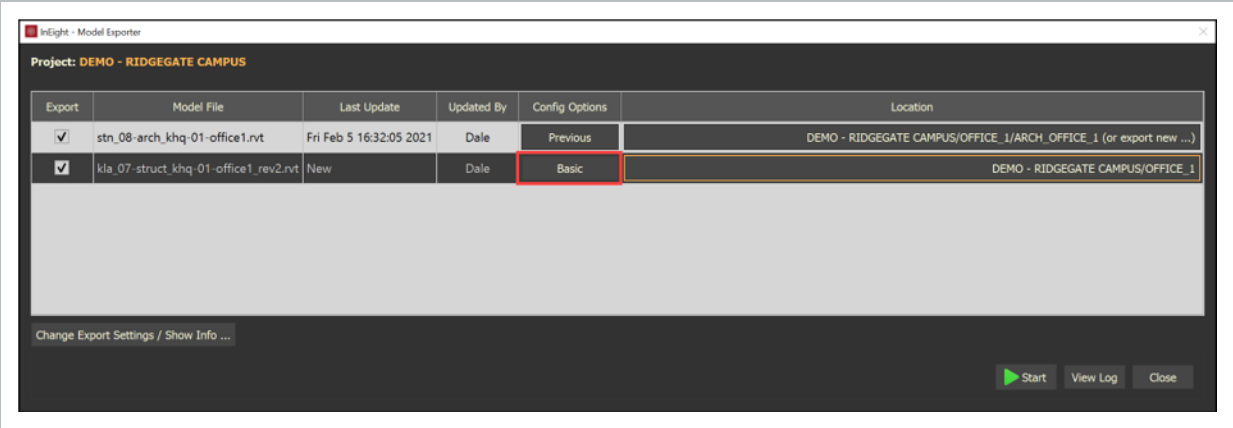


7. Click the **Advanced** tab.

8. Click **Choose different model...**

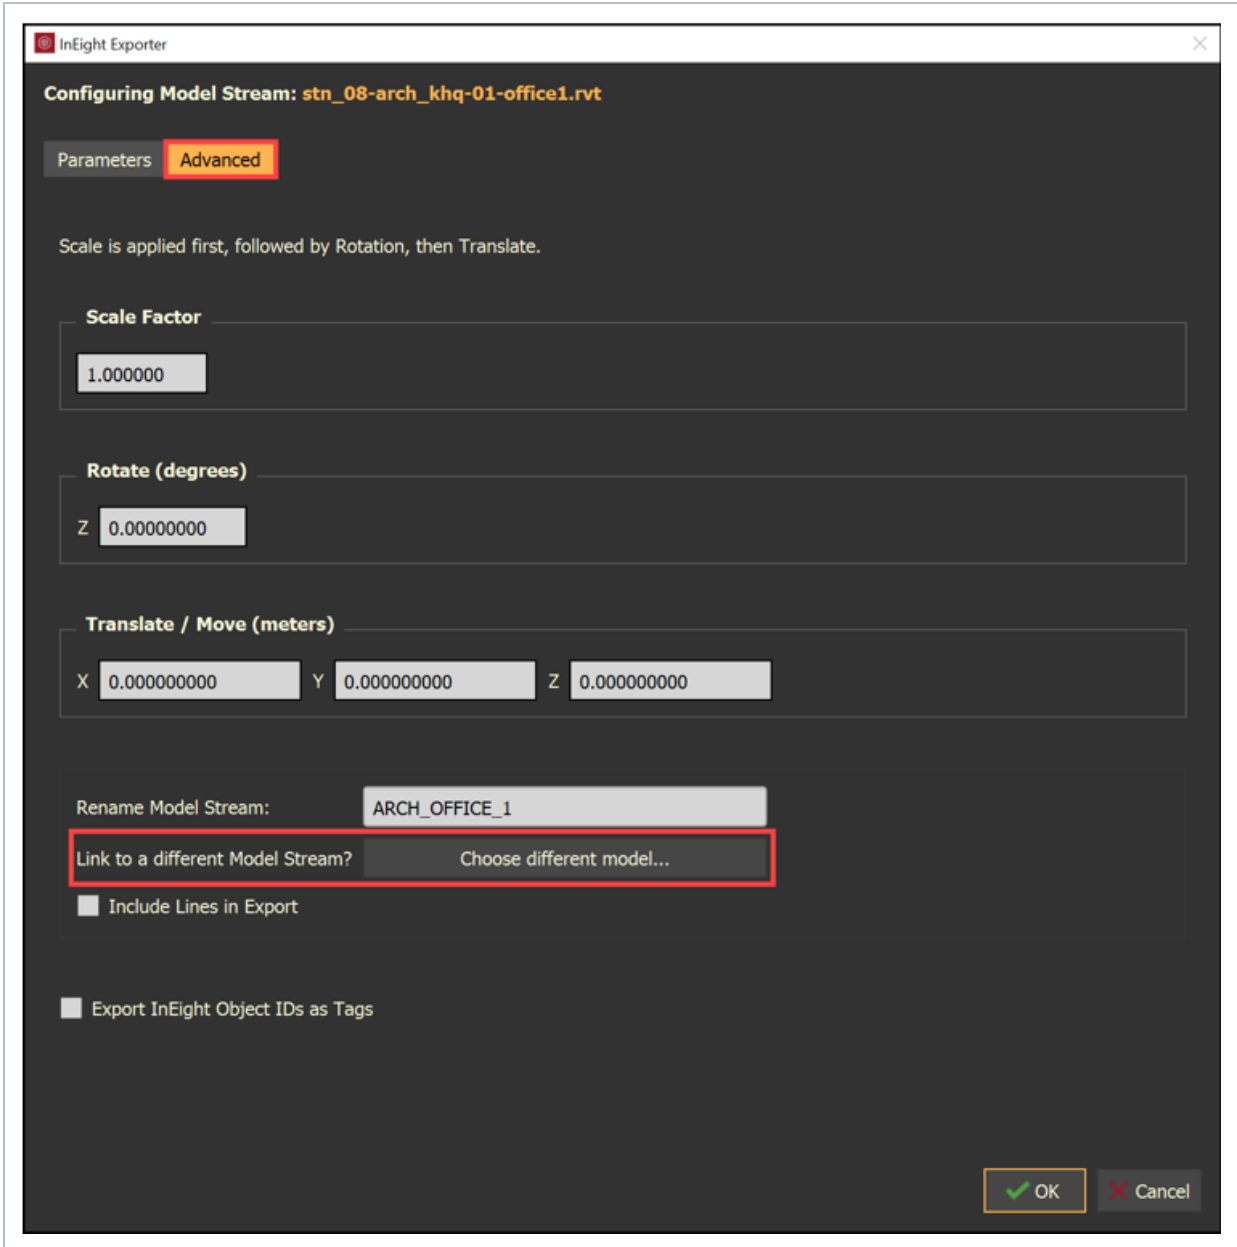

9. In the Choose Location dialog box, select a Model Stream to link to.

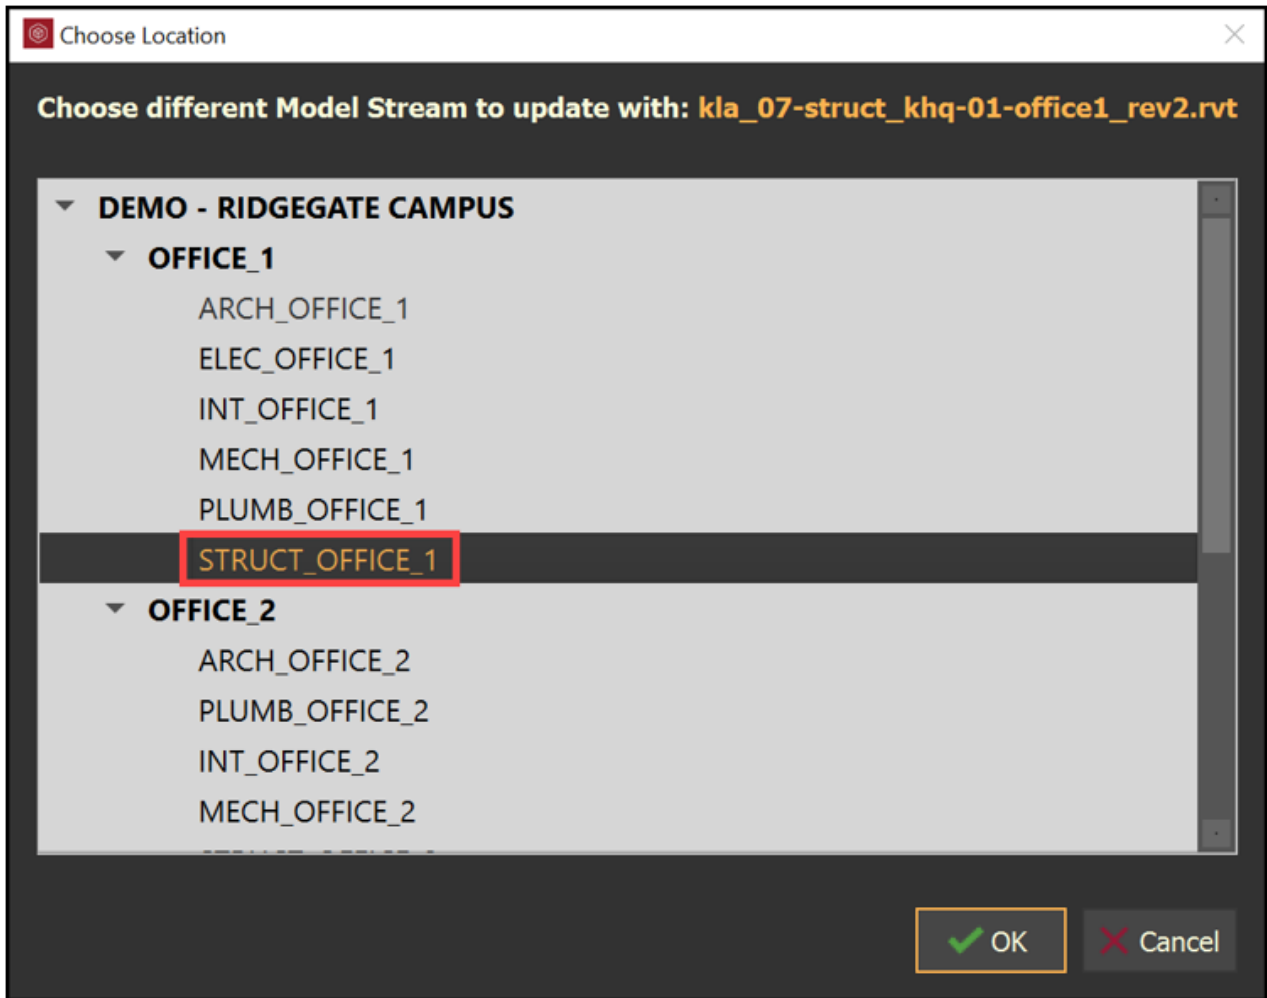

10. Click **OK** when done with Config Options.

3.3 EXPORT SETTINGS

When available for plugin, Export Settings lets you configure the model location options and the model visibility options.

3.3.0.1 Export Settings options:

Revit Location refers to the coordinate systems contained within the Revit Project and can be defined three ways

- **Ask on Export** - The Model Exporter will prompt the user to select the appropriate coordinate system during export
- **Use Revit Project Location** - Uses the active project location
- **Use None** - Resets project location to default values

Export Selected will require the user to have an active selection prior to initializing the Model Exporter and will only export selected objects

Visibility tells the Model Exporter which geometry to include in the export

- **Export Visible** - Exports all visible content within the 3D view
- **Export Visible + Room Volumes** - Exports all visible content within the 3D view plus room volumes
- **Export All** - Exports all geometry found within the Revit project, even if it's hidden in the active 3D view


Info displays some basic information about your current session

- **InEight Connection** - Displays the current status of the Model Exporter's communication with InEight Model
 - **Connected - Online** - Connection is established to the server
- **Disconnected - Offline** - Not connected to the server. Check your Internet connection or login to your project within InEight Model
- **Logged-in as** - The currently logged in user
- **Cache Location** - The path of the InEightModel_Cache folder


3.3.1 Steps

Export Settings

1. In the Model Exporter window, select **Change Export Settings / Show Info ...** to open the Export Settings window.

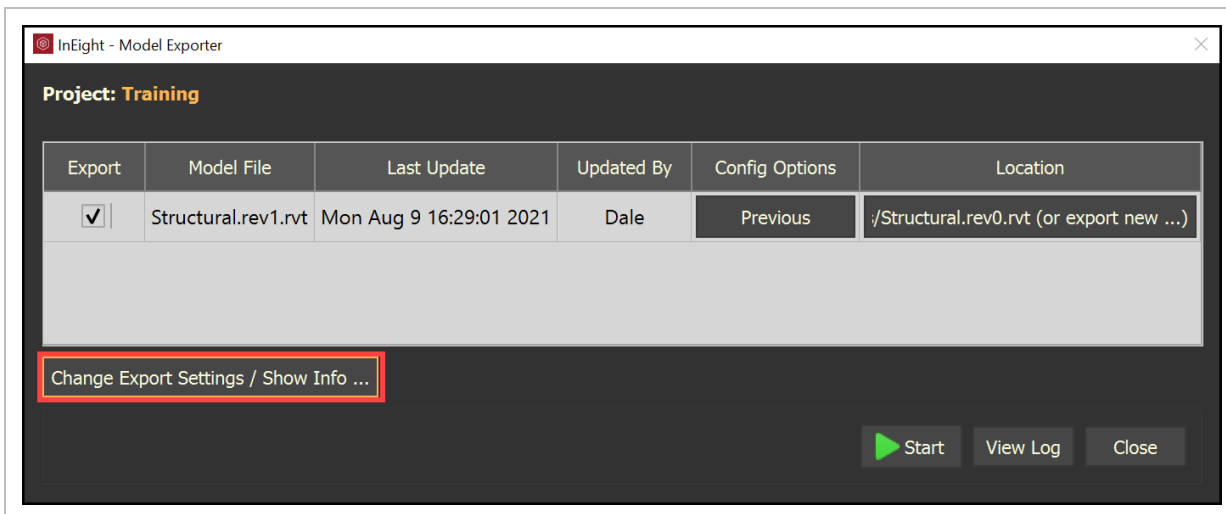

- The Export Settings window opens

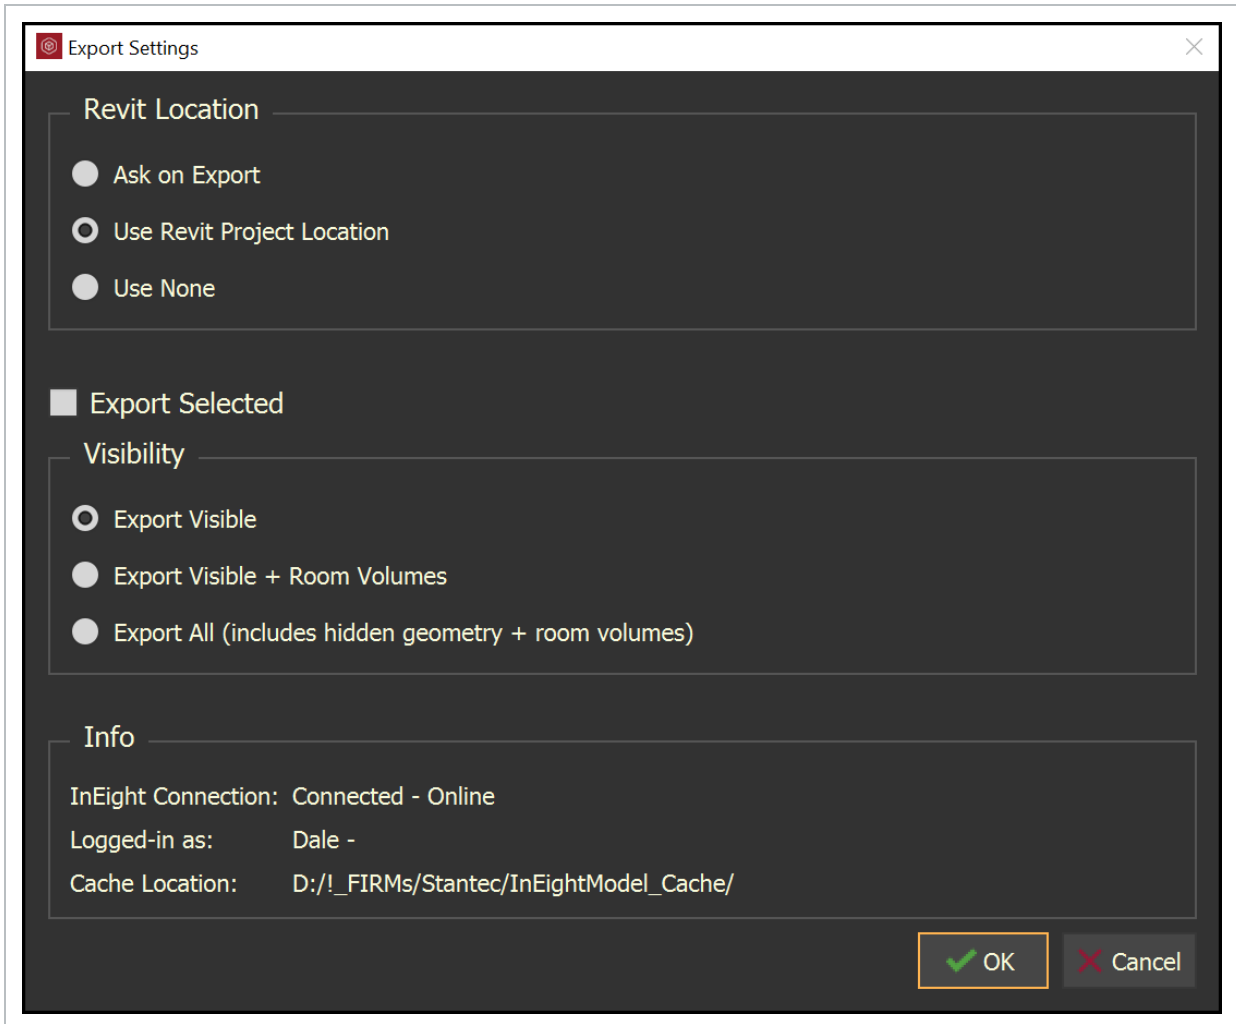


2. Complete your changes, and then click **OK**.

3.4 MODEL REVISIONS

Model revisions might occur during project execution.

3.4.0.1 Model with Same Name

Follow the same process of the initial exporting from AutoCAD or Revit or importing an IFC file.

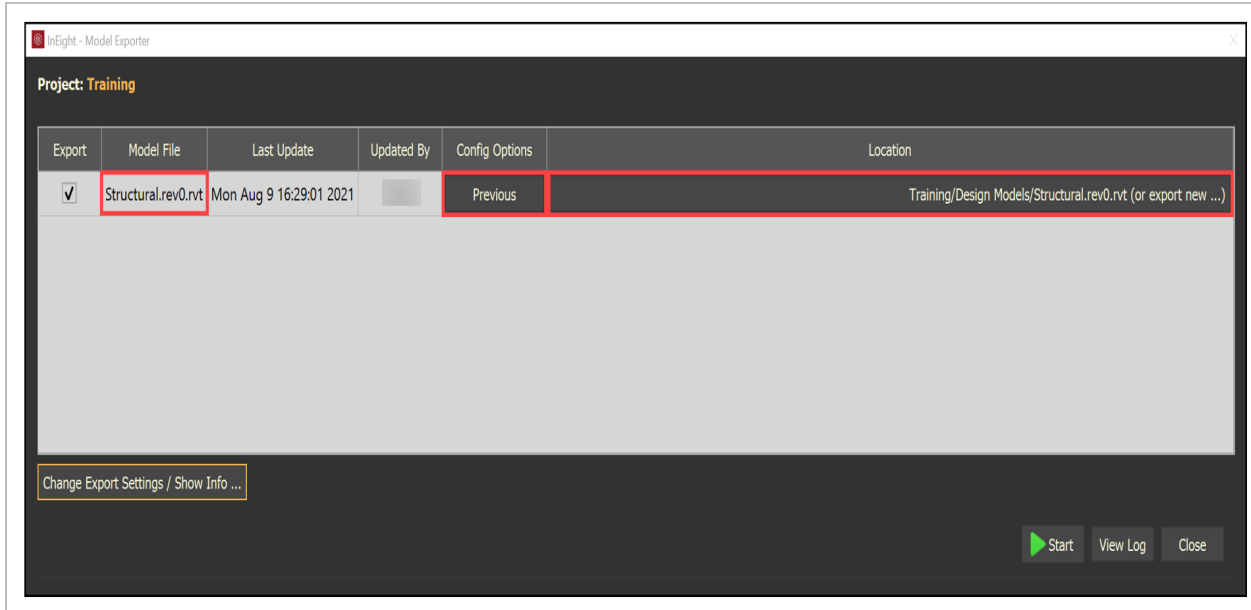


Notice the following parameters while updating the model.

- The **Model file** is the same file name that you have opened to update.
- The **Location** is populated from the previous selection and lets you export as a new model.
- The **Config Options** use the previous settings.

3.4.0.2 Model with a Revised Name

Follow the same procedure of the initial exporting from AutoCAD or Revit or importing an IFC file.

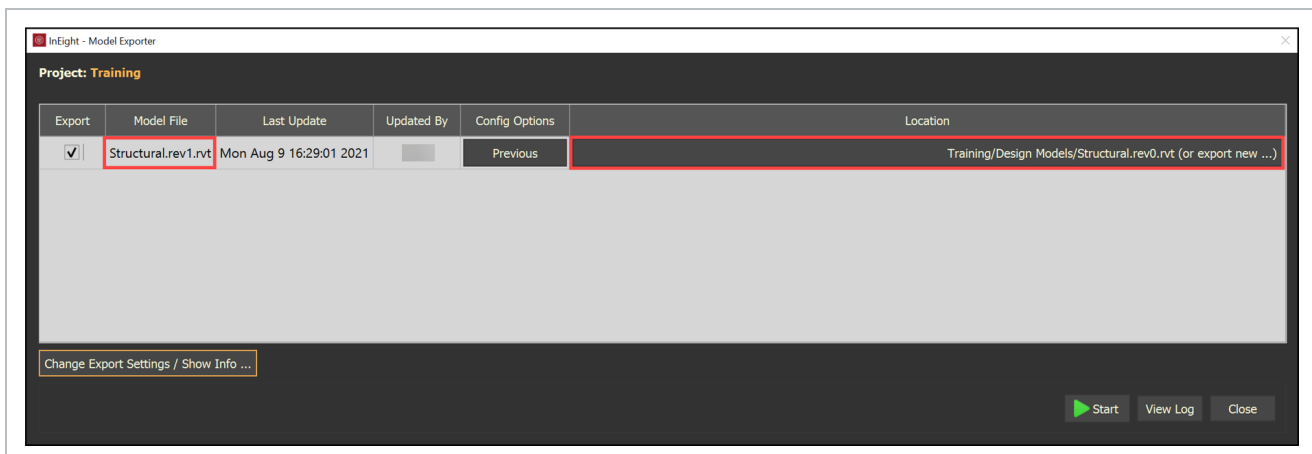


Notice the Model file has .rev2 added to it, different from the initial file name.

NOTE The system puts the revised model stream in the previously selected location.


3.4 Step by Step 1 — Resolve Model Conflict

1. Select Resolve Model Conflict...

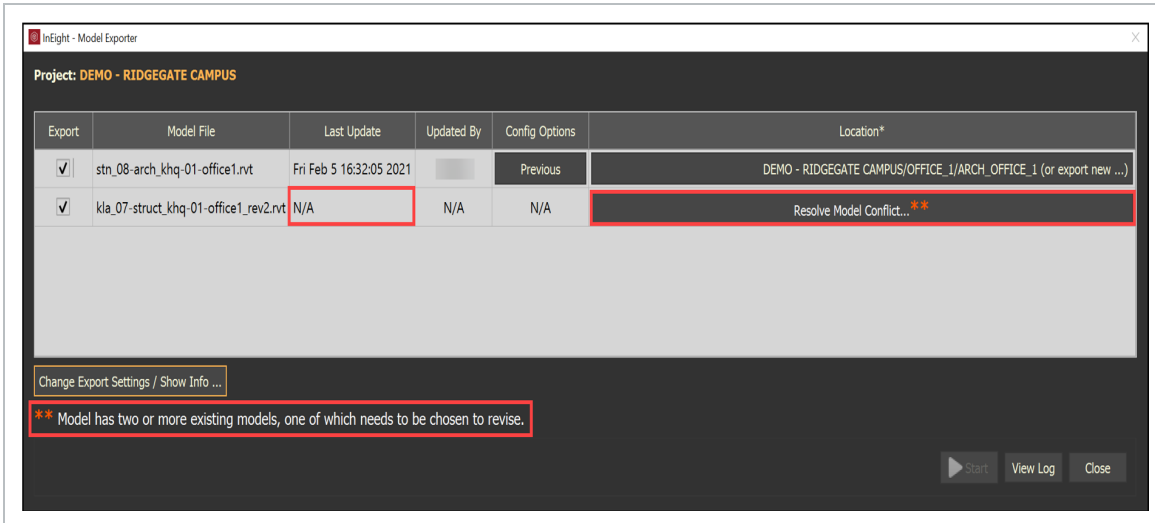


- The Resolve Conflict window opens

2. Select the applicable model stream to be revised.

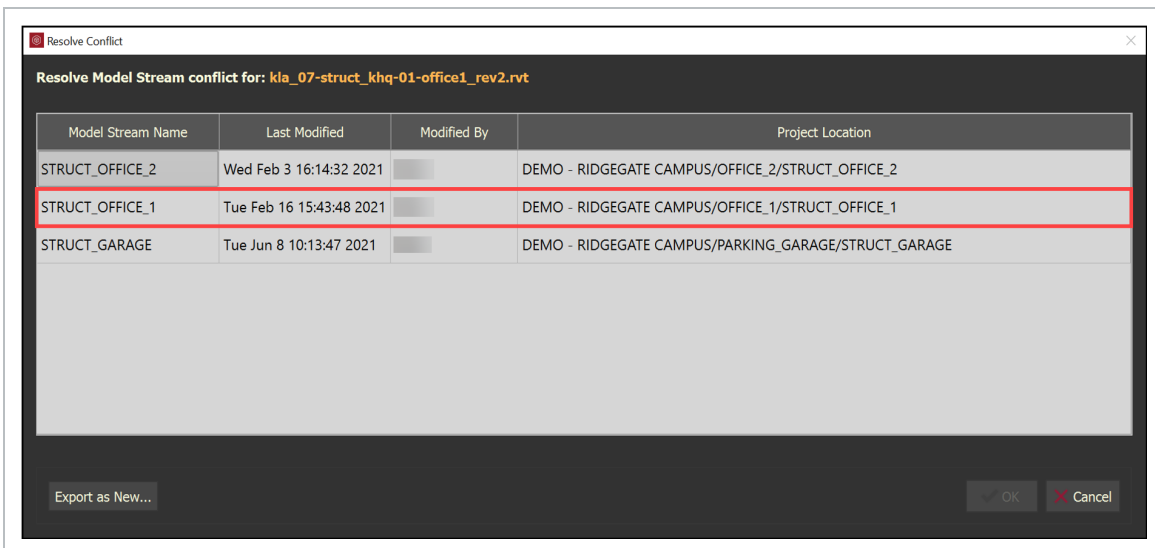


3. Select **Export as New...** if this is a new Model Stream.

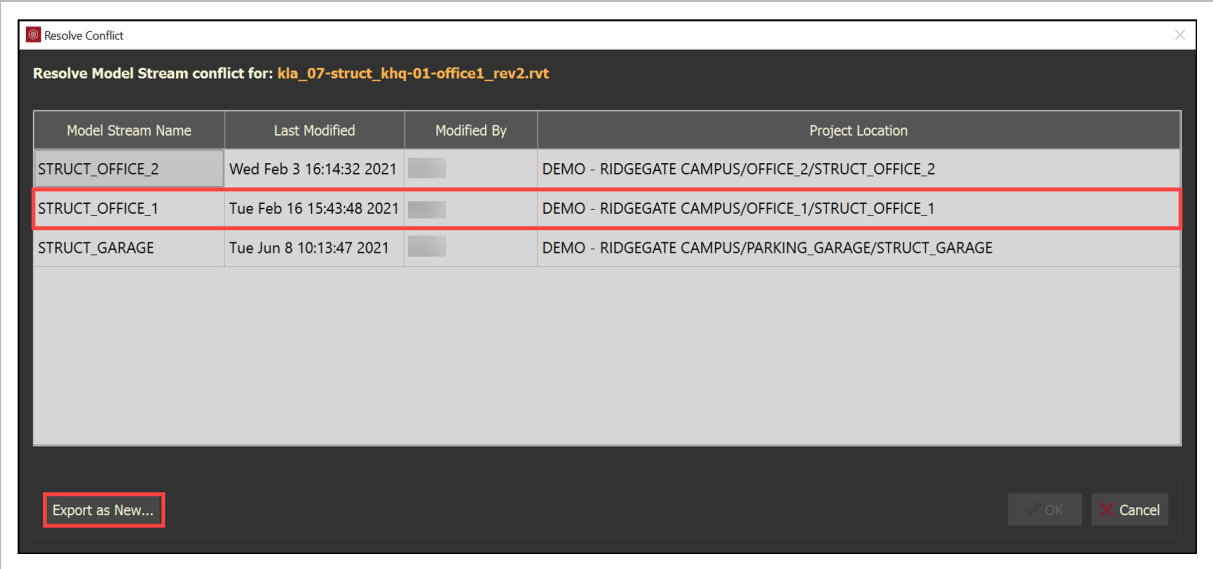

- The Choose Location window opens.

4. Select the preferred location in the Project Structure.

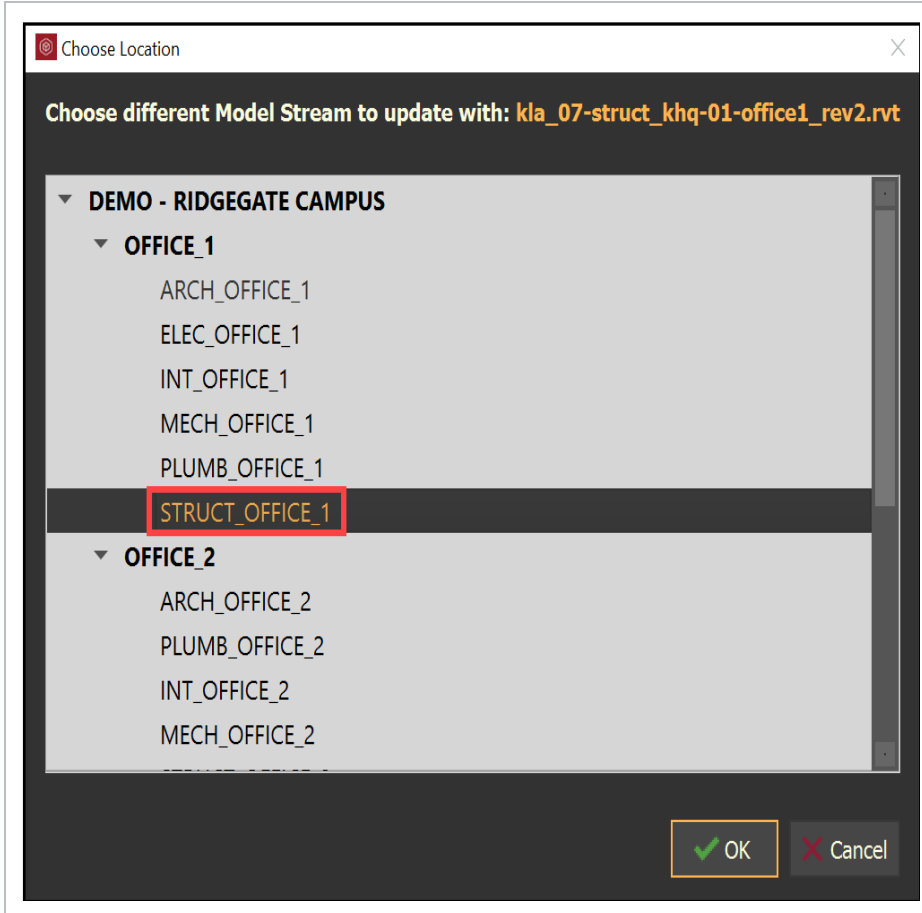

5. Select **OK** to complete.


NOTE

When exporting a model with a similar name to more than one model, the system shows **Resolve Model Conflict...** in the location column.

3.5 ANALYZE MODEL CHANGES

Analyze Model Changes provides the ability to compare models over time. The comparison is not limited to two models, the comparison is triggered off two calendar dates, which could include 2 or more model stream revisions.

The comparison will provide which model stream was compared, how many objects were added, how many objects we updated, and how many objects were removed.

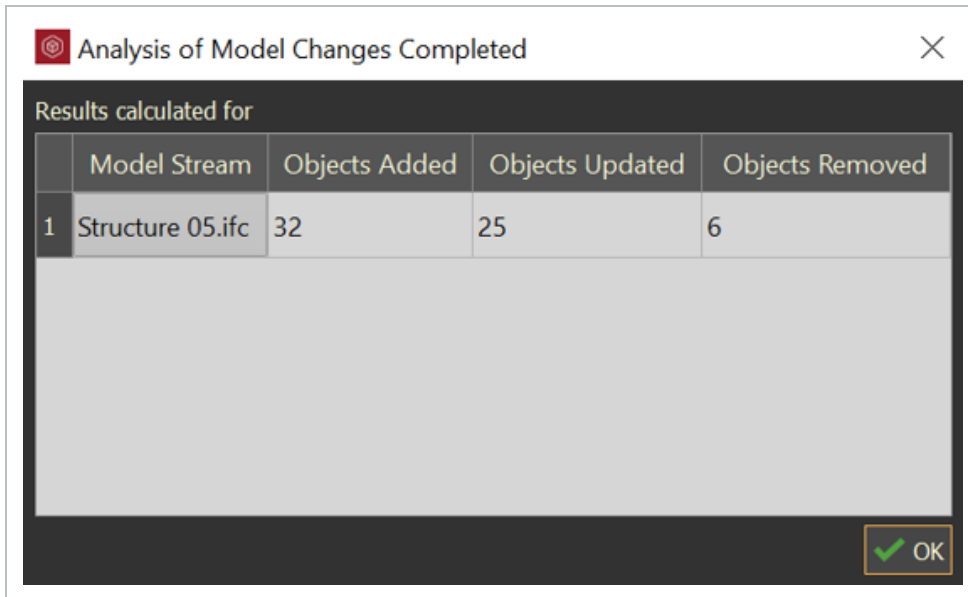


Analysis of Model Changes Completed

Results calculated for


	Model Stream	Objects Added	Objects Updated	Objects Removed
1	Structure 05.ifc	32	25	6

OK

The comparison will also create a new Tag Category named Tag_User with two tag values: *(date range) (Model Stream Name)_added* and *(date range) (Model Stream Name)_updated*.

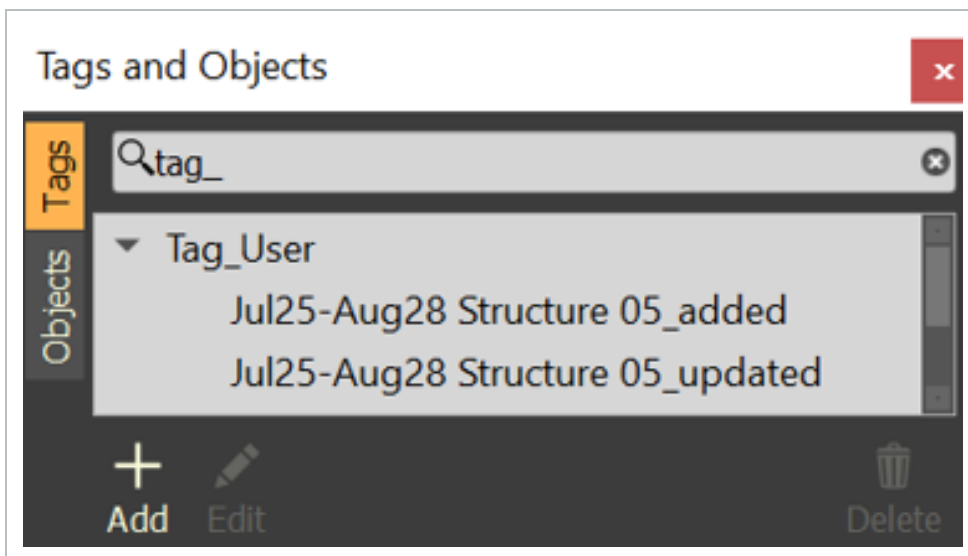


Also, a Style Set is created within the Styling Panel with the name *(date range) (Model Stream Name)*

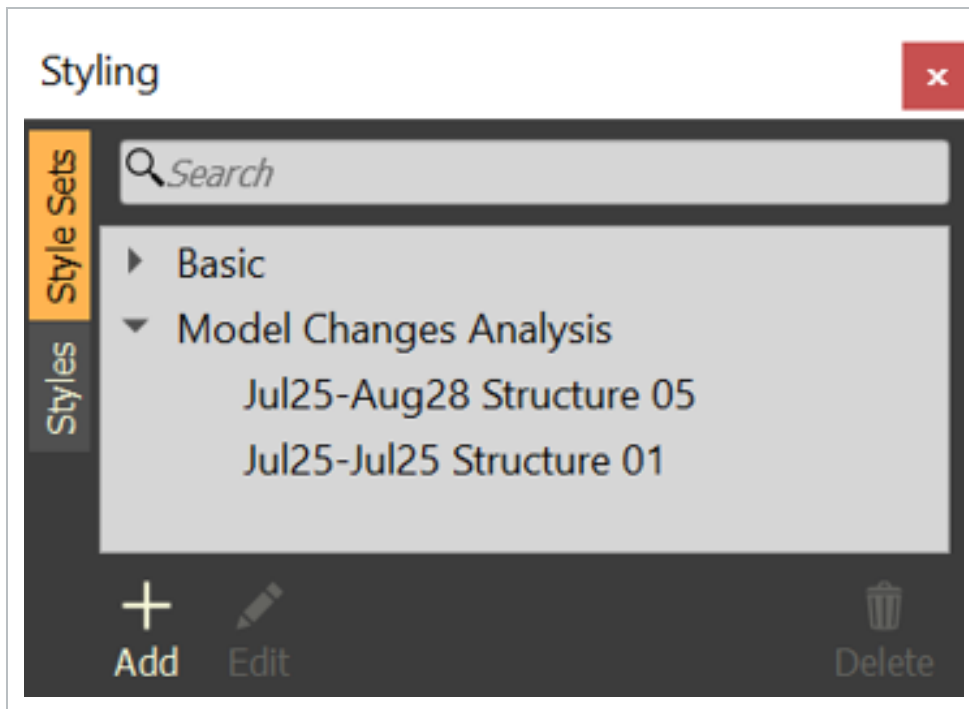


3.5 Step by Step 1 — Analyze Model Changes


1. Have two versions of the model stream published.
2. Within the Project Structure dialog box, select on a model stream to identify the date range to use for the comparison.

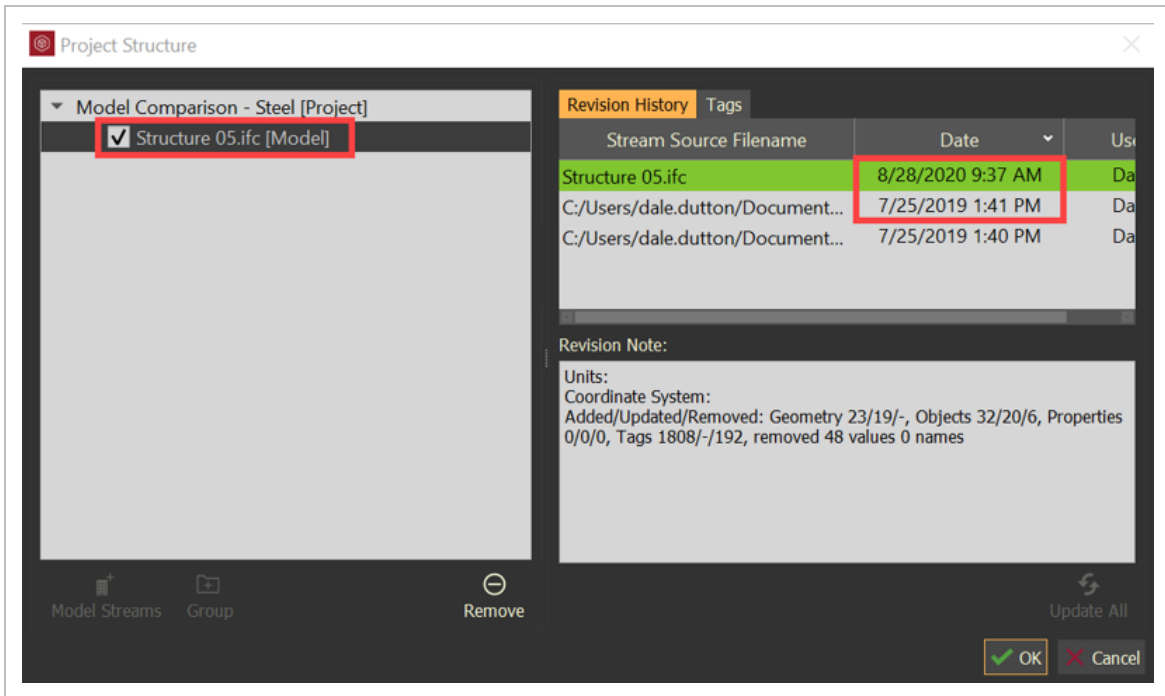


- 3. Close Project Structure dialog box.
- 4. Close Project Structure dialog box.

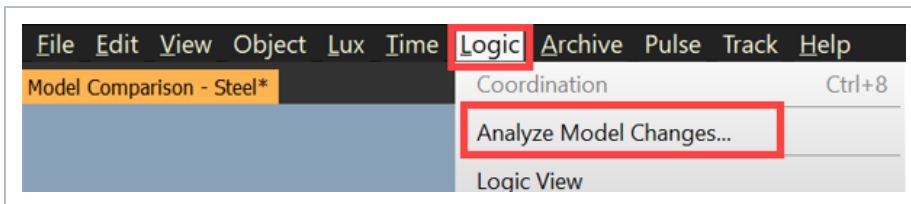


5. Select the **Model Stream**, set the date time frames, then click **OK**.

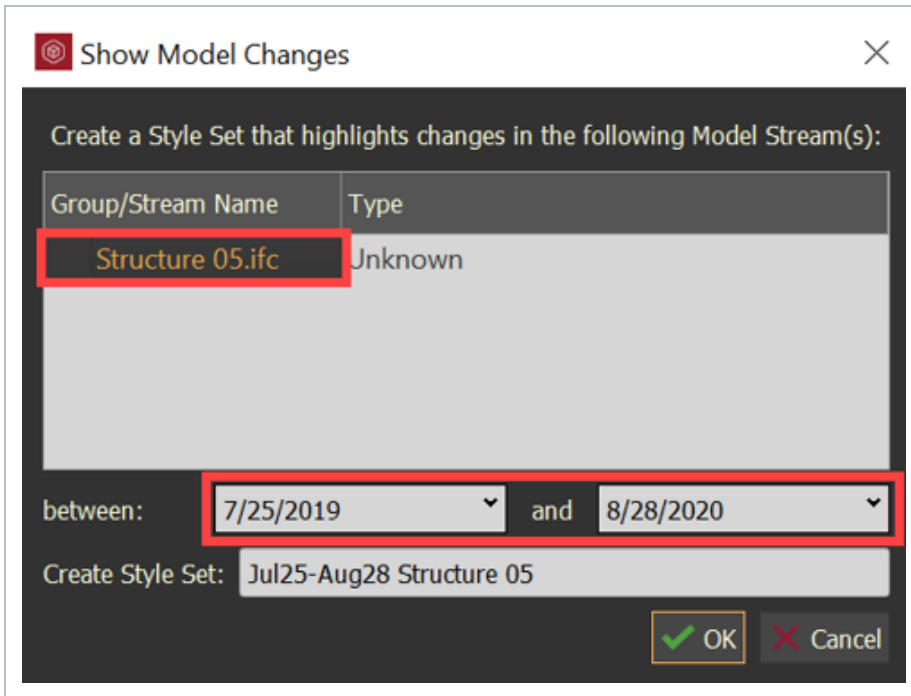


- The Analysis of Model Changes Completed dialog box will open

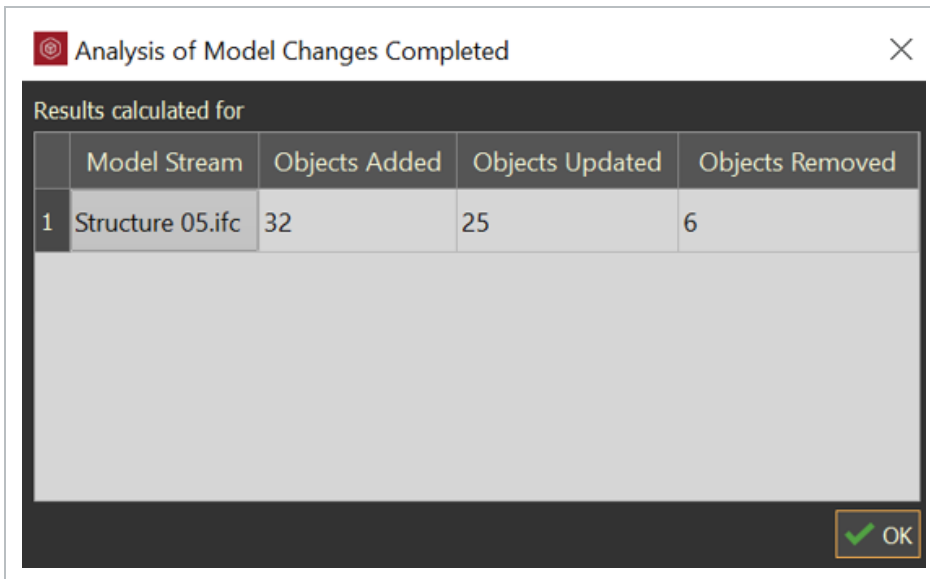

- Tag_User category was created with two values “_added” and “_updated”

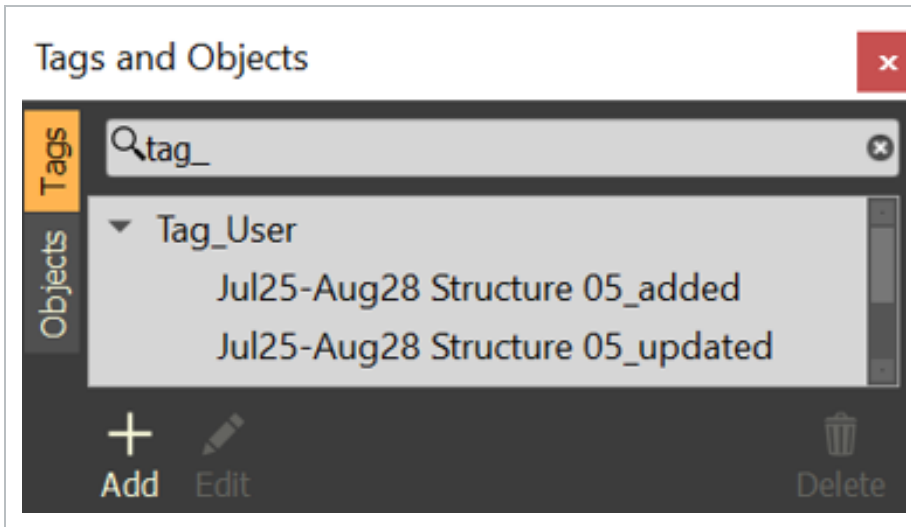

- A Style Set was created coloring the “Added” objects Lime Green and the “Updated” objects Orange

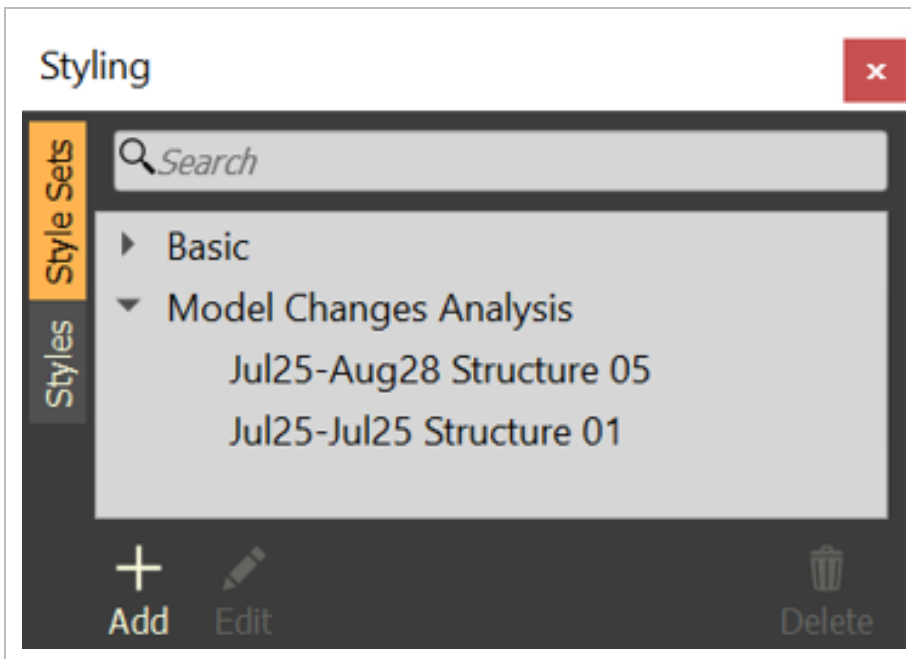



LESSON 4 – PROJECT STRUCTURE

Lesson Duration: 50 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Navigate the project structure panel
- Create and delete model stream groups
- Change active model stream revision and revise model stream revision
- Disable and remove model streams
- Add model streams from other projects


Topics in this Lesson

4.1 PROJECT STRUCTURE OVERVIEW


Project Structure is where model streams are housed after the export from authoring tools or the import of IFC type files. It provides the ability to interact with model streams by grouping and organizing, removing, temporarily disabling, accessing the revision history, importing other models streams from other projects in the environment, and more.

4.1.1 Project Structure Panel


To access the **Project Structure panel**, Select **File** from the menu bar at the top of the screen. Then, select **Project Structure**.

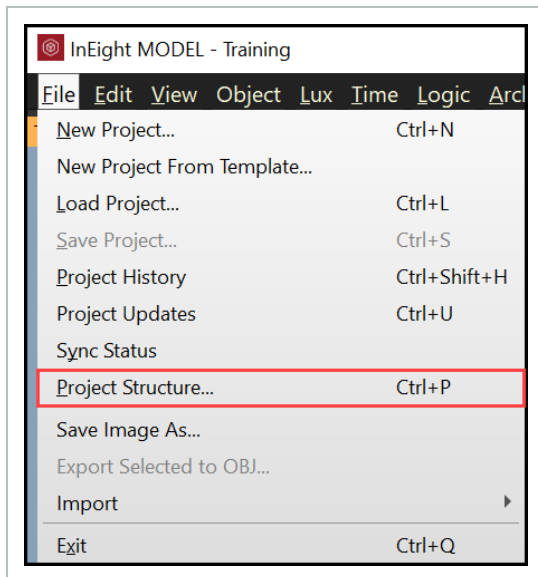

This will open the Project Structure panel.

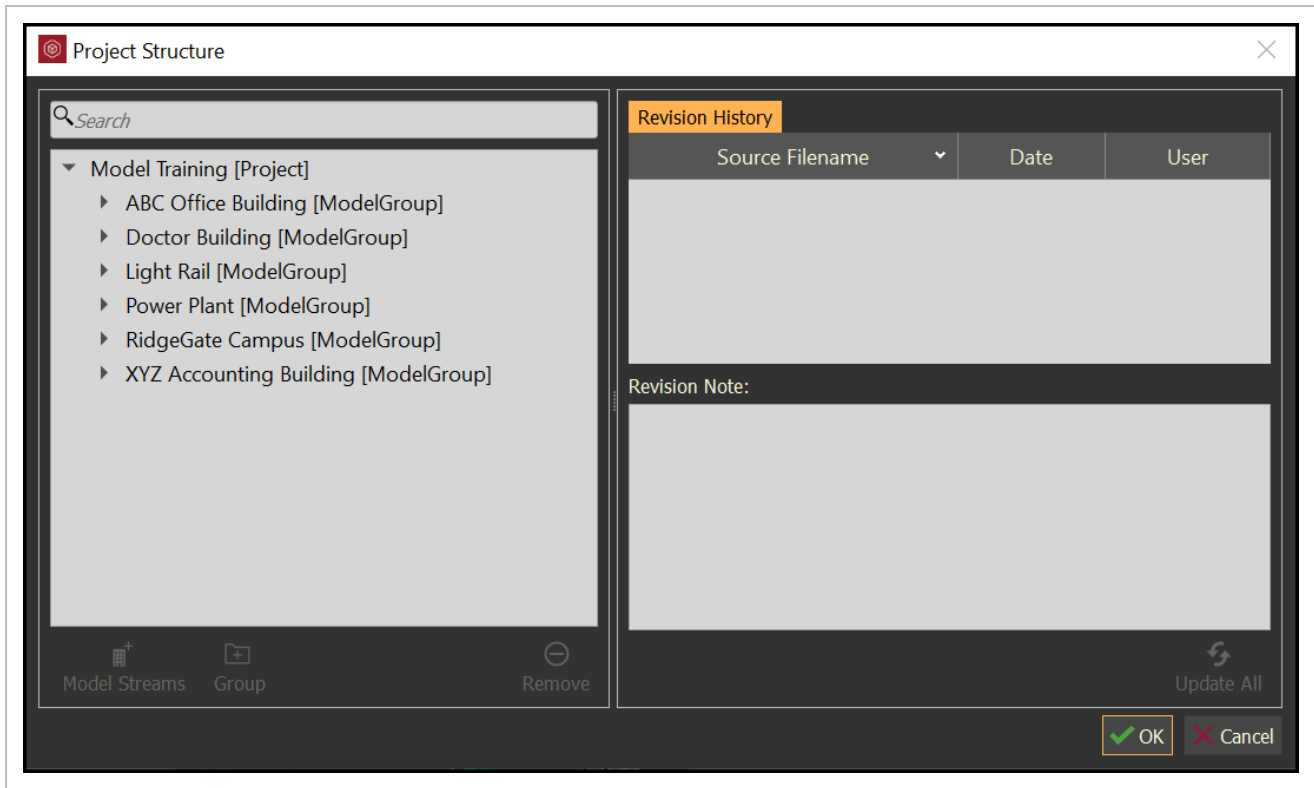

By selecting the project name within the tree structure, all the project **Revision History** will be displayed. Select on a revision to review the **Revision Notes**.

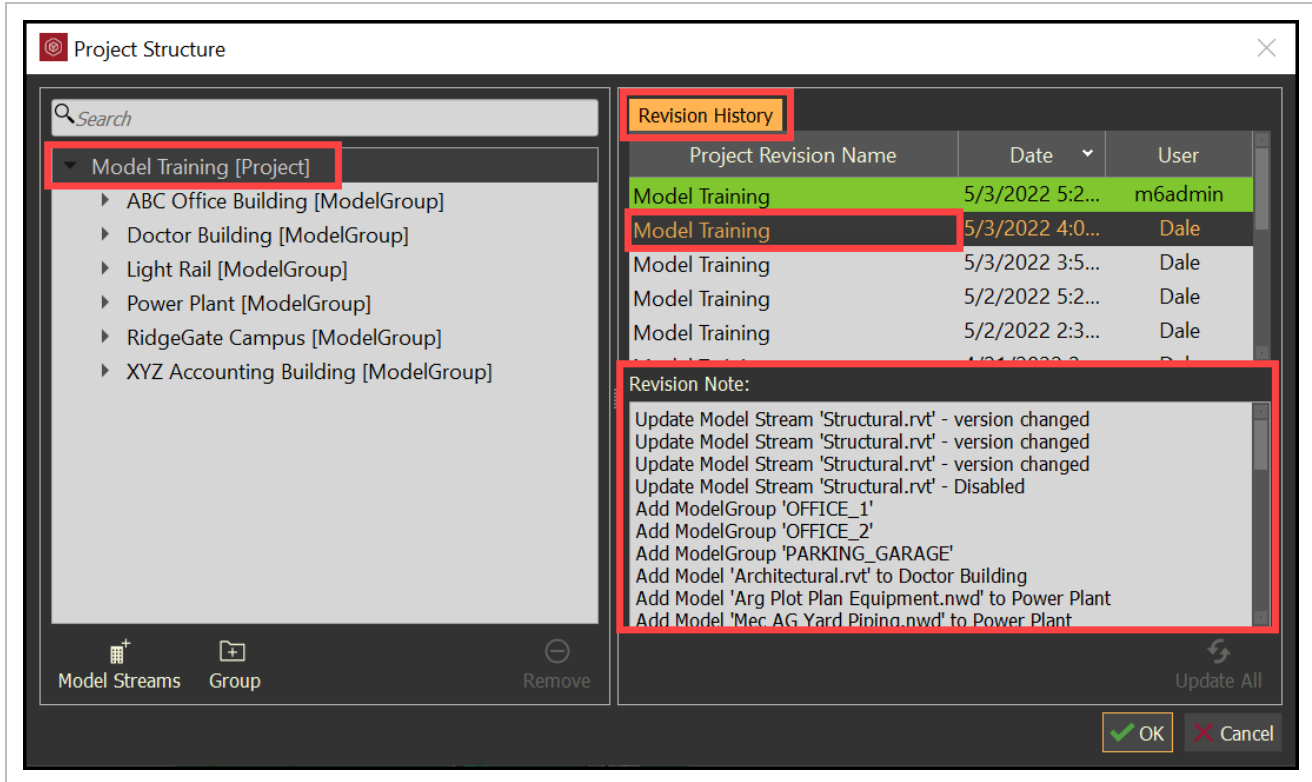


4.2 ORGANIZE MODEL STREAMS


Create groups within the Project Structure tree to organize the model streams for the project. Groups can be created before and or after model streams have been imported into the project. Model Stream Placeholders can also be created identifying anticipated or planned project model streams.

4.2 Step by Step 1 — Create Groups


1. Select the **project name**.
2. Select the **Group** icon.

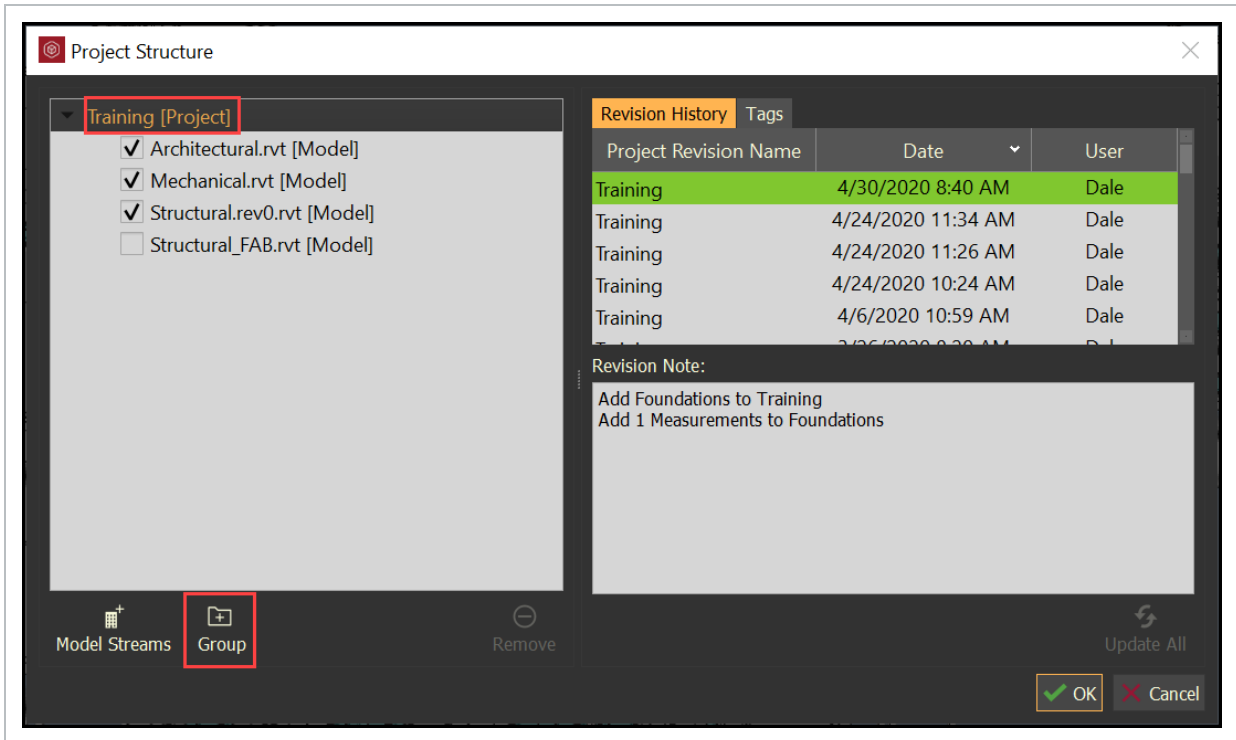


3. Type in a group name, then click **OK**.

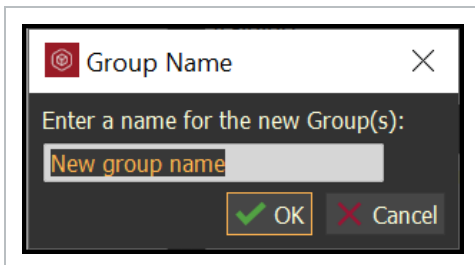

4. Drag and drop model streams into group folders.

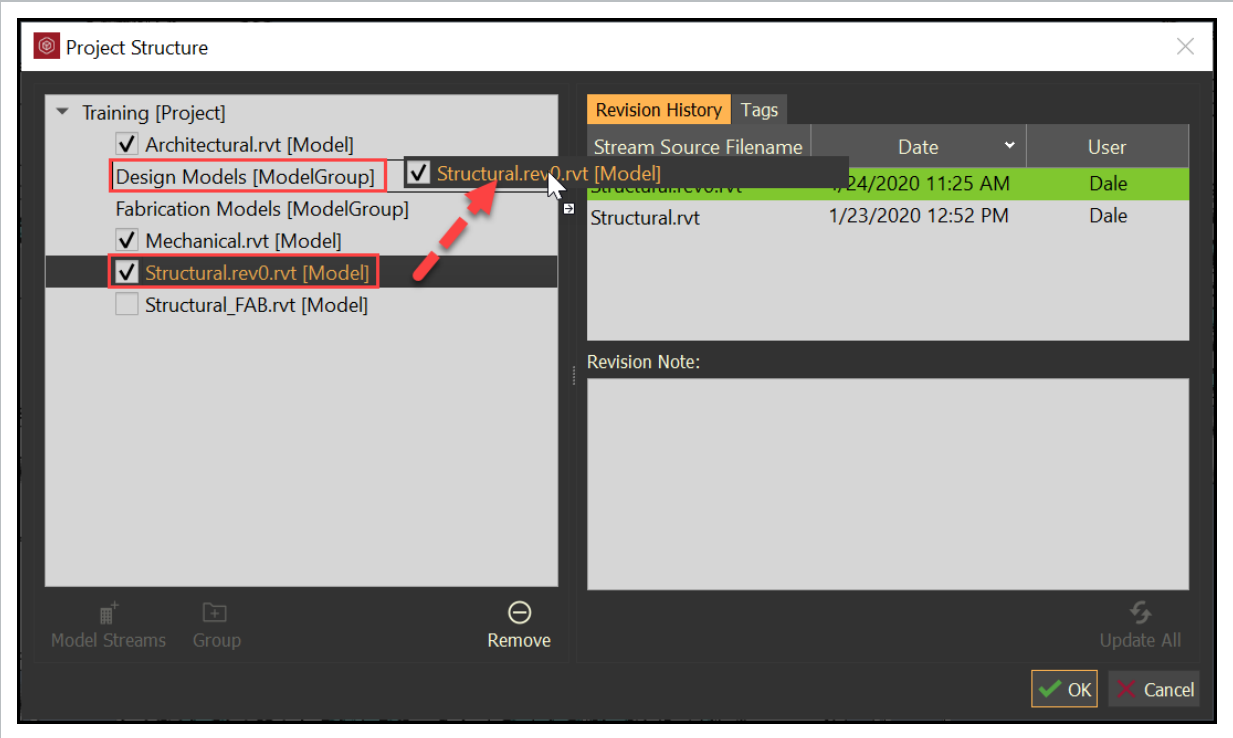


- Possible results of organized models

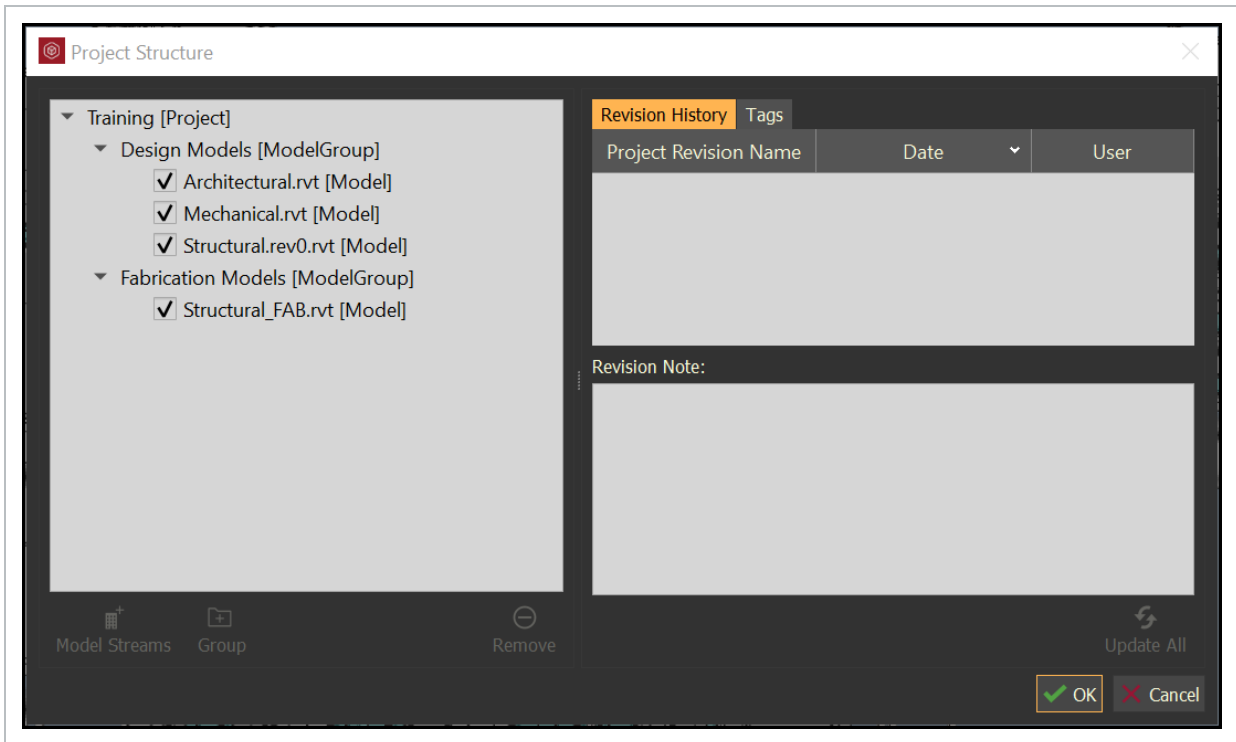


NOTE Once a group name has been created it cannot be renamed. A new group name will need to be created, then you can drag and drop the model streams from one group to the other.

4.2 Step by Step 2 — Delete Groups

1. Select the group name to be deleted.

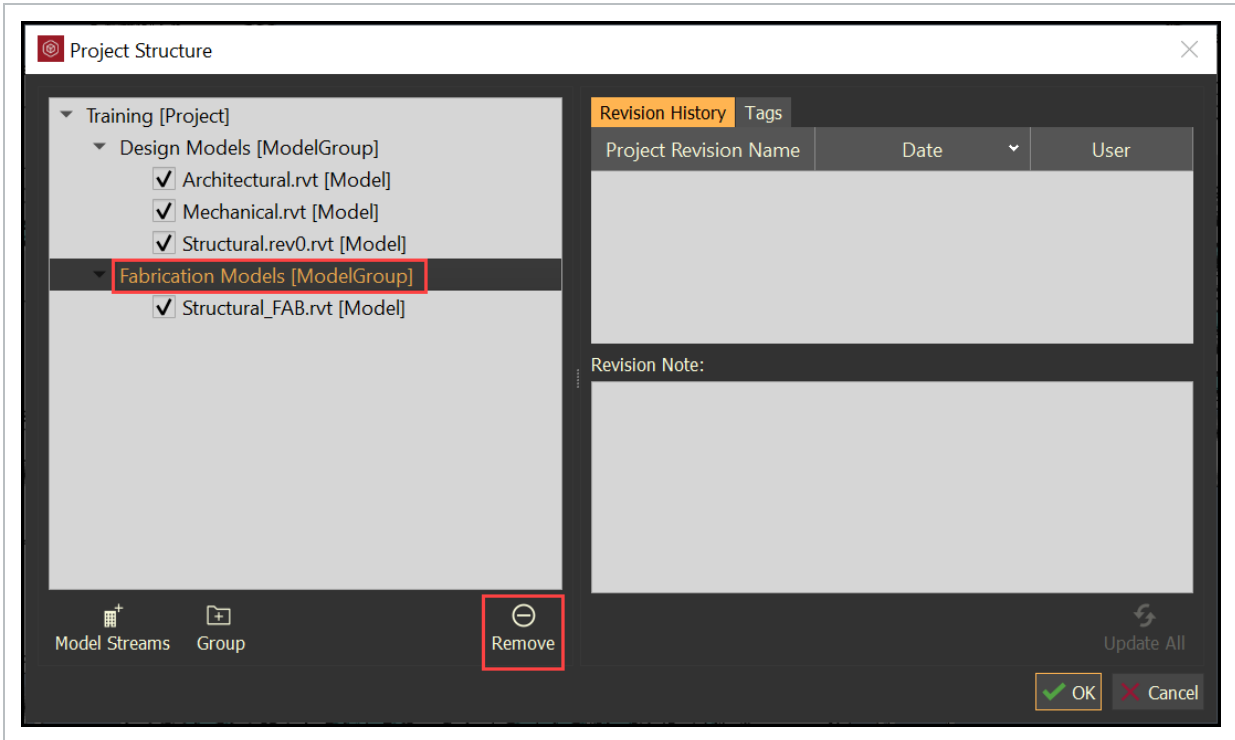


2. Select the **Remove** icon.

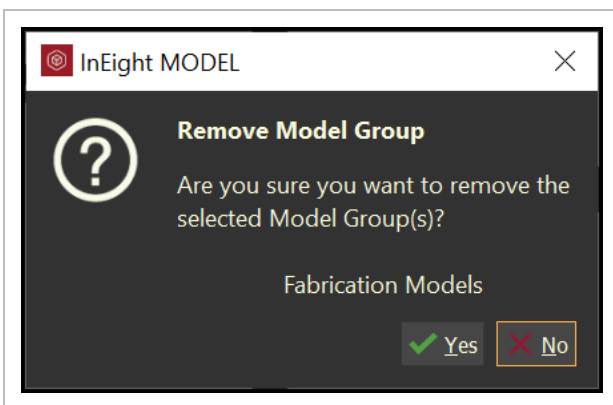


- The Remove Model Group confirmation dialog box will open

NOTE Any model streams within the group that is being removed will be removed as well. The model streams will remain in the database, but not visible within the current project.


TIP The Project Structure will be replicated within the Objects tab within the Tags and Objects Panel.

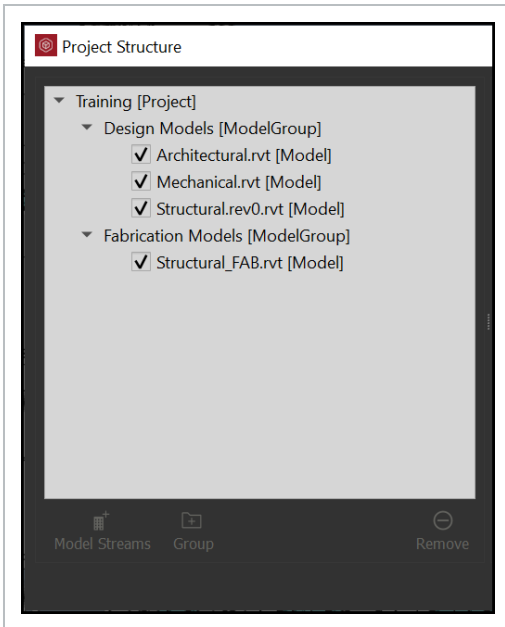

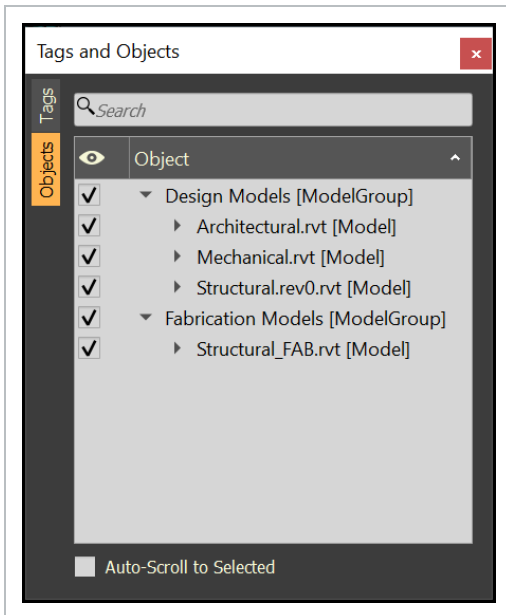


4.2 Step by Step 3 — Creating a Model Stream Placeholder

1. Select on the **Project** or the **Group** for the desired Model Stream placeholder.
2. Select the **Model Streams** icon.

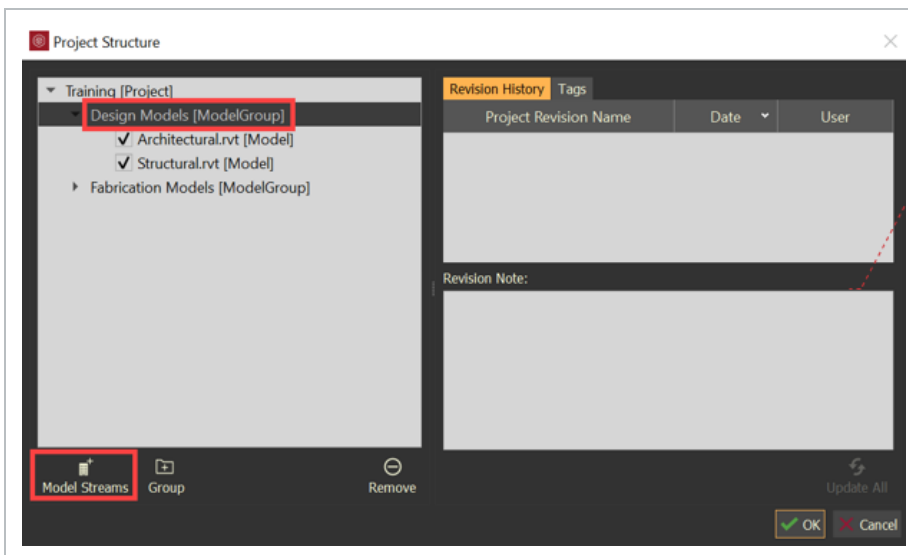


3. Select the **Add Placeholder** icon.

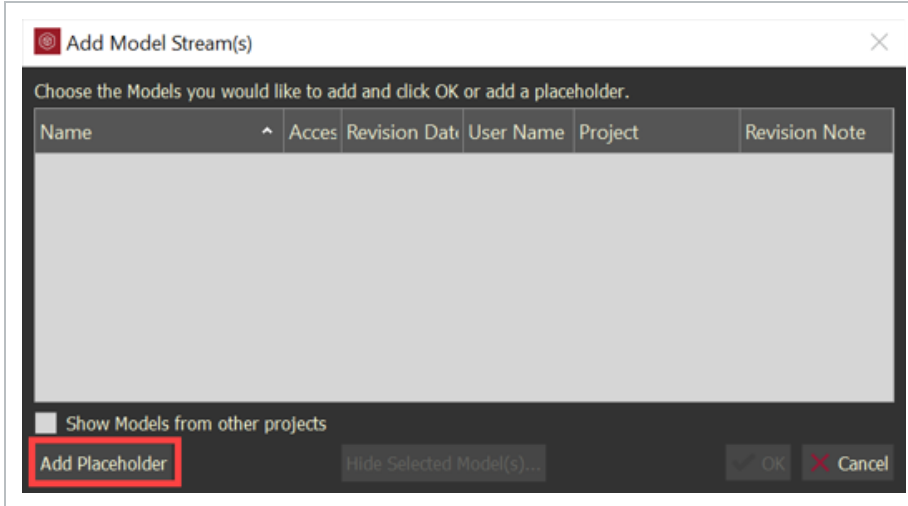


- The Remove Model Group confirmation dialog box will open

4. Type in the anticipated or planned Model Stream name.

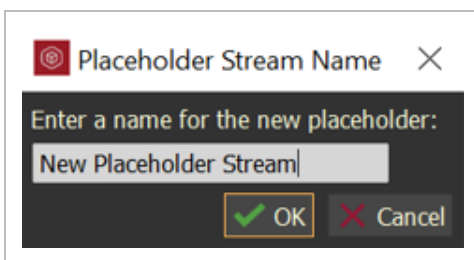

- The Model Stream Placeholder will appear in red until a model stream is uploaded in its place

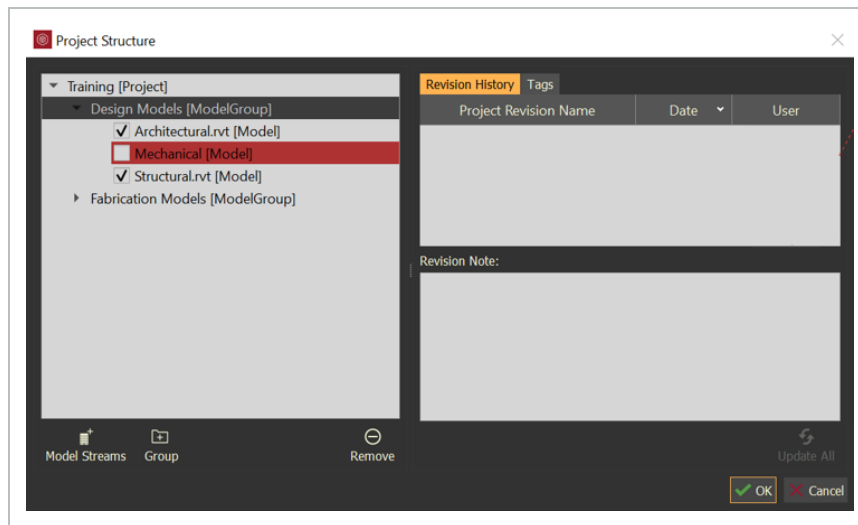


4.3 MODEL STREAM MANAGEMENT

When a model stream is updated from a plugin, a new revision is created in the Project Structure. The **Project Structure** lets the administrator switch the revision of any given model stream in the project.

4.3 Step by Step 1 — Change the Active Model Stream Revision


1. Within the Project Structure tree, select a model stream.
2. Double click on an older revision.

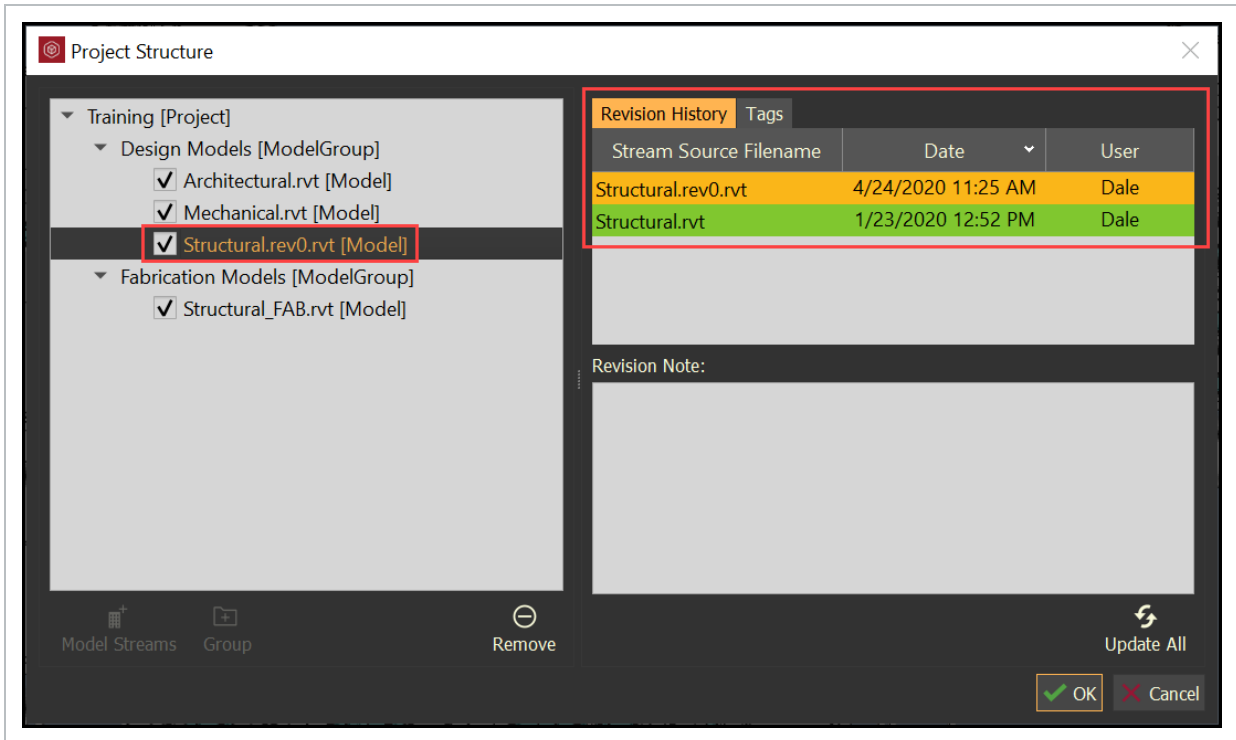

NOTE The current active revision is highlighted in green and the most recent prior revision is highlighted in yellow.


If an administrator changes the revision of any model stream and proceeds to save the project, any user loading the project or accepting updates will also be viewing the historical revision chosen by the administrator. This allows the administrator to roll back to a previous revision, if the latest revision is incorrect or non-compliant.

TIP A model stream will be highlighted in yellow if there is a new model stream revision, but not set as the active revision.

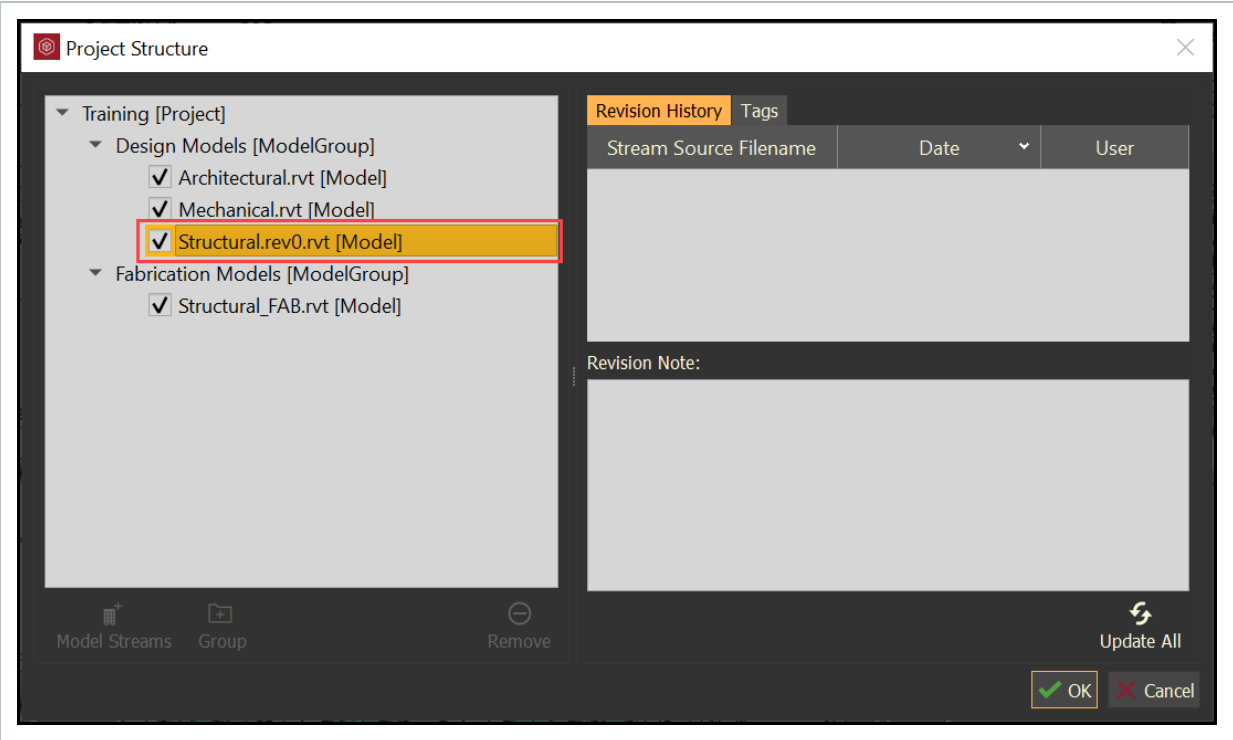

4.3 Step by Step 2 — Update Model Stream Revisions

1. Within the Project Structure panel, click the **Update All** icon.

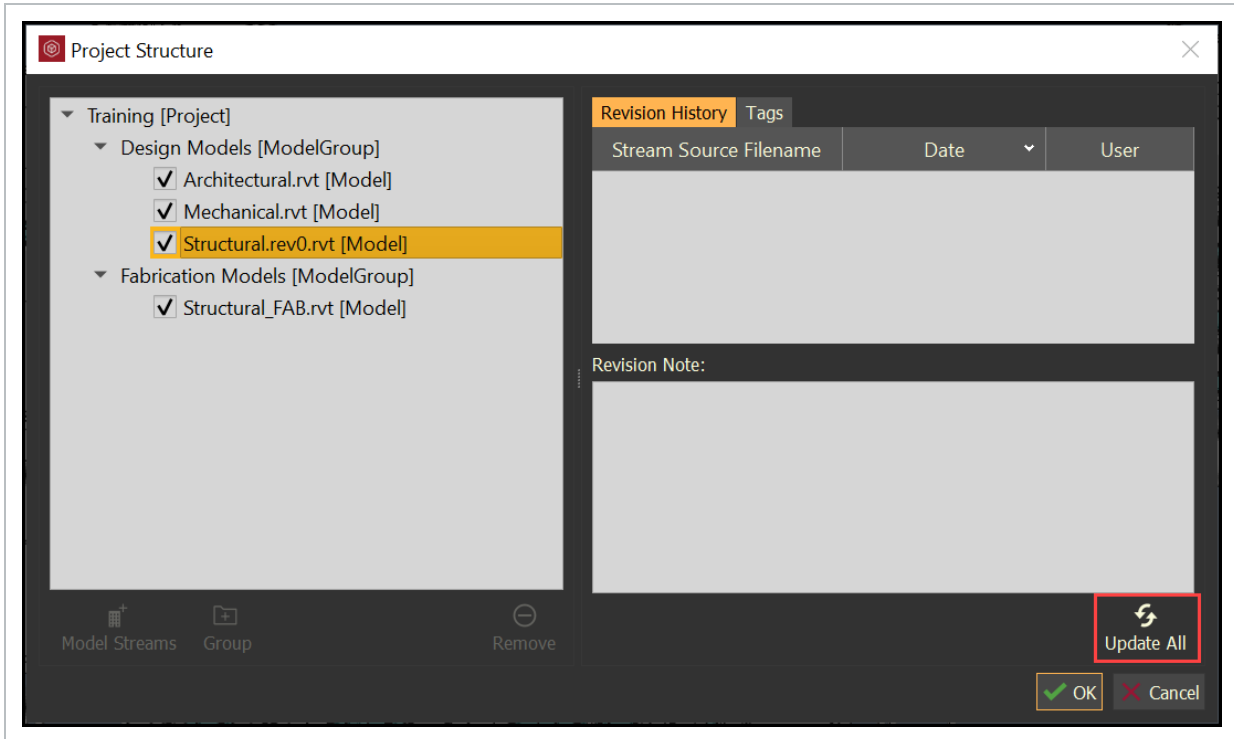**NOTE**


Update all will update all model streams to the latest revision.

TIP

The Update All icon will not be available if there are no old revisions active.

4.3 Step by Step 3 — Disable Model Streams


1. Uncheck the box next to the model stream.
2. Click **OK**.
3. Save the project.

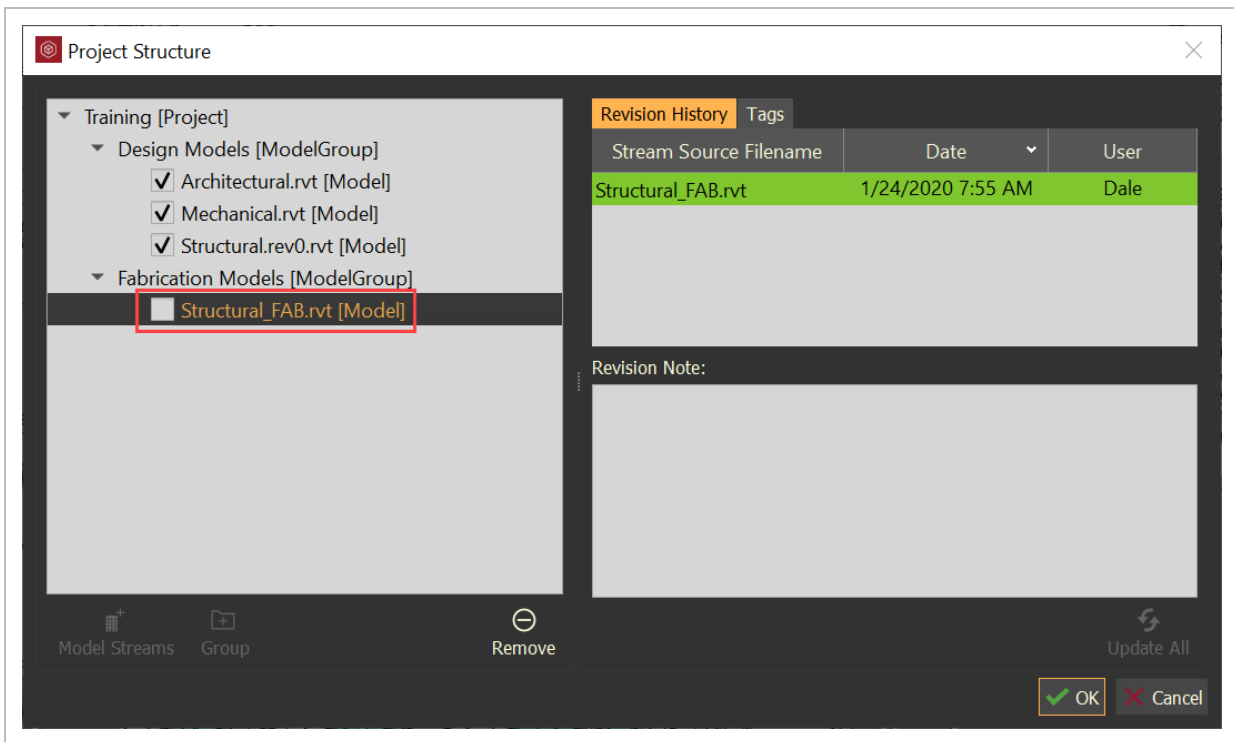


- Once the project is saved, then the model stream is hidden from the project users

4.3 Step by Step 4 — Remove Model Streams

1. Select a model stream.
2. Select the **Remove** icon.

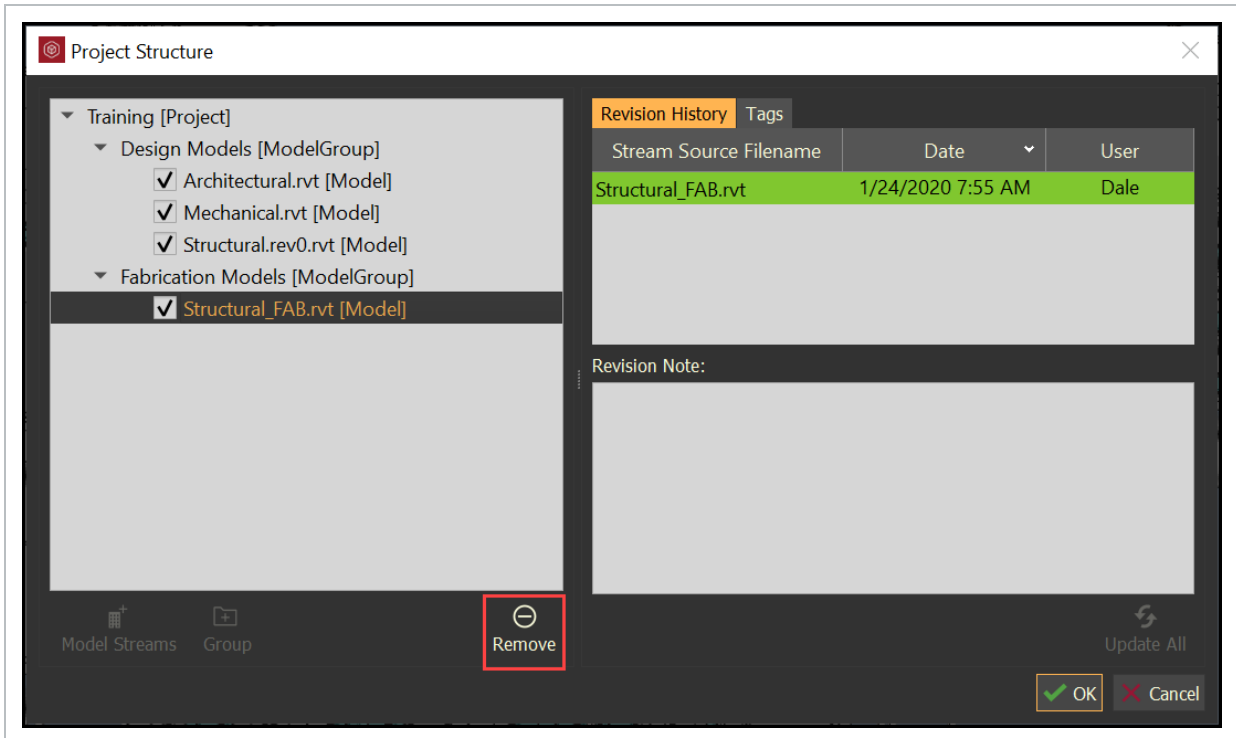

- The Remove and Discard dialog box will open

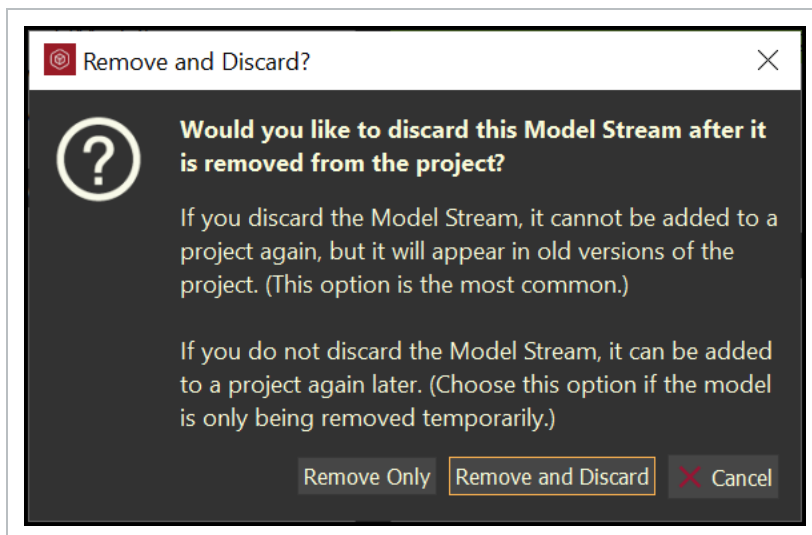


- **Remove Only** -will remove the selected model stream from the current project but it will not remove it from the database
- **Remove and Discard** - will remove the selected model stream from the database.

4.3 Step by Step 5 — Adding Model Streams from Other Projects


Model streams that have been removed with the **Remove Only** command can be reloaded through the **Add Model Stream** icon.

Model streams within the same environment, but in a different project, are accessible to be included in any project within the same environment.


1. Select the root project name or a group folder.
2. Select the **Model Stream** icon.

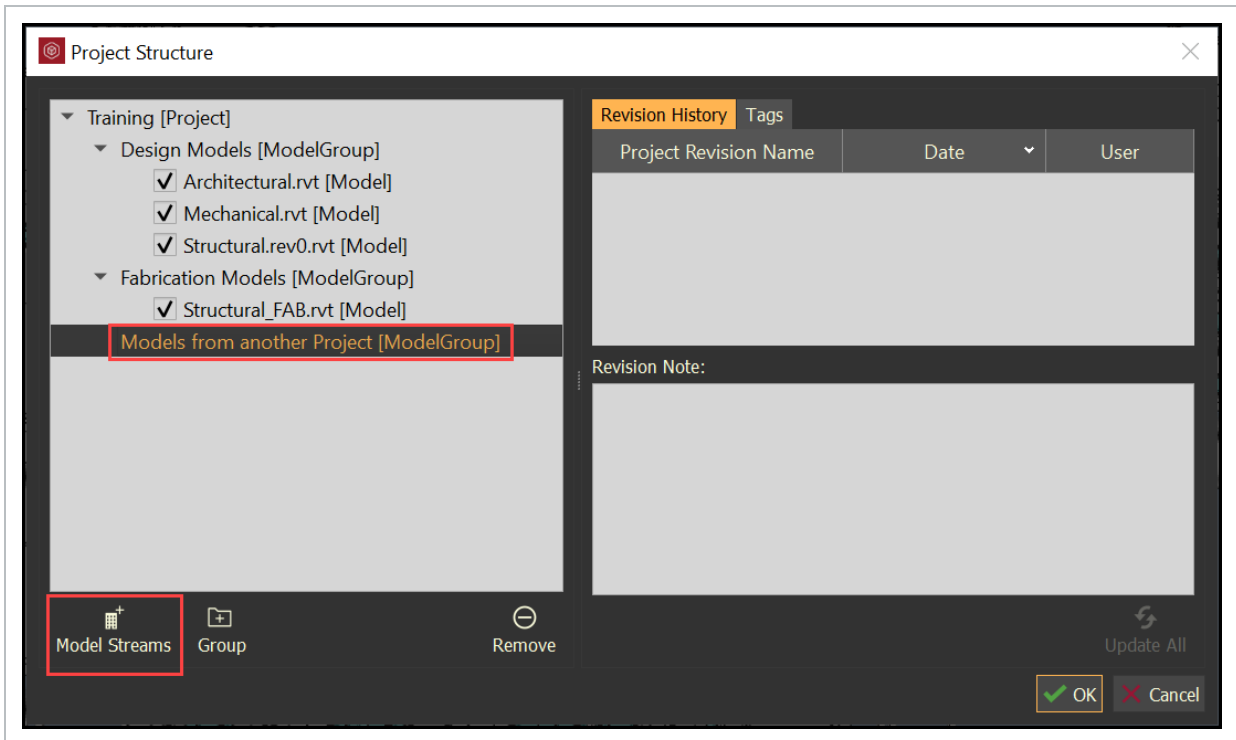


- The Model Stream dialog box will open

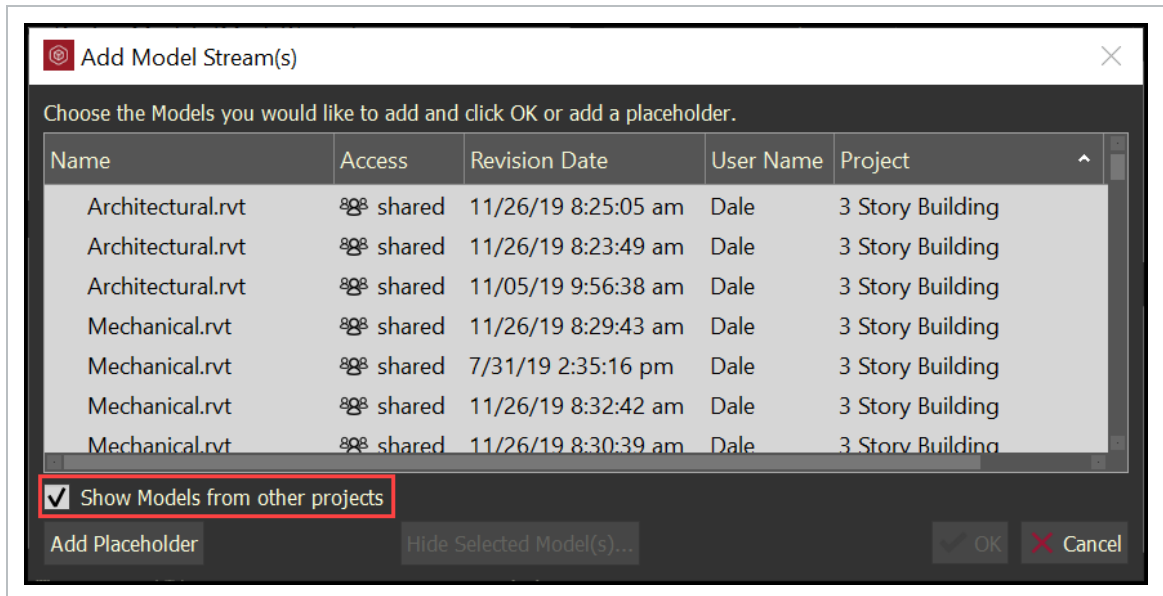

3. Select the desired models to be added to the current project, then click **OK**.

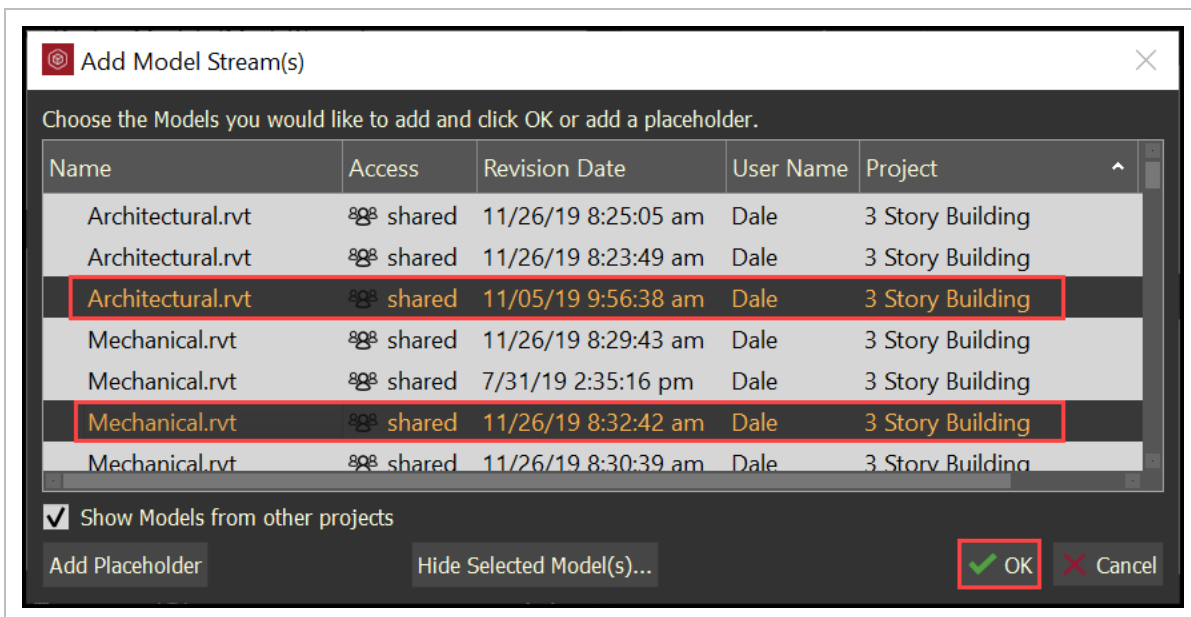


NOTE The select model stream of the particular revision date will be added to the current project along with all older revisions of the model stream.

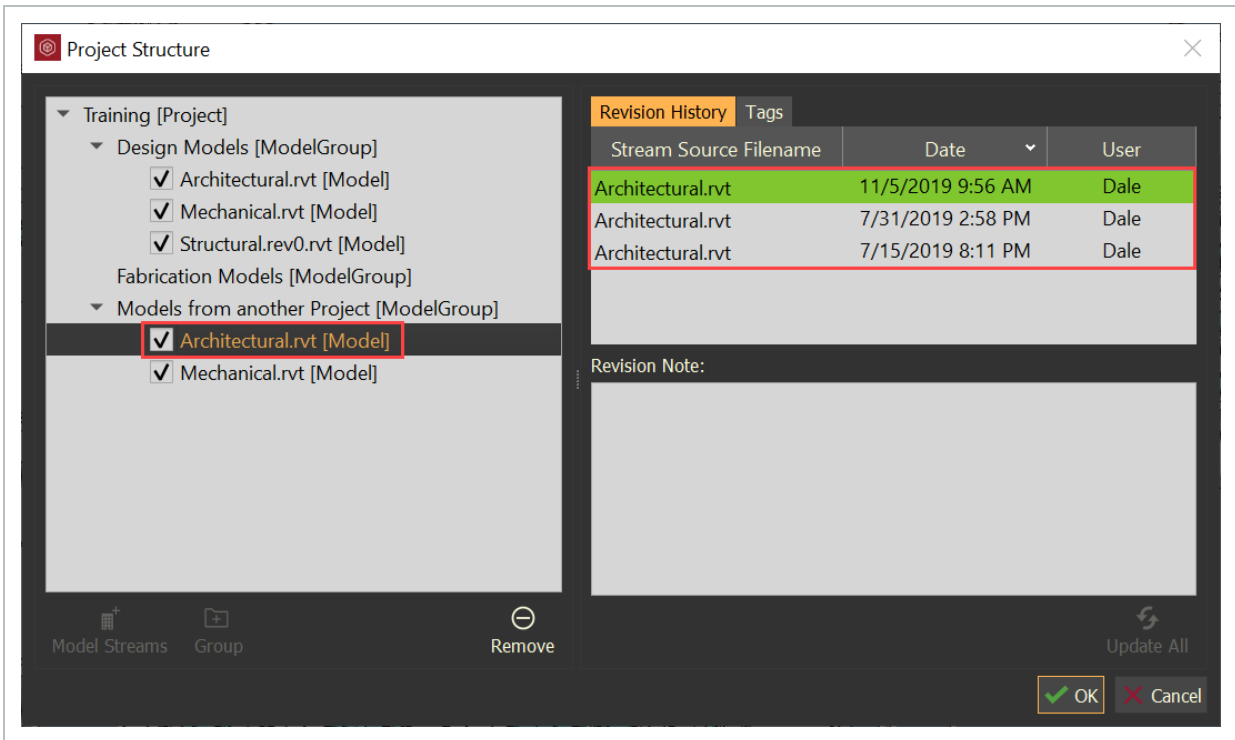


4.3 Step by Step 6 — Publish a Model Stream into a Placeholder

Model Stream Placeholders show as red until a model has been published to replace it.


1. With Model open and the Design Authoring tool (that is, Revit) open, select the **Export Model Stream** icon.

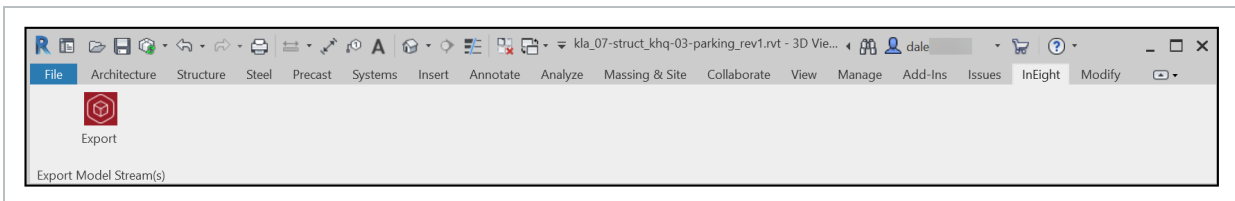

- The Model Exporter dialog box opens.
2. Select **Choose Location**.
 - Even though there is a placeholder that nearly matches the name of the design file, the design file has not been published yet, so it is recognized as a new model

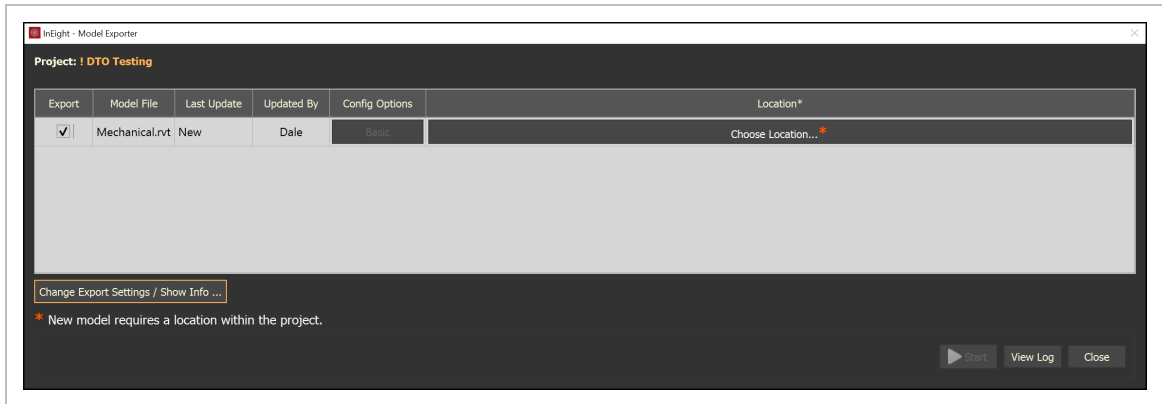


- The Choose Location dialog opens.
3. Select the folder where the Model Stream placeholder is identified.
 - In this example, Mechanical is the placeholder.

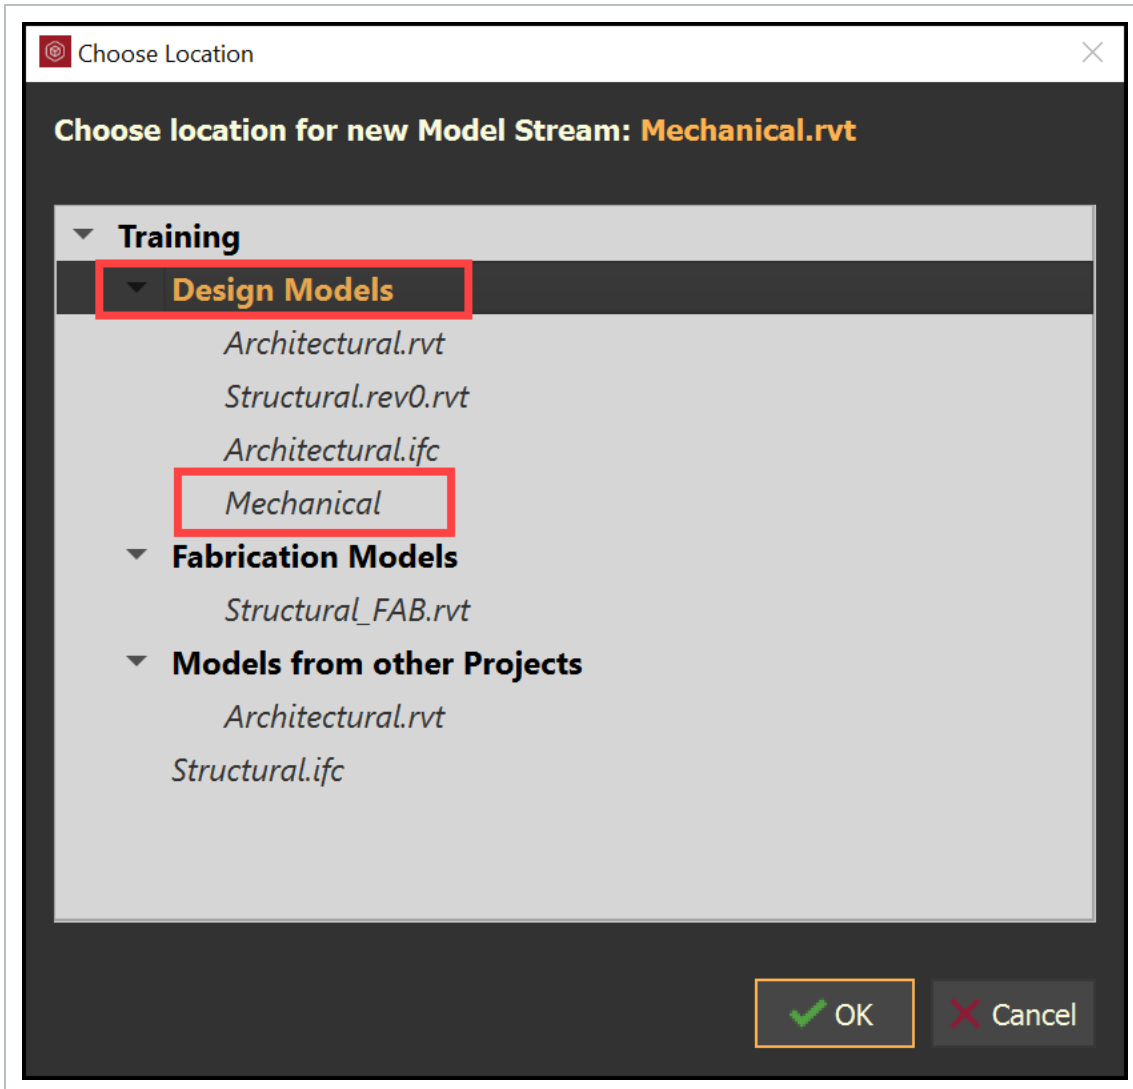
4. Click **OK**.**NOTE**

The new model stream does not replace the placeholder until it is linked to it.


5. Select **Basic** config options.

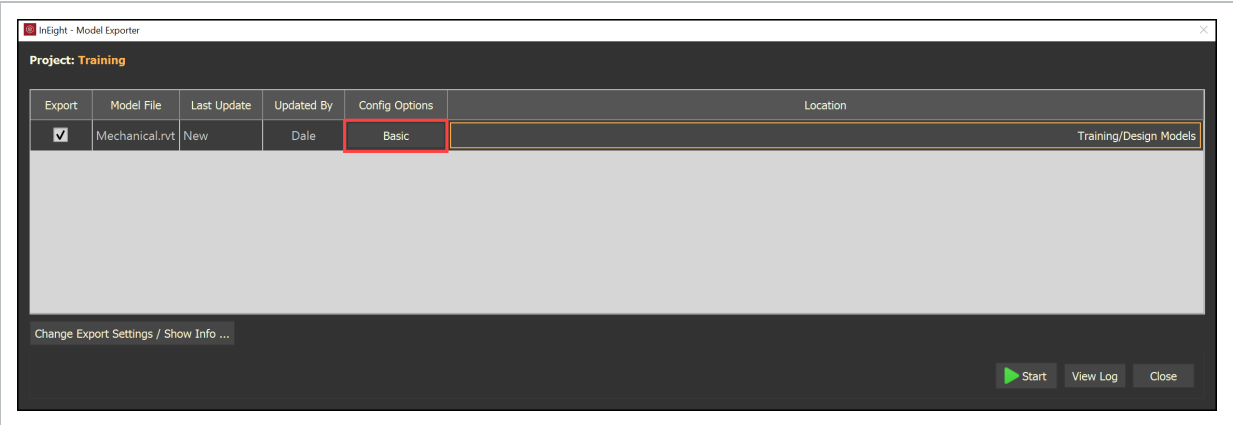


6. Select the **Advanced** tab.

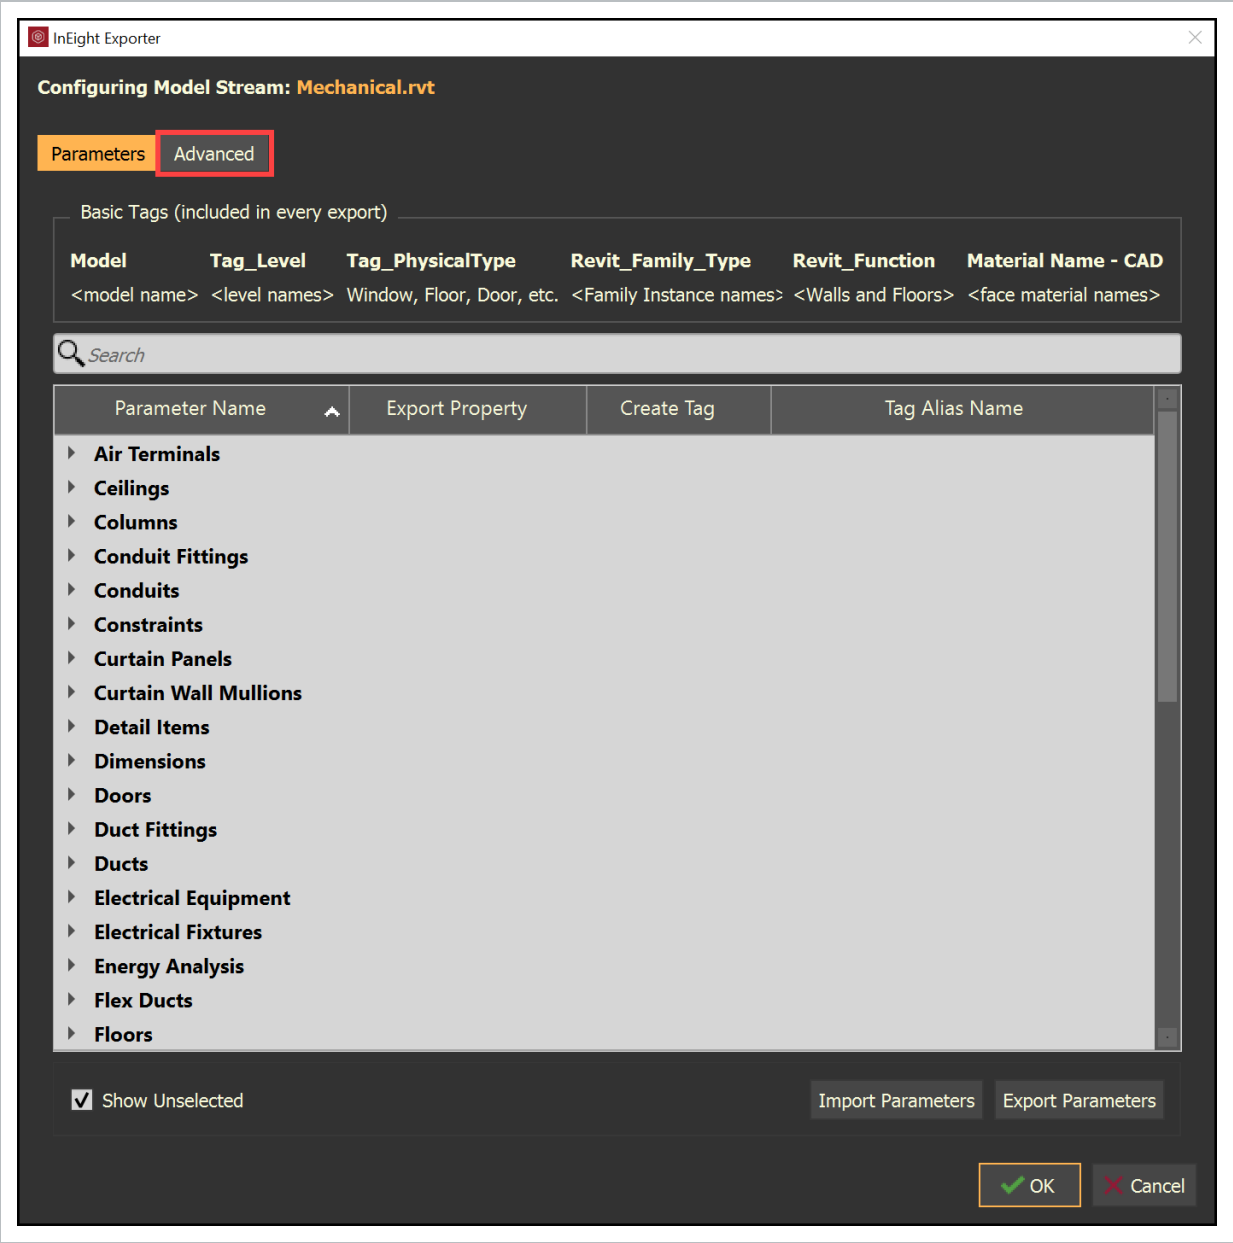


7. Select Choose different model...

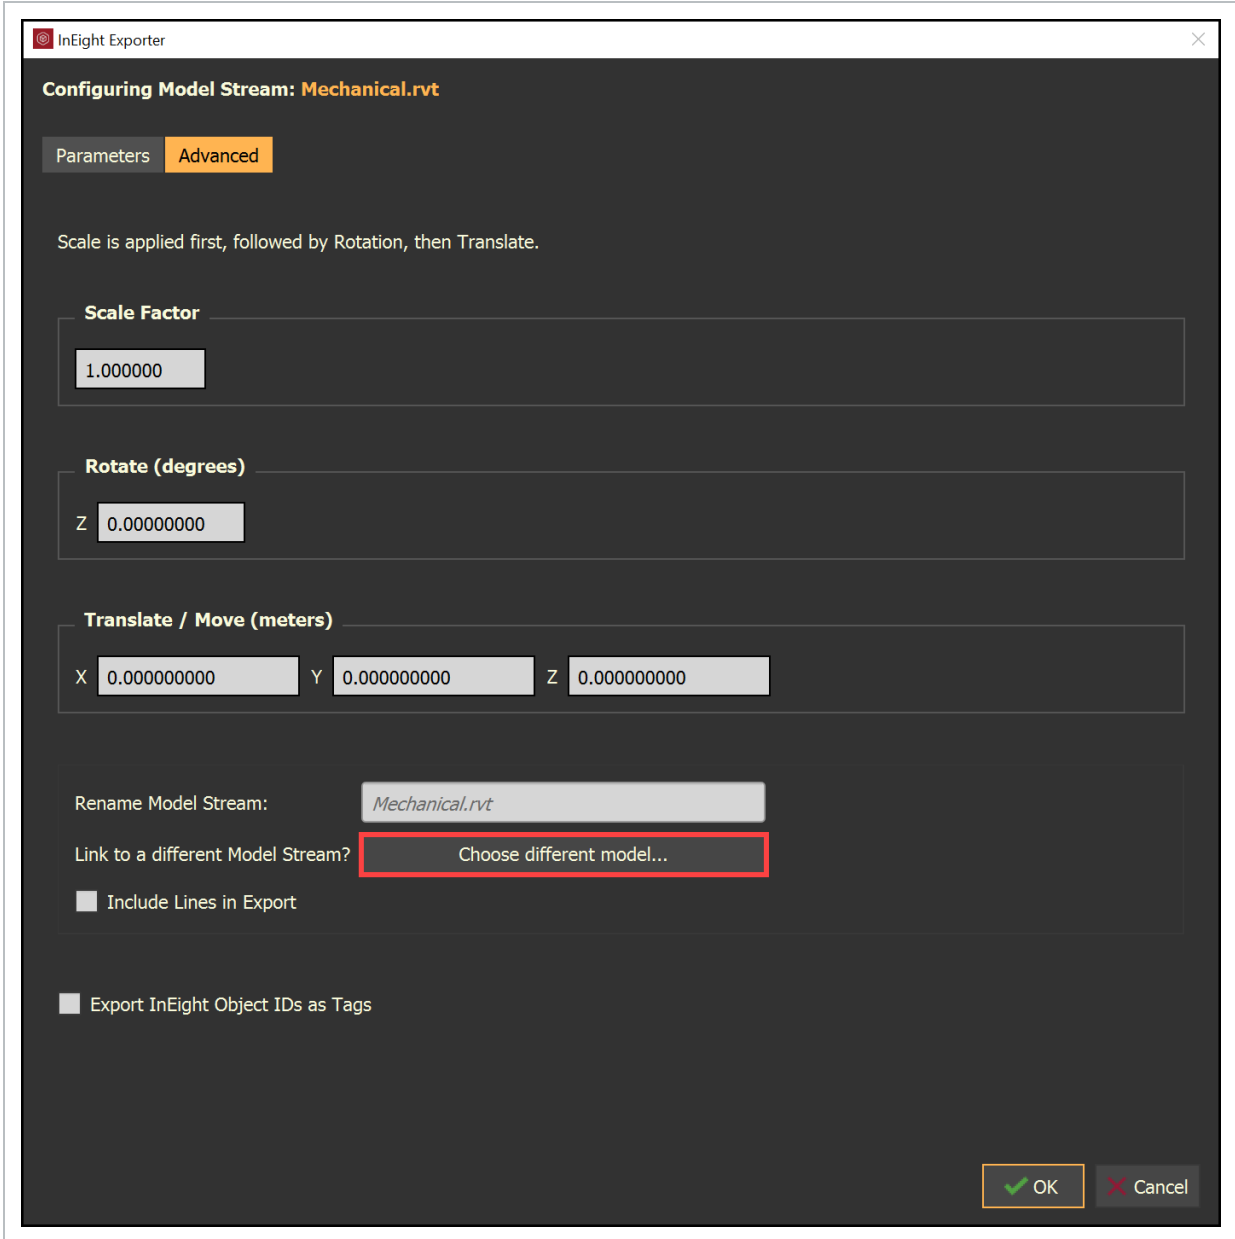

8. Select the **model stream placeholder**, and then click **OK**.

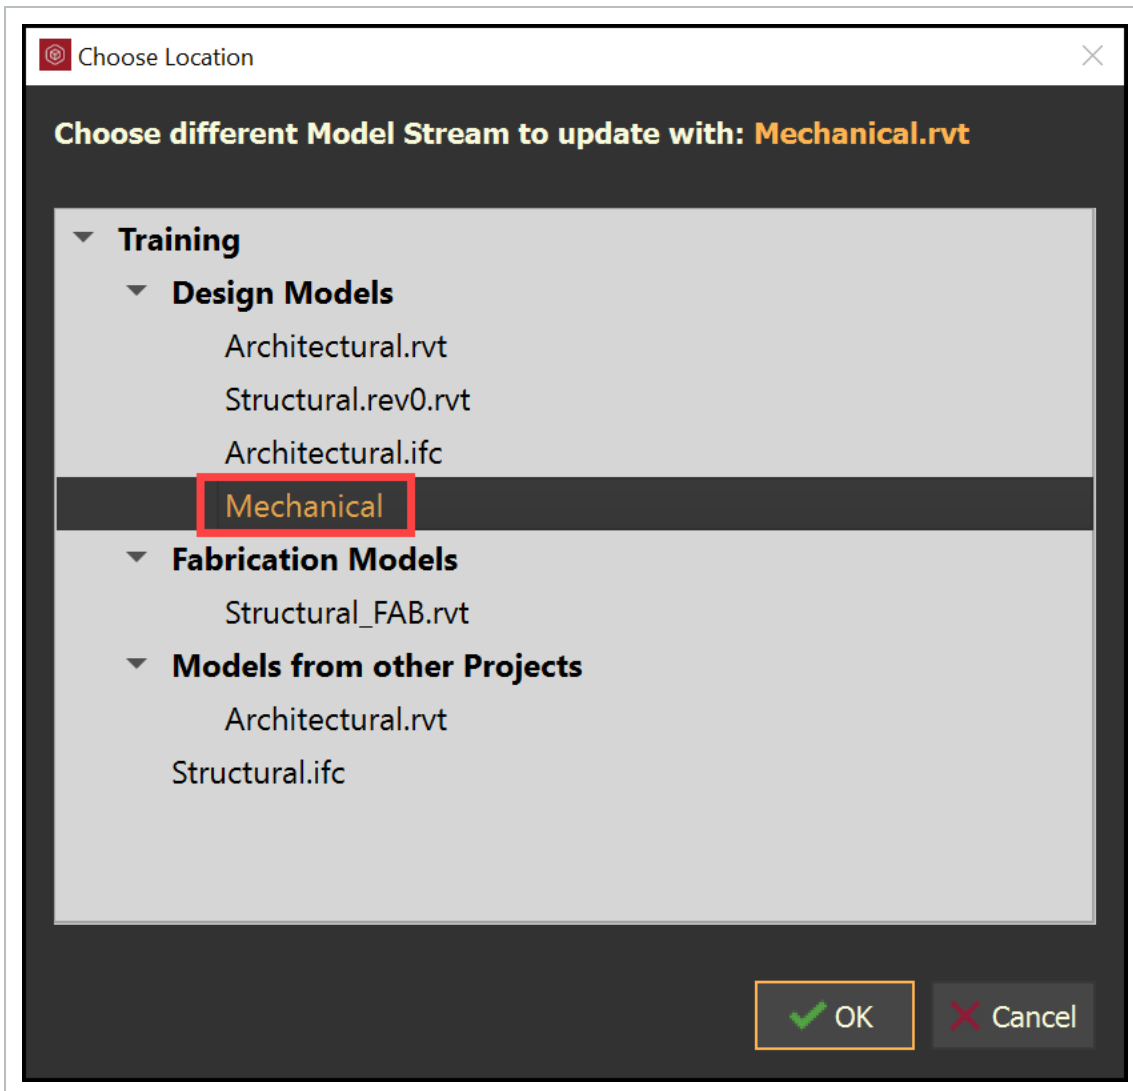


9. Click **Start**.

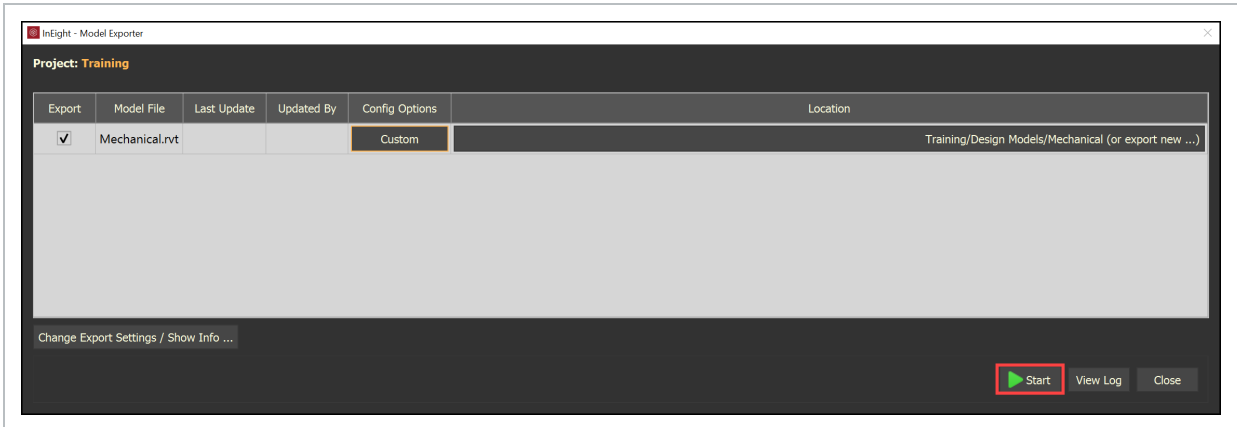

10. Save the model stream to the project.

- In the Project Structure, the new Model Stream has replaced the Model Stream placeholder.

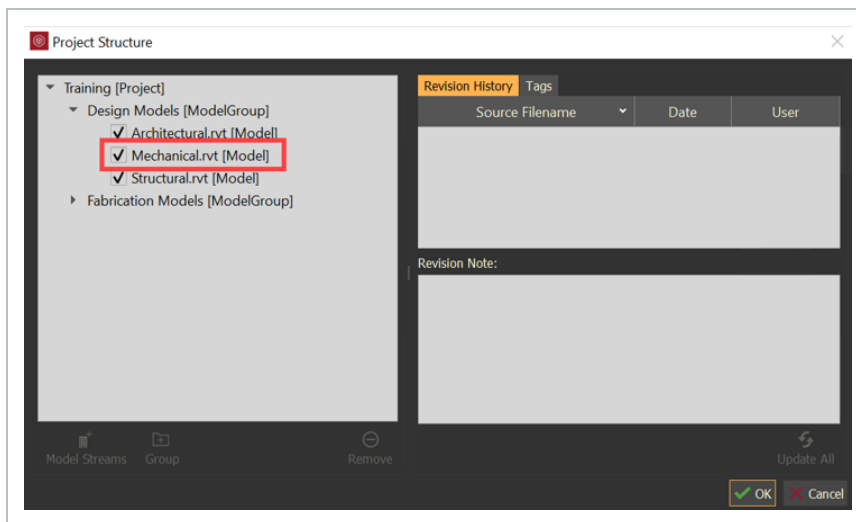

4.4 MODEL STREAM PERMISSIONS


Permissions can be set at the Group level within the Project Structure. Nested groups inherit parent group permissions.

NOTE By default, group permissions inherit project permission for users and user groups.


For best practice, only apply User Groups to projects instead of individual users. This minimizes the management of applying permissions to Model Streams.

4.4 Step by Step 1 — Apply Permissions to Groups

1. Open the Project Structure dialog box.
2. Right-click on a group and select **Edit Group Permissions**.

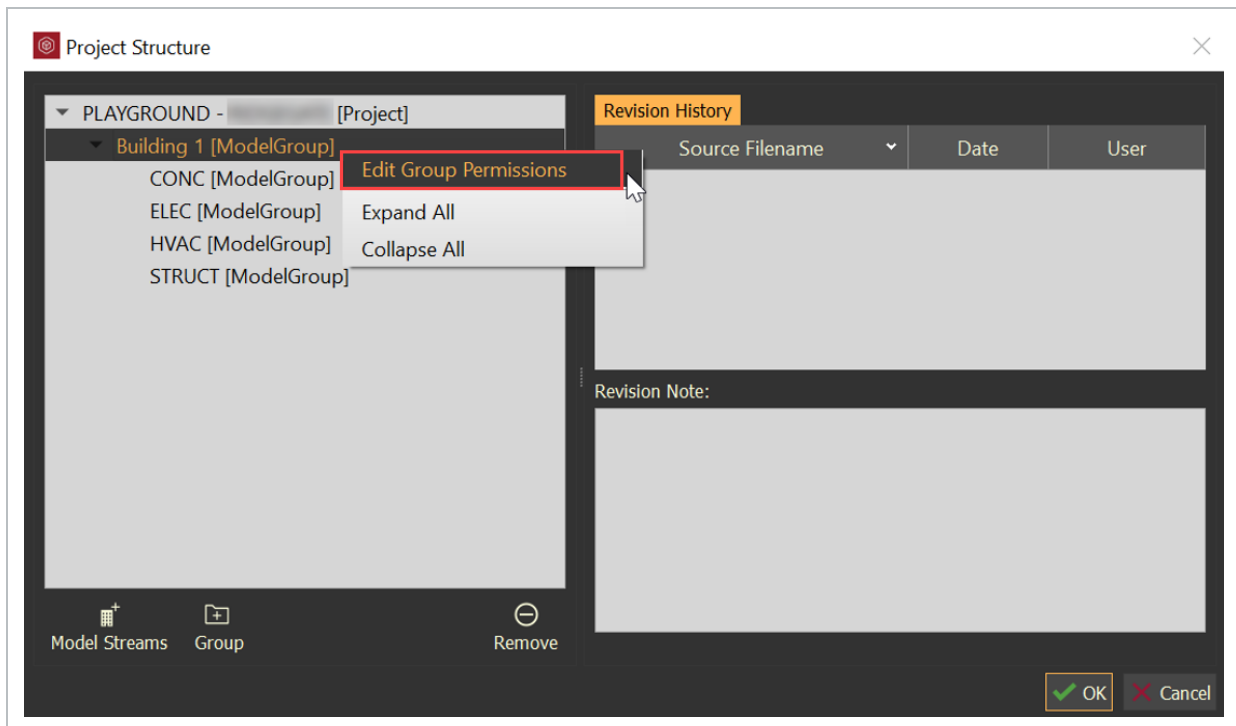


- The Edit Model Group Permissions dialog box opens.
 - By default, the User Parents Group Permissions is already checked.
3. Uncheck the **Use Parent Group Permissions** check box to apply specific User Group permissions.

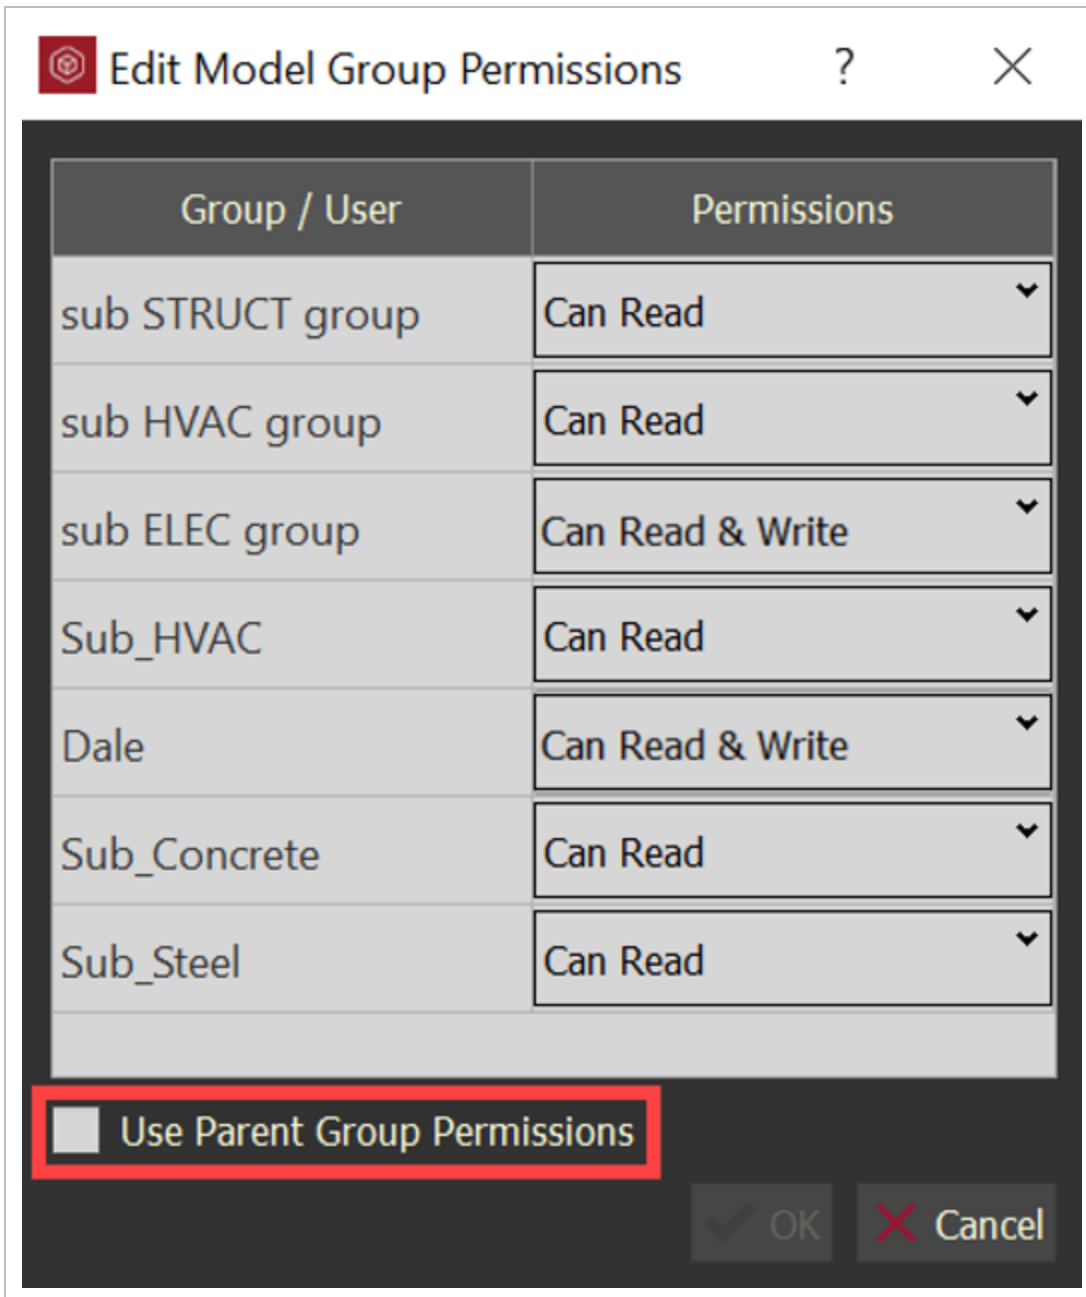

- All users and User Groups show if they have been assigned to the project.
4. Users and User Groups can only have one of the following permissions:
- **Can Read** – read-only permissions.
 - **Can Read and Write** – read, write, and edit permissions.

5. Users that have been assigned to the project within a Group have the **Can Read** permission in the Edit Model Group Permissions dialog box.
 - User Groups that display the project permissions are currently only set at the project level.
6. Use the Account Manager dialog box to reference the users assigned to Groups in specific projects.

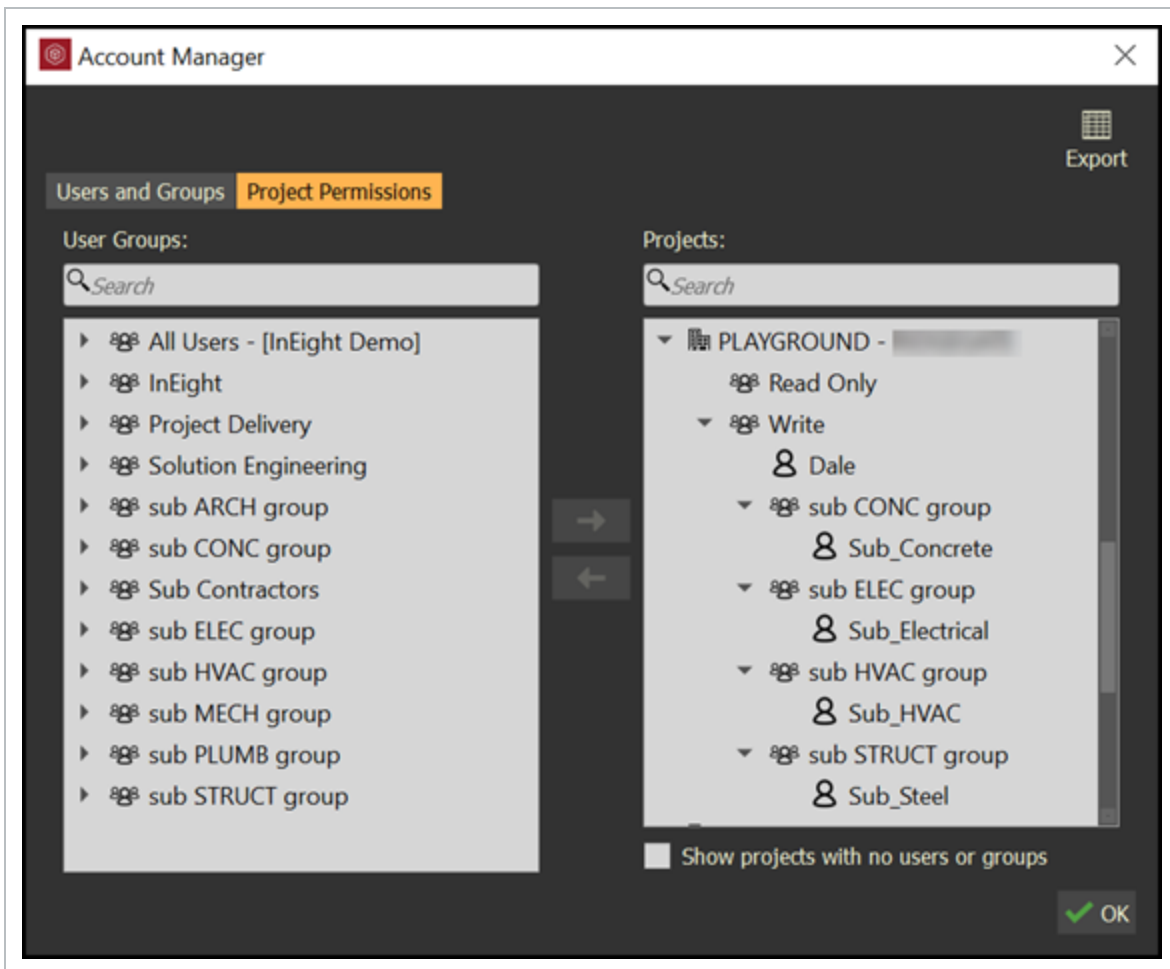

- For more information on the Account Manager dialog box, reference the Managers Users and Manage User Groups topics.
7. Set the permissions for the selected group or user.
 8. Log in as the specific user or group to publish a model.

Lesson 4 Review

1. In the Project Structure tree, groups can only be created before model streams are added.
 - a. True
 - b. False

2. Once a group name has been created, it cannot be edited or renamed.
 - a. True
 - b. False

Lesson 4 Summary

As a result of this lesson, you can:

- Navigate the project structure panel
- Create and delete model stream groups
- Change active model stream revision and revise model stream revision
- Disable and remove model streams
- Add model streams from other projects

This page intentionally left blank.



LESSON 5 – USER INTERFACE

Lesson Duration: 30 minutes

Lesson Objectives


After completing this lesson, you will be able to:

- Navigate InEight Model
- Select model objects
- Use common hot keys

Topics in this Lesson

5.1 VIEWER INTERFACE

The Viewer interface (Workspace) is highly configurable. Tools and panels are accessed through a series of menus located across the top of the application and a notification panel located across the bottom of the application.

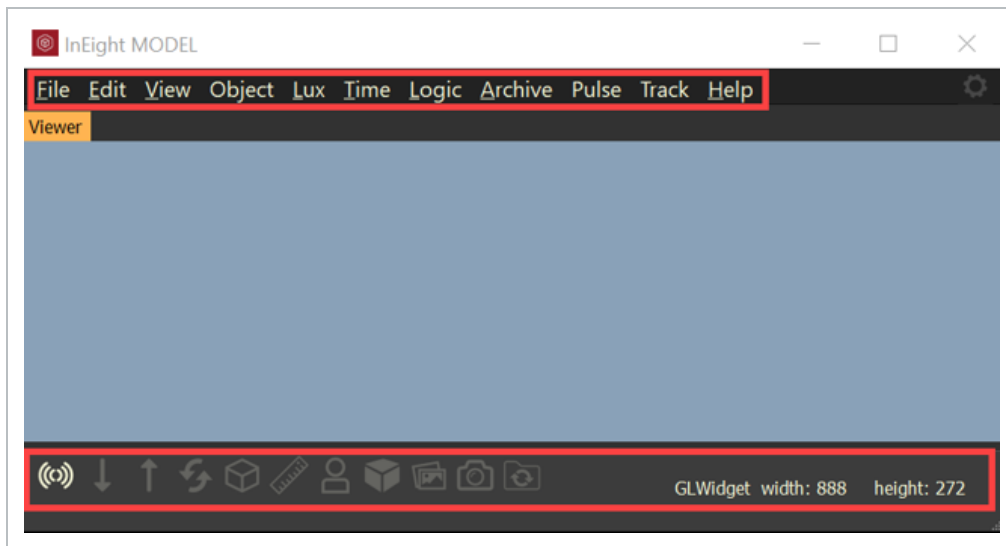


Panels can be opened, closed, rearranged, and docked into various configurations. Move, dock and undock panels by dragging the panel title bar.

TIP

Hold Ctrl before dragging a panel to prevent it from docking automatically.


- Some Panels have multiple areas, differentiated with tabs:
- When panels are docked on top of one another, each panel is represented as a tab
- Tabs can be on top, side of, and bottom of a panel
- Select the tab to activate a specific panel or area of a panel
- The active panel tab is highlighted in orange
- Re-size undocked panels by clicking and dragging the panel edge

- Resize a docked panel by clicking and dragging the edge of the panel

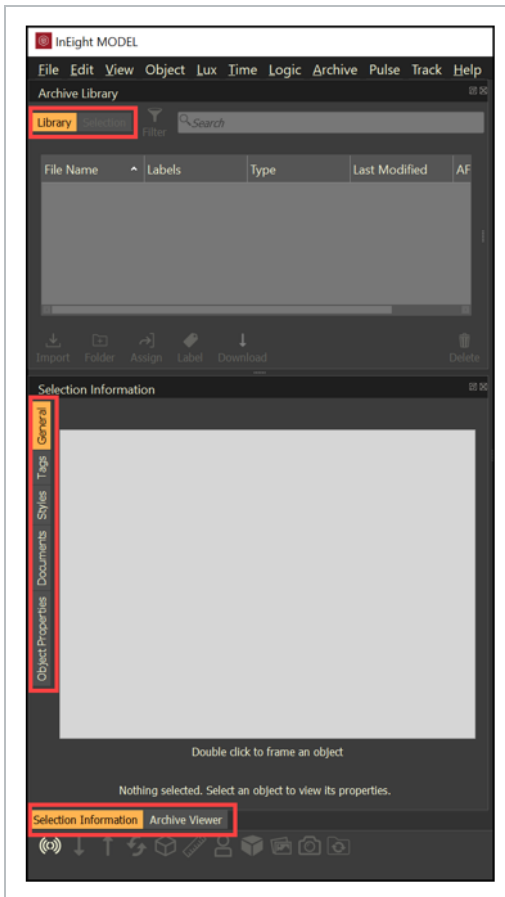


5.1.1 Docking Panels:


- While moving a panel to dock at the Top, Bottom, Left or Right, the Viewer will respond by indicating a space for the panel to be docked

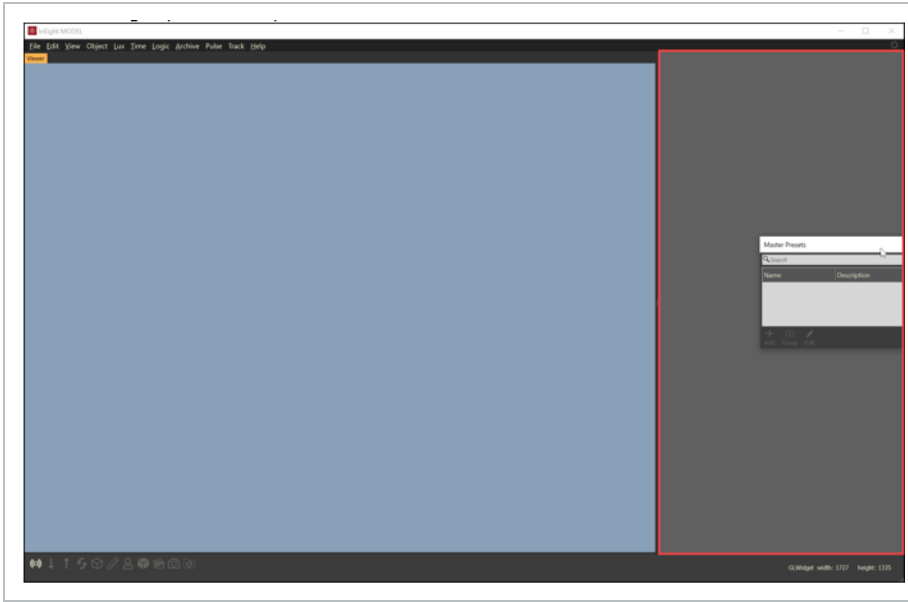


- Panels can be docked at the Top, Bottom, Right, and Left of the viewer

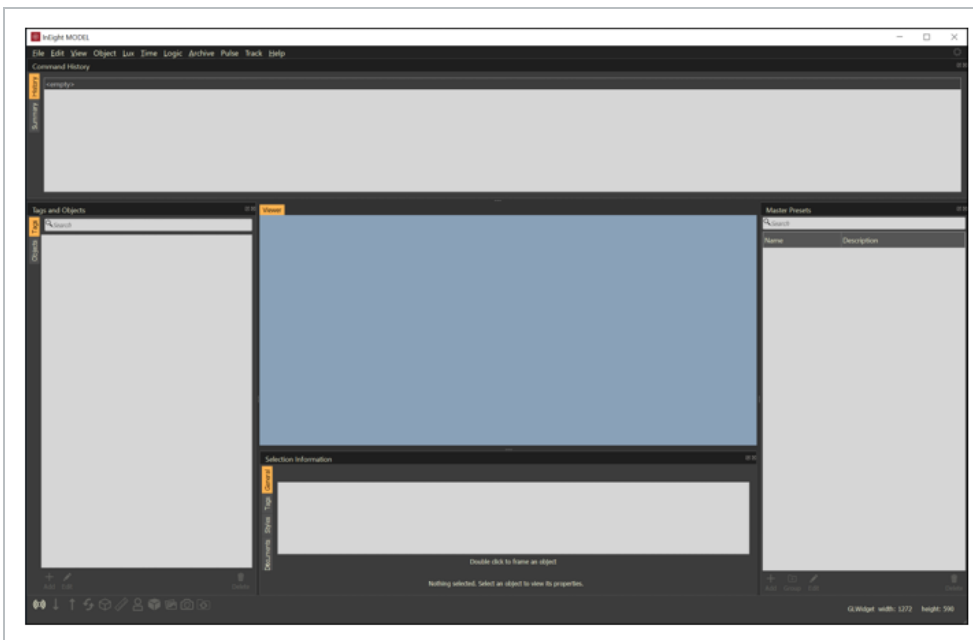


- Panels can be docked on top of one another

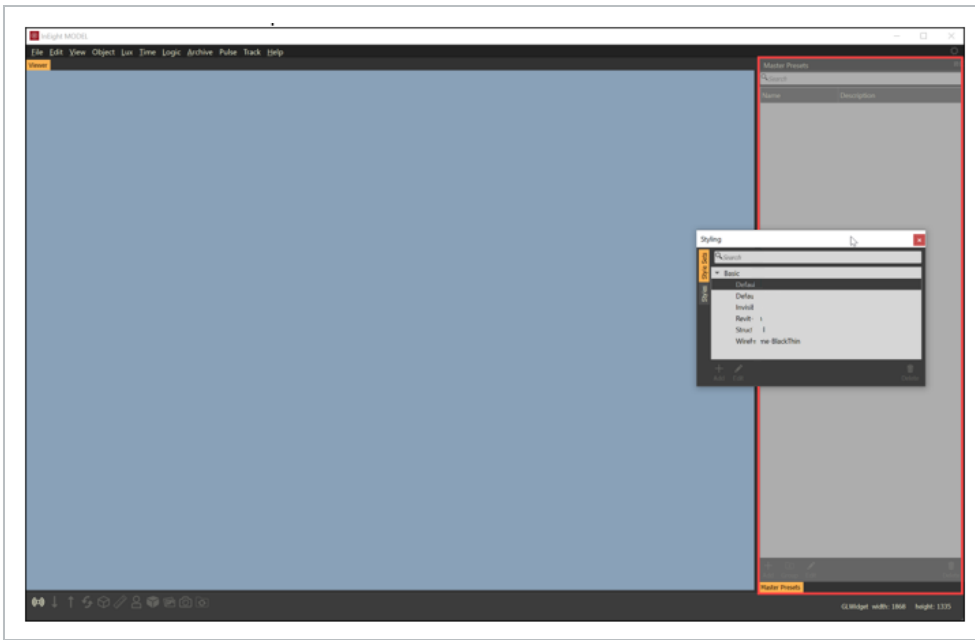


- Panels can be docked at the top or bottom of another panel

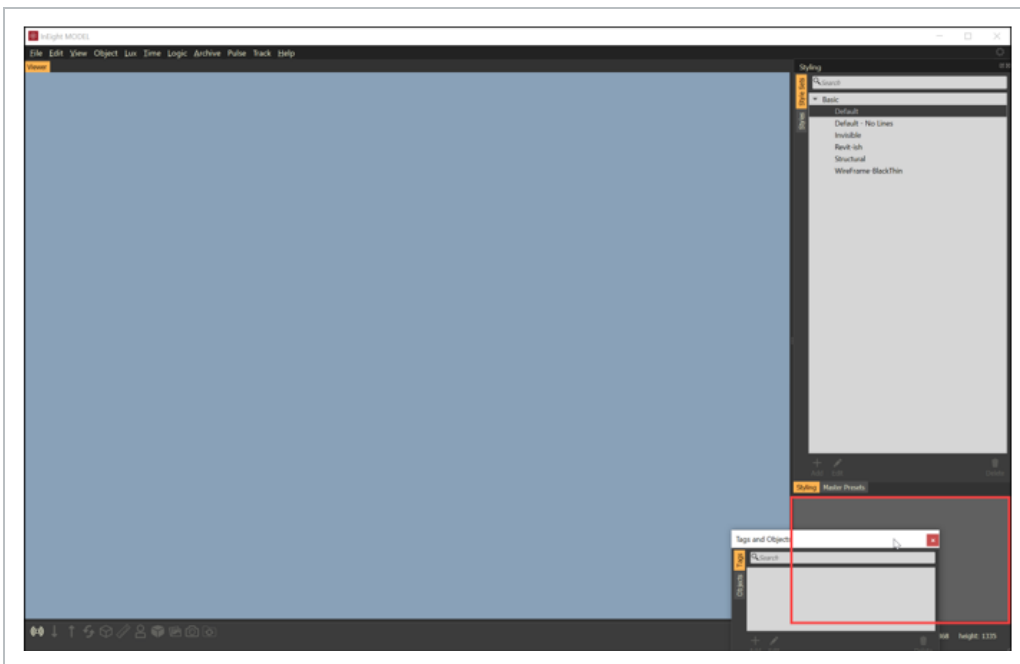


- Panels can be docked beside another panel

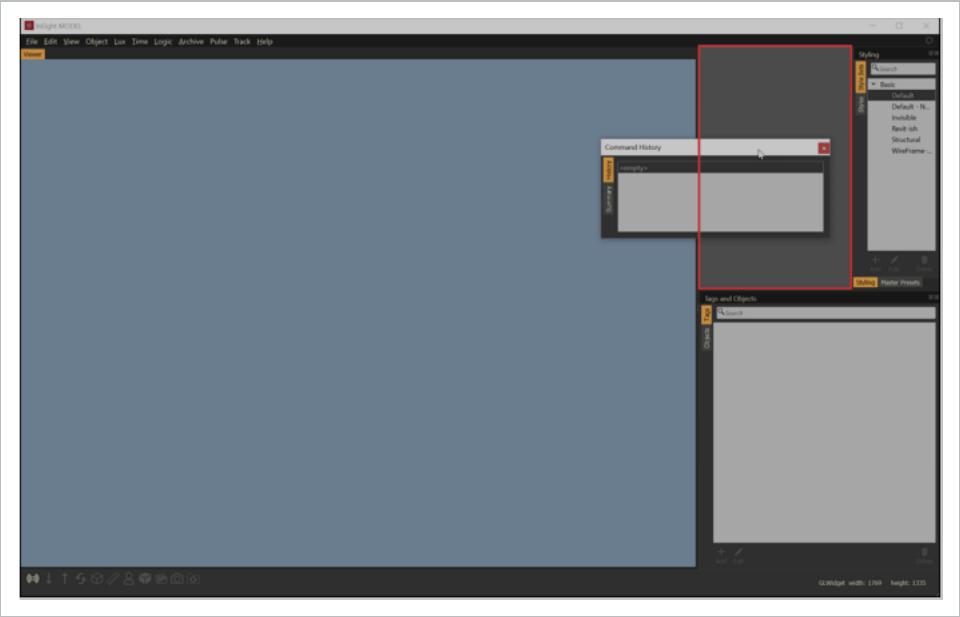

- Panels can be docked in between two panels

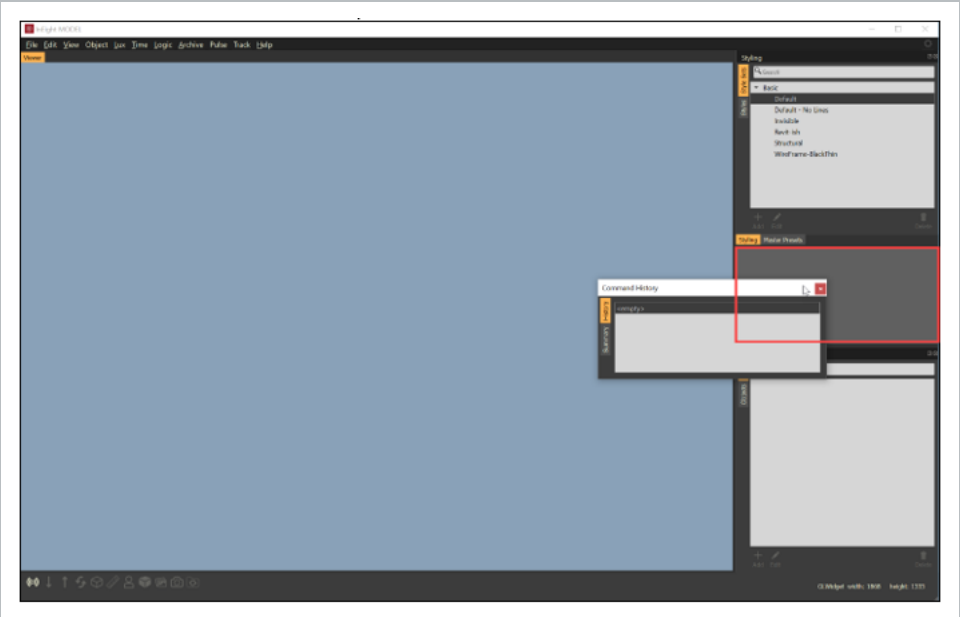

- Panels can be stand alone on the same or different monitor

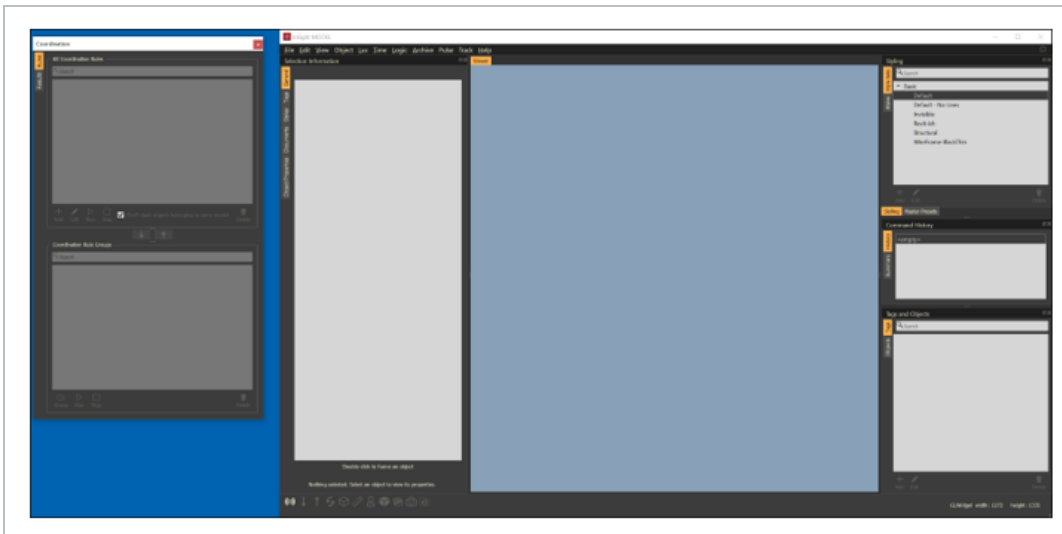


5.2 SHOW MODEL SPOTS

Model Spots provide the ability to easy find those model streams that are not aligned on the same coordinate.

5.2 Step by Step 1 — Show Model Spots

1. Select View > Show Model Spots.

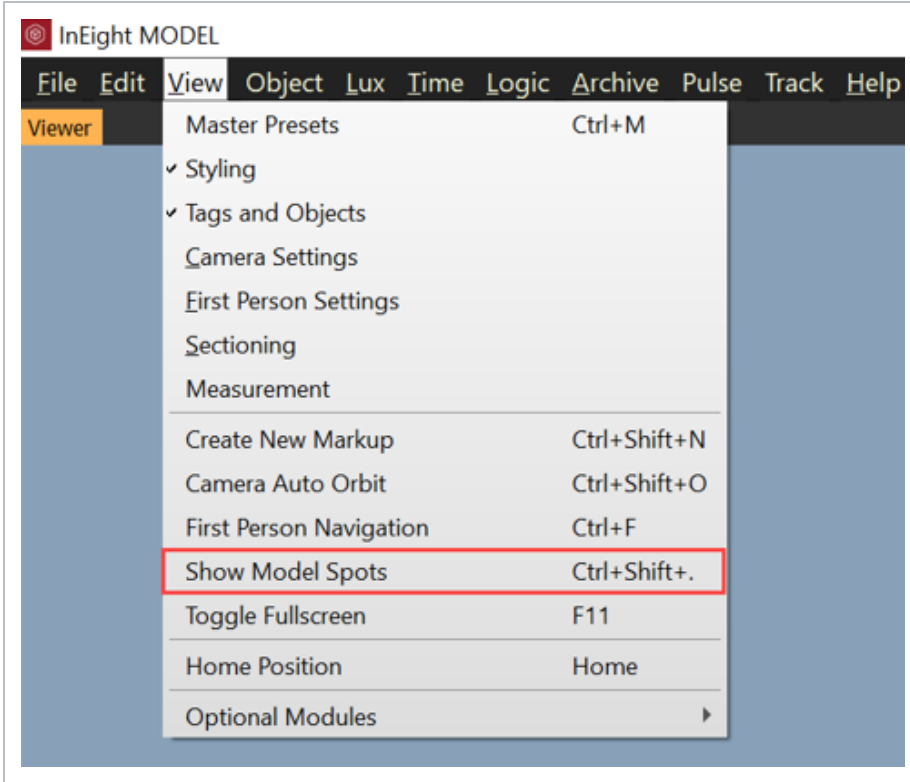

2. Zoom out until red dots are visible or click the Home key on the keyboard.




3. Hover over a dot to see the model stream name(s).



4. Double-click on a model spot to zoom into the model stream(s).


5.3 NAVIGATION

InEight Model allows you to move through, zoom, pan, and change perspectives within the 3D space surrounding your model. To begin, load or open a model. The navigation widget will appear in the top, right corner of your window and will rotate as you navigate to indicate your camera's position and direction in space.


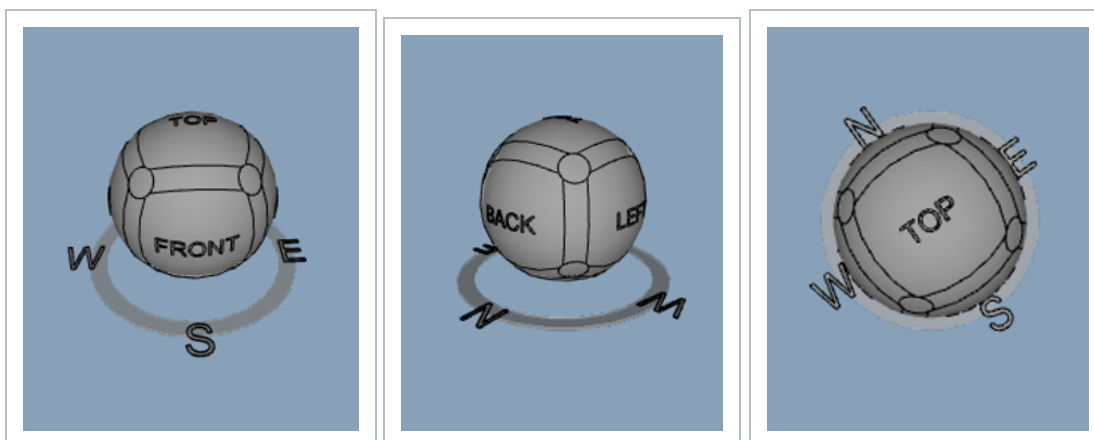


NOTE If the navigation widget is not present in the top, right corner of your screen, there is nothing to navigate; load a model.

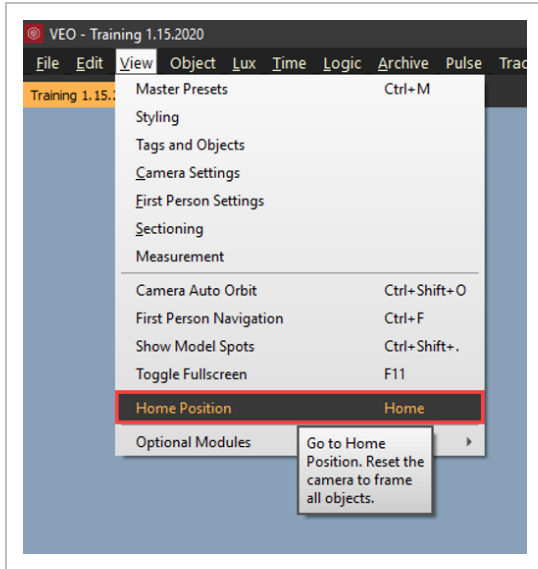



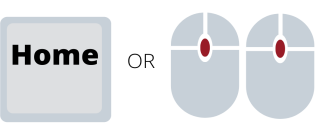
InEight Model, the viewer interaction is focused on the center of the view and not the model objects. This allows you to see all objects from your camera perspective as you navigate and interact with objects. To quickly return to the designated “home” view of a model, you can navigate up to the menu, click View, and select **Home Position** from the drop-down menu.

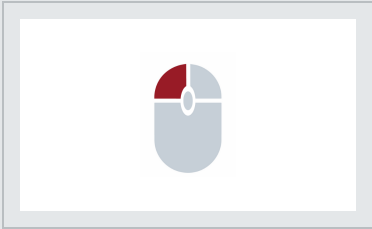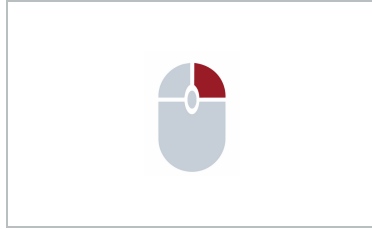



Navigation Controls

Function	Action	Description
Orbit		Left click and hold to revolve around, or orbit, the object or model
Pan		Right click and hold to maintain the object's position while moving, or panning, your view of the object or model

Navigation Controls (continued)

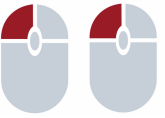Function	Action	Description
Zoom (to Center of view)		Scroll the wheel away from you to zoom in and toward you to zoom out
Zoom to Cursor		Hold the CTRL key and use the scroll wheel to zoom to, and away from, the cursor. Your cursor must be over a model element
Zoom to Object / Set Center		Double left click an object to zoom the camera to an object. This will set the center of orbit to the object
Zoom to Selected Objects		Select an object and press the F5 key to zoom the camera to frame the selection
Zoom to Home Position		Use the Home key or double click the mouse wheel to zoom the camera to frame the extents and home position of the 3D environment

Navigation Controls (continued)

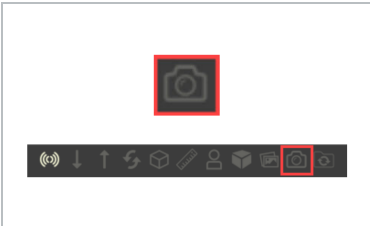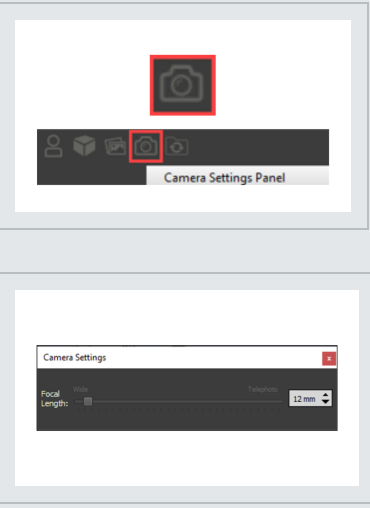
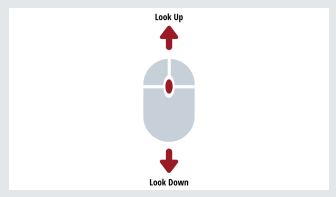
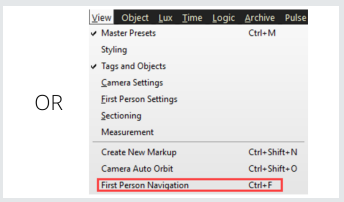
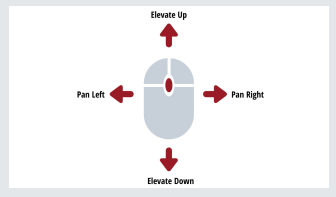
Function	Action	Description
<p>Orthographic & Perspective Views</p>		<p>Toggle between the Orthographic and Perspective view modes</p>
<p>Camera Settings (Perspective View)</p>		<p>Camera Settings enable you to change the focal length of the lens through which you are viewing the model . Right click on the camera icon and click Camera Settings Panel to adjust your setting. This setting is only available in Perspective View</p>

5.3.0.1 First Person Navigation

First person navigation positions the camera view where it assumes your eyes would be and what they would see in relationship to the model environment.

<p>First Person Toggle</p>		
----------------------------	---	--


Navigation Controls (continued)

Function	Action	Description
		
		

Walk Speed




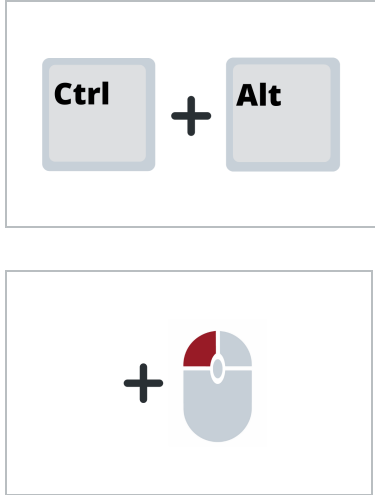
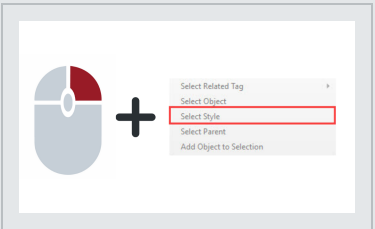
Walk Speed enables you to change the speed up or slow down when walking through the model

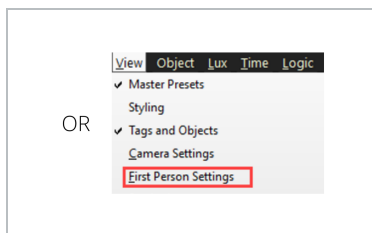



5.4 SELECTION

InEight Model allows you to manipulate the way you view, manage, and interact with the objects that make up your model(s). Many of these features are available as hot keys and within a drop-down menu.



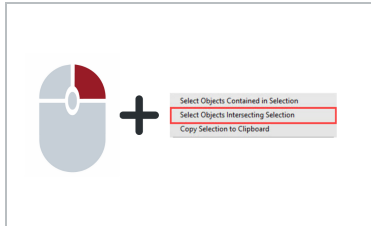
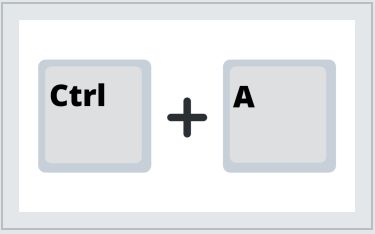
Selection Controls

Function	Action	Description
Select Object		Allows you to select an object
Select Object Transparent		Allows you to select transparent objects
Select Style		Provides a means to select like objects with the same style (enabled only if one object is selected)






Selection Controls (continued)

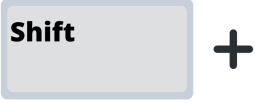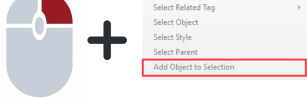Function	Action	Description
<p>Add / Remove to Selection</p>	<div data-bbox="522 308 889 533">  </div> <div data-bbox="522 569 889 793">  </div> <p style="text-align: center;">OR</p> <div data-bbox="522 867 889 1092">  </div>	<p>Adds unselected objects to the current selection set, or, removes selected objects from the existing selection set</p>
<p>Window Selection</p>	<div data-bbox="522 1148 901 1373">  </div> <div data-bbox="522 1423 901 1648"> <p style="text-align: center;">DRAW A + WINDOW TO THE RIGHT</p> </div> <p style="text-align: center;">OR</p>	<p>Selects objects completely within the window</p>


Selection Controls (continued)

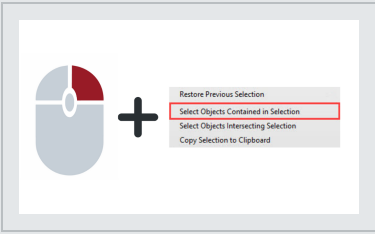Function	Action	Description
		
<p>Crossing Selection</p>	<div data-bbox="521 611 889 835">  </div> <div data-bbox="521 869 889 1094"> <p>+ DRAW A WINDOW TO THE LEFT</p> </div> <p>OR</p> <div data-bbox="521 1178 889 1402">  </div>	<p>Selects objects that are both completely in the window and those that cross into the window</p>
<p>Select All</p>		<p>Initiates the select all action. A dialog box will appear to confirm this action</p>


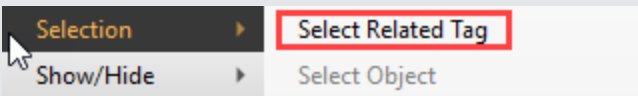
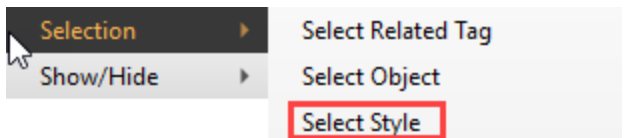
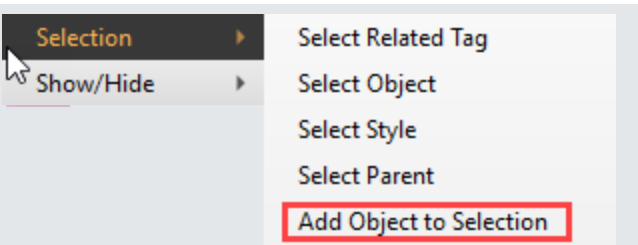
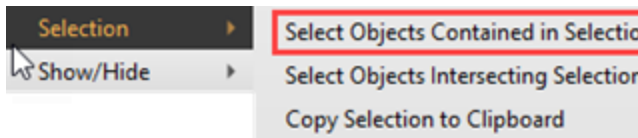
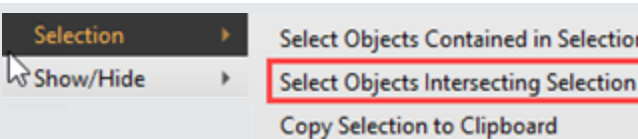
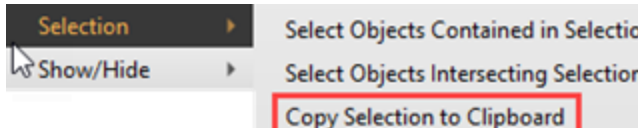
Selection Controls (continued)

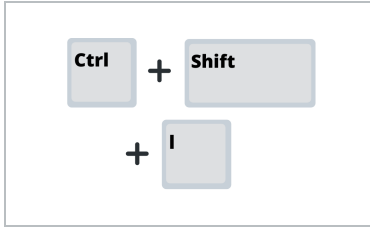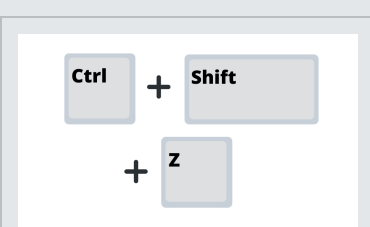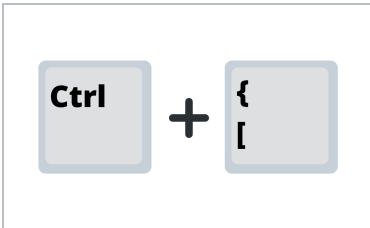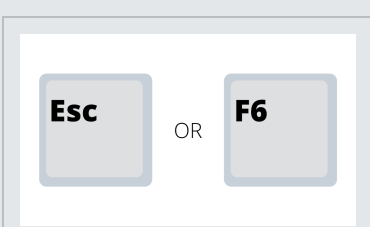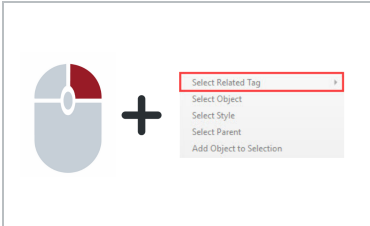Function	Action	Description
<p>Invert Selection</p>		<p>Inverts the selection set of objects</p>
<p>Restore Previous Selection</p>		<p>Restores the selection set to the previous selected objects</p>
<p>Selection Filter</p>		<p>Opens the Selection Filter dialog box and allows you to filter down the selection set</p>
<p>Clear Selection</p>		<p>Clears the current selection</p>
<p>Select Related Tag</p>		<p>Provides a means to select like objects with the same tag</p>

Selection Controls (continued)

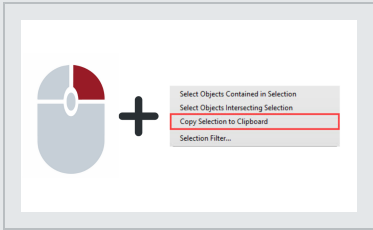Function	Action	Description
Copy Selection to Clipboard	 A screenshot of a software interface. On the left is a selection tool icon, a grey circle with a red wedge and a white circle inside. To its right is a plus sign. Further right is a context menu with four items: 'Select Objects Contained in Selection', 'Select Objects Intersecting Selection', 'Copy Selection to Clipboard' (highlighted with a red border), and 'Selection Filter...'. The entire screenshot is enclosed in a thin grey border.	Provides a means to copy the select object's metadata to the clipboard


Right Click Menu Selection Controls

Function	Action	Description
RCM - Select Object		Right click on top of an object, then click Select Object
RCM – Select Related Tag		Provides a means to select like objects with the same tag.
RCM – Select Style		Provides a means to select like objects with the same style. (Note: enabled only if one object is selected)
RCM – Add Object to Selection		Right click on top of an object, then click Add Object to Selection
RCM – Select Objects Contained in Selection		Provides a means to select all objects contained within the object
RCM – Select Objects Intersecting Selection		Provides a means to select all objects inside and intersecting with an object
RCM – Copy Selection to Clipboard		Provides a means to copy the selected object’s metadata to the clipboard


5.4.0.1 Right Click Menu

- The Selection Menu offers all the selection commands listed in the table above, except **Delete Selected Objects** and **Copy Selection to Clipboard** (see the table above for

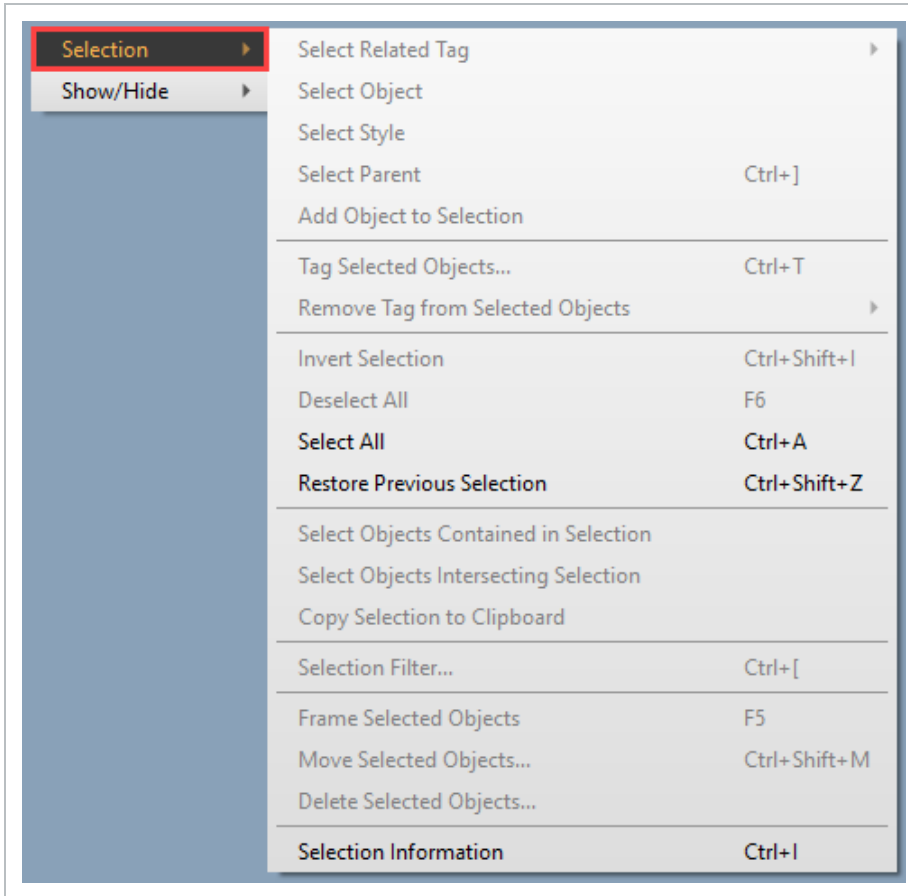


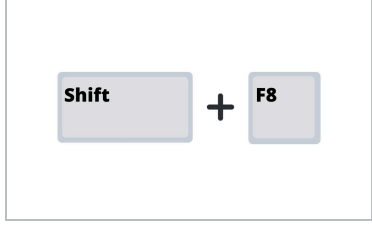
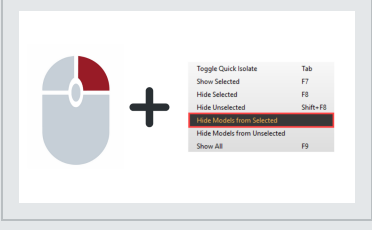
descriptions)

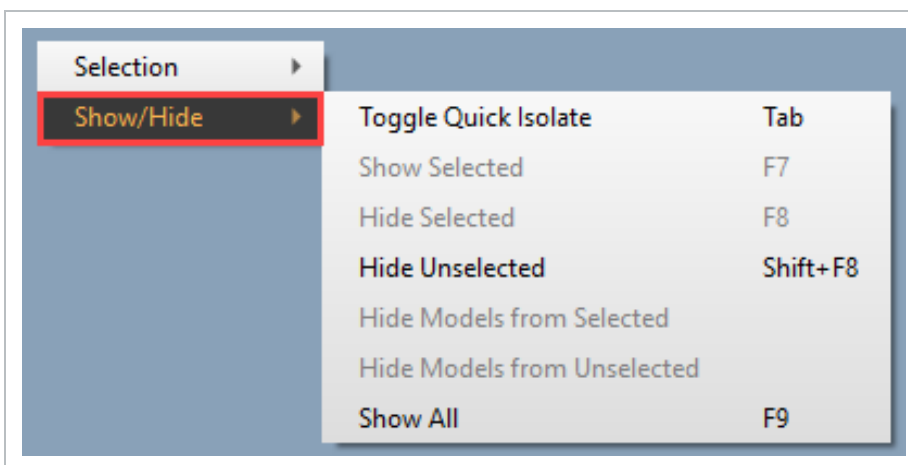



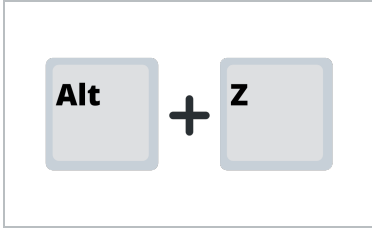
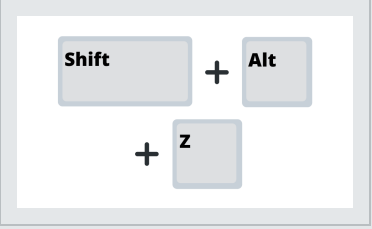

- The Show/Hide Menu offers even more options – many of which are also accessible as hot keys. See the table below for descriptions




Model Object View Controls

Function	Action	Description
Isolate Mode		Toggles between the entire model and an isolated view of the selected objects
Show Selected		Shows all selected objects
Hide Selected		Hides all selected objects
Hide Unselected		Hides all unselected objects
Hide Models from Selected		Hides all models from the selected objects

Model Object View Controls (continued)

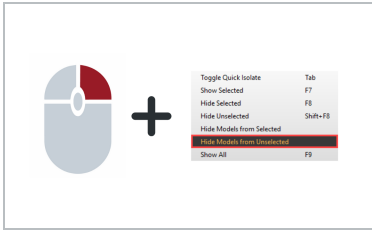Function	Action	Description
Hide Models from Unselected		Hides all models from the unselected objects
Show All		Shows all objects and models in a project
Undo View State Changes		Undo up to the last 10 view state changes
Redo View State Changes		Redo up to the last 10 view state changes
Toggle Full Screen		Toggles the window size and position between a customizable (F11) and full screen window

Model Object View Controls (continued)

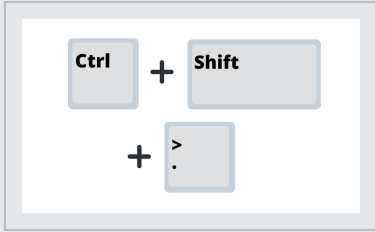
Function	Action	Description
Show Model Spots		Marks the model's spot within the space so that the model is identifiable no matter how far out you zoom

5.5 SELECTION MODE

Selection Mode provides the ability to select objects related to the active mode.


- Last Object will select the lowest level of an object (a child)
- First Object will select all objects that belong to the highest level (a parent)
- IWP will select all objects that belong to the IWP associated to the object being selected
- CWP will select all objects that belong to the CWP associated to the object being selected
- Elements will select objects that belong to the Element associated to the object being selected
- Tag Name will select objects that belong to the Tag associated to the object being selected

NOTE Any object can be selected no matter what mode is active. If the object selected does not have data associated to it for the active mode, then the Last Object mode will be the default.

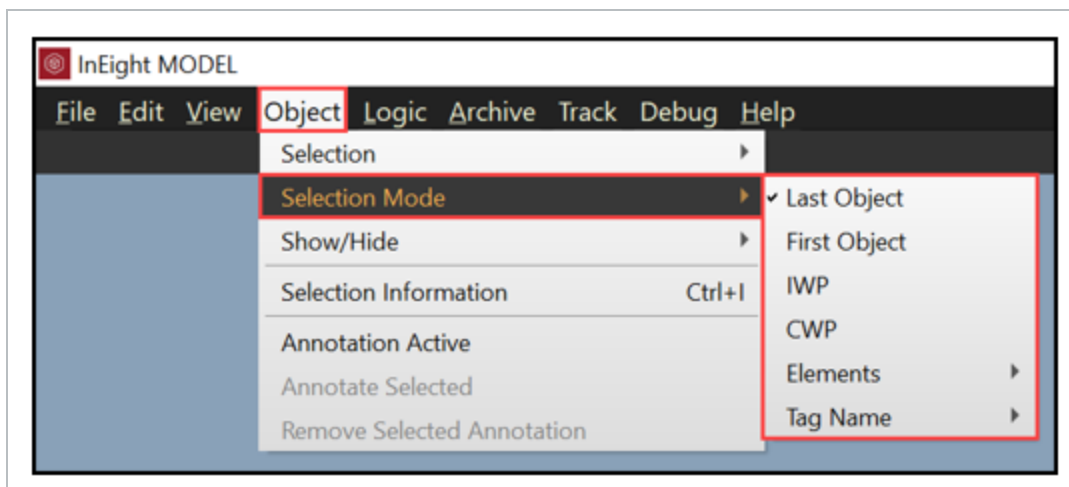


5.5.1 Selection Mode Indicator

Selection Mode is always active and will be displayed at the bottom right within the viewer.

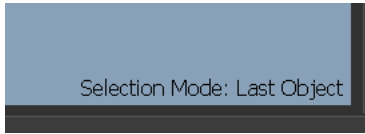


5.5.2 Selection Mode - Last Object

Last Object selection mode will select the lowest level of the object.

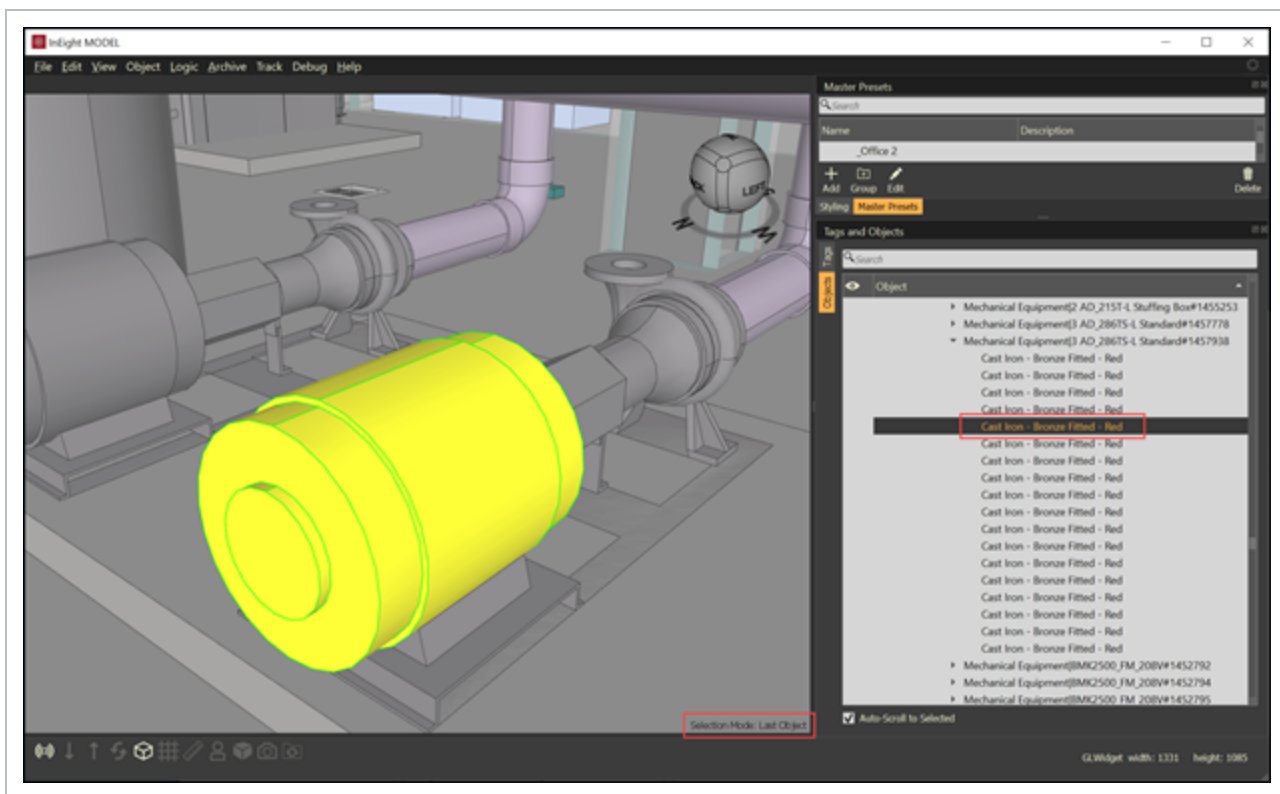


5.5.3 Selection Mode - First Object

First Object selection mode will select the highest level of the object and select all objects associated to the parent level.

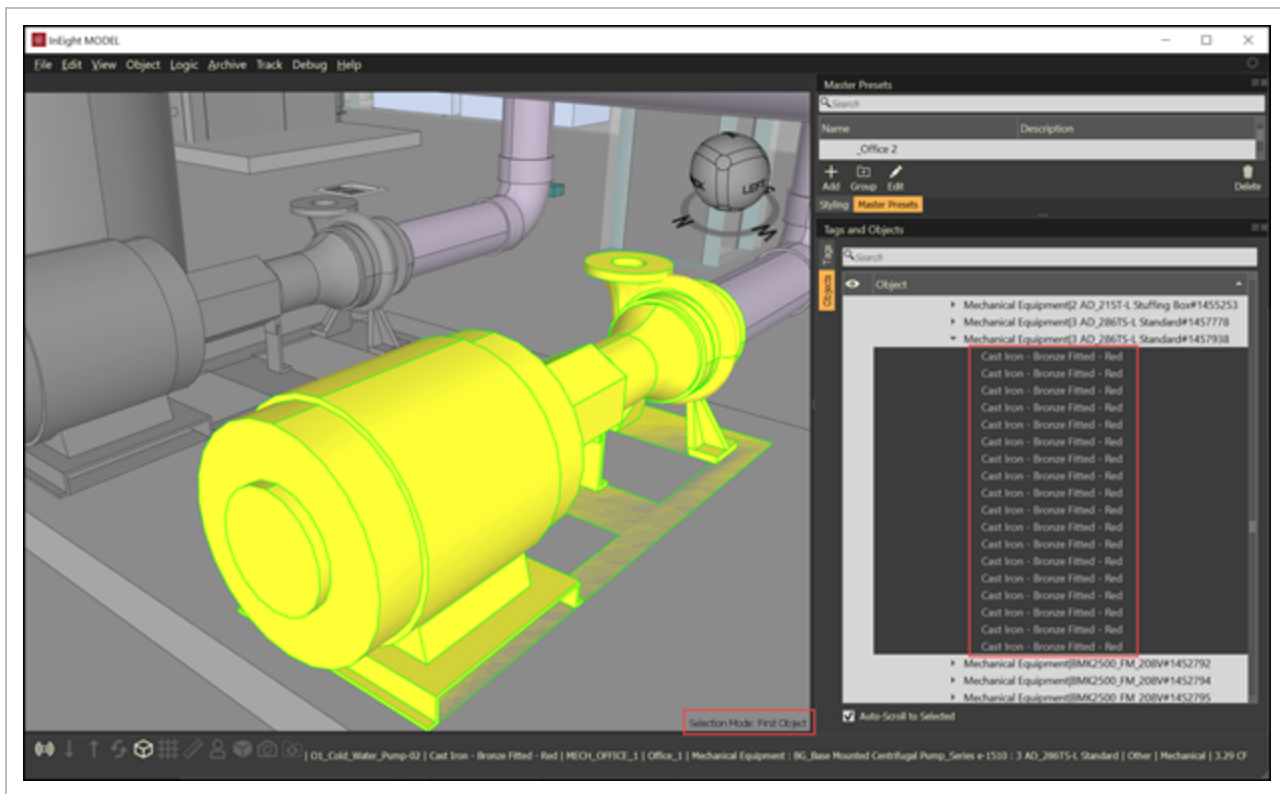


5.5.4 Selection Mode - IWP

IWP selection mode will select all objects that belong to the IWP associated to the object being selected.

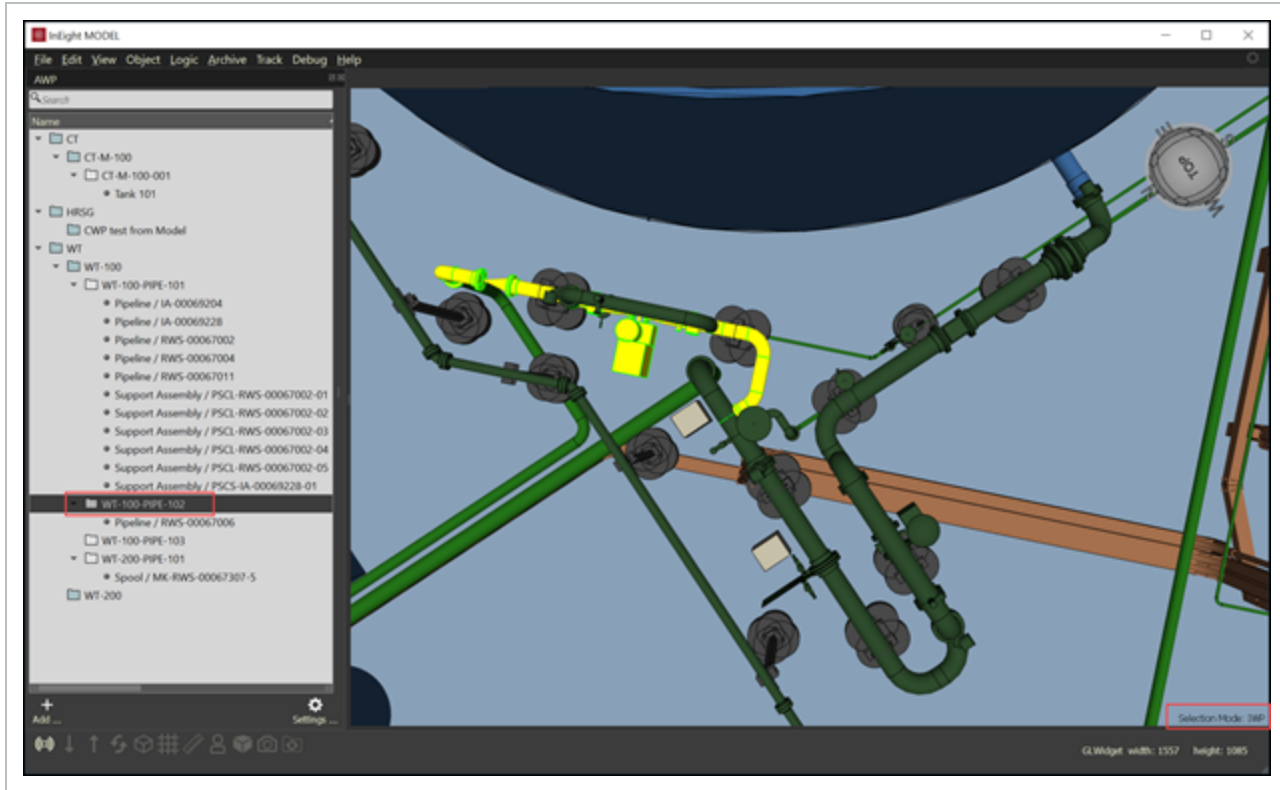


5.5.5 Selection Mode - CWP

CWP selection mode will select all objects that belong to the CWP associated to the object being selected.

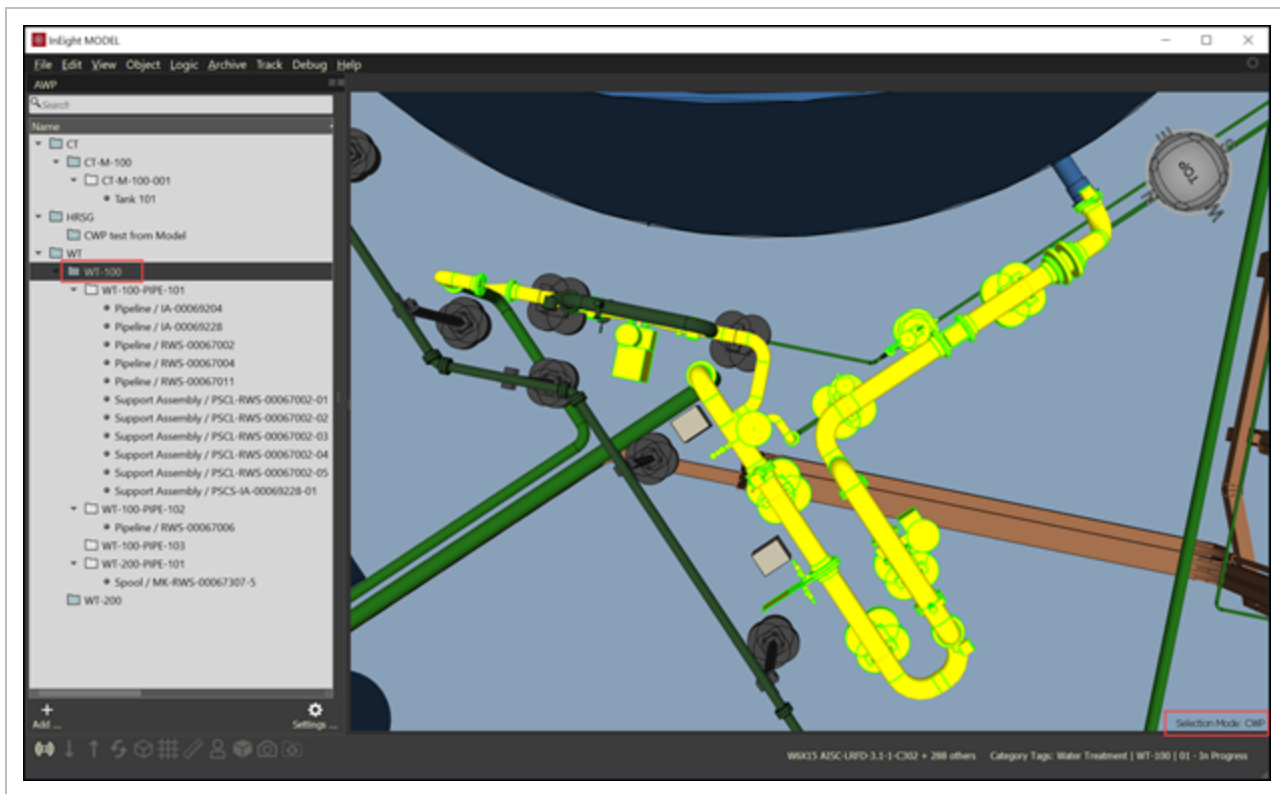


5.5.6 Selection Mode - Element

Element selection mode will select all objects that belong to the Element associated to the object being selected.

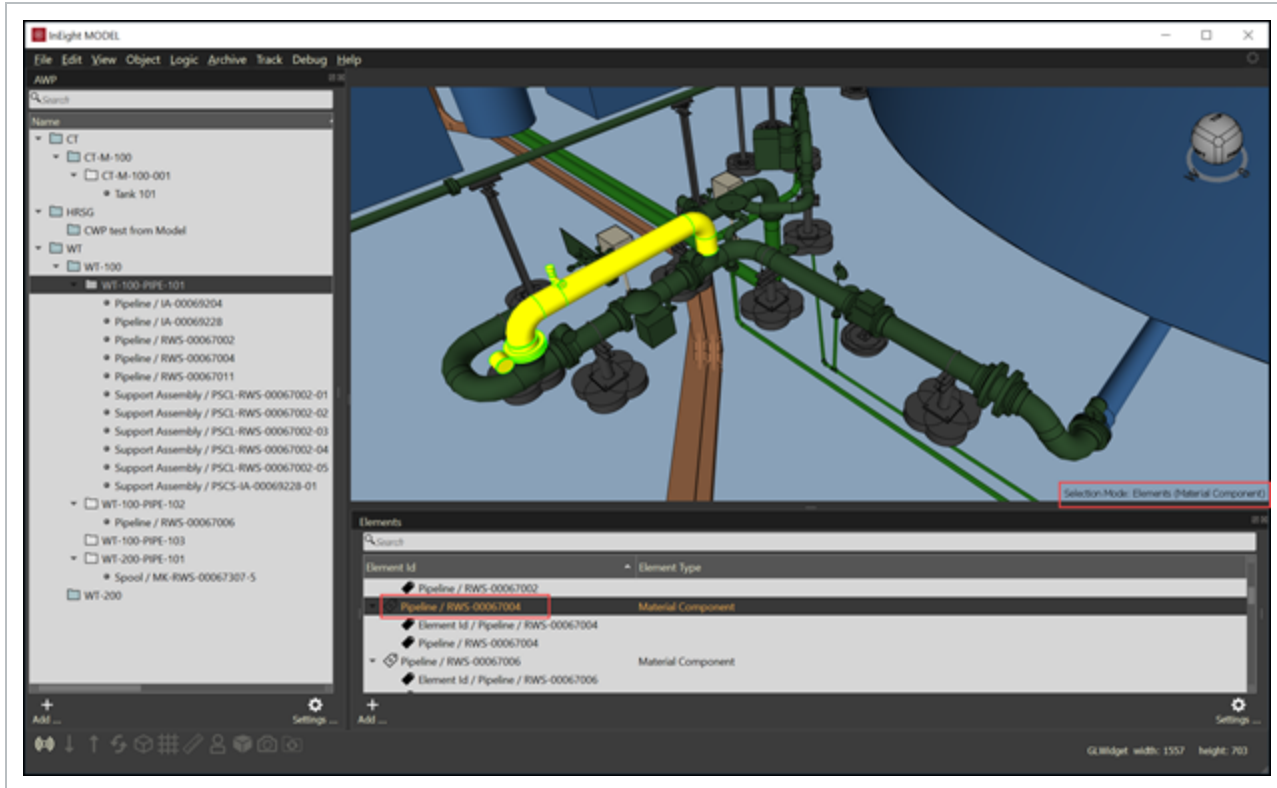

5.5.7 Selection Mode - Tag


Tag selection mode will select all objects that belong to the Tag associated to the object being selected.

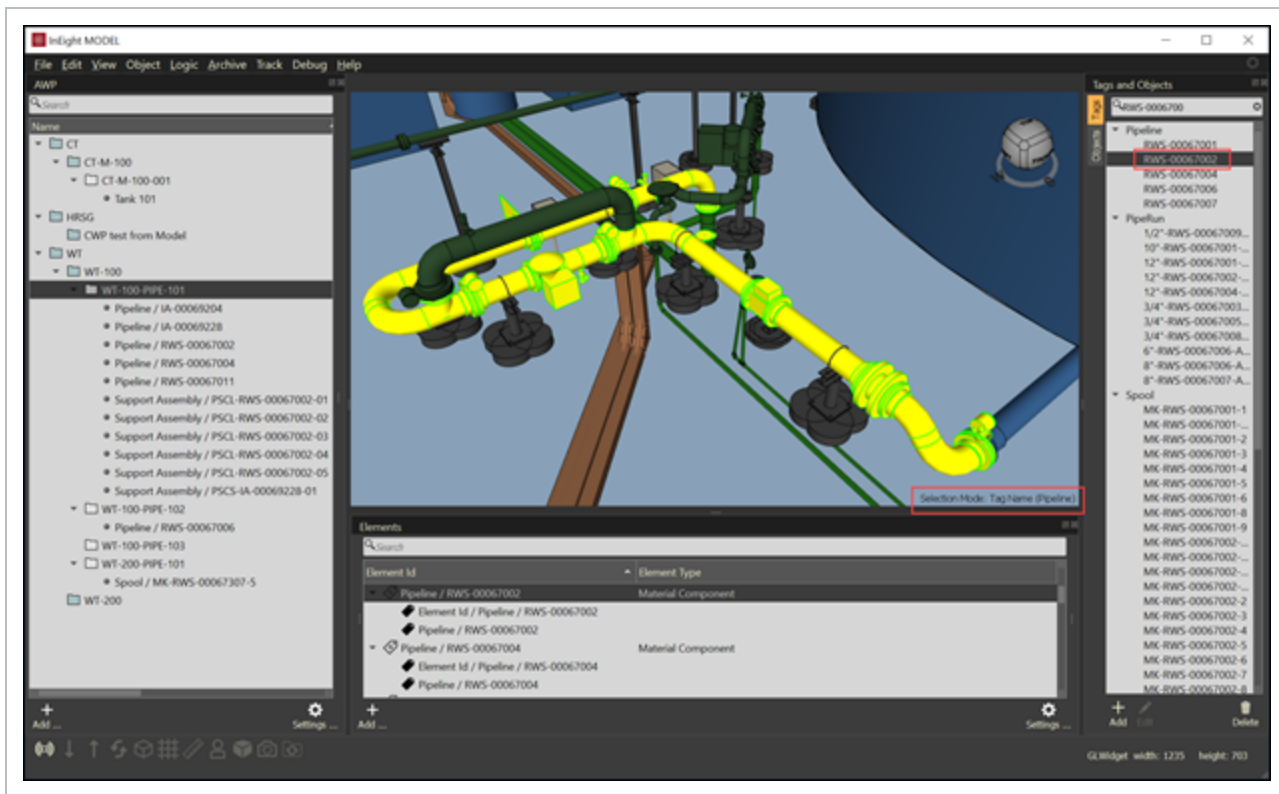






5.6 HOT KEYS

[Click to open a one page PDF copy of the InEight Model Hot Keys.](#)

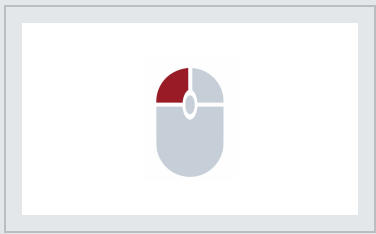
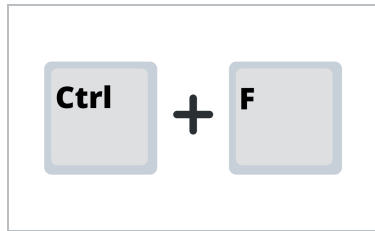
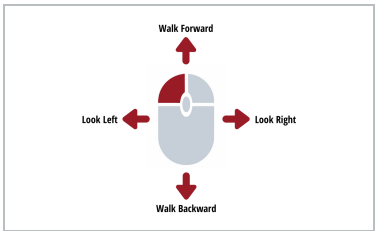
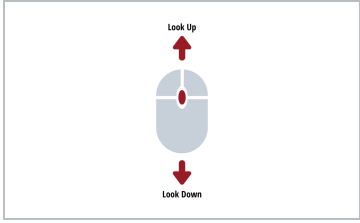
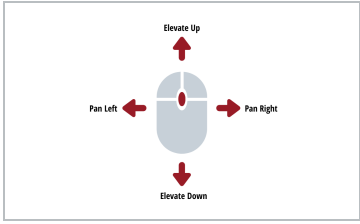

Viewer Navigation

Function	Action	Description
Orbit		Left click and hold to revolve around, or orbit, the object or model




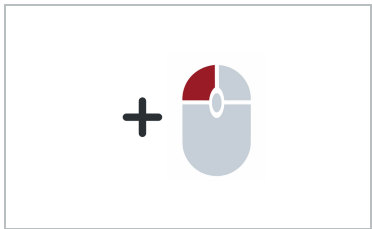
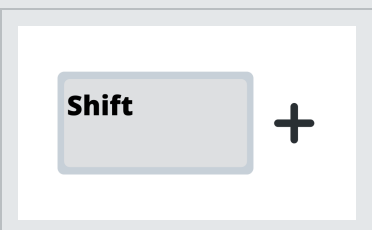
Viewer Navigation (continued)

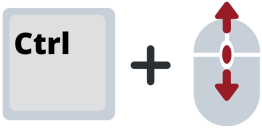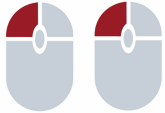Function	Action	Description
Pan		Right click and hold to maintain the object's position while moving, or panning, your view of the object or model
Zoom (to center of view)		Scroll the wheel away from you to zoom in and toward you to zoom out
Zoom to Cursor		Hold the CTRL key and use the scroll wheel to zoom to, and away from, the cursor. Your cursor must be over a model element
Zoom to Object / Set Center		Double left click an object to zoom the camera to an object. This will set the center of orbit to the object
Zoom to Selected Object		Select an object and press the F5 key to zoom the camera to frame the selection


Viewer Navigation (continued)

Function	Action	Description
Zoom to Home Position		Use the Home key or double click the mouse wheel to zoom the camera to frame the extents and home position of the 3D environment
First Person Toggle		
		
		
Adjust Walk Speed		Walk Speed enables you to change the speed up or slow down when walking through the model




Model Object Selection

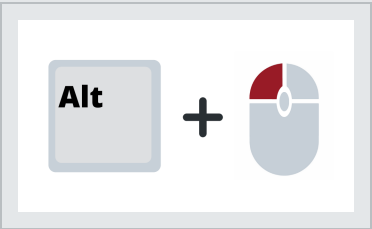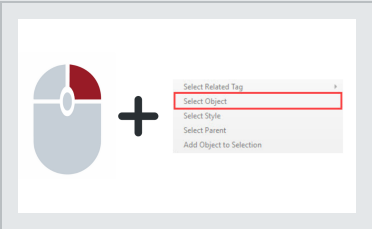Function	Action	Description
Select Object	 <p style="text-align: center;">OR</p> 	Allows you to select an object
Select Transparent Object	 	Allows you to select transparent objects
Add / Remove to Selection		Adds unselected objects to the current selection set, or, removes selected objects from the existing selection set




Model Object Selection (continued)

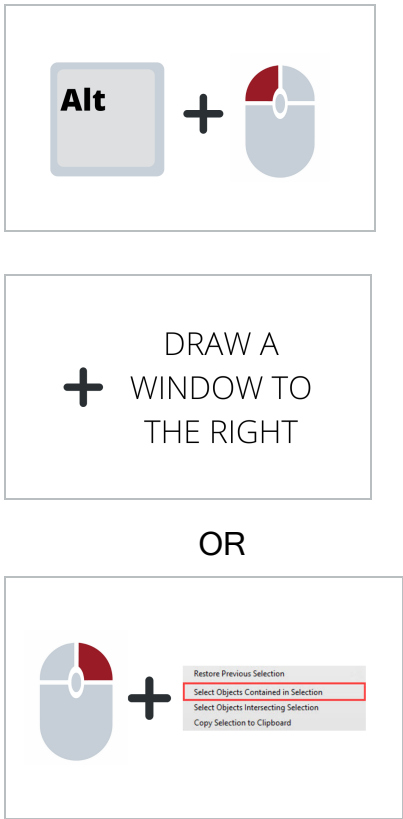Function	Action	Description
		
<p>Window Selection</p>		<p>Selects objects completely within the window</p>
<p>Crossing Selection</p>		<p>Selects objects that are both</p>


Model Object Selection (continued)

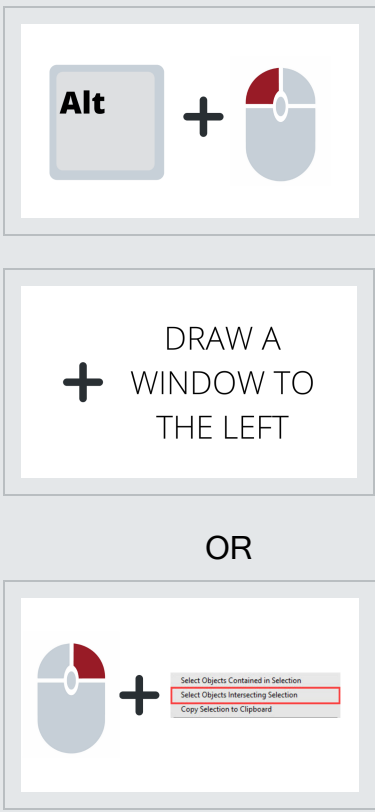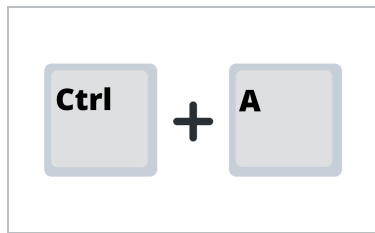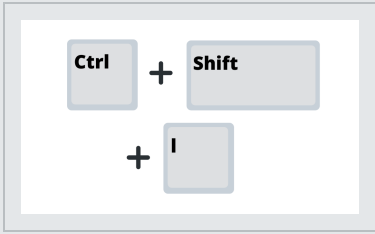Function	Action	Description
	 <p>The action sequence is shown in three parts: 1. A box containing the 'Alt' key icon and a mouse cursor icon with a red selection area. 2. A box containing the text 'DRAW A WINDOW TO THE LEFT' with a plus sign to its left. 3. The word 'OR' centered below the first two boxes, followed by a box containing a mouse cursor icon and a context menu with three options: 'Select Objects Contained in Selection', 'Select Objects Intersecting Selection' (highlighted with a red border), and 'Copy Selection to Clipboard'.</p>	<p>completely in the window and those that cross into the window</p>
<p>Select All</p>	 <p>The action sequence is shown in a single box containing the 'Ctrl' key icon, a plus sign, and the 'A' key icon.</p>	<p>Initiates the select all action. A dialog box will appear to confirm this action</p>
<p>Invert Selection</p>	 <p>The action sequence is shown in a single box containing the 'Ctrl' key icon, a plus sign, the 'Shift' key icon, another plus sign, and the 'I' key icon.</p>	<p>Inverts the selection set of objects</p>



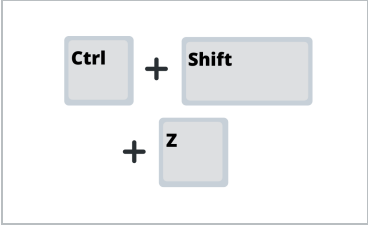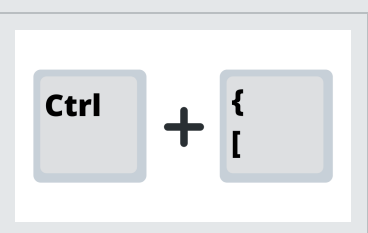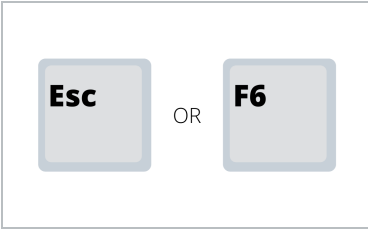


Model Object Selection (continued)

Function	Action	Description
Restore Previous Selection		Restores the selection set to the previous selected objects
Selection Filter		Opens the Selection Filter dialog box and allows you to filter down the selection set
Clear Selection		Clears the current selection


Model Object View

Function	Action	Description
Isolate Mode		Toggles between the entire model and an isolated view of the selected objects




Model Object View (continued)

Function	Action	Description
Show Selected		Shows all selected objects
Hide Selected		Hides all selected objects
Hide Unselected		Hides all unselected objects
Show All		Shows all objects and models in a project
Show Model Spots		Marks the model's spot within the space so that the model is identifiable no matter how far out you zoom


Model Object View (continued)

Function	Action	Description
Toggle Full Screen		Toggles the window size and position between a customizable (F11) and full screen window


Panels

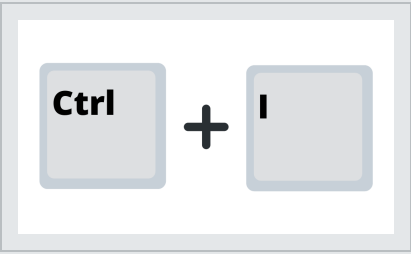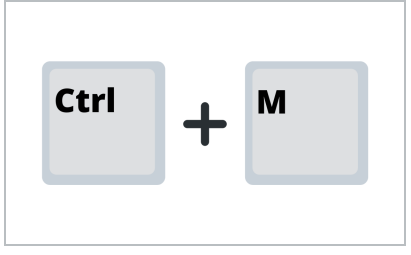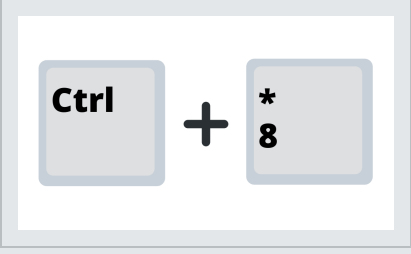Function	Action	Description
Selection Information		Opens the Selection Information Panel where you can view the attributes and metadata of your selected objects
Master Presets		Opens the Master Presets Panel where you can quickly select or create a master preset
Coordination		Opens the Coordination Panel where you can quickly run rules and see your results


Panels (continued)

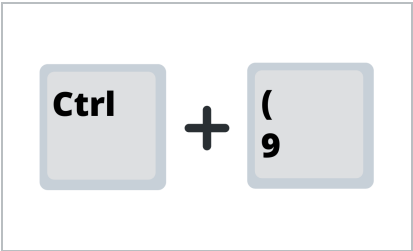Function	Action	Description
Data Transformation Operations	 A diagram showing a grey box with 'Ctrl' inside, followed by a plus sign, and another grey box with the number '9' inside.	Opens the Data Transformation Operations Panel


Actions

Function	Action	Description
Tag Selected	 A diagram showing a grey box with 'Ctrl' inside, followed by a plus sign, and another grey box with the letter 'T' inside.	Opens the Tag Panel to allow you to select and apply tags to your selected objects

Other

Function	Action	Description
Load Project	 A diagram showing a grey box with 'Ctrl' inside, followed by a plus sign, and another grey box with the letter 'L' inside.	Opens the Load Model Project Dialog Box where you can quickly load additional models


Other (continued)

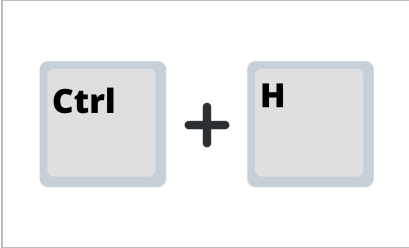Function	Action	Description
Command History		<p>Opens the Command History Panel where you can view any and all saved changes</p>

5.7 USER SETTINGS

Within the Settings icon in the top left of the menu bar, a user can modify their user settings. Toggle to:


- Work Online/Offline
- Adjust User Settings
- Change Password
- Edit Contact Information
- Save Workspaces
- Reset Workspace
- administrators can access User Management through Admin

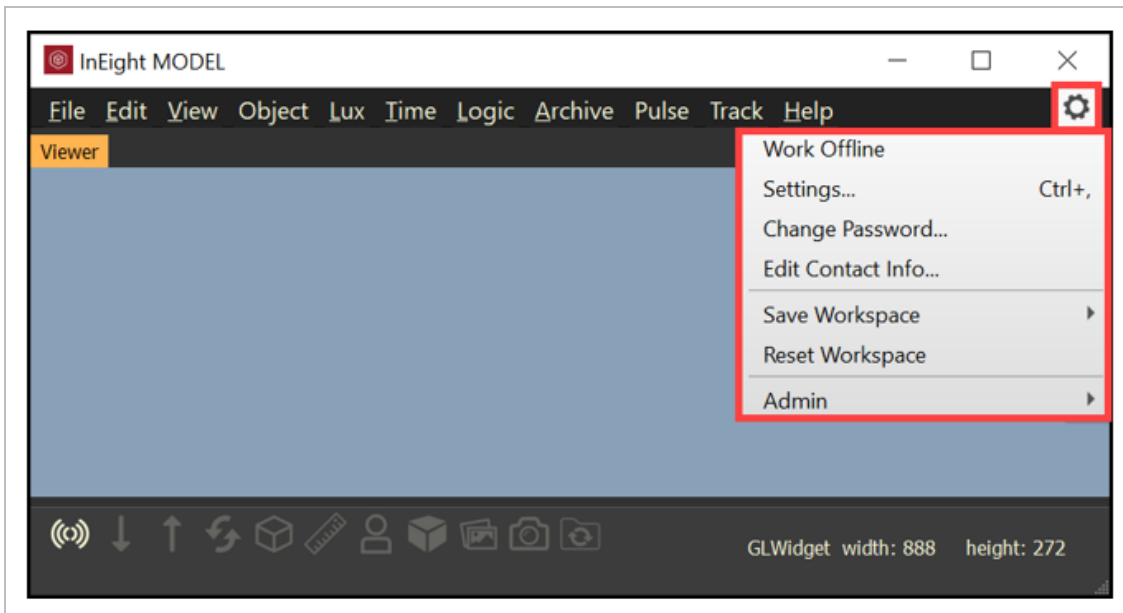

5.7.1 Settings...


Provides the ability to change:

- Mouse/Keyboard Mapping changes
- Choose Default Zoom Behavior
- Set the Coordinate Display Units
- Change the Background Color
- Choose Selection Display Style
- Invert Scroll Wheel in First Person

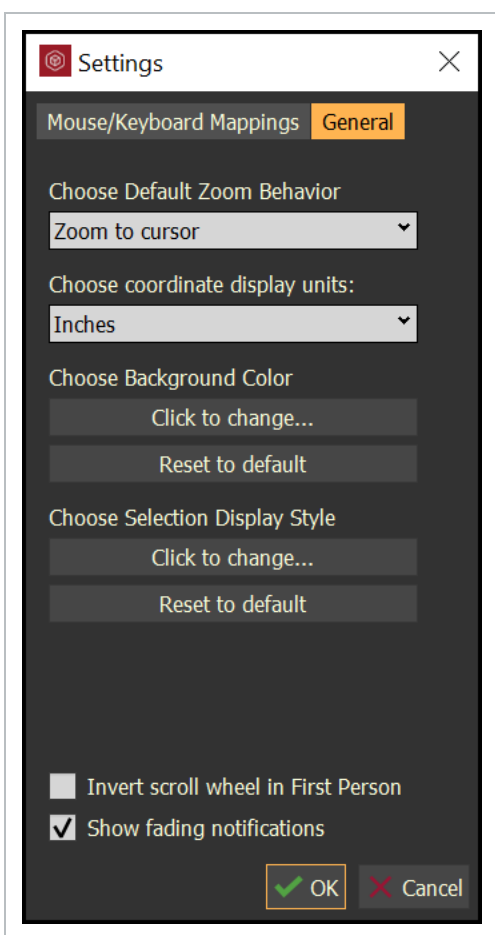


5.7.2 Mouse / Keyboard Mapping

Allows for the user to change any of the shortcuts to their working experience desire

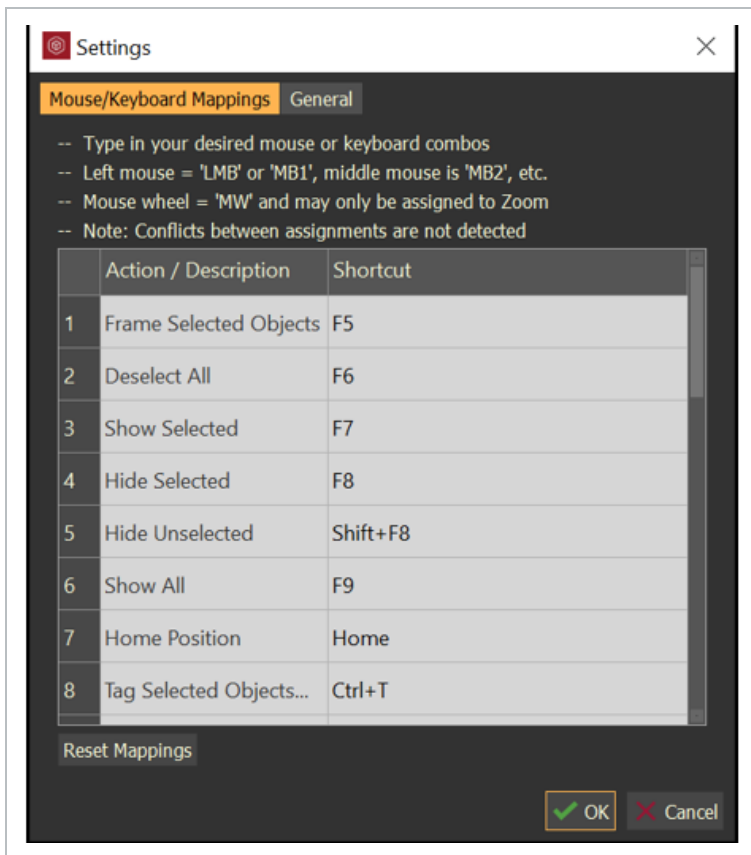


5.7.3 Choose Default Zoom Behavior

Allows for the user to set Zoom to Center or Zoom to Cursor.

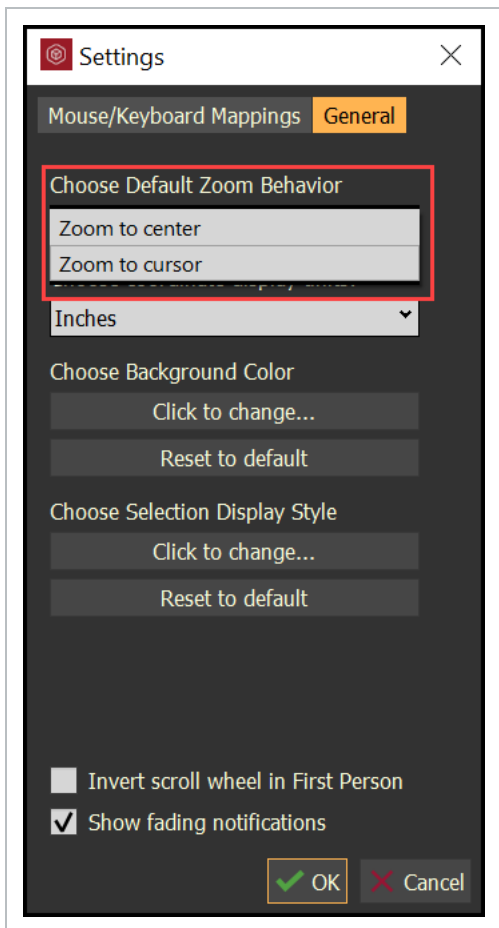


5.7.4 Coordinate Display Units

Allows for the user to set the coordinate display units. This does not change the scale of the model.

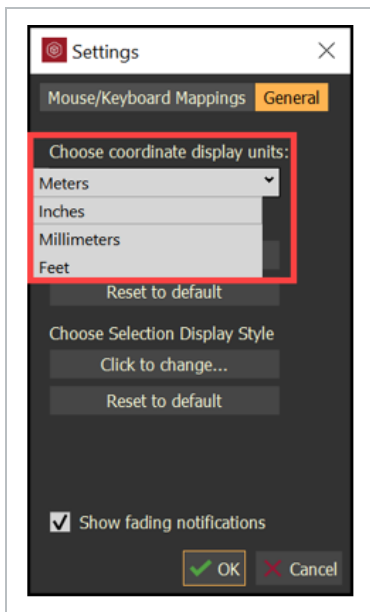


5.7.5 Background Color

Allows for the user to change the background color of the 3D viewer.

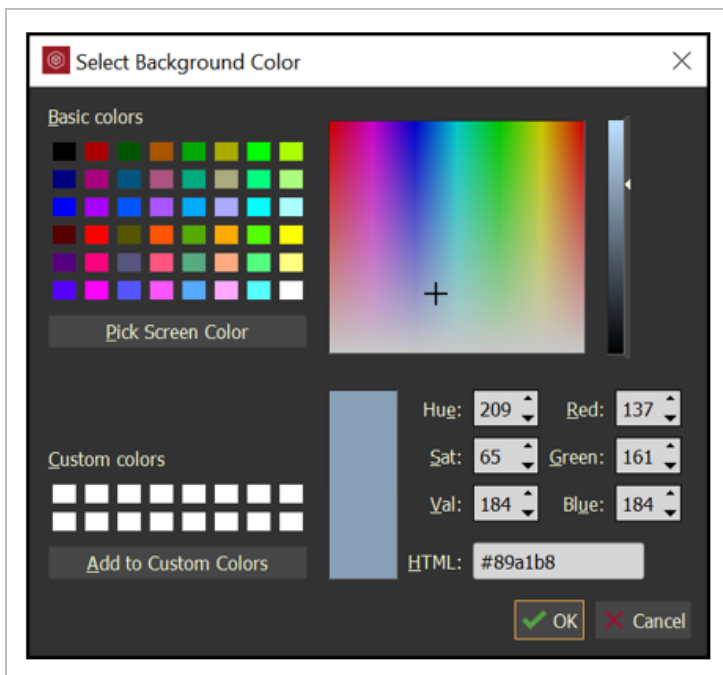

5.7.5.1 Choose Selection Display Style


Allows for the user to manage display of selected objects. Manage the ability to show lines (edges) of the objects in a desired color and the ability to color selected objects with a fill color.

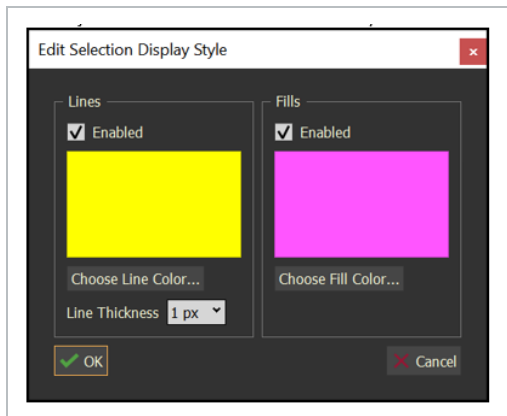

NOTE Choose Fill Color... also has transparent settings.


5.7.6 Invert Scroll Wheel in First Person

Allows for the user to manage the "head tilt" within the First Person.

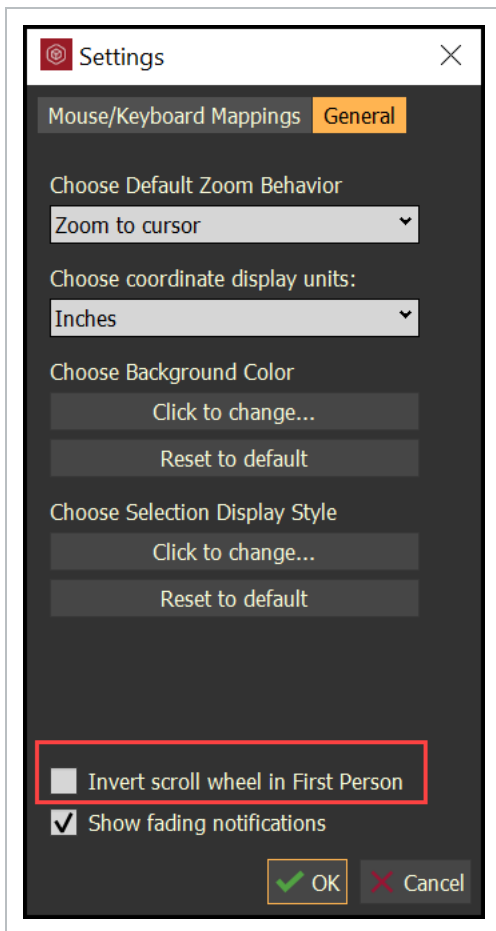

5.8 CREATE NEW MARKUP


A new markup can be created within the viewer and saved to a PDF file. Access it through **View -> Create New Markup**. Once Create New Markup is selected, a snapshot of the current 3D Viewer is captured and ready for a markup.

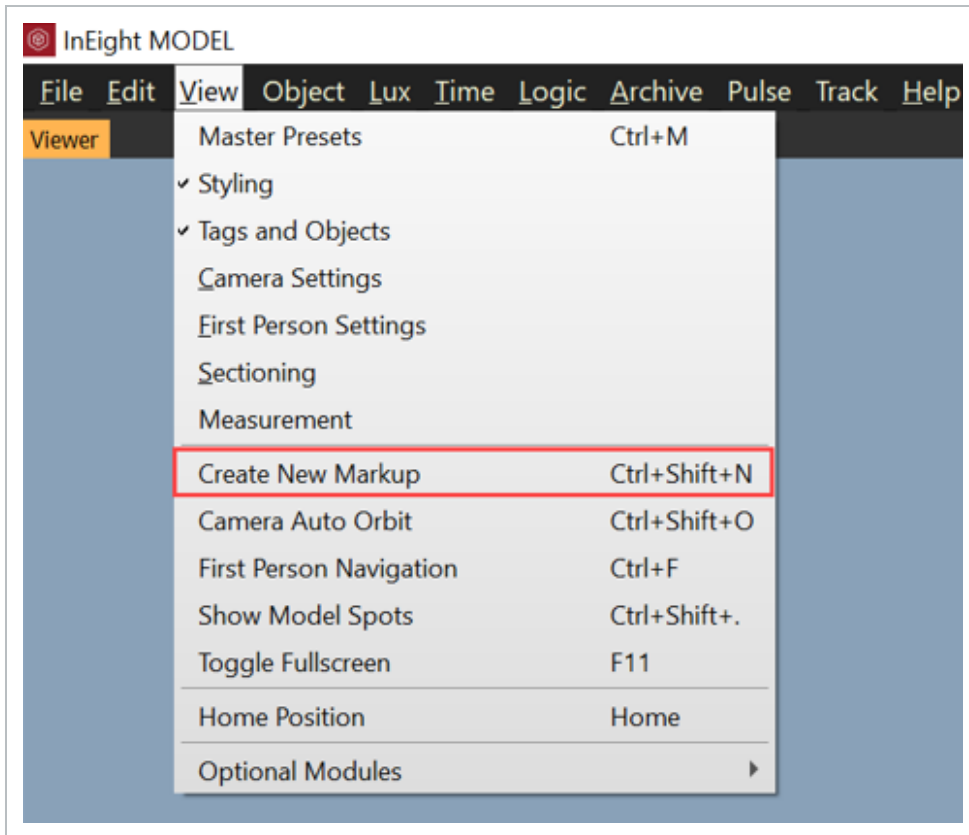

The markup capabilities allow the user to place Arrows, Scribble, Ellipse, Rectangles, and Text.


NOTE

The text size can be adjusted with the Thickness bar.

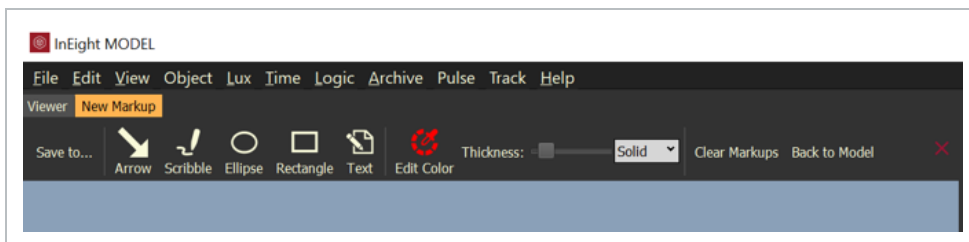


- Set the **Color**, **Thickness** and line type to a **Solid** or **Dashed** before placing an object
- Once objects are placed, they cannot be edited. They can, however, be deleted by selecting the object, then select the DEL key on the keyboard.
- Text color and size can be edited after placement. Select and highlight the text, then select edit color and/or move the thickness bar to change the text size.

Select **Save to...** to save the markup as a PDF file.

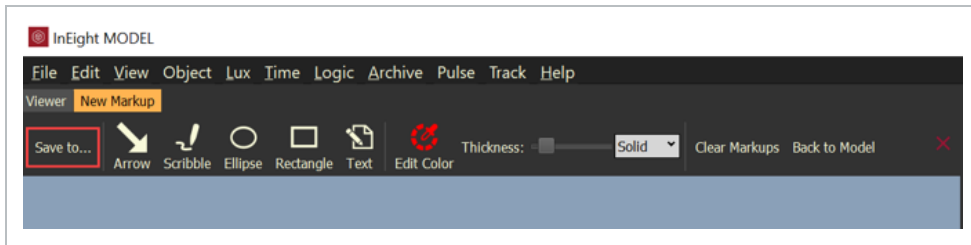


NOTE Once the new PDF file is saved, the existing markup is still active.


Select **Clear Markups** to clear all markups.

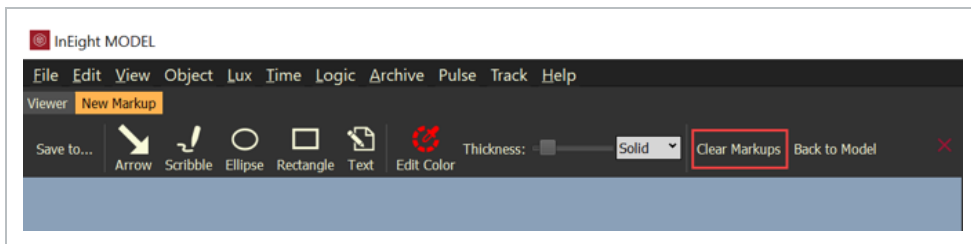

Select **Back to Model** to toggle from the New Markup to the 3D Viewer

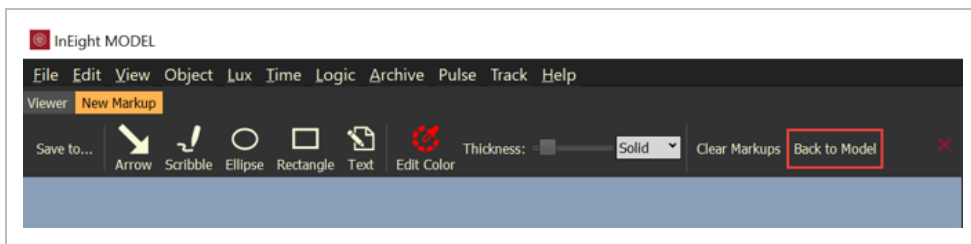

Select the **red X** to close the Markup tool.

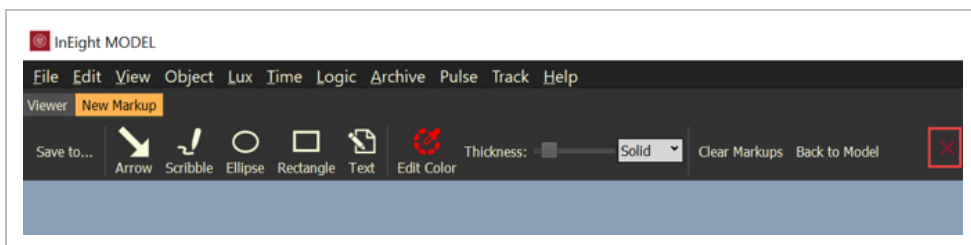


5.9 GRIDS

If grids are part of the Revit project, then they are included in the export process.

Grids can be toggled on and off through the main menu. Use the following step by step to toggle the grids on or off.

5.9 Step by Step 1 — Toggle on or off grids

1. From the main menu, click **View**.
2. Select **Show Grids**.

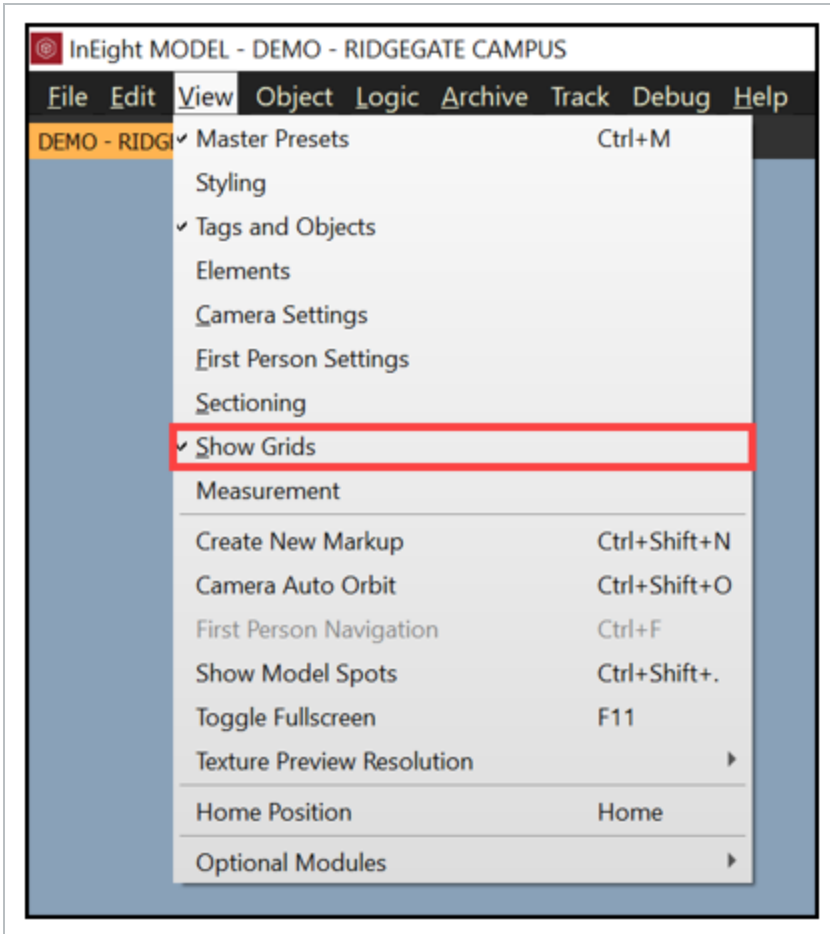

Grids can also be toggled on and off from the notification panel at the bottom left in the application.



Lesson 5 Review

1. How can you navigate in InEight Model?
 - a. Using your mouse
 - b. Using the Navigation Widget
 - c. Using hot keys
 - d. All of the above

2. If you right click on your mouse, what two menus appear?
 - a. Trash, Model settings
 - b. Plugin History, Show/Hide
 - c. Show/Hide, Selection
 - d. Selection, Trash

3. You can navigate a model from a First Person View.
 - a. True
 - b. False

Lesson 5 Summary

As a result of this lesson, you can:

- Navigate InEight Model
- Select model objects
- Use common hot keys

This page intentionally left blank.



LESSON 6 – PROJECT UPDATES AND HISTORY

Lesson Duration: 30 minutes

Lesson Objectives

After completing this lesson, you will be able to:


- Access and review your model's history
- Understand how to update your project from the Project Update window
- Access the history of the commands taken on your project prior to saving Access and review

Topics in this Lesson

6.1 COMMAND HISTORY

As content is added to the model environment, a complete history is tracked, saved, and accessible anytime through the lifetime of the project. The Command History panel provides the insight as to what actions have been taken before they have been saved to the project.

The Command History panel is located from the main menu, Edit -> Command History or with the Ctrl+H hotkey.

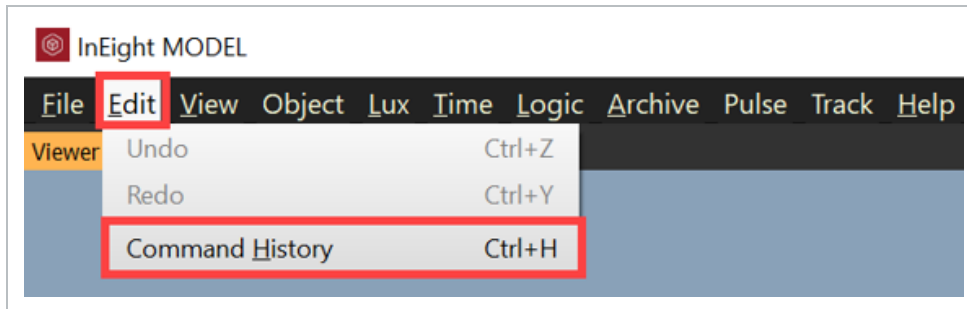

As changes are created within the model environment, they are listed in the Command History until the user saves the changes to the project. Also, there will be an * following the project name to indicate that there are changes.




You can undo any changes by selecting a previous change or selecting <empty>. Notice that the project name no longer has an * following the name.




To reactivate the changes, simply select on the last change that you want applied to the project. Then Save the changes to the project with Ctrl+S or select File -> Save Project...

The Save Changes dialog box will open with a description of the project changes.

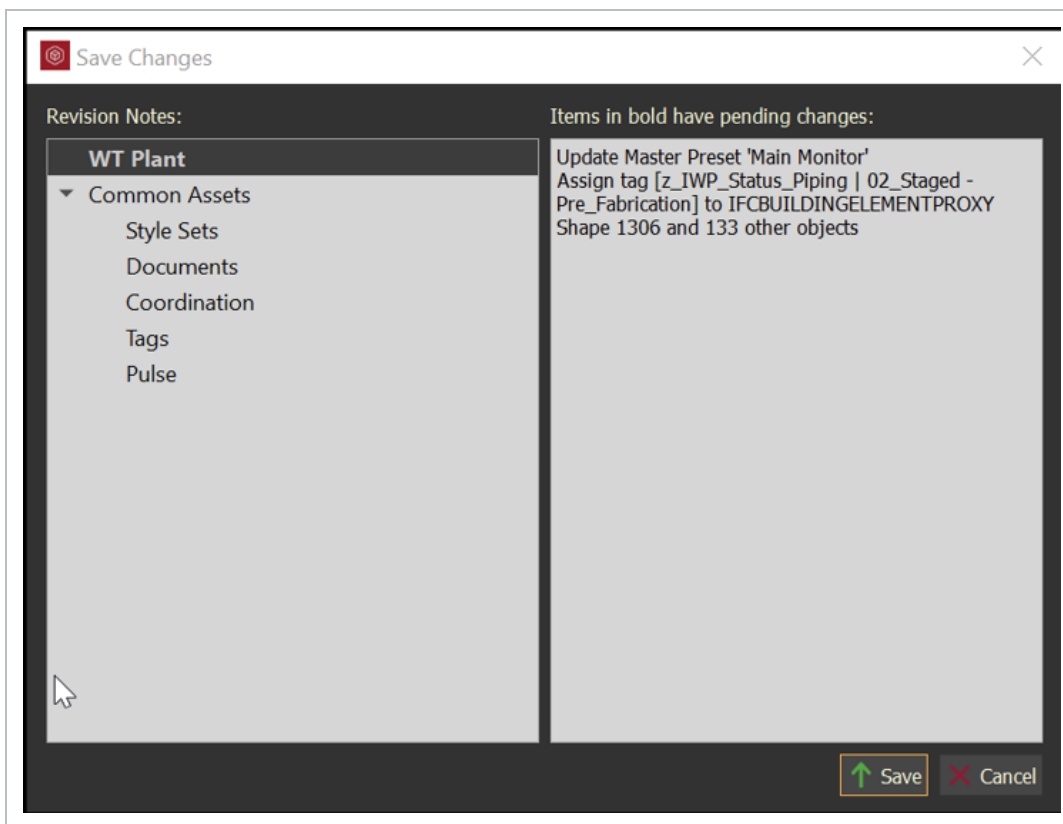


6.2 PROJECT UPDATES


When a user has saved updates to the project each user currently within the project will get a notice: **You have project updates.**

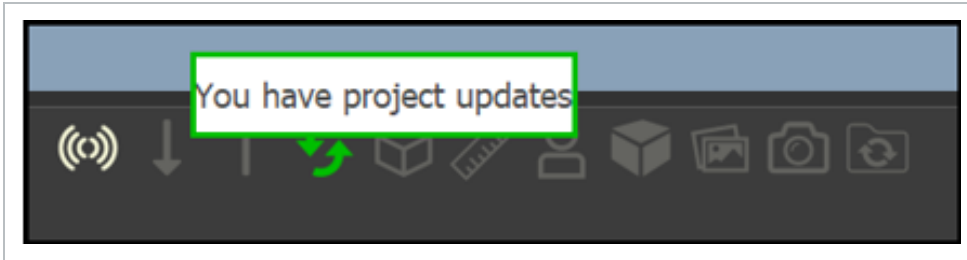


Right click on the green sync icon and select Update Now to retrieve the latest project updates.

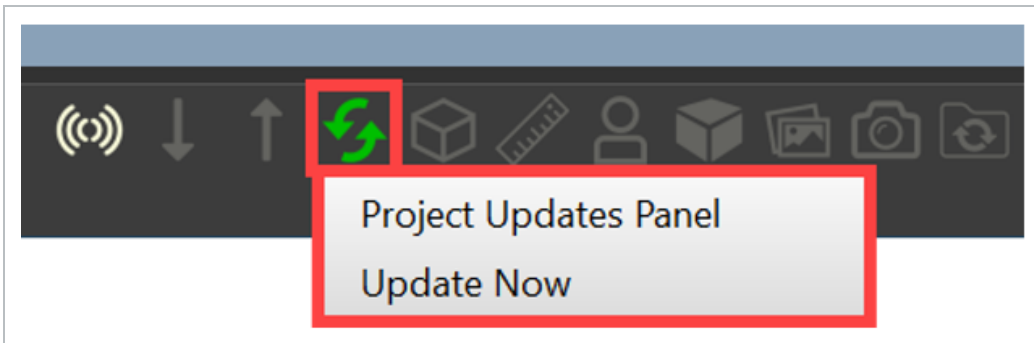

Or select Project Updates Panel to review the Update Details and by who. Once reviewed, then click Update Now to update your current session with the latest project updates.

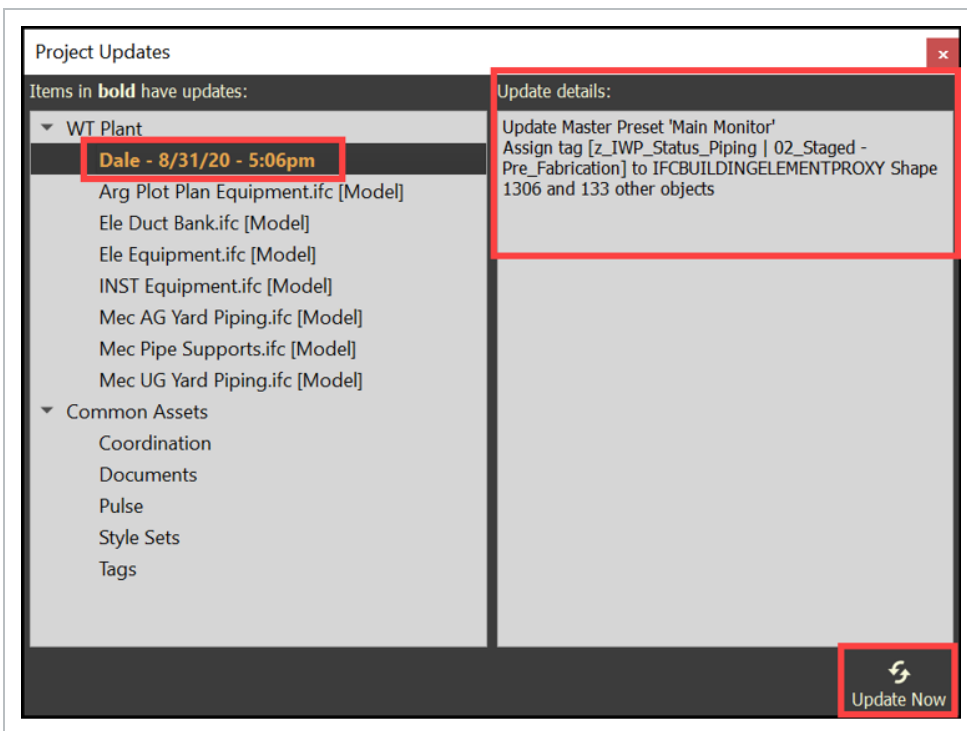


If there are and a user tries to save their project changes, then a Project Not Current dialog box will appear, requiring the user to perform a project update before a project save can take place.

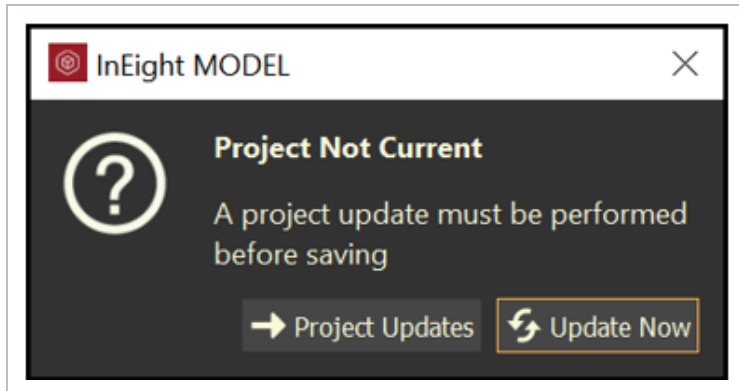

6.3 PROJECT HISTORY

Project History allows users to view a project at any stage, from the beginning all the way to the end of a project.


The Project History panel is located from the main menu, File -> Project History or with the Ctrl+Shift+H hotkey.

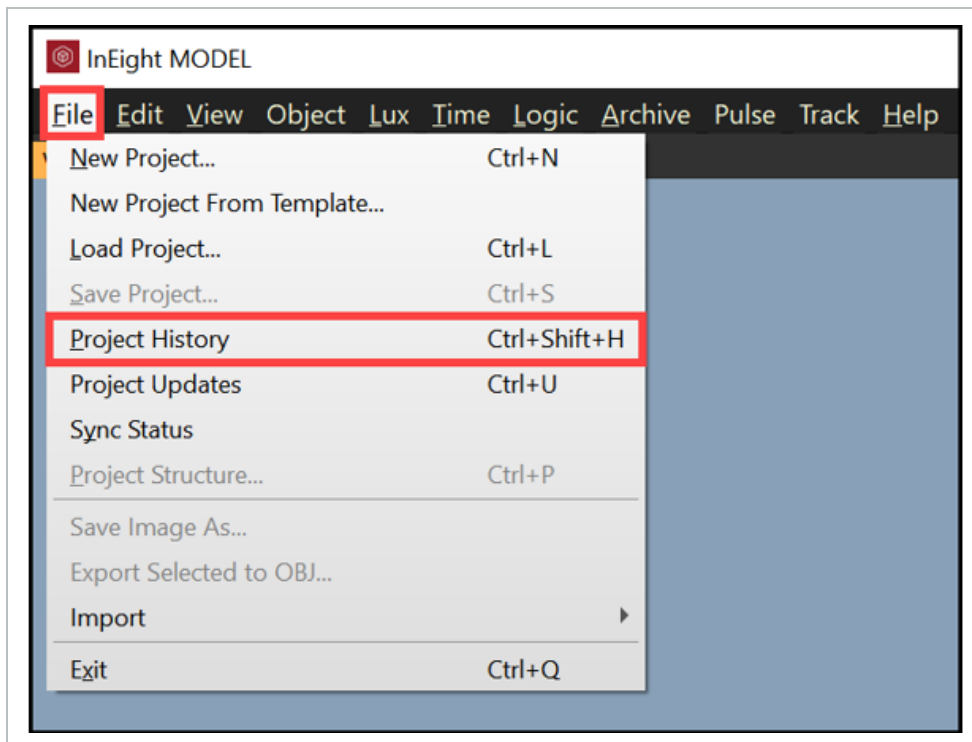


The Project History panel provides the ability to look at the project in a historical view. This can be achieved by:

- Jump to date and then click Go
- Project Revisions - search revisions made by a particular user or search for keywords from the Revision Notes history.

- Revision Date - double click on a revision date

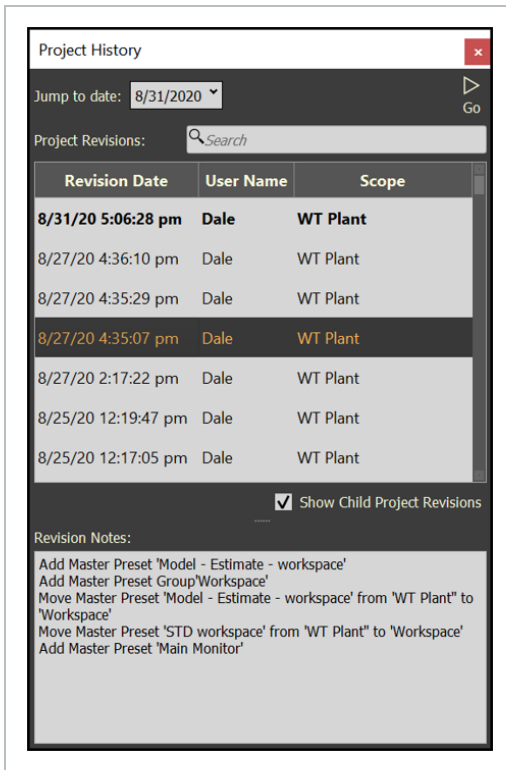

When an older revision is activated, a red box will appear around the 3D Viewer and the project will be rolled back to that particular time in the project's history.

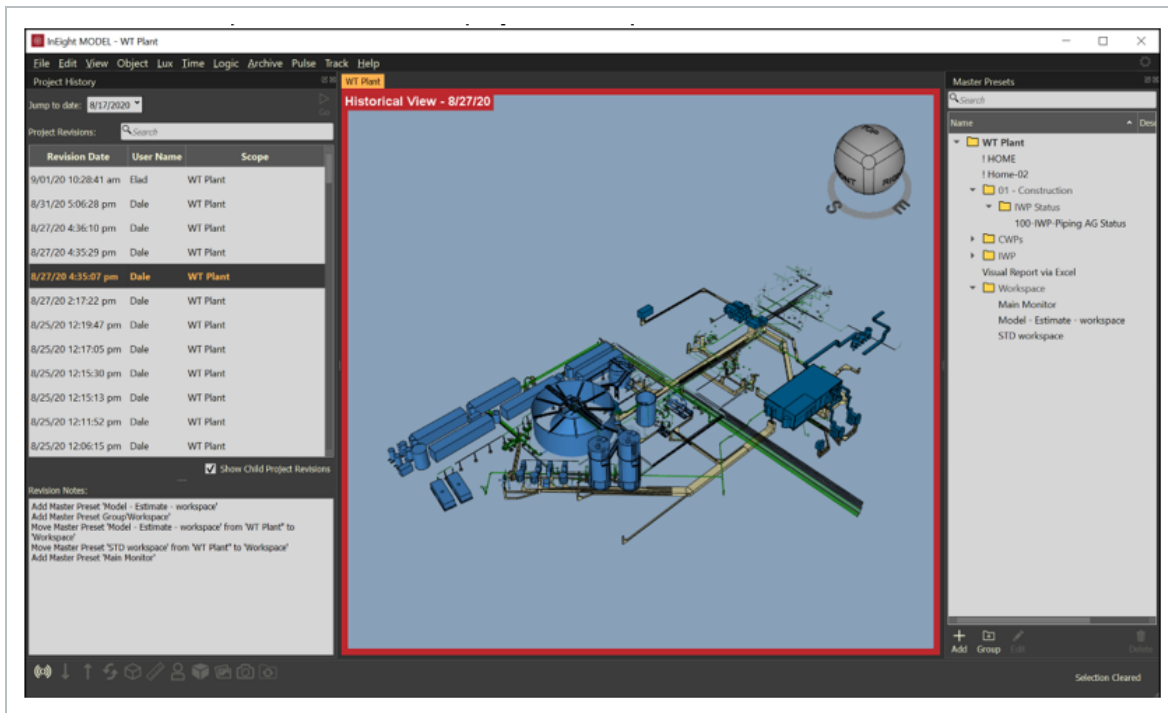

NOTE

In order to get back to the current version of the project, double-click on the first date listed at the top of the Revision Date list. Once the model is back to the current version, the red box will disappear.

Lesson 6 Review

1. Once you've made a change in model, the previous state can never be recovered.
 - a. True
 - b. False

2. Users cannot save changes to their project if a project update is available.
 - a. True
 - b. False

Lesson 6 Summary

As a result of this lesson, you can:

- Access and review your model's history
- Understand how to update your project from the Project Update window
- Access the history of the commands taken on your project prior to saving Access and review

This page intentionally left blank.



LESSON 7 – TAGS AND OBJECTS

Lesson Duration: 30 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Create custom tags and edit tags
- Create and edit dynamic tags
- Assign and remove tags

Topics in this Lesson

7.1 TAGS AND OBJECTS OVERVIEW


Tags are the organizational structure of model objects and define a set of identifiers (category and value). When you export a model through Revit or AutoCAD, or import an IFC file, you are creating tags and objects metadata.

Interact with tags to manipulate your model in a variety of ways, including:

- Selecting a group of model objects
- Visualizing your model with styles associated to tags
- Creating custom tags to enhance a model's value
- Linking documents and photos to tags
- Creating coordination rules to detect clashes

7.1.1 Tags and Objects Panel


To access your project's tags and objects, select **View** from the menu bar at the top of the screen. Then, select **Tags and Objects**.

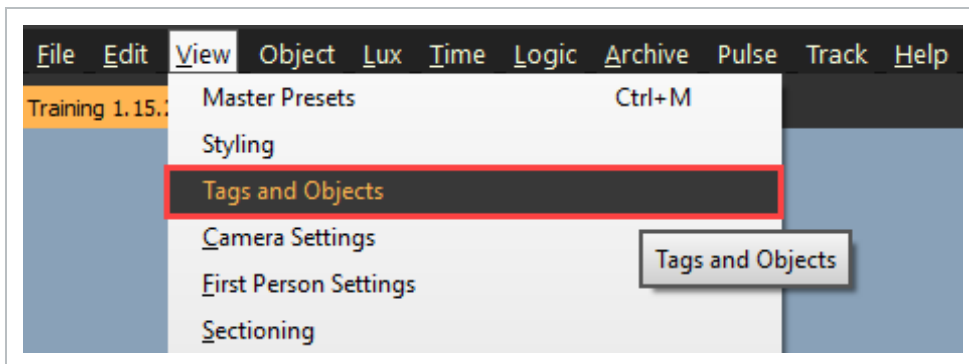



- This will launch the Tags and Objects panel

7.1.1.1 Objects Tab

The **Objects tab** within the Tags and Objects panel displays all the model streams that are available within your project.

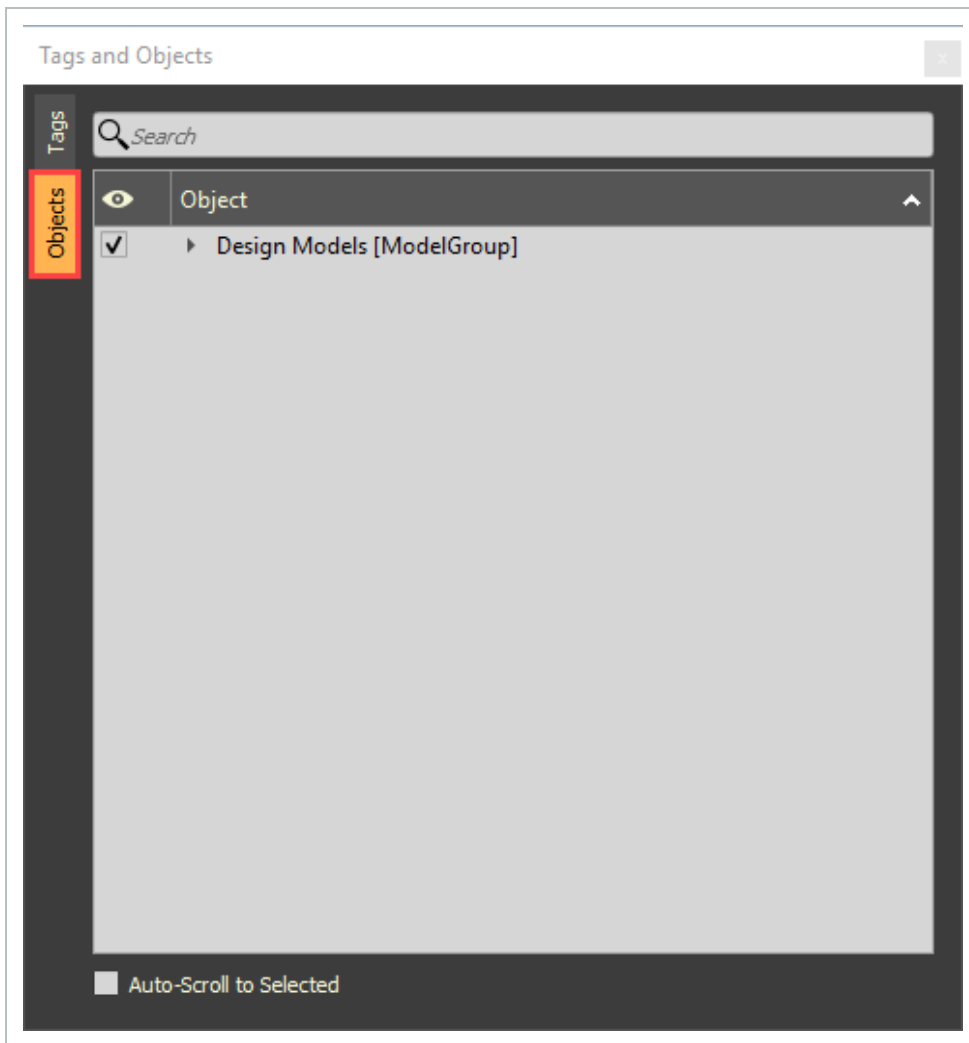

Search for objects in the search bar or use auto-scroll to expand the list of tags that relate to your selected model object(s).

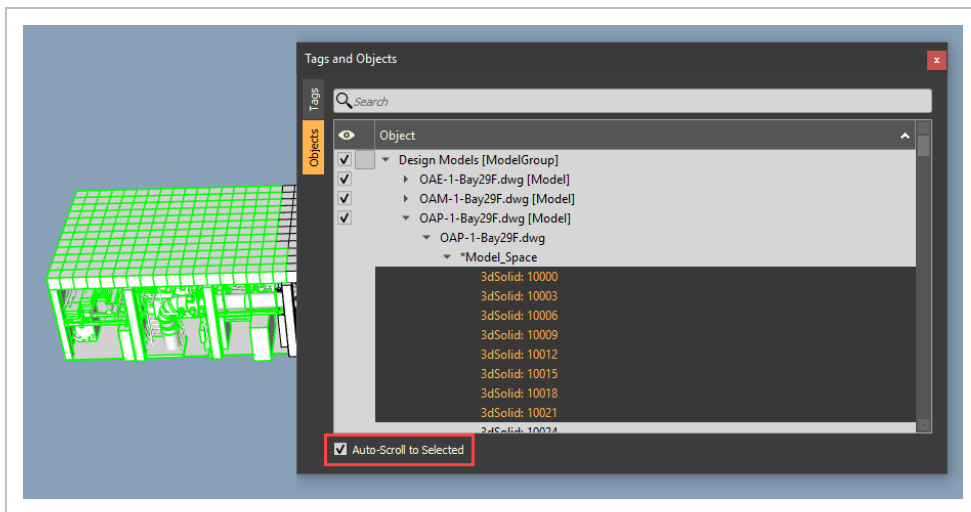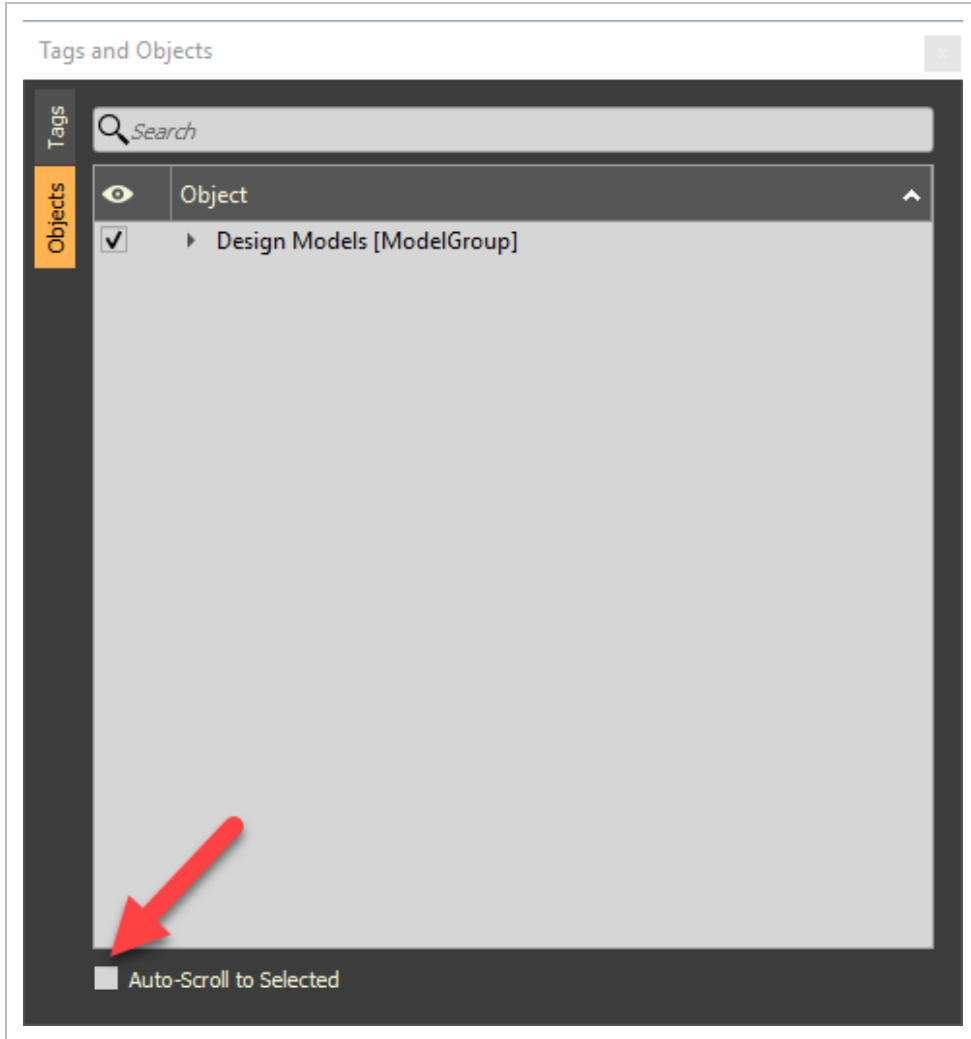


7.1 Step by Step 1 — Toggle Model Streams Visibility

1. From the Tags and Objects panel, select the **Objects** tab.
2. Toggle the **View** check box to turn the visibility of Model Streams on or off.




7.1.1.2 Tags Tab

The **Tags** tab displays all the tags imported with the model streams and any dynamic or custom tags created.

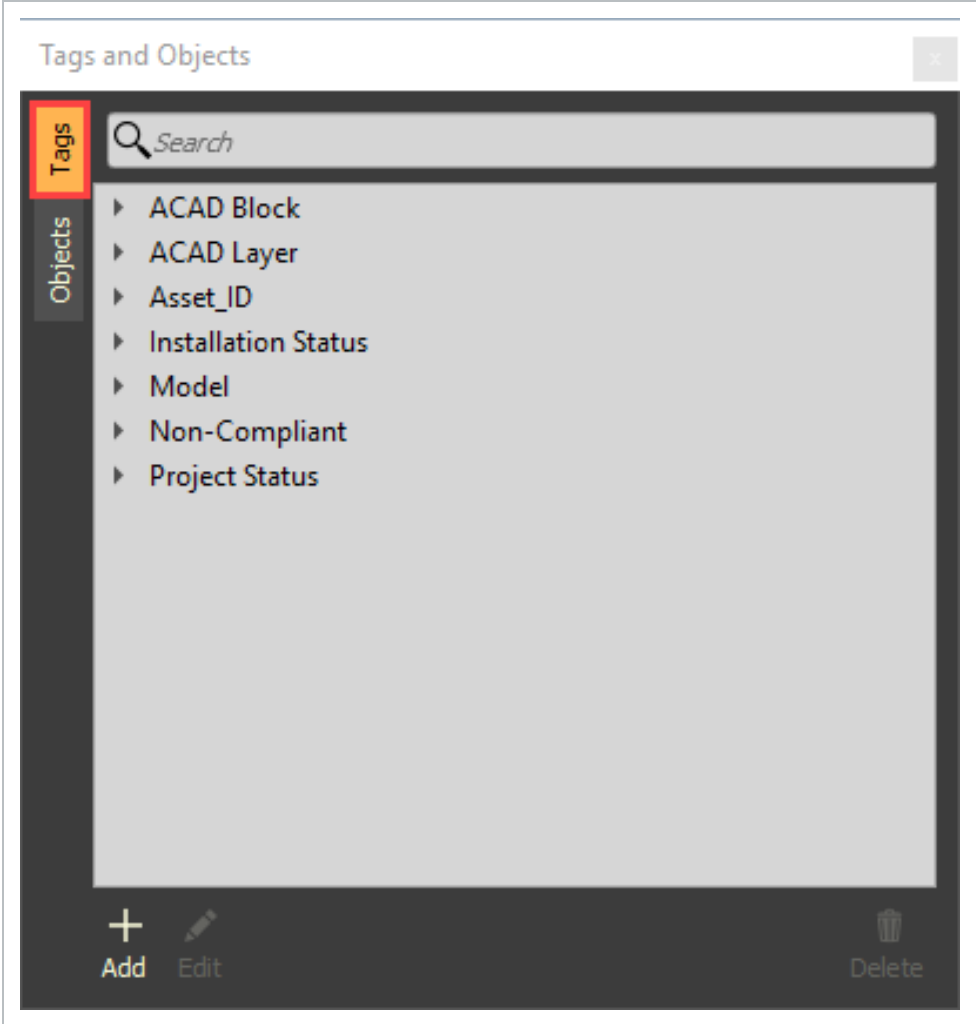

Select a tag category to expand its list of tag values or use the search bar to find a tag.

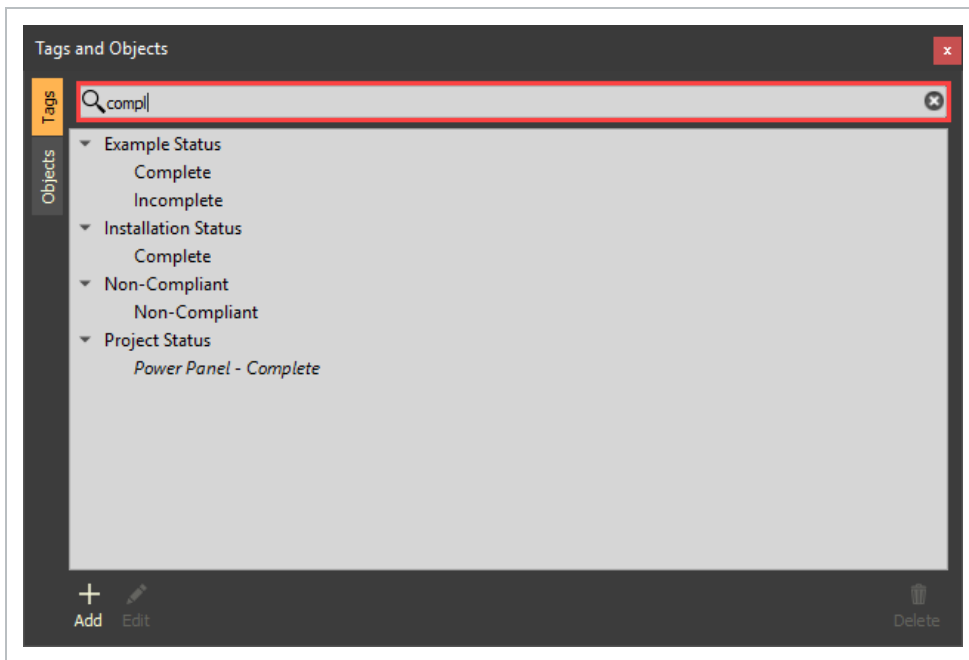

7.2 CREATE AND EDIT TAGS

Tags are fixed, or static, values within a defined category that help describe the objects to which they are assigned. You can only associate a model object to one **Tag Value** within a **Tag Category**. Create tags through the Model Exporter/Importer, manually in InEight Model or import tags from Excel. Use tags to help define and view your model through different lenses.

7.2.1 Manually Create and Edit Custom Tags


Use custom tags to transform design models into construction models or owner models.

Add custom tags to:

- Normalize data to your specific nomenclature
- Unique Identifications
- Status
- Endless possibilities...


7.2 Step by Step 1 — Creating Tags

1. From the Tags and Objects panel, select the **Tags** tab.
2. Next, select the **Add** icon.

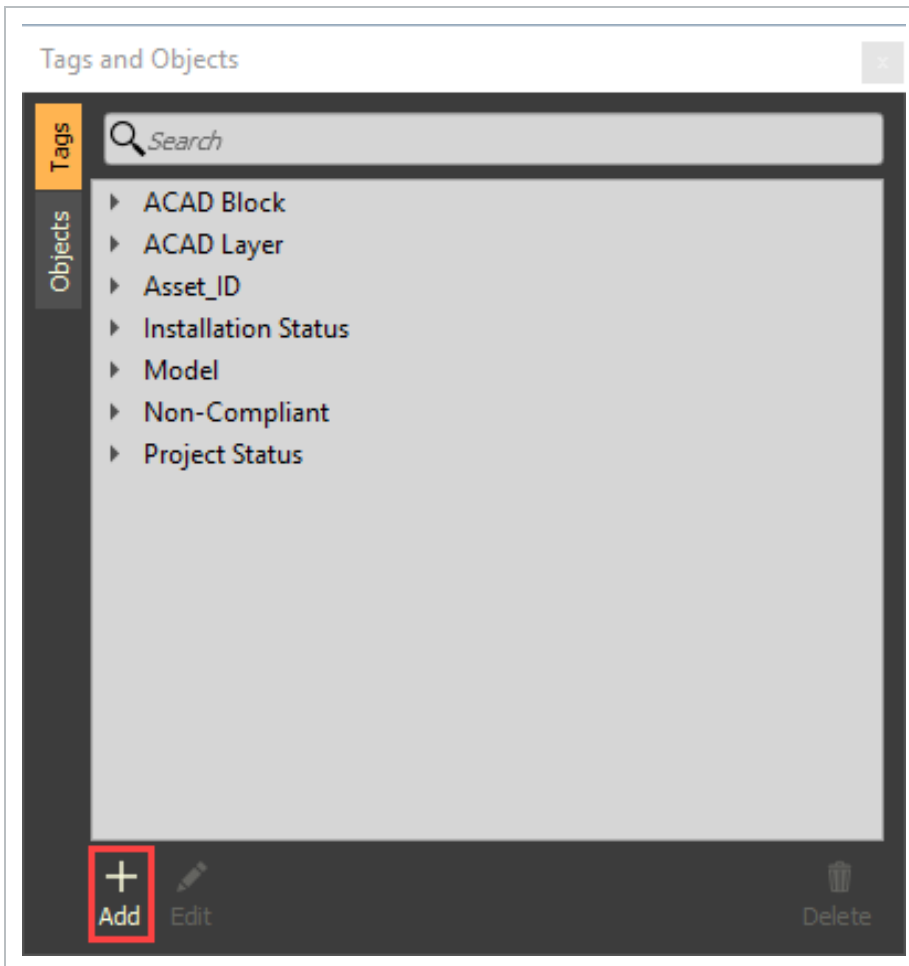**TIP**

If there are model objects selected, **Ctrl+T** will open the Tag dialog box.

- The Tag dialog box will open. Enter a tag category name and select **Add New**.

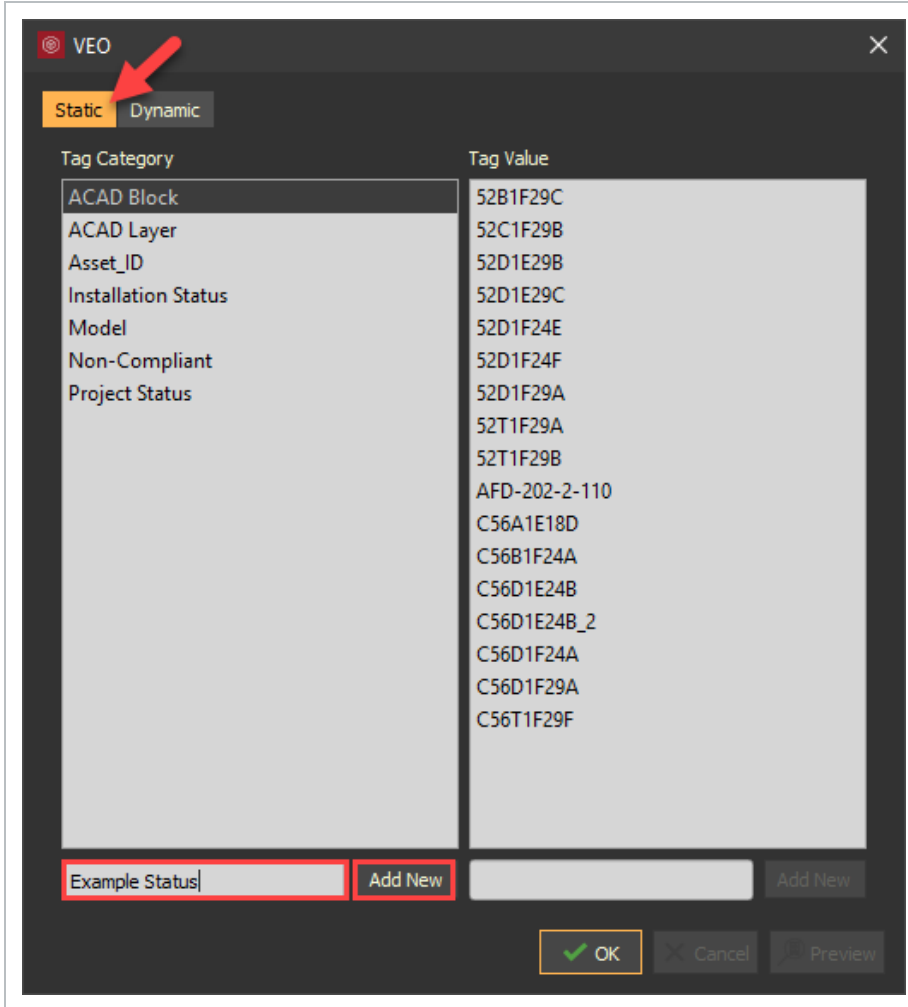


- Once you select Add New, the new Tag Category is created and selected


NOTE

If you select **OK** without first selecting **Add New**, you will close the Tag dialog box without saving your tag category name.

4. Enter a tag value and select **Add New**.

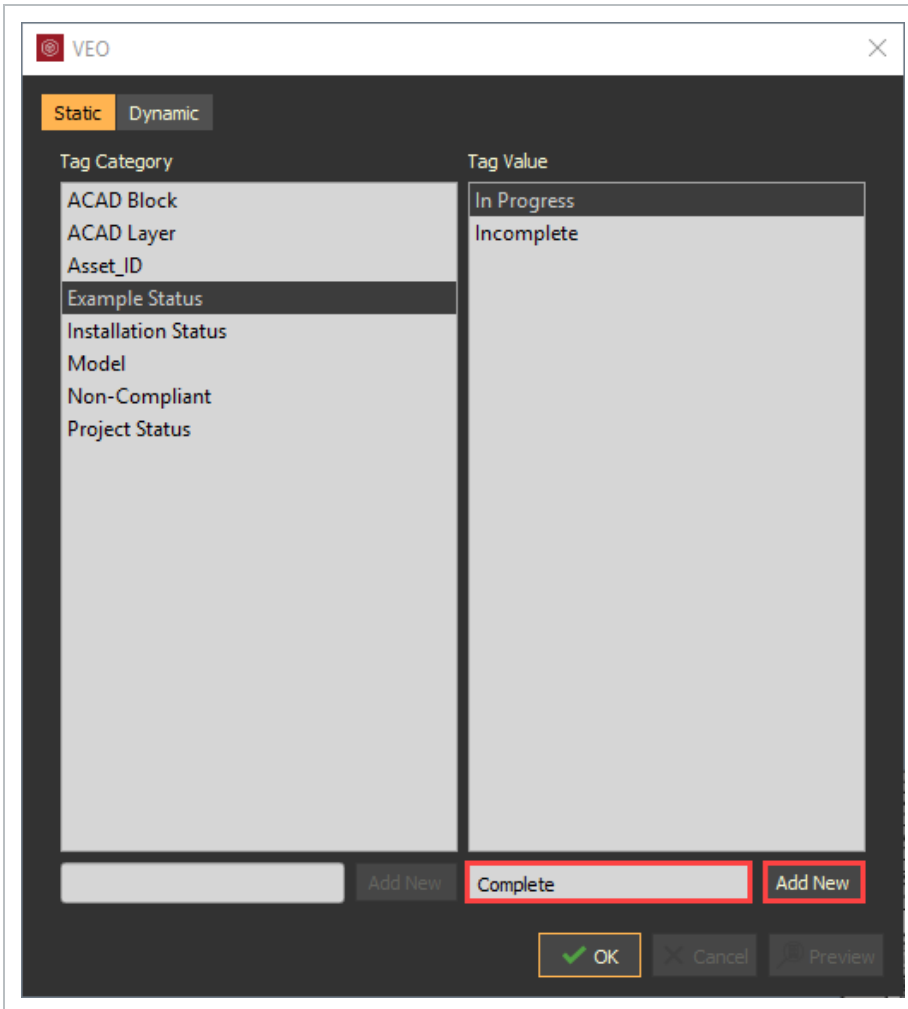


5. Now, select **OK** to save your new tag(s).

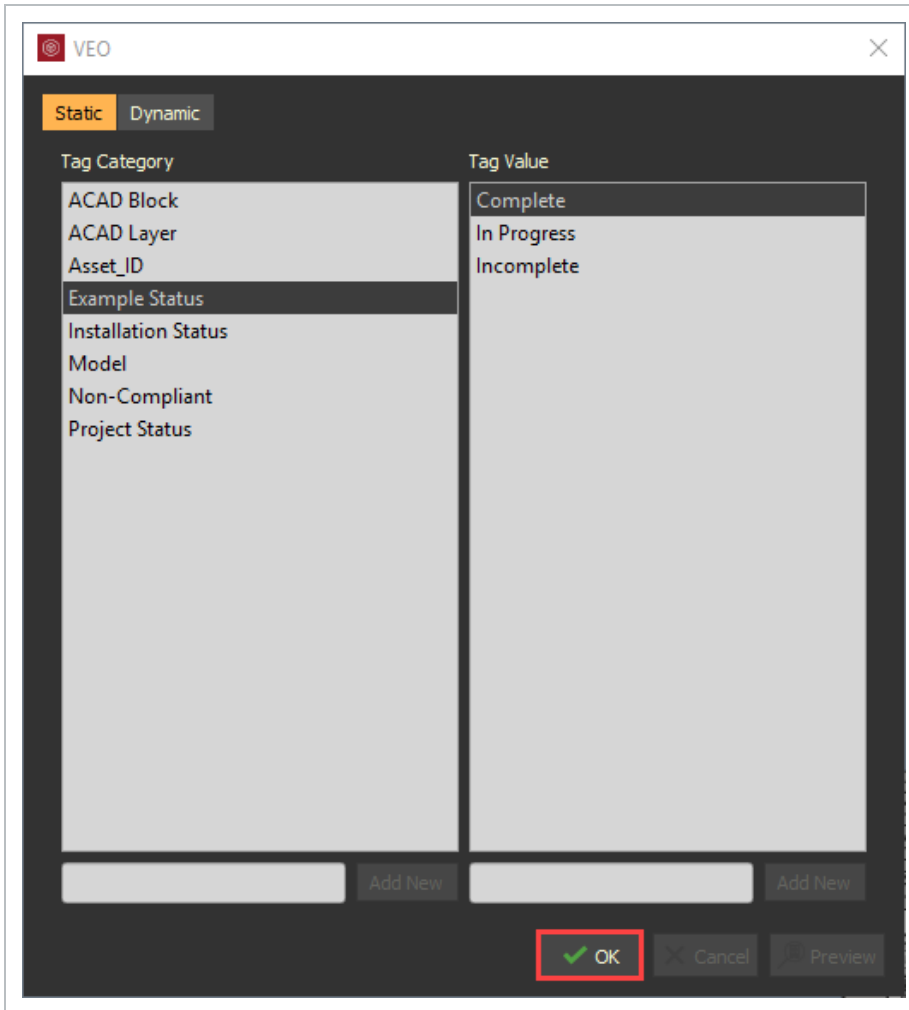

NOTE If any model objects are actively selected, a note will appear in the Tag dialog box asking you to confirm that you want to apply your tag to those selected objects.

6. Your new tag will appear in the Tag panel.

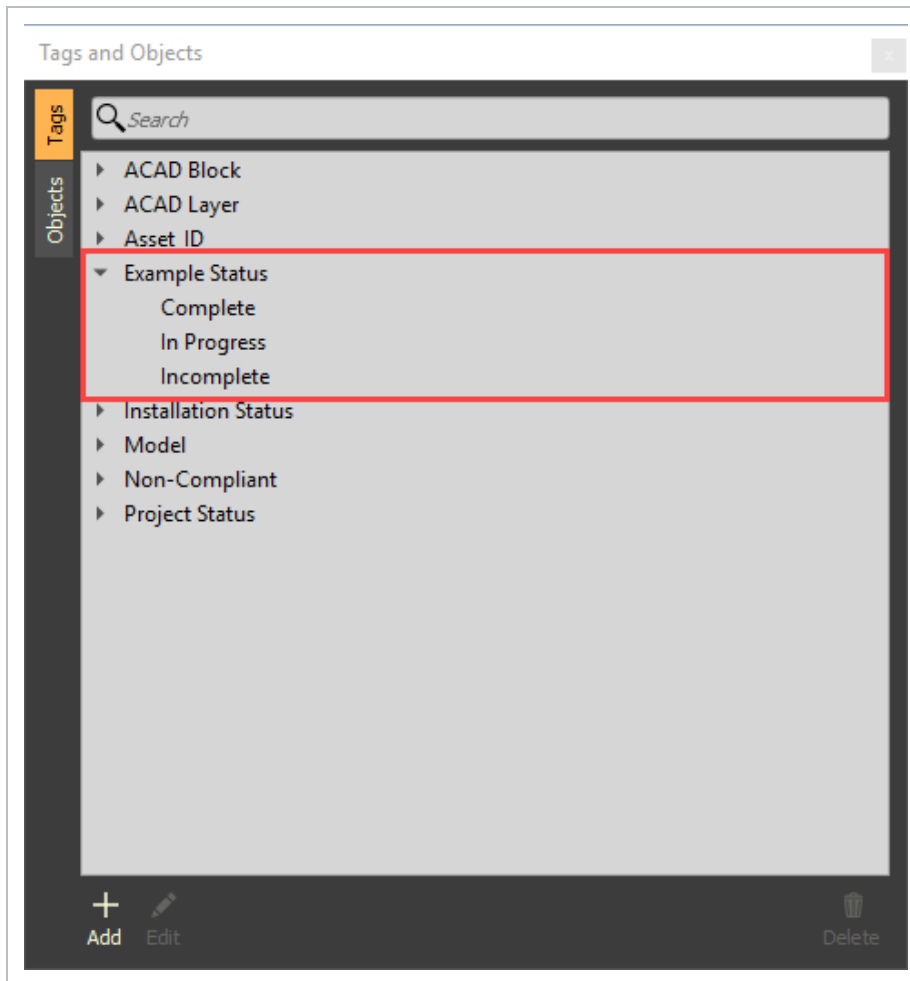


7.2.2 Delete a Tag

Any tags from the Model Exporter / Importer process deleted are not really deleted. They are still in the database but hidden from the Tag panel. The next Model Exporter / Importer process will not import any tag that has been deleted.

7.2 Step by Step 2 — Deleting Tags

1. From the Tags and Objects panel, select the **Tags** tab.
2. Select the tag category or tag value(s) you want to delete, then click on the **Delete** icon.

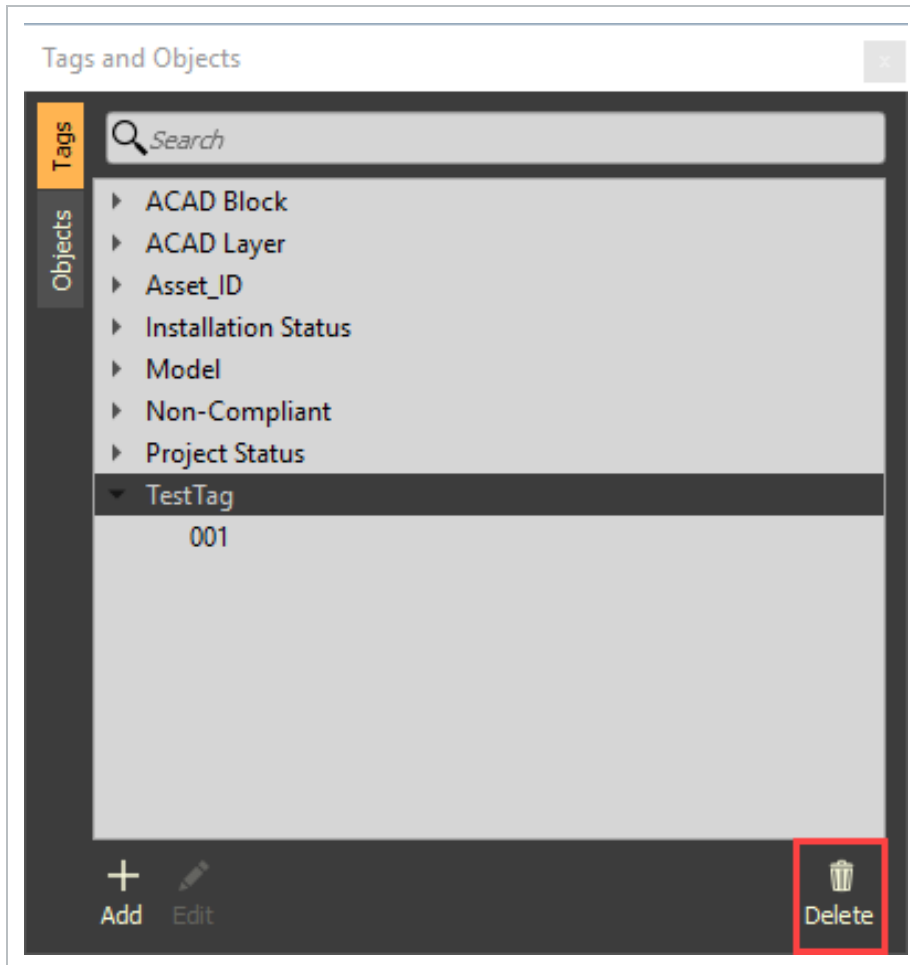


7.3 CREATE AND EDIT DYNAMIC TAGS


Unlike static tags, dynamic tags are controlled by rule sets. They are powerful tools in creating custom groups of objects for various interactions. Use Dynamic tags to configure coordination rules and normalize data.

7.3 Step by Step 1 — Creating Dynamic Tags

1. Open the **Tags and Objects** panel.
2. Check that no model objects are actively selected.
3. Select the **Add** icon to open the Tags dialog box.
4. Select the **Dynamic** tab.

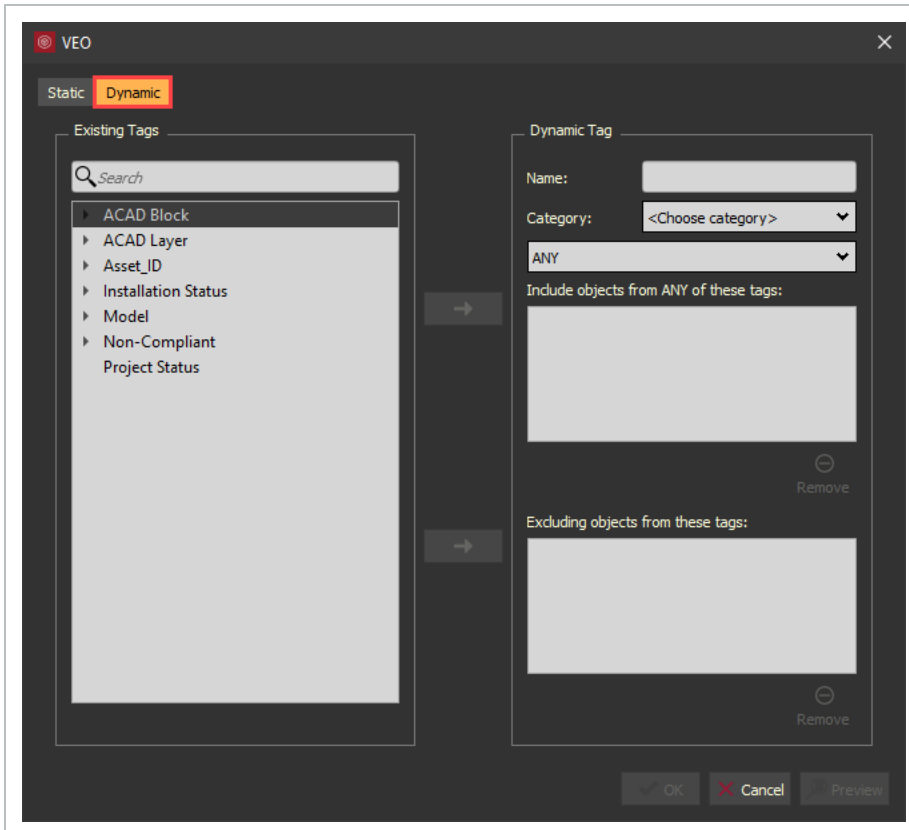

5. Enter a name and select a category from the drop-down menu or select **New...**

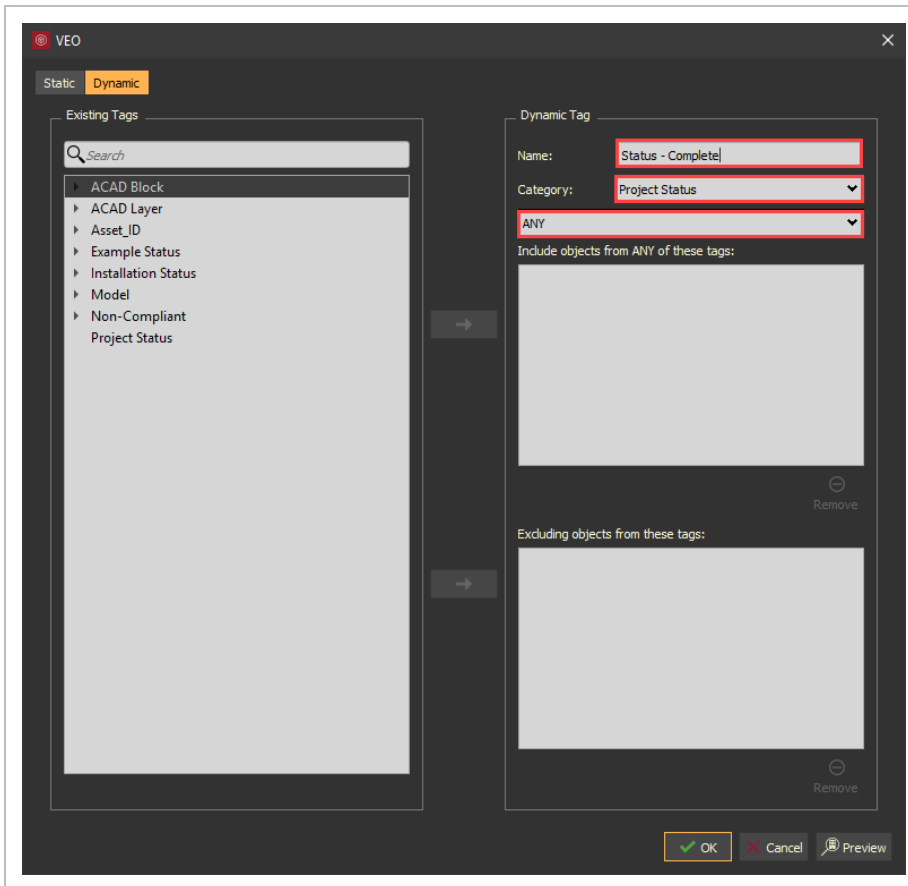


6. Select either **ANY** or **ALL** from the drop-down menu.

TIP

ANY includes any object from ANY of the tags selected.
ALL includes objects that have ALL of the tags selected.


7. From the existing tags list on the left, select the tag(s) you want to include.
 - Use the top arrow to direct that tag from the existing options to your dynamic tag inclusion list on the right. Repeat until you have moved all desirable tags to the included list on the right

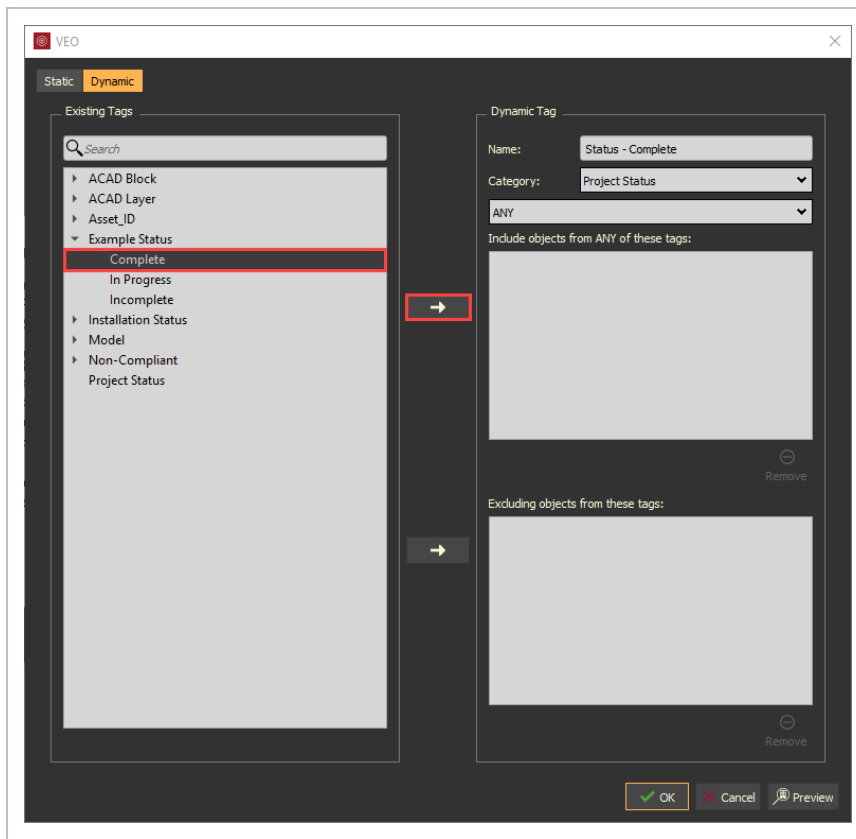**NOTE**

Existing Tags can be multi-selected by holding CTRL or SHIFT keys on the keyboard.


8. From the existing tags list on the left, select the tag(s) you want to exclude.
 - Use the bottom arrow to direct that tag from the existing options to your dynamic tag exclusion list on the right. Repeat until you have moved all undesirable tags to the

excluded list on the right

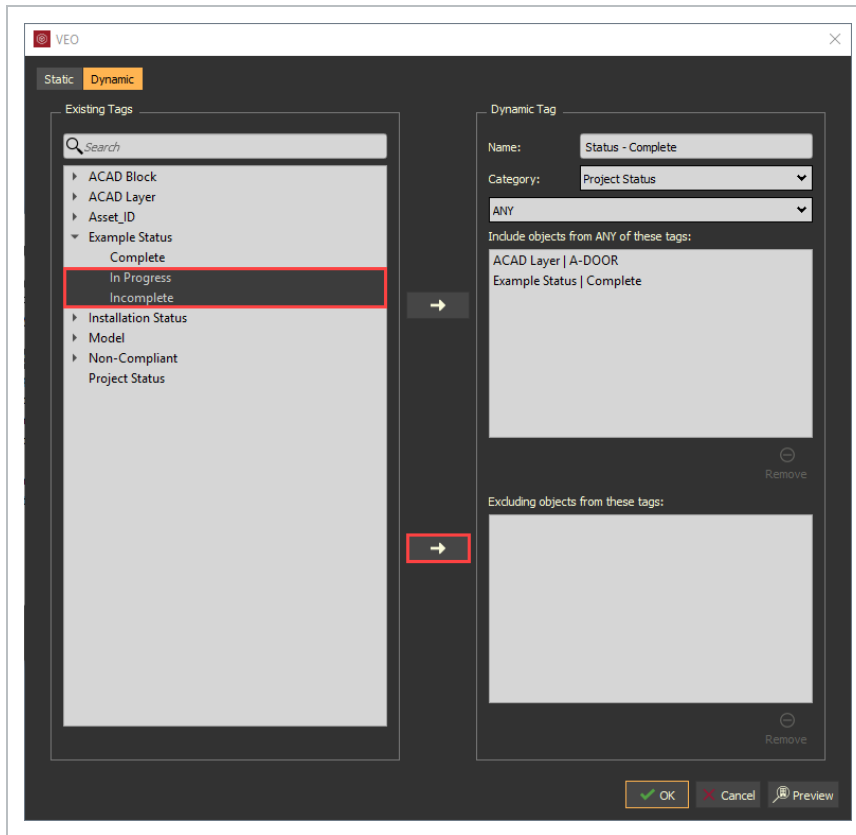


NOTE The same tag cannot exist in both the included and excluded fields.

9. Preview the results of your dynamic tag by selecting the **Preview** icon.
 - This will select all model objects that meet the Dynamic Tag criteria

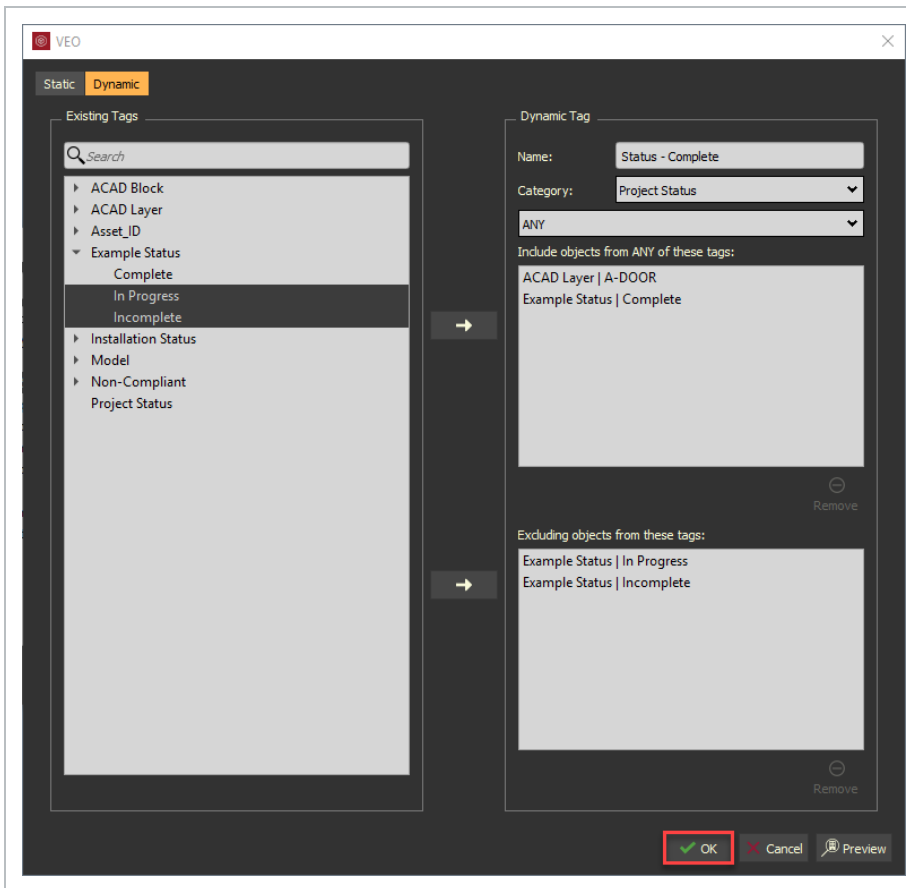10. To save this dynamic tag, select **OK**.**NOTE**


Dynamic tags will not appear in the Existing Tags Column, and therefore cannot be used in another dynamic tag.

Within the Tags and Objects panel, under the Tags tab, Dynamic tags appear in italics.

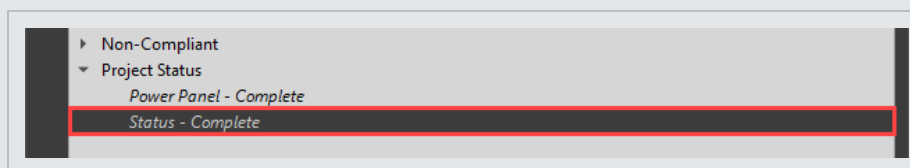

7.3 Step by Step 2 — Editing a Dynamic Tag

1. Open the **Tags and Objects** panel.
2. Select the dynamic tag you want to edit. Select the **Edit** icon or right click and select **Edit Dynamic Tag** from the drop-down menu.

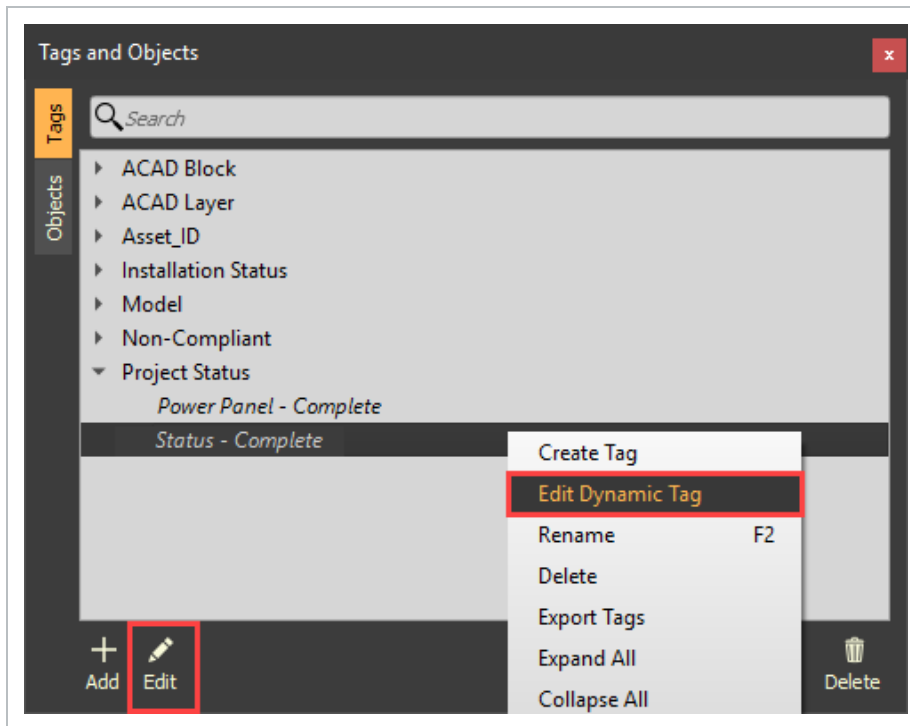

7.4 ASSIGN AND REMOVE TAGS


7.4.1 Assigning Tags

Assign custom created tags to model objects to enrich the model with actionable metadata.

7.4 Step by Step 1 — Assigning Tags


1. Select desired model objects.
2. Use the Tags hot key **Ctrl + T**, or right click to view the **Selection Menu**.

3. From the Selection Menu, click on **Tag Selected Objects**.

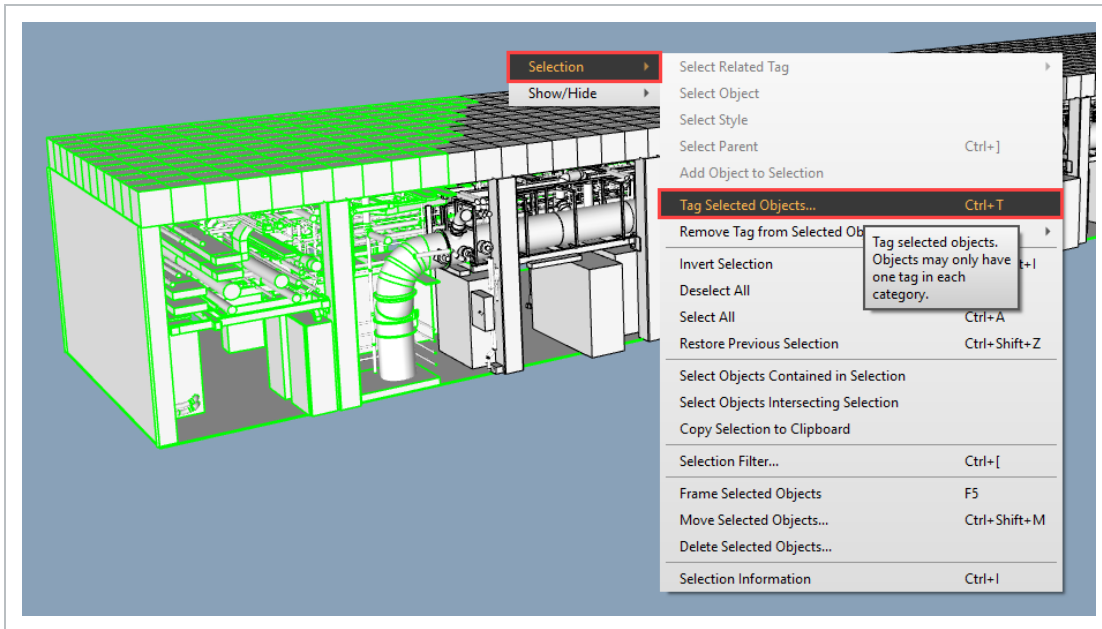

4. From the Tags dialog box, select a tag category and value(s) you wish to apply to your selection.

5. Click **OK**.

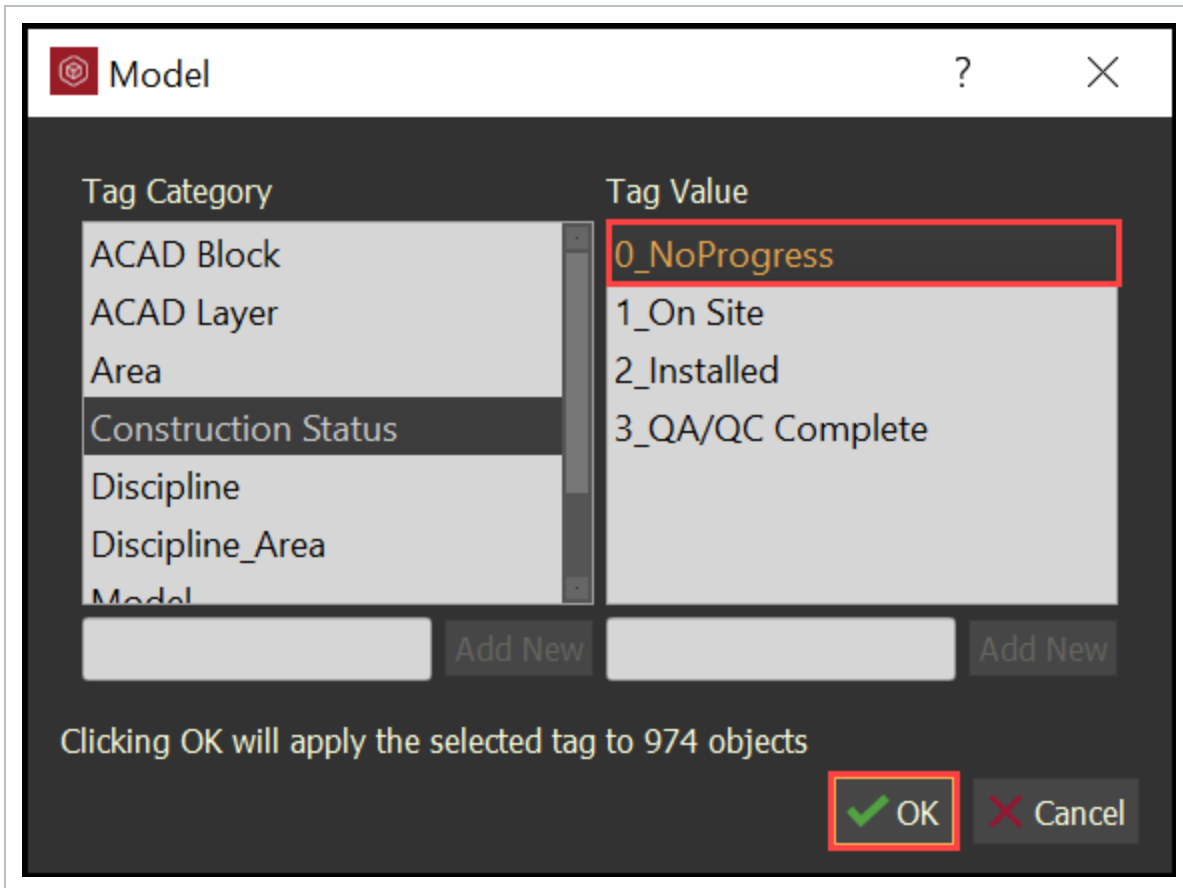

NOTE Clicking OK will apply the selected tag to the actively selected objects.


TIP If the desired tag category or value is not available, then simply create it, then select **OK**.

7.4.2 Removing Tags

Quickly remove tags from model objects.

7.4 Step by Step 2 — Removing Tags

1. Select desired model objects.
2. Right click to view the **Selection Menu**.
3. From the Selection Menu, select the tags you want to remove from your selected objects.

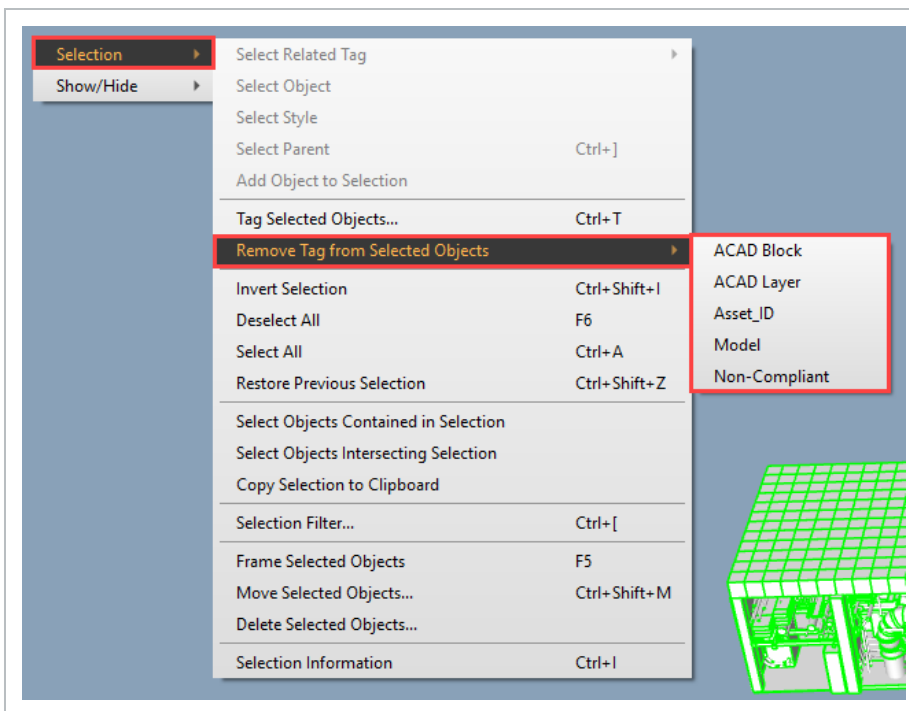


7.5 COPY METADATA FROM MODEL TO EXCEL

Metadata can be copied from your model into Excel by selecting the whole model or specific parts of the model, copying that data to the clipboard, and then pasting that data into excel.


The following step-by-step walks you through how to copy metadata from Model to Excel.

7.5 Step by Step 1 — Copy Metadata from Model to Excel

1. Select model objects.
2. Right-click anywhere in the viewer and select Selection > Copy Selection to Clipboard.

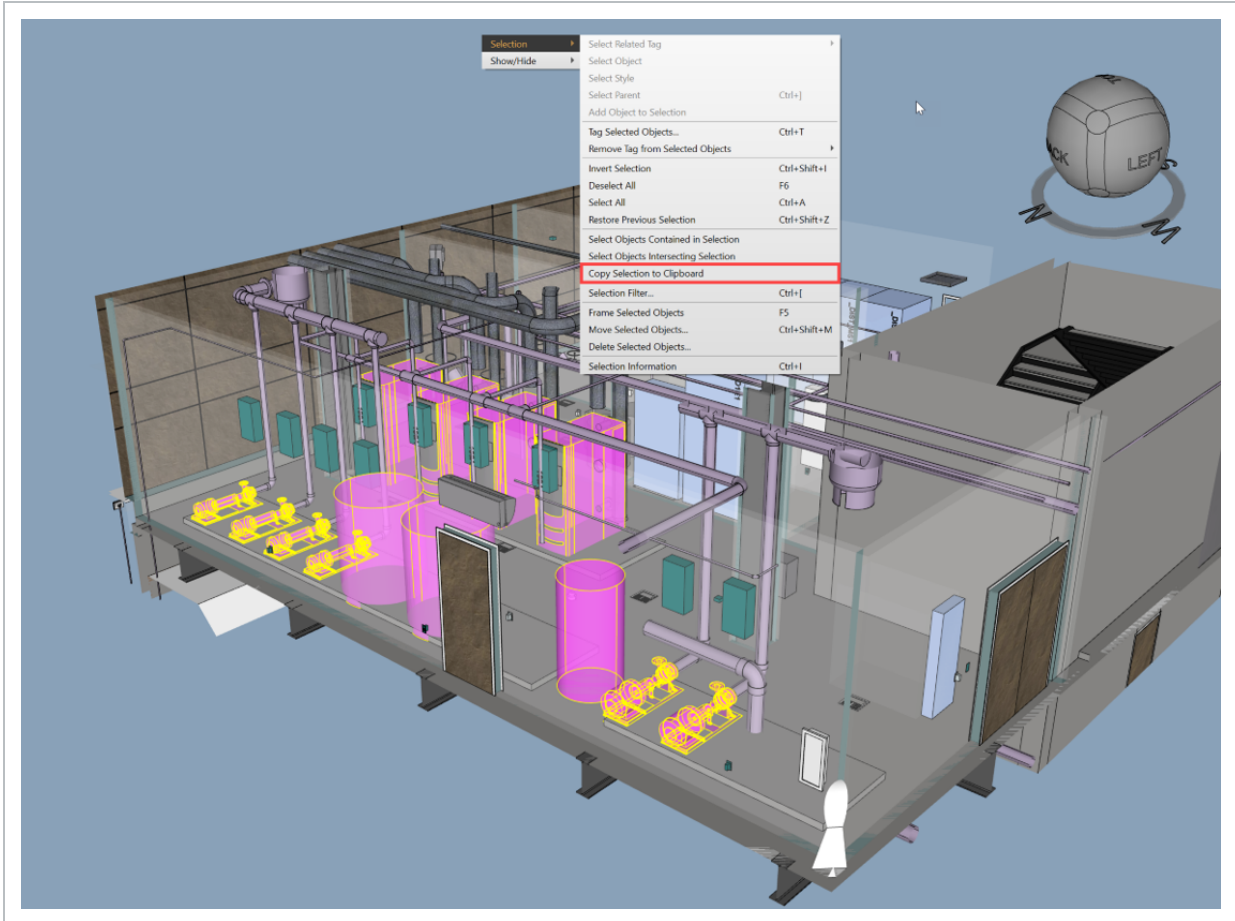

3. Open Excel, and then paste the copied items.

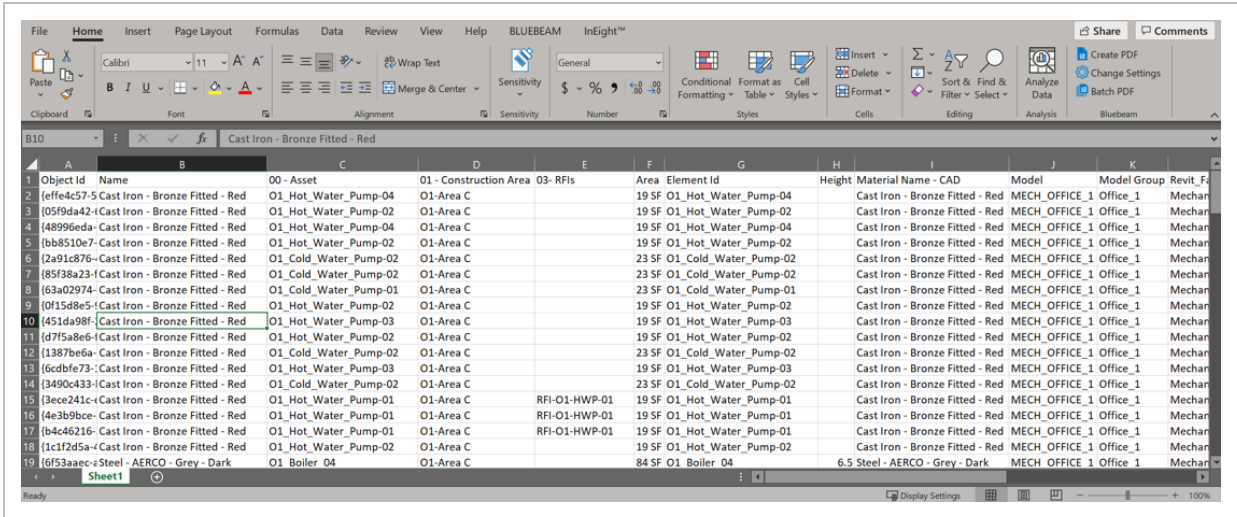

All metadata associated with the selected objects is now pasted into Excel.

7.6 TAG DATA EXPORTER


The Tag Data Exporter provides the ability to identify a Tag to pivot off of. It also lets you identify your desired related tags to include in an export of model metadata into a CSV file. The configurations can be saved for repeatable use. These configurations can also be imported and exported as needed for other projects.

7.6 Step by Step 1 — Export Tag Data to CSV file


1. Right-click the **Tags** tab in the Tags and Objects panel.
2. Select **Tag Data Exporter....**




3. Select a **Tag**, and then move it to the **Identifier/Pivot Tag** field.

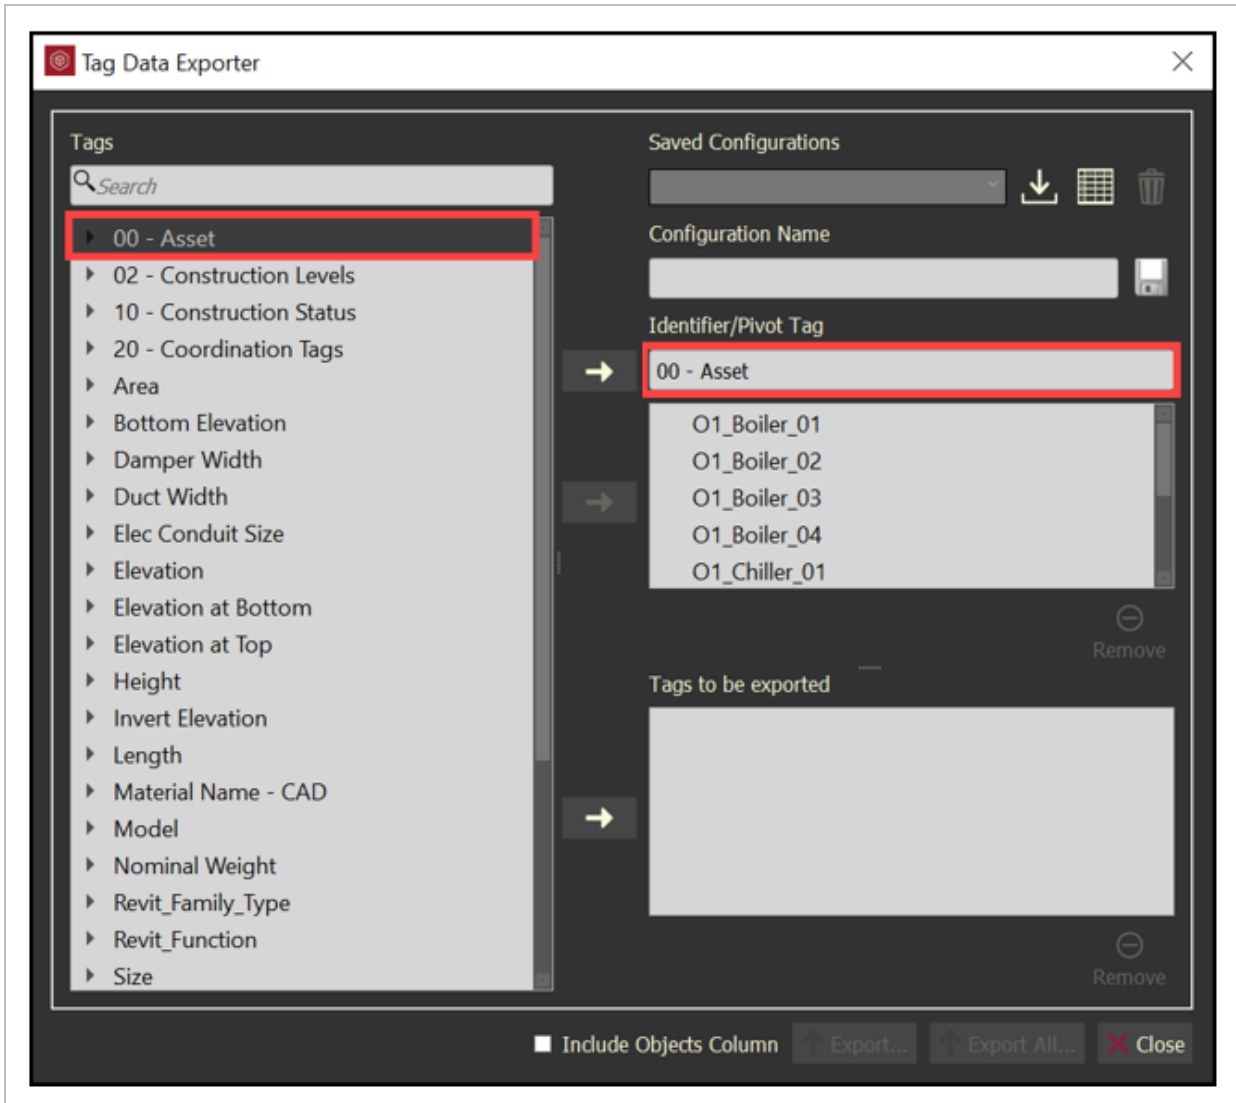


4. You can be specific with the Tag values by removing any values that you do not want to be a part of the export. Select the tag values, and then click **Remove**.

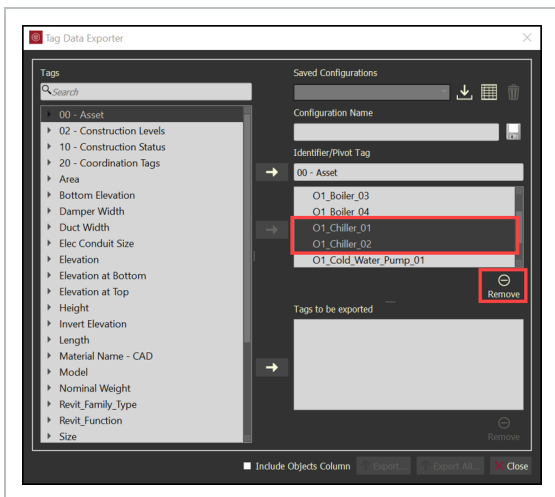


5. You can also be specific with the Tag values by selecting your values, and then moving them into the Identifier/Pivot Tag area.

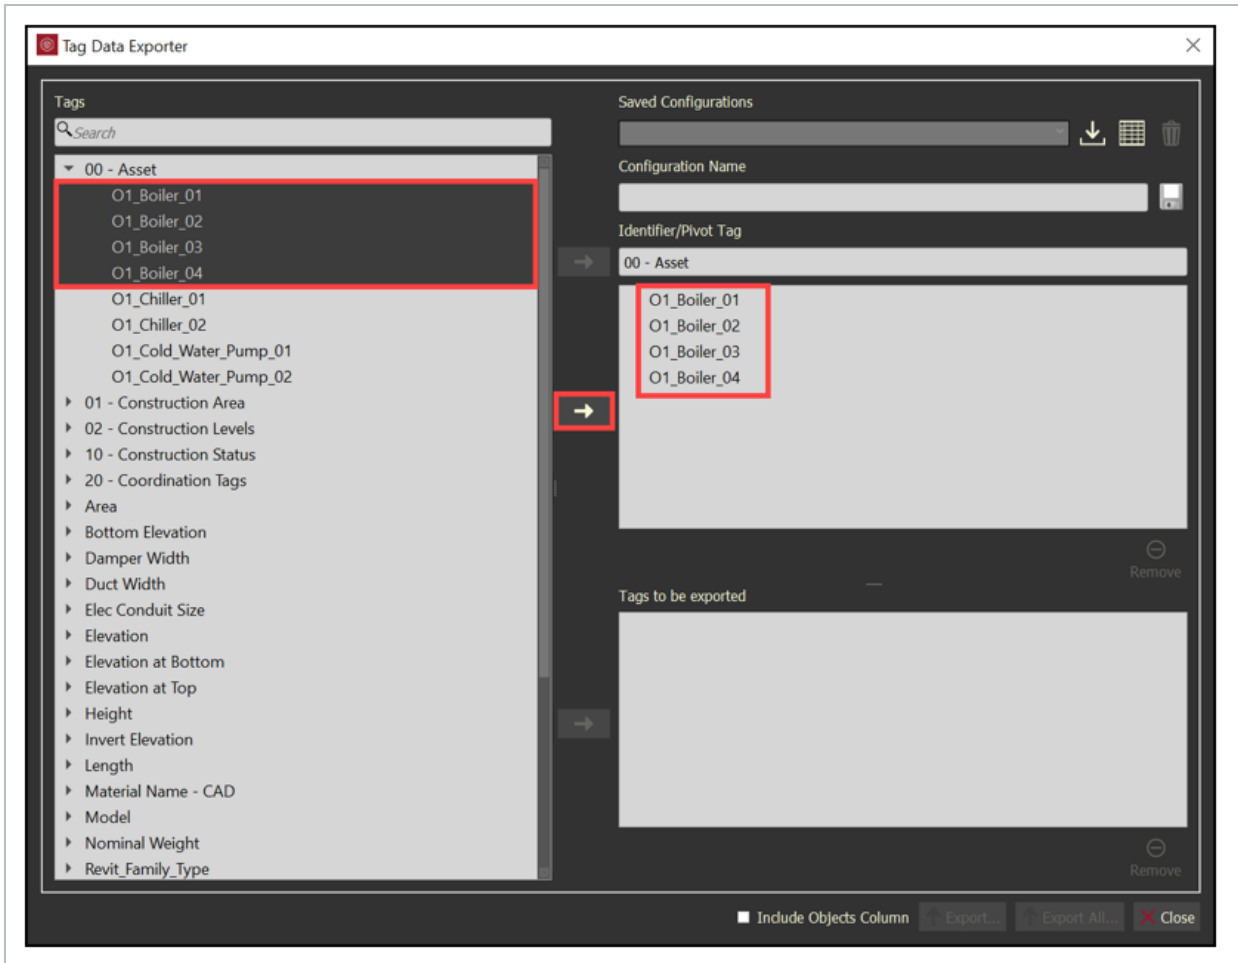


6. Select additional **Tags**, and move them to the **Tags to be exported** field.

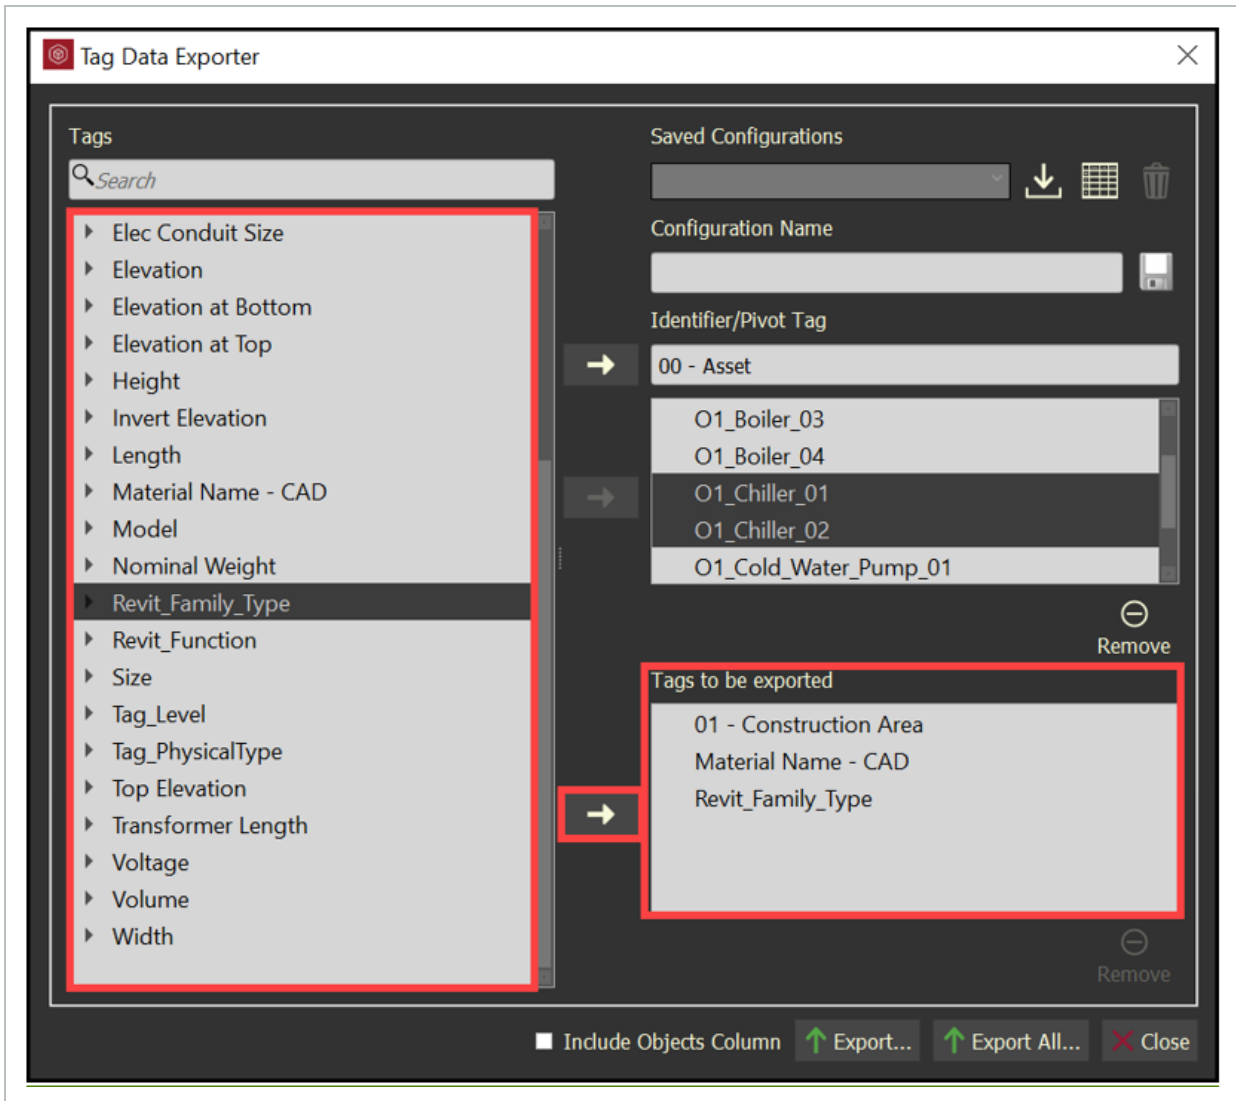


7. Enter a **Configuration Name** and click **Save** to access this configuration again.

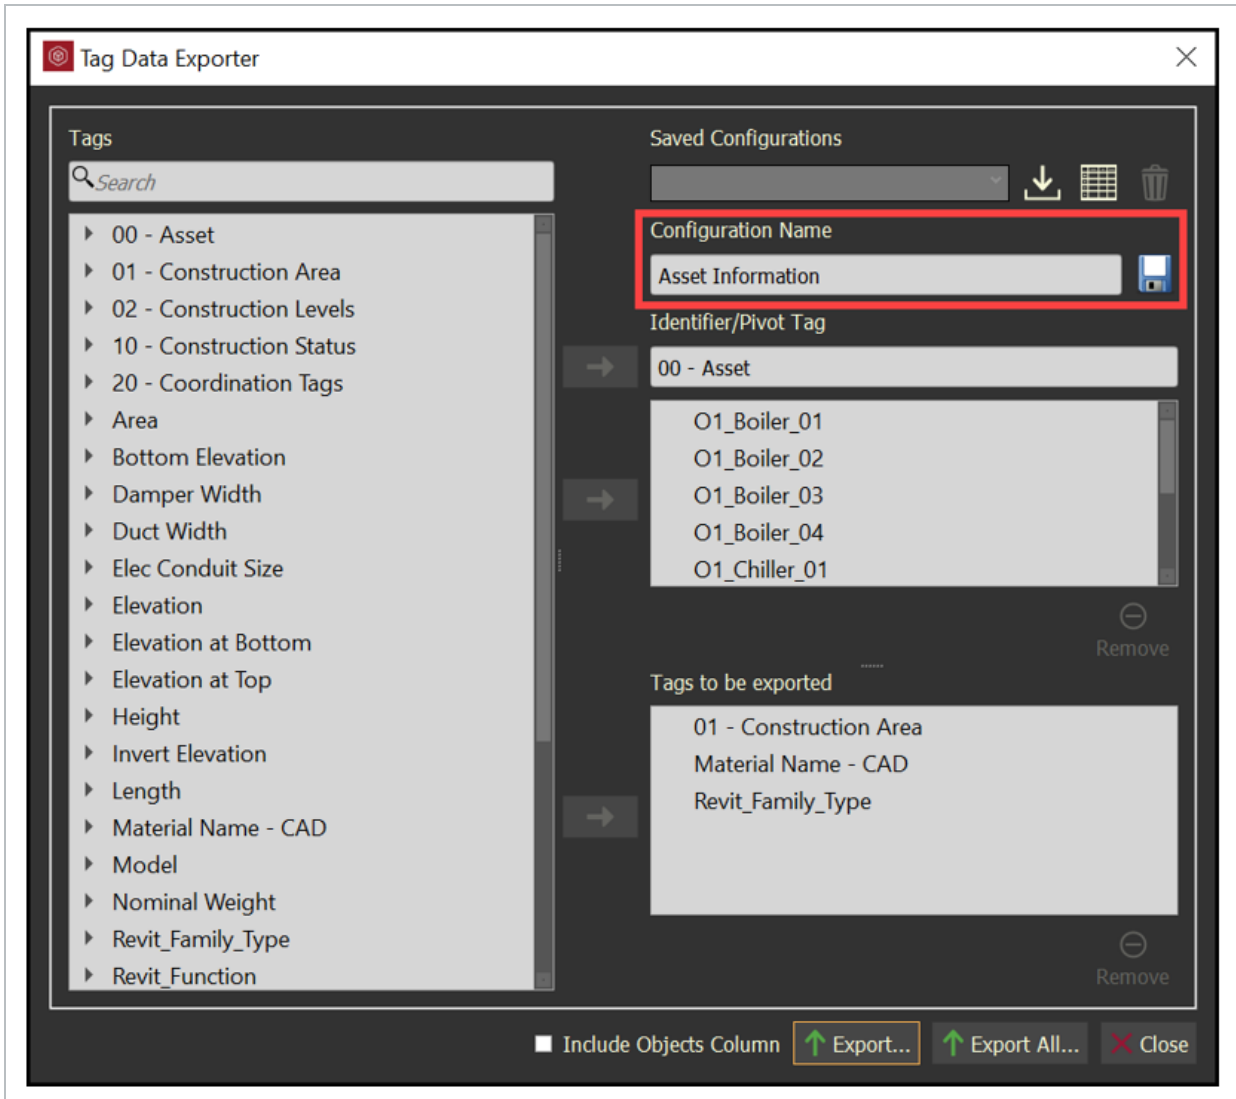

8. The saved configurations can be imported, exported, and deleted.

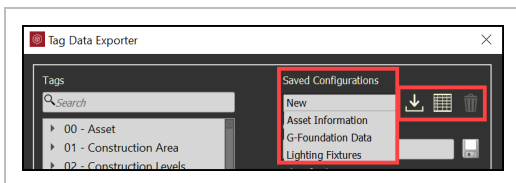


9. Toggle the **Include Objects Column** if you want the data exported to be combined into like rows according to the data with a leading column providing a count of objects meeting that row of data.

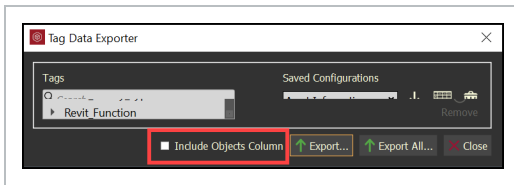

10. Click **Export All...** to export all data related to the configuration into a CSV file.
 11. Click **Export...** to only export data related to the configuration and the model objects currently selected.
- CSV file with the Object Column

Objects	BEAM sizes	3D-Estimating Tags	IFC Material
18	M_Concrete-Rectangular Beam:300 x 600mm	Beam:300 x 600	Concrete - Precast Concrete
201	M_Concrete-Rectangular Beam:400 x 800mm	Beam:400 x 800	Concrete - Precast Concrete
110	M_Concrete-Rectangular Beam:400 x 800mm	Beam:400 x 800	Default Floor
11	M_Concrete-Rectangular Beam:600 x 900:1	Beam:600 x 900	Default Floor
22	M_Concrete-Rectangular Beam:600 x 900:1	Beam:600 x 900	Concrete - Precast Concrete

- CVS file without the Object Column

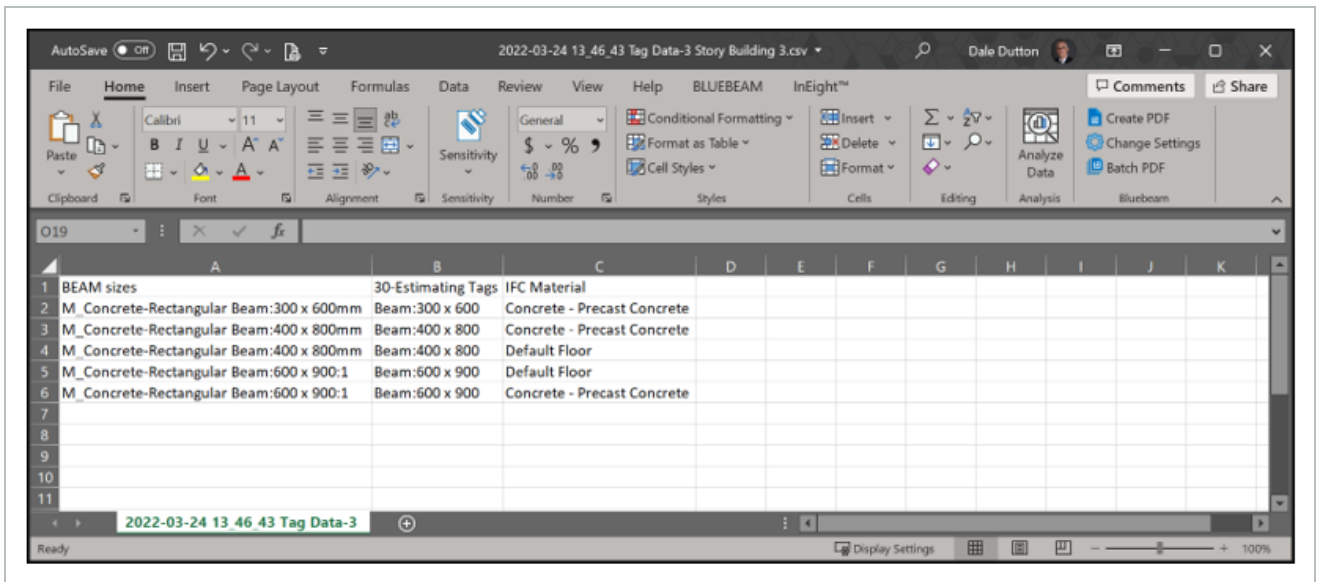

7.7 IMPORT TAGS FROM EXCEL


Custom Tags can be imported from Excel into the model.

Within Excel, one column needs to contain a unique tag for the Category Tag / Category Values that exist within the model.

Assign custom created tags to model objects to enrich the model with actionable metadata.

7.7 Step by Step 1 — Import Tags from Excel

1. Establish Unique ID information within excel. (i.e., Asset_ID in column A.)

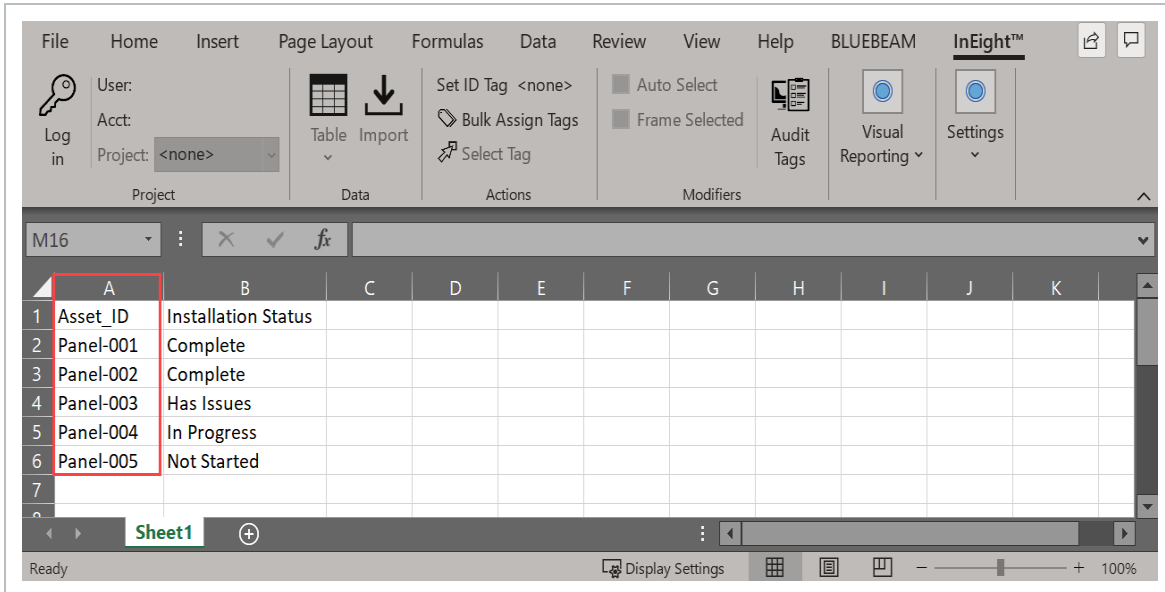


NOTE

Asset_ID has to be an existing Tag Category along with the information in cells A2 thru A20 must be existing Tag Values within the model.


Asset_ID cannot have any duplicates.

Model Objects must be assigned to the Unique ID.


2. Establish metadata to import into the model. (i.e. Installation Status in column B)

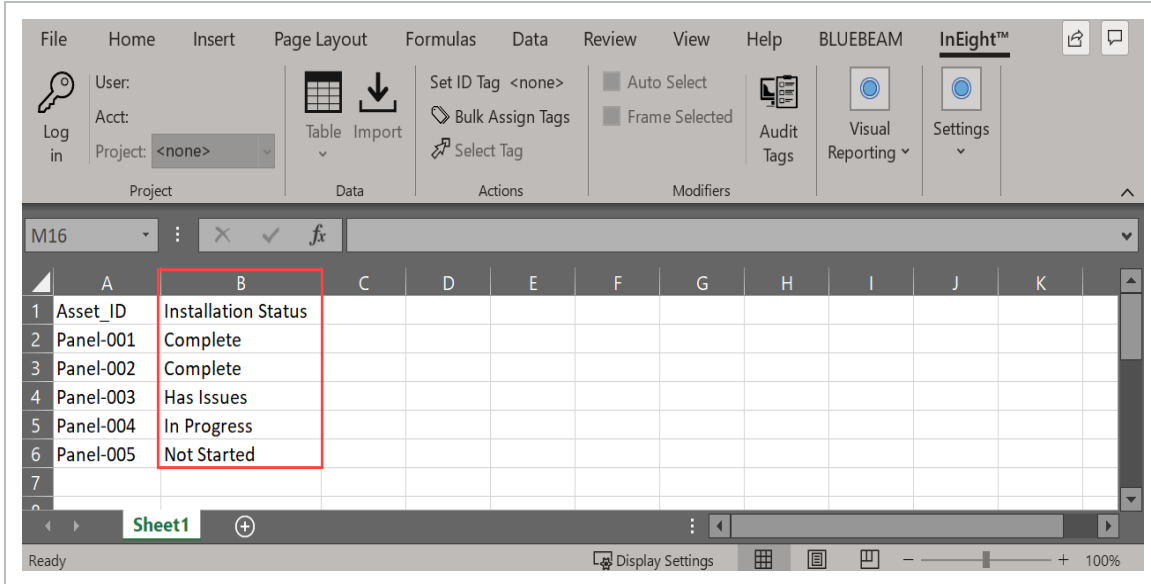


3. Select the InEight tab within the Excel ribbon.

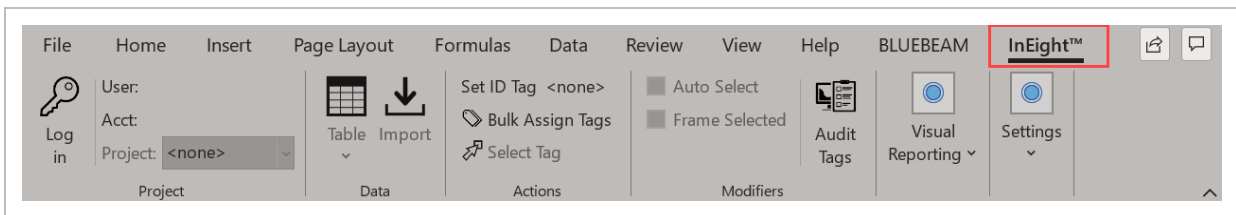

4. Select a cell within the Unique ID column.

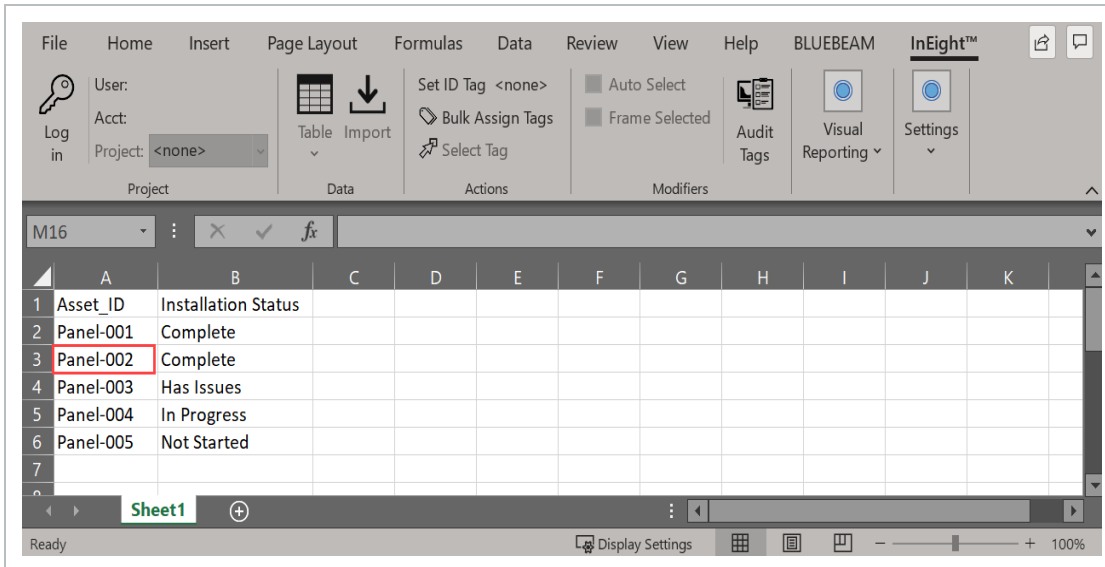


5. Within the Actions menu, select Set ID Tag.

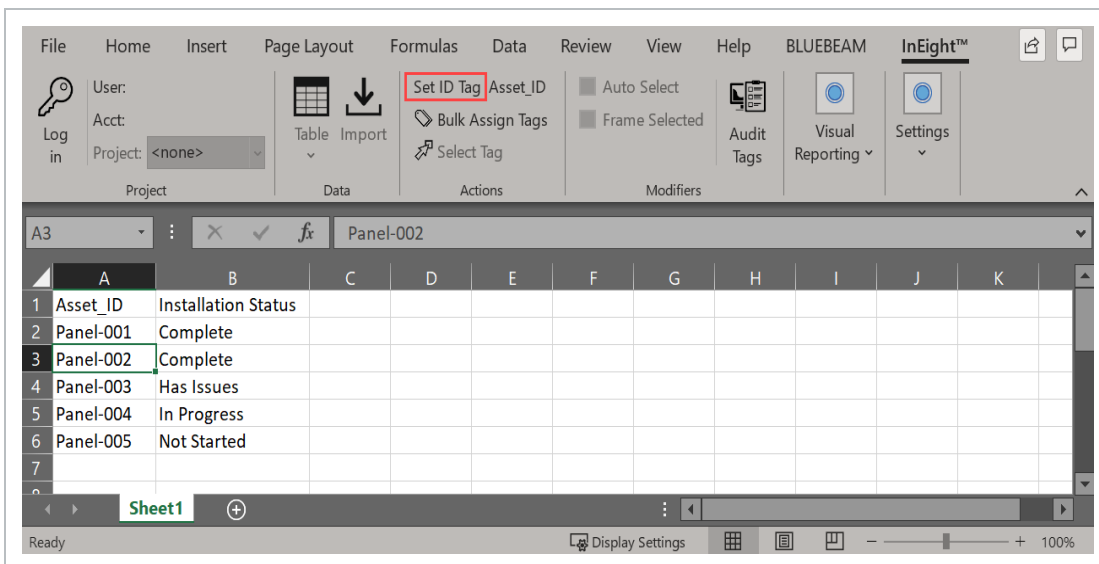


NOTE

The Set ID Tag will change from <none> to the column header. (i.e. Asset_ID)


6. Select a range of cell(s) within the column of data to import.

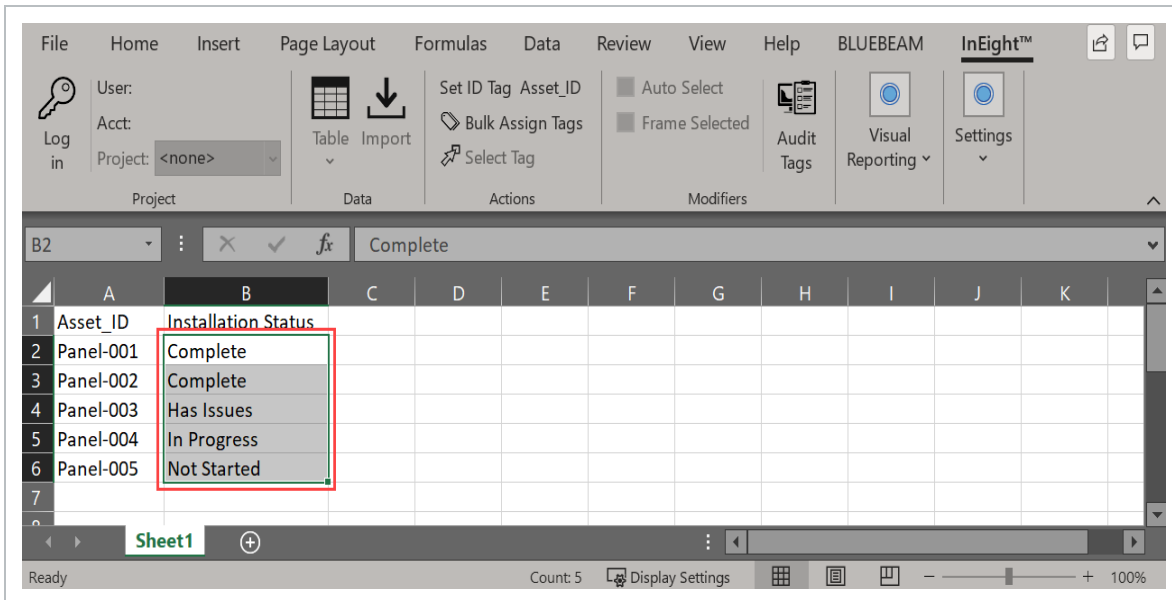


7. Within the Actions menu, select **Bulk Assign Tags**.

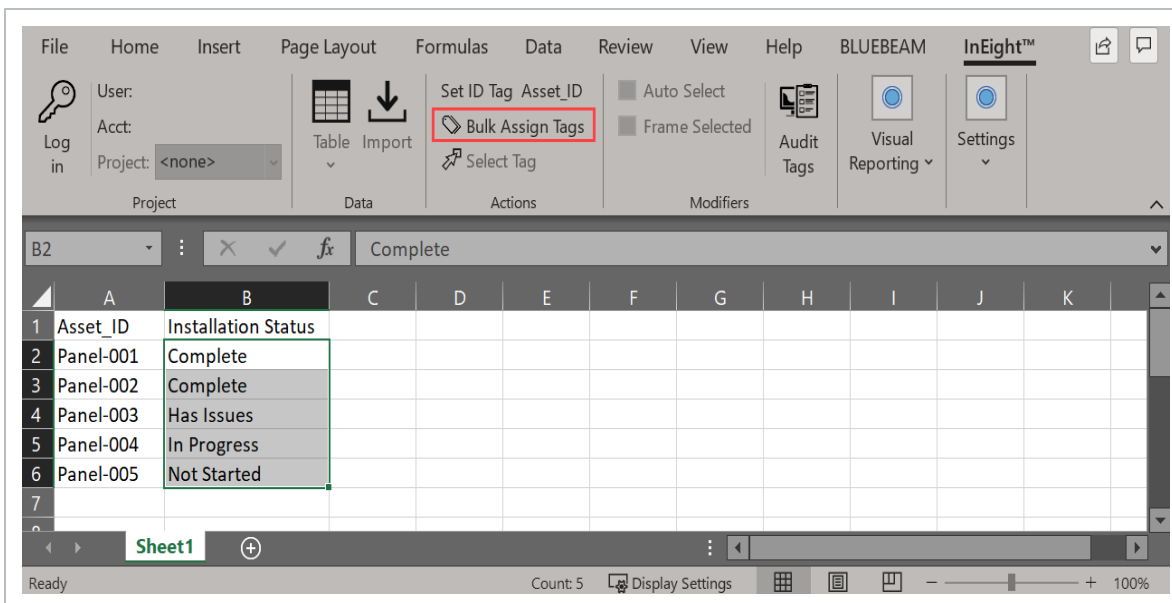

8. Import multiple columns of metadata, by selecting a range of cells that span columns.

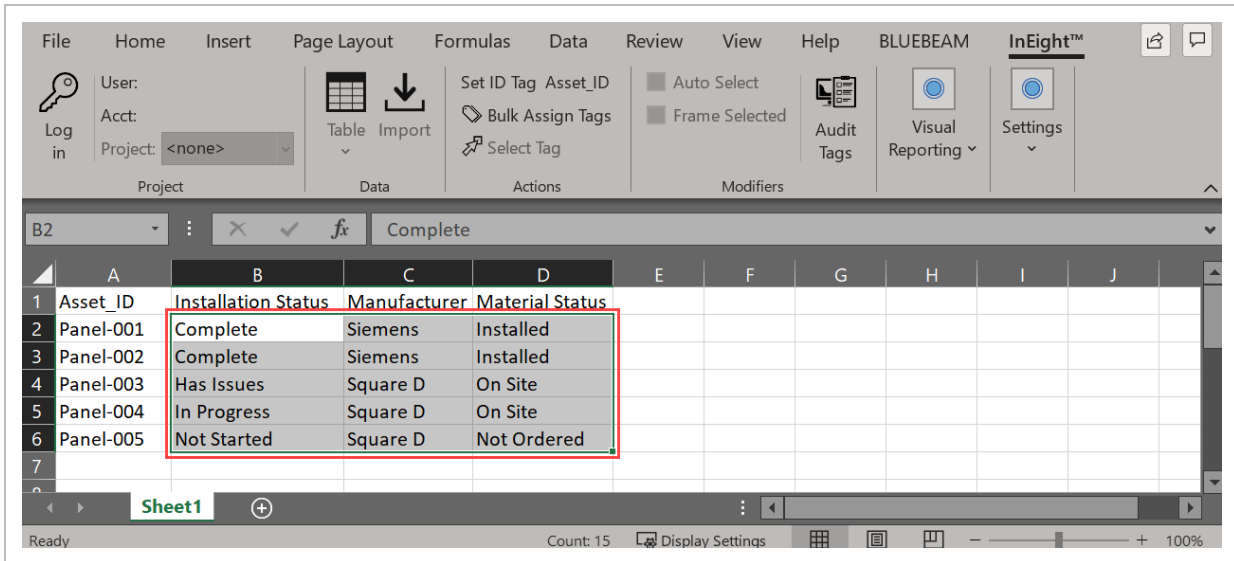


9. Within the Actions menu, select **Bulk Assign Tags**.

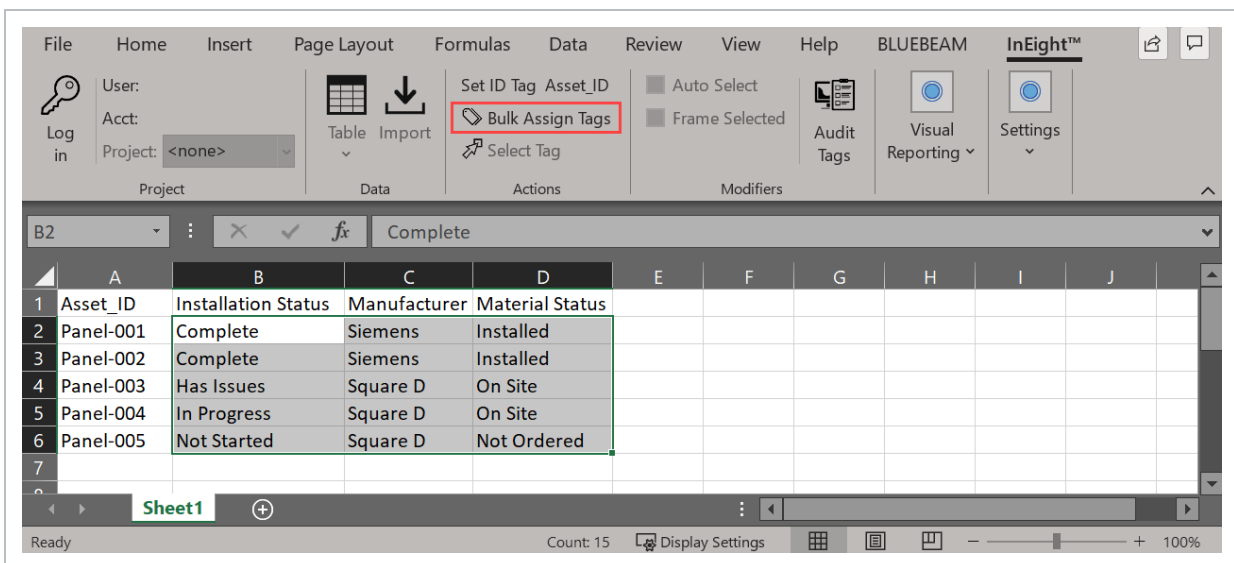

NOTE

There will be NO indication notice that the data has been imported.

10. Results:

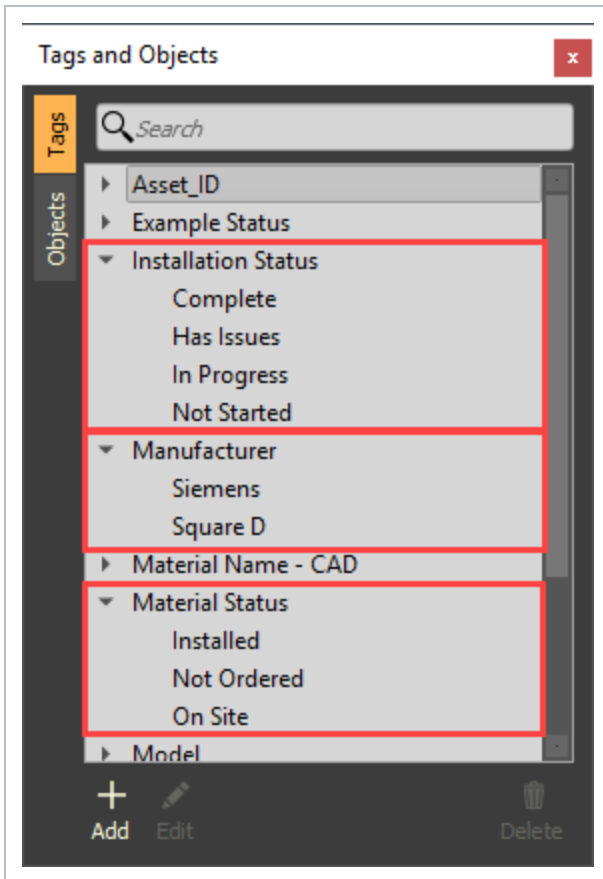

7.8 SELECT MODEL OBJECTS VIA EXCEL


Model objects can be auto-selected and framed in the model viewer by selecting tag values in Excel. In Excel, the top row represents the Tag Category. Any row below the top row represents the Tag Value. The Tag Category and Tag Value must be exactly the same in Model in order for Excel to interact with Model.

The following step-by-step walks you through how to auto-select Model objects in Excel.


NOTE The following steps require the Excel Plugin to be installed.

7.8 Step by Step 1 — Select Model Objects via Excel


1. From Excel, select the **InEight** tab from the top menu.
2. Under the Project section, Click **Login**.
The Login to InEight dialog box opens.
3. Login using the same credentials for InEight Model.

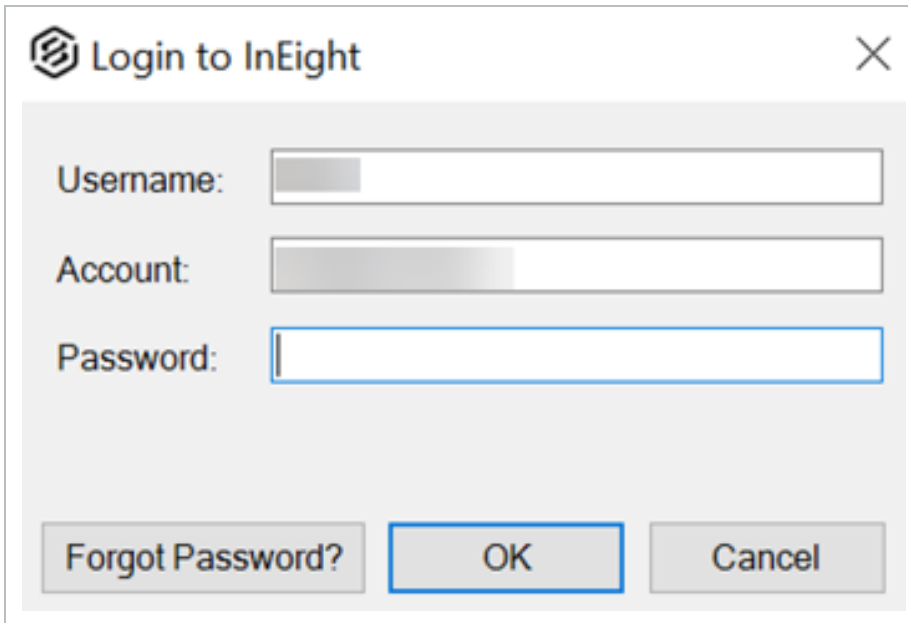

4. Select the project you are currently in, and then click **OK**.
5. In Excel under the InEight tab in the Modifiers section, select the check marks for both **Auto Select** and **Frame Selected**.

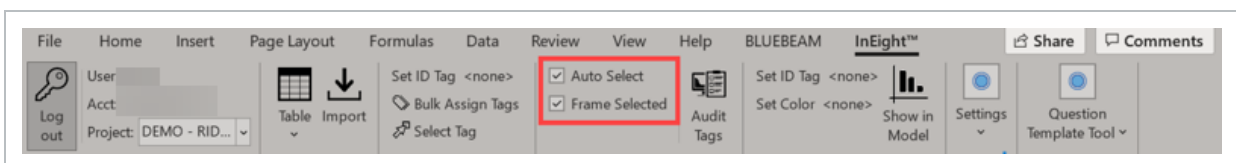

6. Select a tag value from the metadata copied from the Model into Excel.
7. In the Actions section, click **Select Tag**.

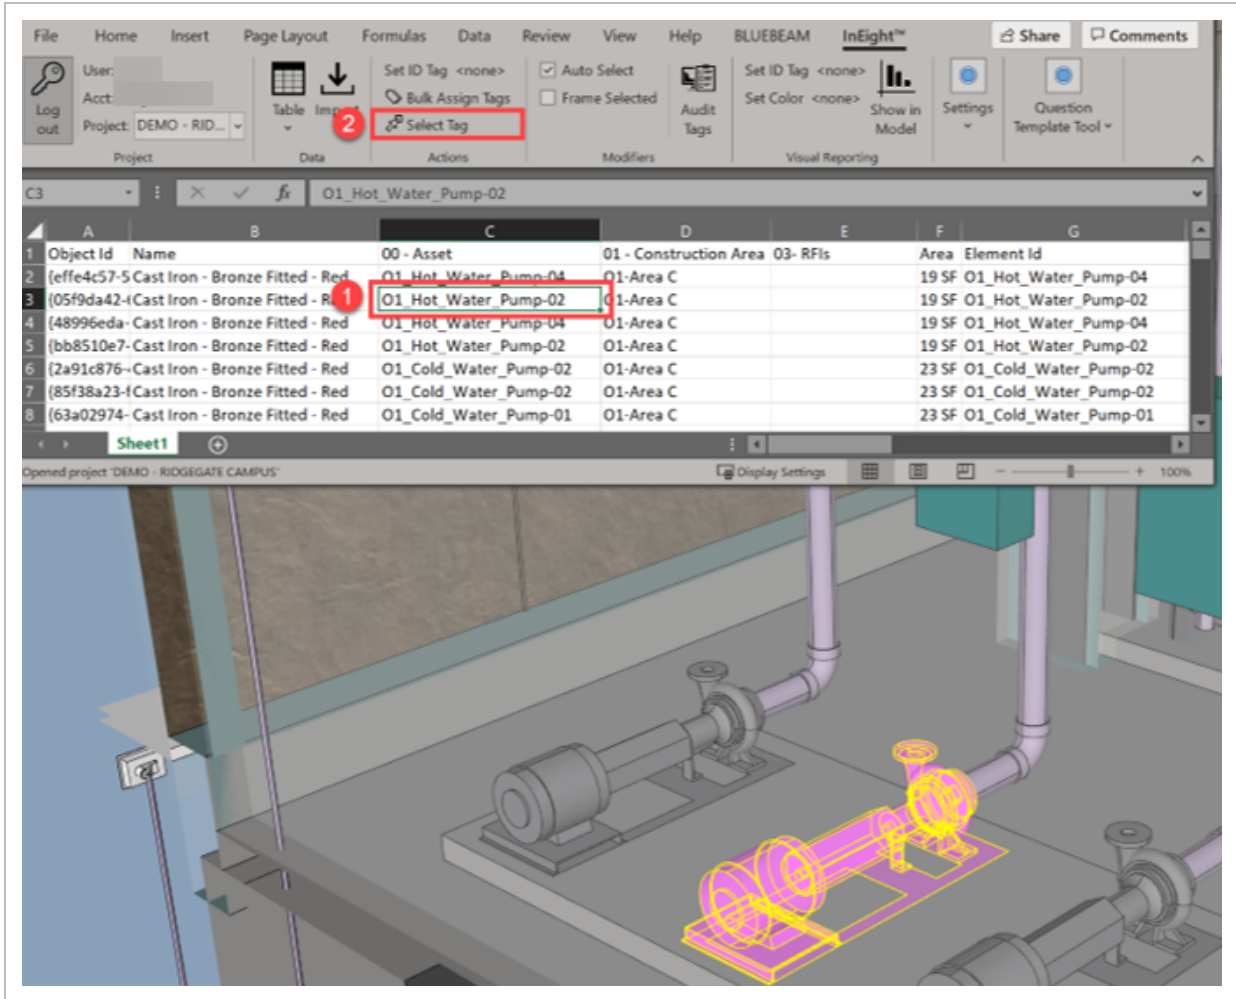

7.9 CREATE TABLES OF EXTERNAL DATA

NOTE Only a Project Admin can create Generic Tables to import external data and link to a Unique ID Tag in Model.

External information can be accessed in Model but is managed externally using Excel.


7.9.1 Identify the model Unique ID

The following step-by-step walks you through how to identify the model Unique ID in Excel.

NOTE The following steps require the Excel Plugin to be installed and for a Project Admin to be logged into the InEight Excel Plugin.


7.9 Step by Step 1 — Identify the model Unique ID

1. After you log into Excel, use the first column (cell A1) to match a Tag Category in Model.

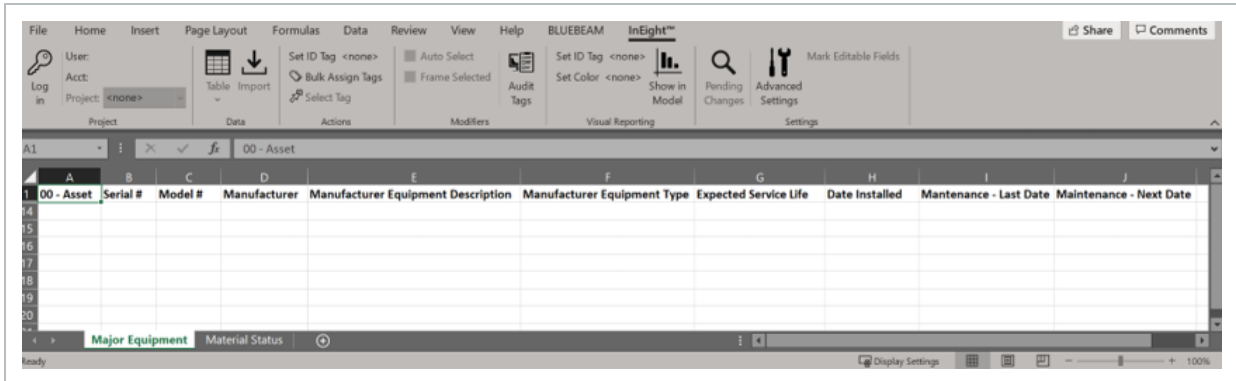

Columns B and beyond can contain additional columns of data as needed.

2. Rename the Tab to the preferred Table Name.
Although this is not a required step, it can provide clarity as you develop the extra data.
3. Under the InEight tab in the Data section, select **Table**.
4. From the drop-down menu, in the New Table section, select **Create new Table**.

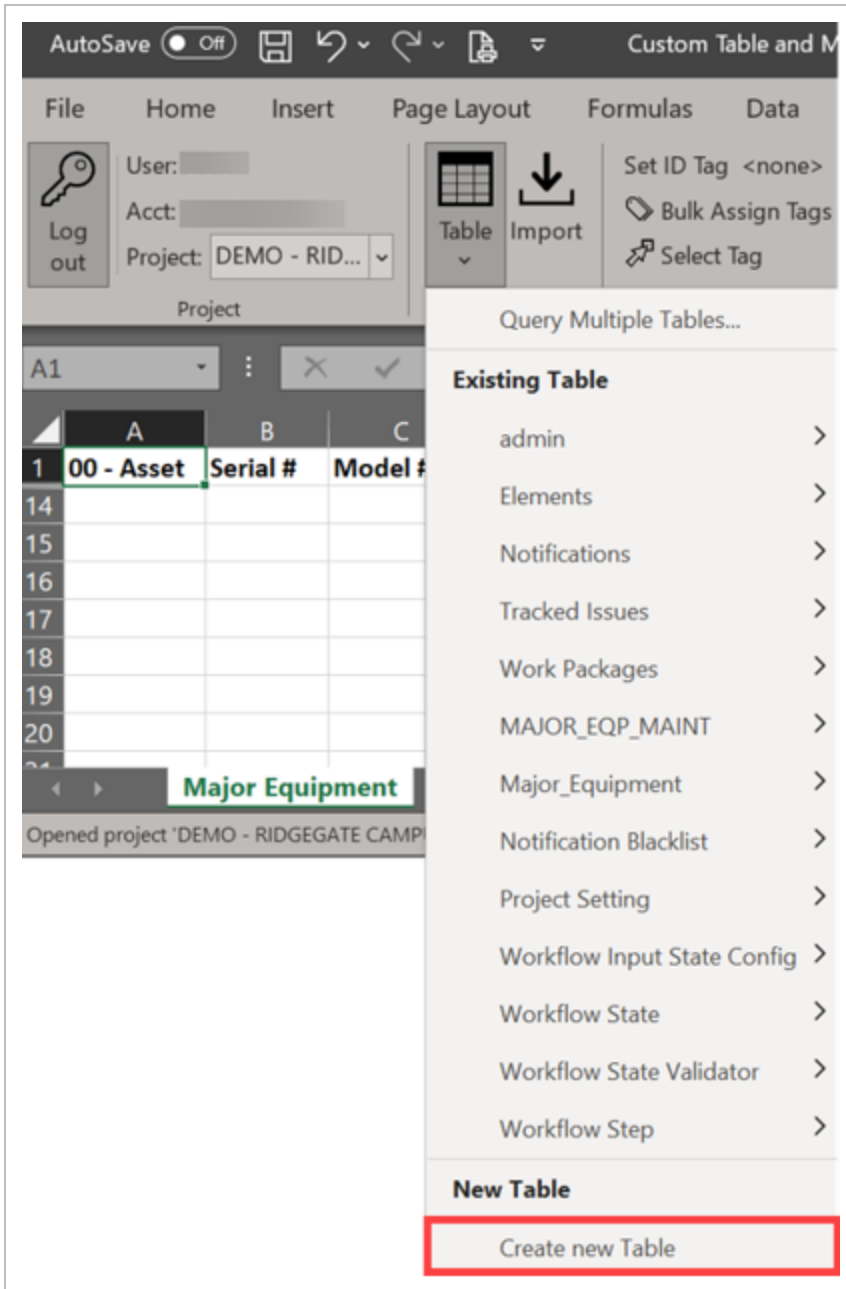

5. From the Create new Table data box:
 - a. Select the check mark for **Use headers from current Excel worksheet.**
 - b. Confirm the **Schema Name** is labeled with the preferred name with no spaces.

c. Select **Generic Table** for the Table Type.

Create new table definition

Schema Name: Major_Equipment

Use headers from current Excel worksheet

Column Name	Data Type	Identifier
00 - Asset	Short String (32 chars.)	<input type="radio"/> Remove
Serial #	Short String (32 chars.)	<input type="radio"/> Remove
Model #	Short String (32 chars.)	<input type="radio"/> Remove
Manufacturer	Short String (32 chars.)	<input type="radio"/> Remove
Equipment Description	Short String (32 chars.)	<input type="radio"/> Remove
Equipment Type	Short String (32 chars.)	<input type="radio"/> Remove
Expected Service Life	Short String (32 chars.)	<input type="radio"/> Remove
Date Installed	Short String (32 chars.)	<input type="radio"/> Remove
Maintenance - Last Date	Short String (32 chars.)	<input type="radio"/> Remove
Maintenance - Next Date	Short String (32 chars.)	<input type="radio"/> Remove

Add Field


Table Type: Generic Table

Please selects an Identifier field for a generic table.

OK Cancel

6. Select one item to be the **Identifier** (i.e. 00 – Asset).

NOTE This must be a pre-existing Tag Category in Model.

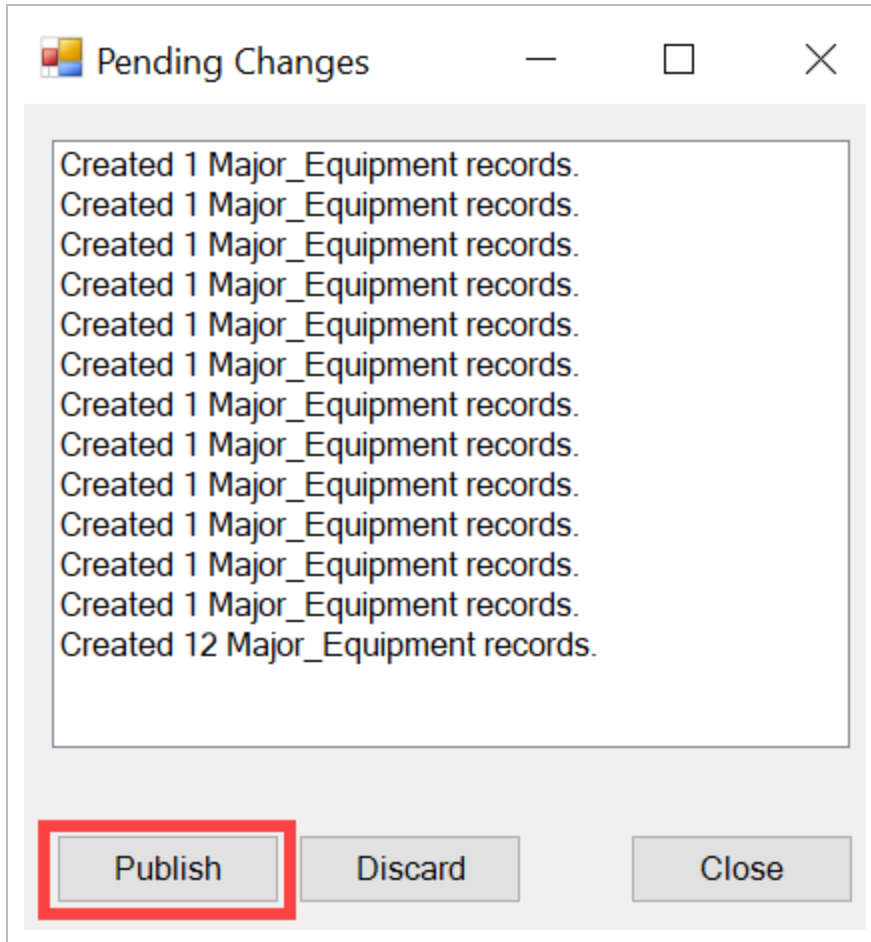

7. In the Data Type column, choose the correct Data Type for each Column Name.

NOTE All data types are defaulted to Short String.

- **String**: can contain any sequence of characters
- **Integer**: a whole number (not a fractional number) that can be positive, negative, or zero (-5, 1, 5, 8, 97, 3243)
- **Location**: GPS latitude and longitude coordinates
- **Short String**: can contain any sequence of characters limited to 32 characters
 - If this is chosen, make sure that your data will not extend beyond 32 characters or you will encounter an error when uploading data.
- **TimeStamp**: a seven part value representing a date and time by year, month, day, hour, minute, second

- **GUID:** Global Unique ID
- **Unsigned Integer:** often called units which are zero or positive numbers
- **Long Integer:** longer than an integer
- **Float:** a number that is not an integer, because it includes a fraction in decimal format
- **Double:** can represent a fractional and whole values and can use exponential notation (1.0e6 to represent one million)


NOTE

You can add or remove any of the column name fields.

8. After all Column Name fields have the preferred Data Type, select **OK** to create the Generic Table.

The new tab is then shaded in red to show that it is now a table available in the Model database.

Three new fields also show: Created By, Created On and Property ID.

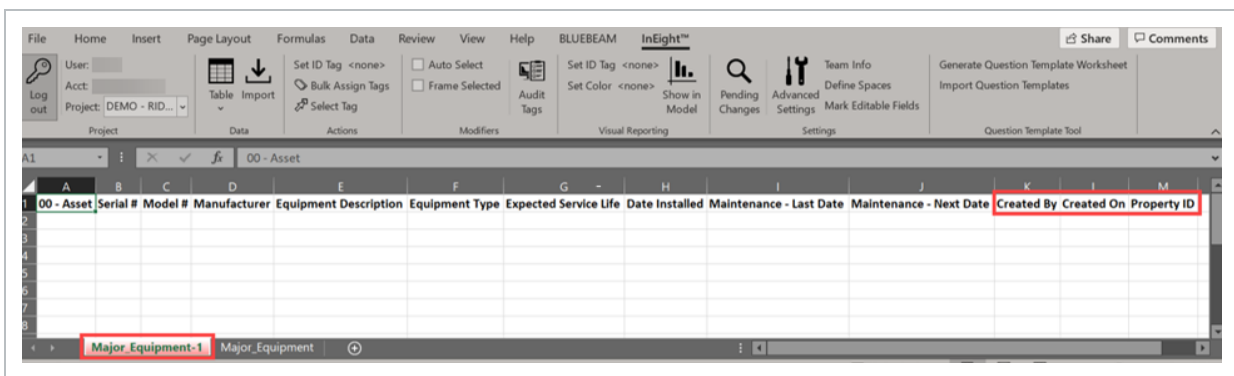


7.9.2 Add information to Generic Table

The following step-by-step walks you through how to add information to the generic table.

7.9 Step by Step 2 — Add information to Generic Table


1. Open Excel and log in.
2. Under the InEight tab in the Data section, select **Table**.

3. Under Existing Table, select the name of your newly created Generic Table, and then select **Query All**.
4. In the Identifier column or the Unique ID, fill in the data from the model.

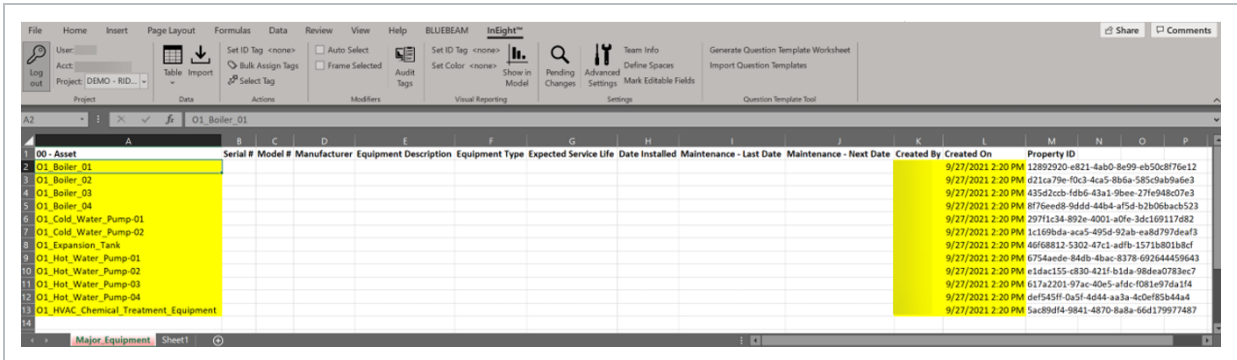


The new information is then highlighted in yellow. This shows that the information has been added or modified but not yet saved to the database table.

5. Under the InEight tab in the Settings section, click **Pending Changes**.

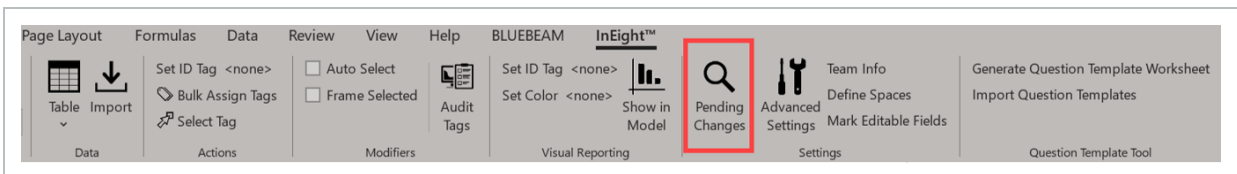

6. Click **Publish**.

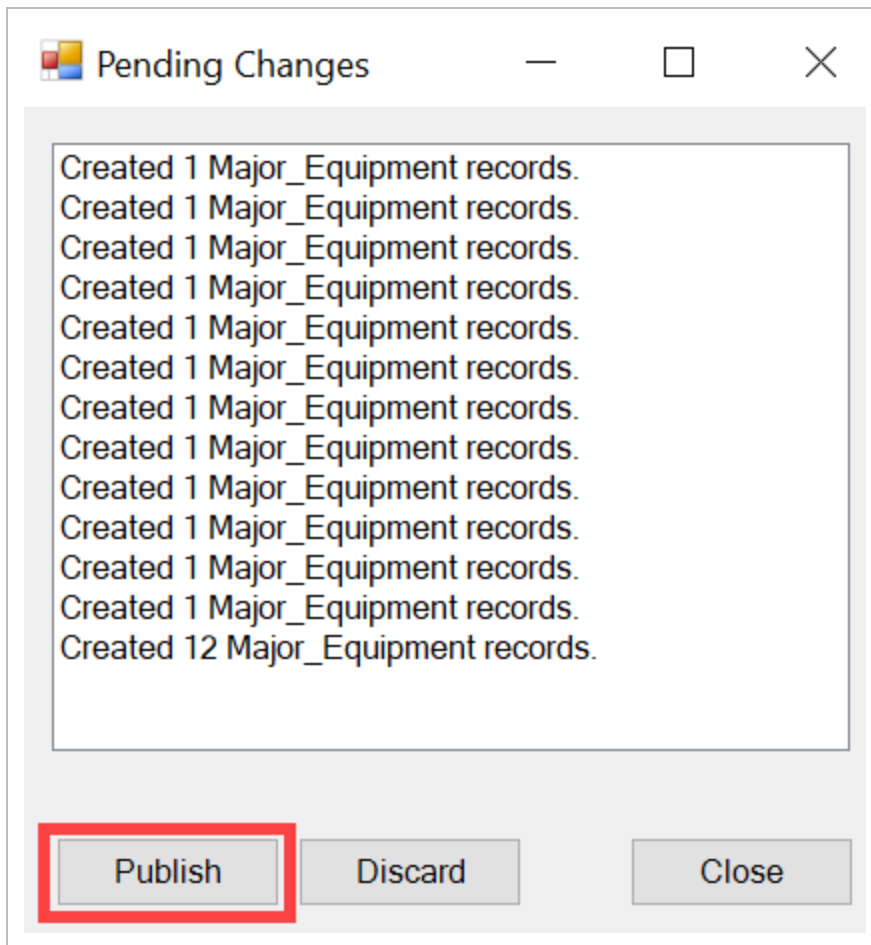

The database table is now updated.

7. Fill in any additional data throughout the project as needed.


7.9.3 Import information to Generic Table

The following step-by-step walks you through how to import information into the generic table.


7.9 Step by Step 3 — Import information to Generic Table

1. Open Excel and log in.
2. In Excel, select the spreadsheet tab containing the preferred data that needs to be uploaded into a table.

- Under the InEight tab in the Data section, select **Import**.

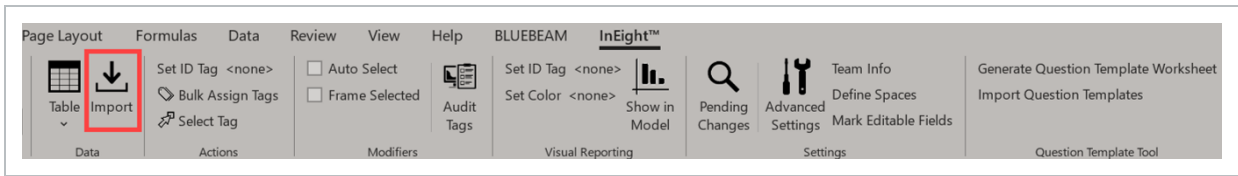


- In the Import Records dialog box, select the Table schema that you want to upload data into.
- When a warning dialog box appears, select **OK**.

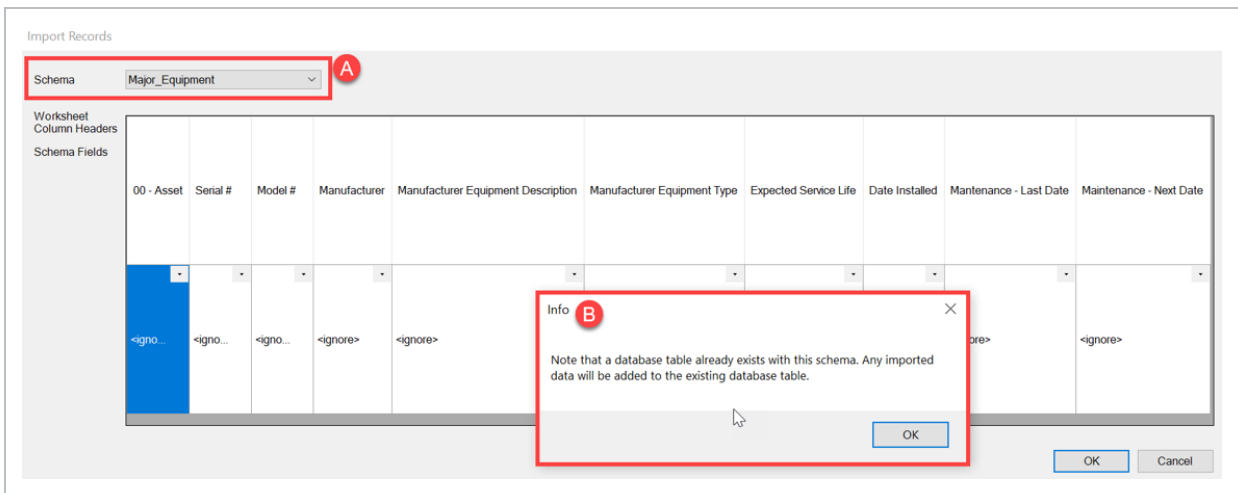

The Generic table opens with the new data added.

- Under the InEight tab in the Settings section, select **Pending Changes**.

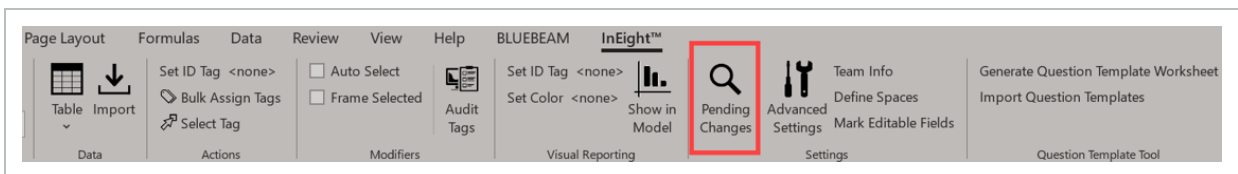

- Click **Publish**.

The database table is now updated.


7.9.4 Refresh existing table data

Throughout the project, data might be updated by another user without notification that an update is happening. You need to refresh your table to see new information.

The following step-by-step walks you through how to refresh existing table data.

7.9 Step by Step 4 — Refresh existing table data

1. Open Excel and log in.
2. Under the InEight tab in the Data section, select **Table**.
3. Under Existing Table, select the name of your newly created Generic Table, and then select **Query All**.

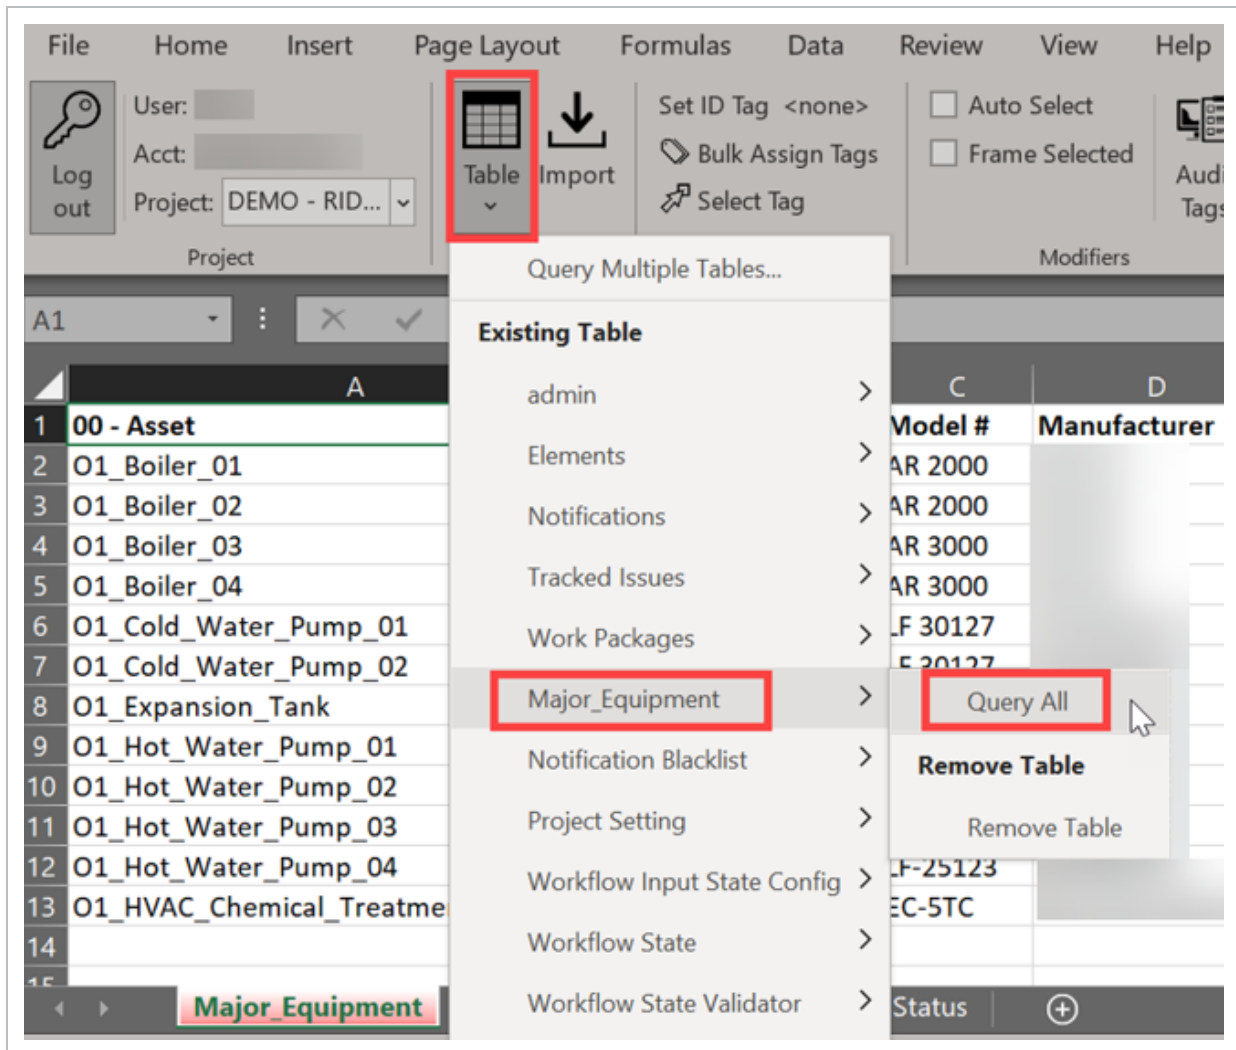

7.9.5 Close Database Tables


The following step-by-step walks you through how to close database tables.

7.9 Step by Step 5 — Close database tables

1. Open Excel and log in.
2. Right-click the Excel spreadsheet table tab.
3. Select **Delete**.

Deleting the table tab only removes the local worksheet from Excel, but it does not remove database tables from your project.

You can also click the x in the top right of Excel. The InEight Excel Plugin dialog box opens showing available options.

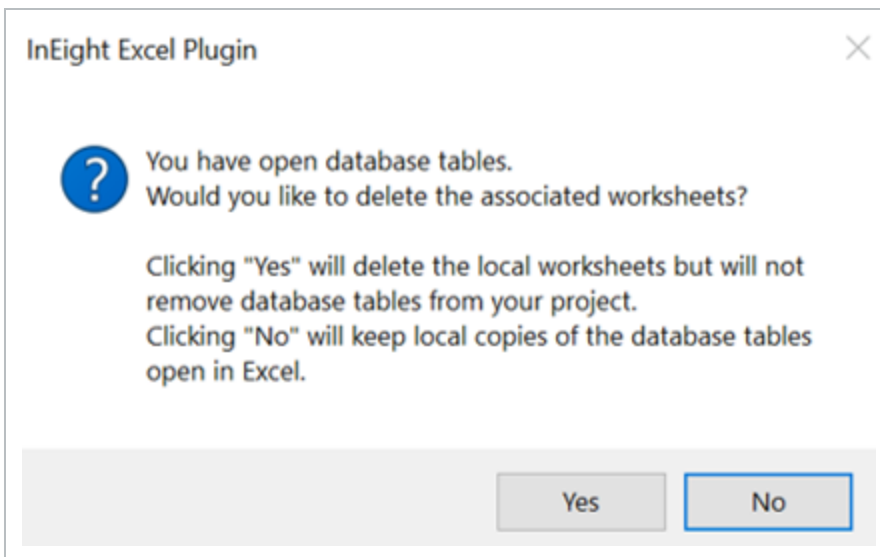

Lesson 7 Review

1. How can you create Tags in InEight Model?
 - a. Manually create from Tags and Objects panel
 - b. Automatically create tags from the metadata of the Export / Import process
 - c. Manually import tags from an Excel file
 - d. All of the above

2. Tags are made up of what two components?
 - a. Category, Size
 - b. Size, Value
 - c. Value, Location
 - d. Category, Value

3. Deleting a tag that was created through the export / import process does not delete the tag until the **nexttime** you export / import to revise or update your model.
 - a. True
 - b. False

Lesson 7 Summary

As a result of this lesson, you can:

- Create and edit static tags
- Create and edit dynamic tags
- Assign to and remove tags from objects


LESSON 8 – DATA TRANSFORMATION OPERATIONS

OPERATIONS

8.1 DATA TRANSFORMATION OPERATIONS (DTO) OVERVIEW

DTOs provide flexible and repeatable processes to maintain, normalize, add, validate, parse, and concatenate data. DTOs can be exported and imported from project to project to eliminate duplicate effort.


You can access DTOs from the main InEight Model window. Click Logic > **DTO**.

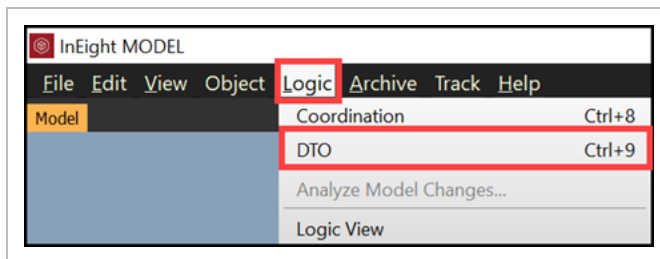

The Data Transformation Operations window has three tabs:


- **DTO** – Lets you create a tree structure of DTOs.
- **Selector** - You can select model objects from tags and object properties using specific criteria.
- **Action** – Lets you create, parse, concatenate, and quantify model data, and more through various functions.

8.1.1 DTO tab

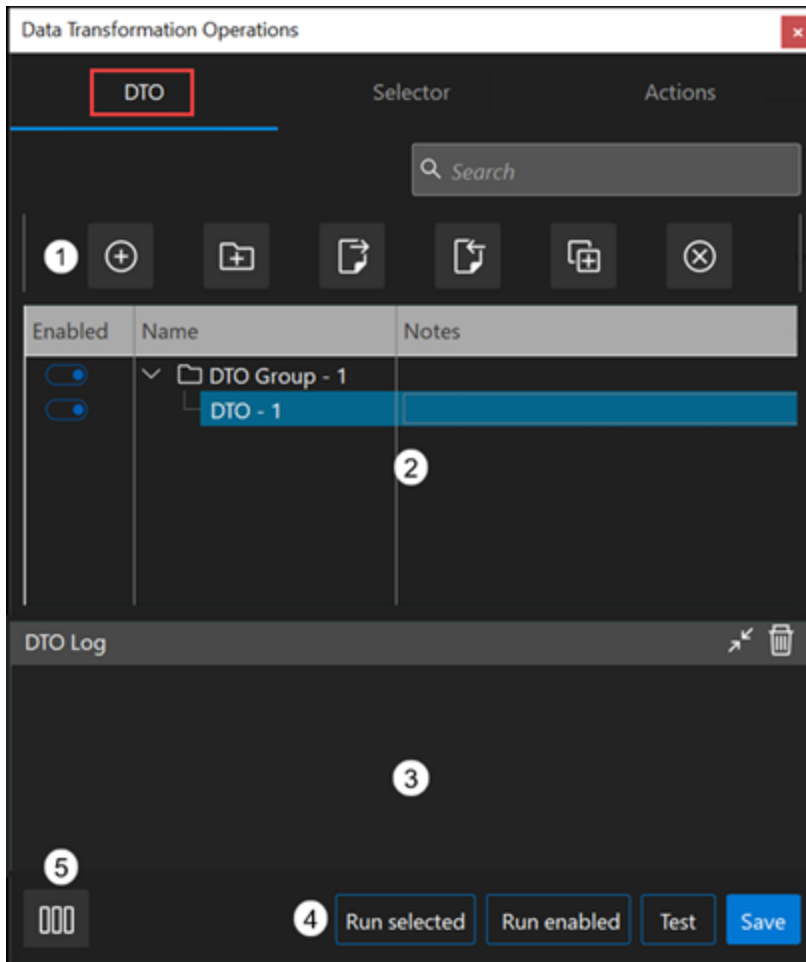


- 1 Action icons provide one-click actions for the most common DTO functions. You can add, add group, export, import, duplicate, and delete.
- 2 The list view lets you enable or disable DTOs, create DTOs, and view the list grouped by folders.
- 3 The log view shows the interaction information of DTOs when they are used. The Maximize/Minimize icon opens or closes the DTO Log panel. You can use the delete icon to clear the log.
- 4 Bottom action buttons let you run the selected DTOs or selected DTO groups, run all enabled DTOs. Test your included model objects in the Selector tab criteria.
- 5 You can use the Expand Panels icon to view all three tabs at the same time or view one tab at a time.

8.1.2 Selector tab

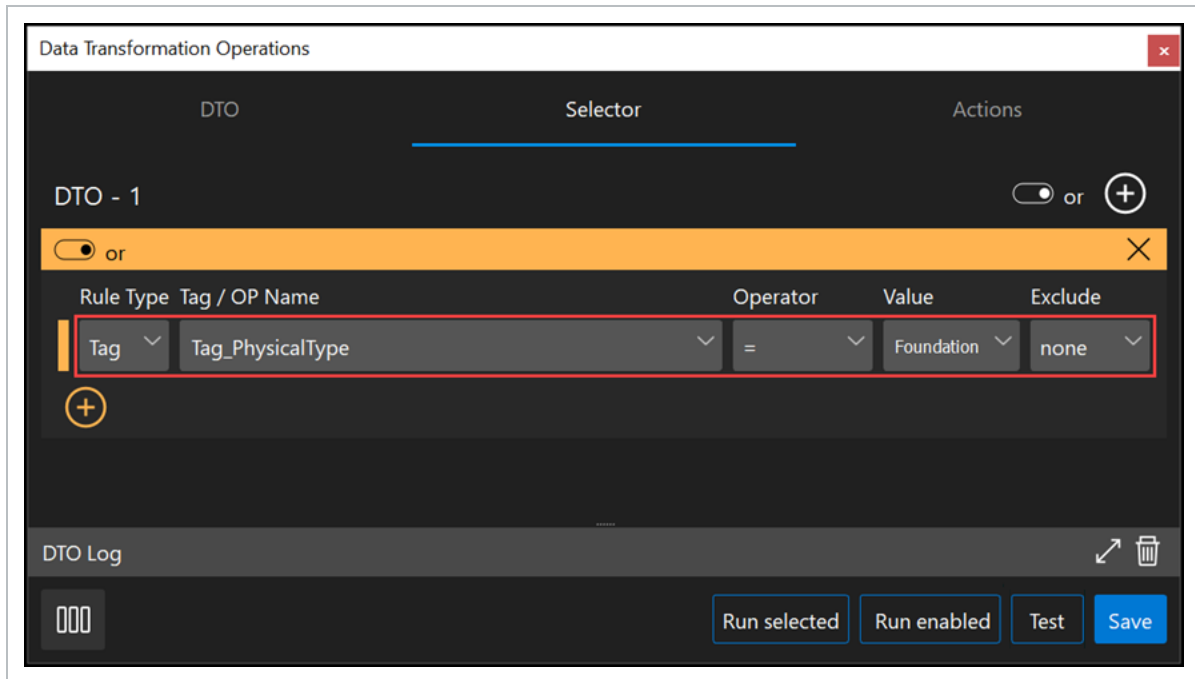


Rule Type	Select Tag or Object Property.
Tag/OP Name	Select a Tag or OP Name
Operator	Select the operator rule.
Value	Select a value from the tag or object property identified in Tag / OP Name field.
Exclude	Exclude the children or parent model objects, or you can ignore using the none value.


After you click the Test button, you can review and validate your selection criteria in the Selection Information panel.

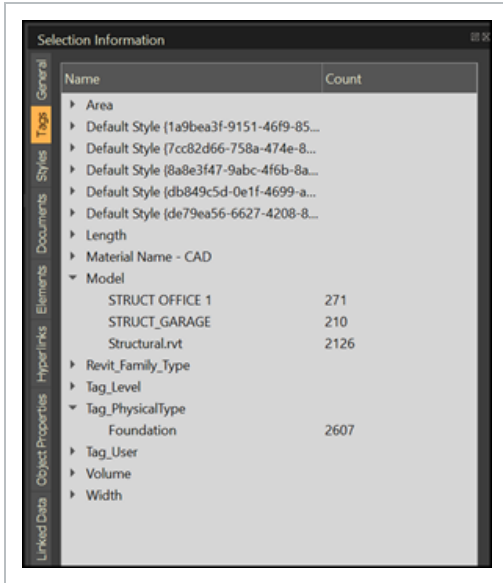

8.1.3 Actions tab

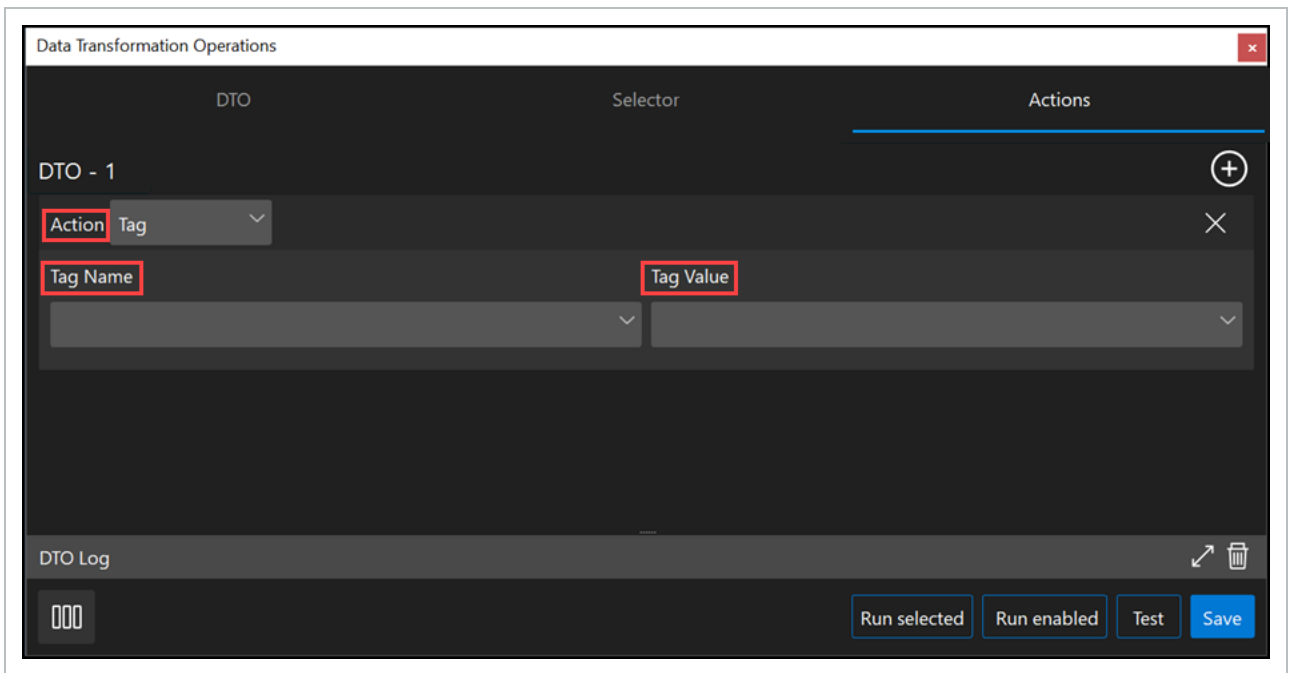

Action Select between multiple action types that include Tag, Temp Property, Calculated, Quantity, Elements, and Sequential Tags.

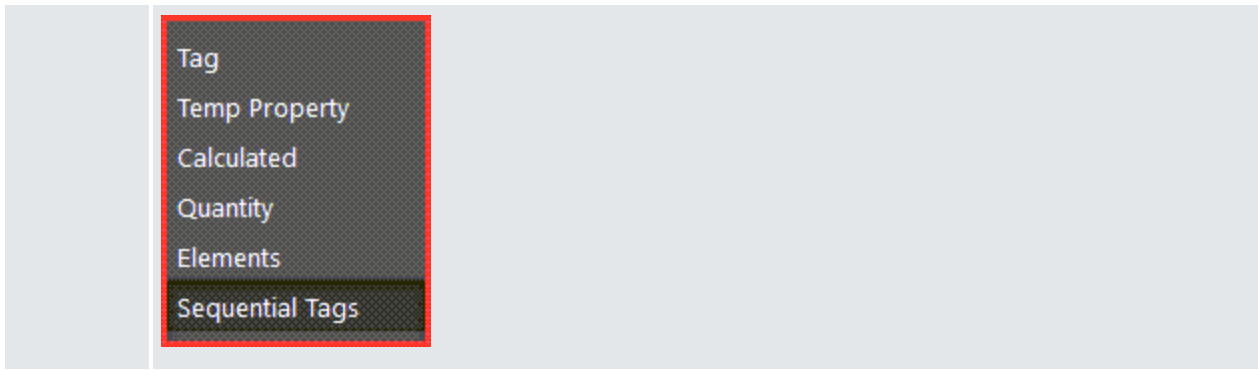

Tag Name Enter a new unique tag name or select an existing tag name.

Tag Value Enter the new value that you want to associate to the Selector tab criteria.

NOTE The available fields change depending on the action you select.


8.2 CREATE A DTO

In the DTO tab, you can add DTOs manually. First you must create a DTO group, and then add DTOs to the group. DTOs can also be imported and exported between projects to save you time.

8.2.1 DTO Tab


8.2.1.1 Add a DTO Group Folder

1. In the DTO tab, to Add a DTO group, click the **Add Group** icon.
2. You can add notes for the DTO group. Double-click the **Notes** section to add your notes.

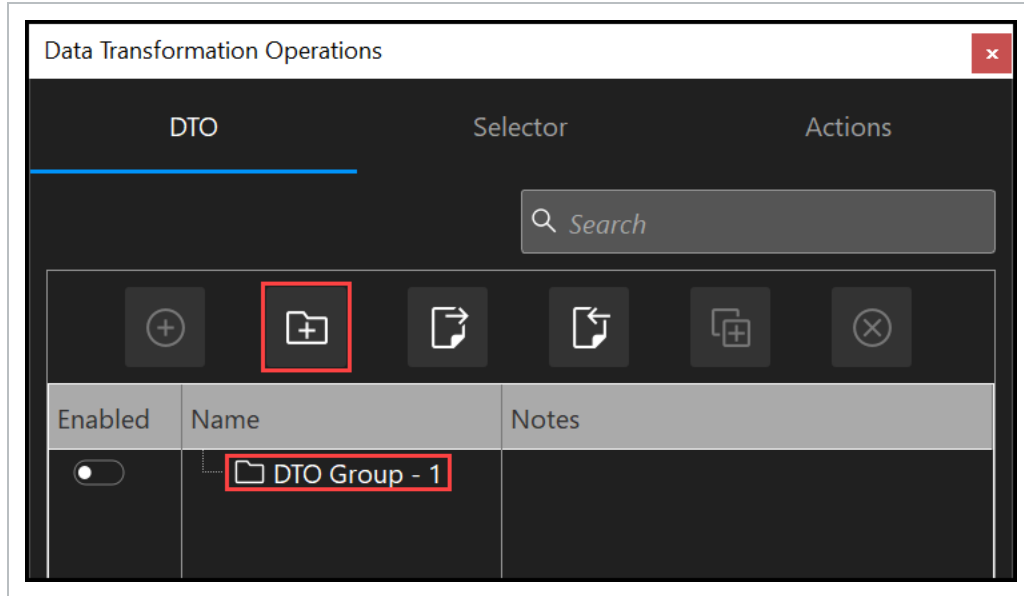

8.2.1.2 Add a DTO


1. Select a DTO group, and then click the **Add DTO** icon. You can also right-click in the DTO group to add a DTO.
2. You can add notes for the DTO. Double-click in the **Notes** section to add your notes.

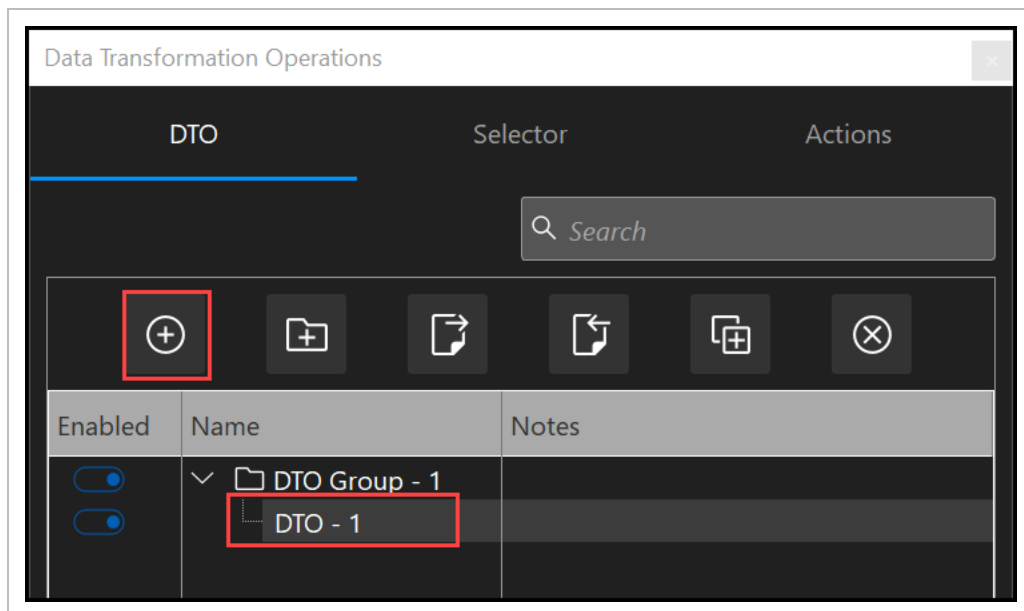

8.2.1.3 Rename a DTO

You can rename DTO groups and DTOs to better communicate their purpose.

1. Click the DTO tab
2. Double-click the DTO Group or DTO, and then enter the new name. You can also right-click the Name column and use the menu.
3. Click **Save**.

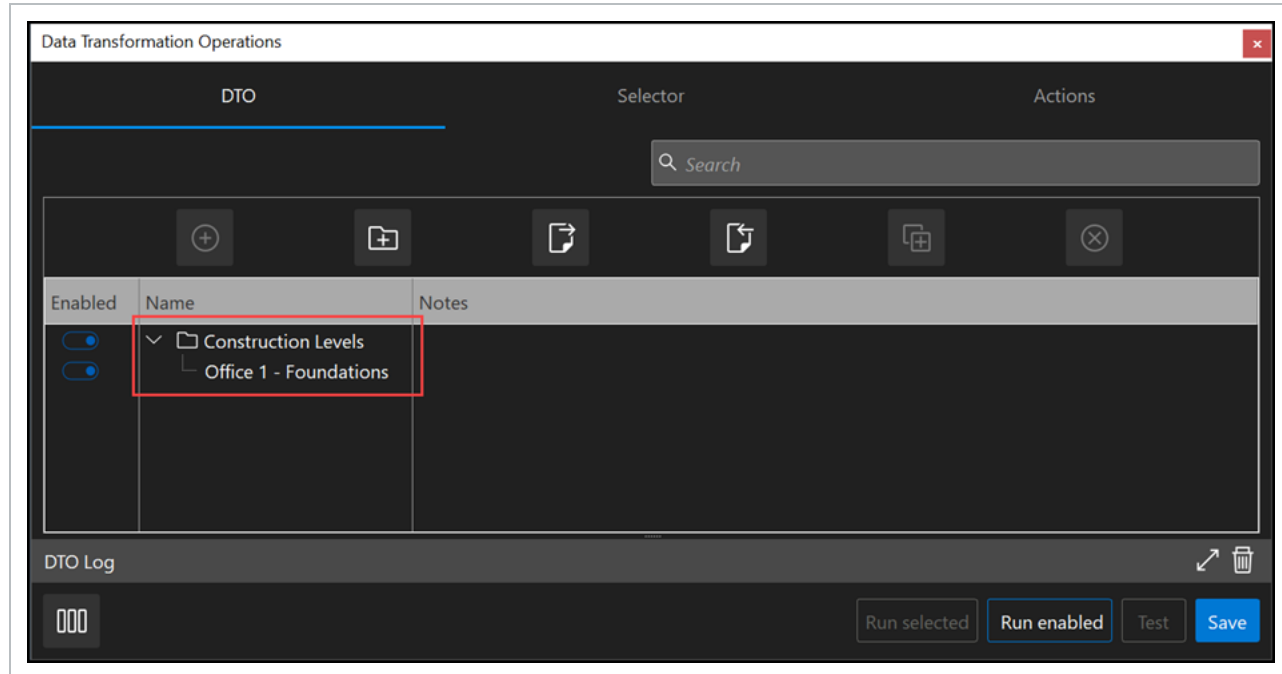

8.2.2 Selector Tab

After you create a DTO, you can create rules in the Selector tab to build your own criteria to find specific model objects using their tags or object properties.


1. In the DTO tab, click your DTO to select it.
2. Click the **Selector** tab. You can see your DTO name as a reference. By default, a blank Rule row is created.

The screenshot shows the 'Data Transformation Operations' window. At the top, there are three tabs: 'DTO', 'Selector', and 'Actions'. The 'Selector' tab is active and highlighted with a red box. Below the tabs, there is a text input field containing 'DTO - 1', also highlighted with a red box. To the right of this field is a toggle switch and a plus sign icon. Below this is a yellow bar with a toggle switch and an 'X' icon. The main area contains a table with the following columns: 'Rule Type', 'Tag / OP Name', 'Operator', 'Value', and 'Exclude'. The first row has the following values: 'Tag' (with a dropdown arrow), an empty text field (with a dropdown arrow), '=', an empty text field (with a dropdown arrow), and 'none' (with a dropdown arrow). A plus sign icon is located at the bottom left of the table area.


Rule Type	Tag / OP Name	Operator	Value	Exclude
Tag		=		none

3. Fill in the rule information to identify all foundations in the model.
 - a. Rule Type
 - b. Tag / OP Name
 - c. Operation
 - d. Value
 - e. Exclude

4. Click **Test** to select all objects that meet the criteria.

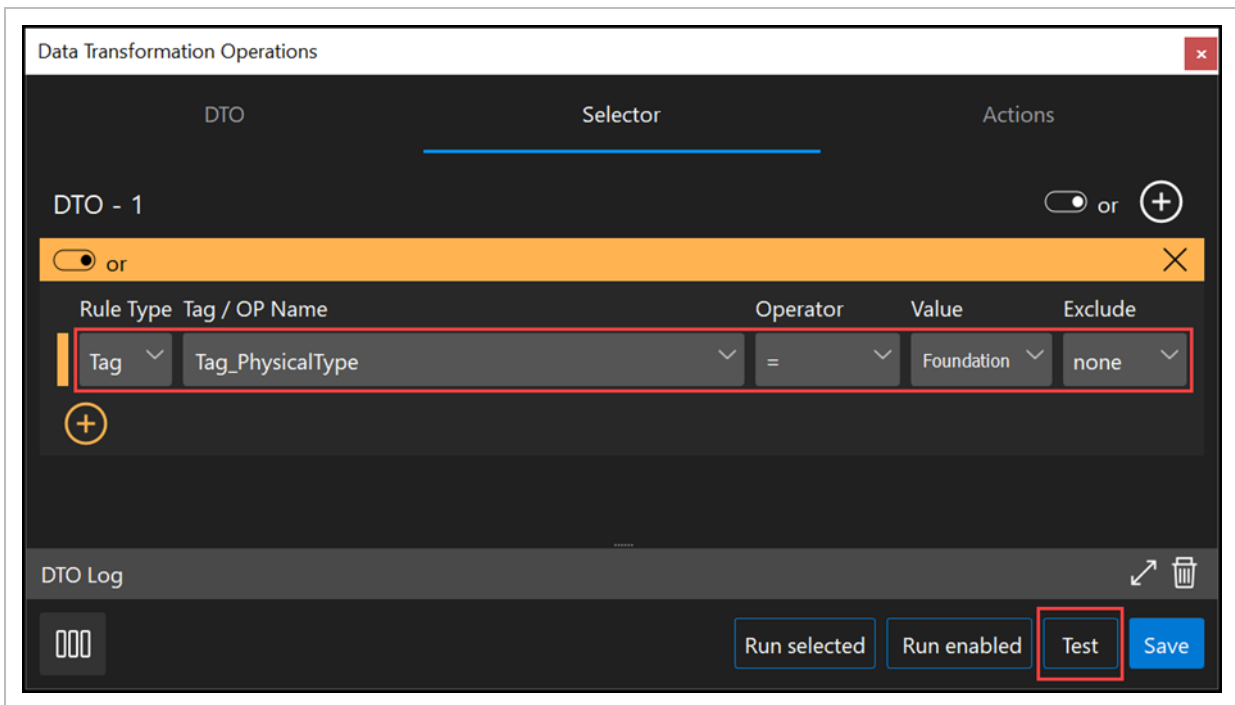


- After you click Test, you can review and validate your selection criteria in the Selection Information panel.

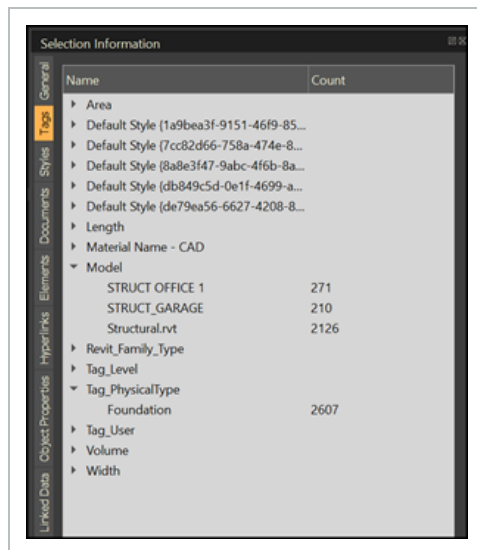


5. You can add additional rules to filter for other metadata.

- a. Click the **Add** icon below the current rule.
 - b. Use the **and/or** toggle to switch between the two options. The ribbon changes color depending on the option.
 - c. Fill in your rule criteria.
6. Click **Test** to select all objects that meet the criteria.

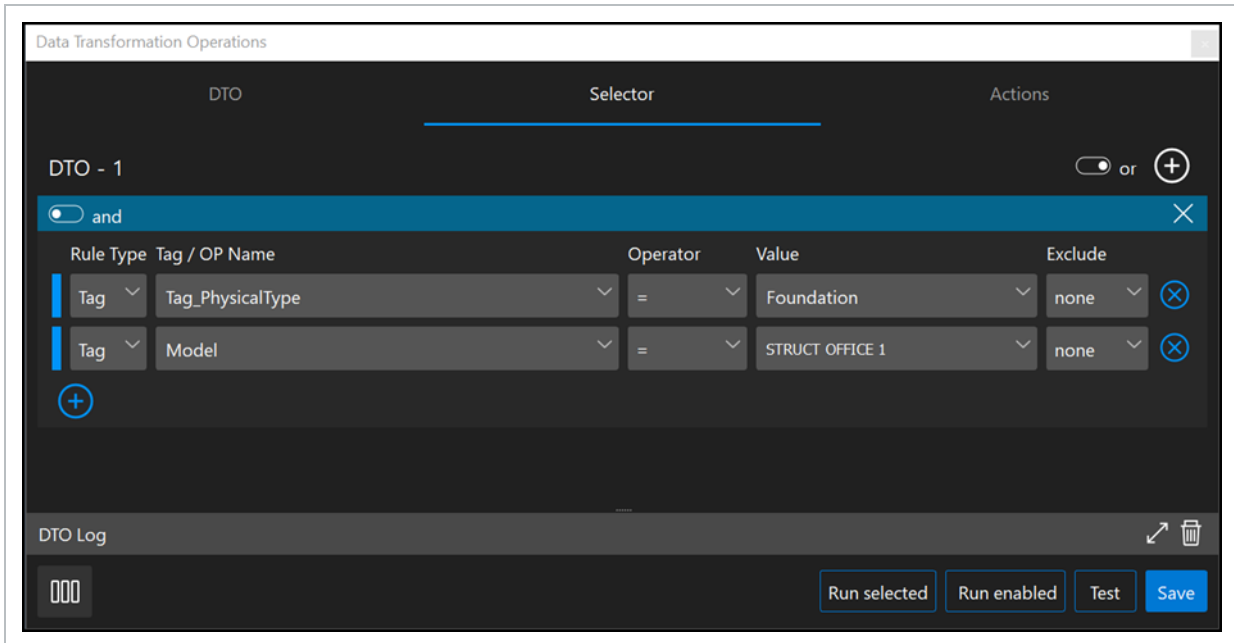

- You can review and validate that you have selected the objects as expected in the


Selection Information panel.

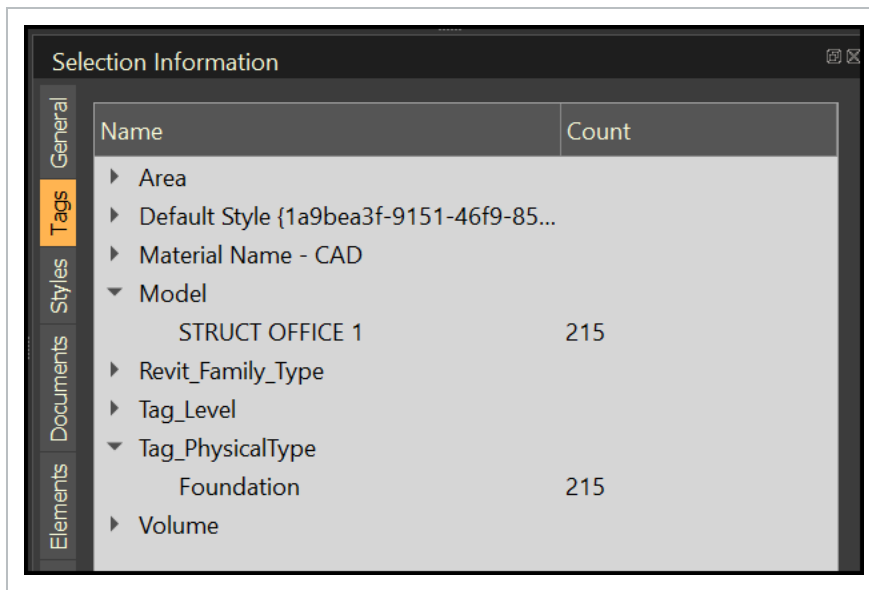


8.2.3 Actions Tab

On the Actions tab, you can create a new tag.

1. Click the **Actions** tab. The action window shows the DTO name and by default, creates a blank row for you to fill in.

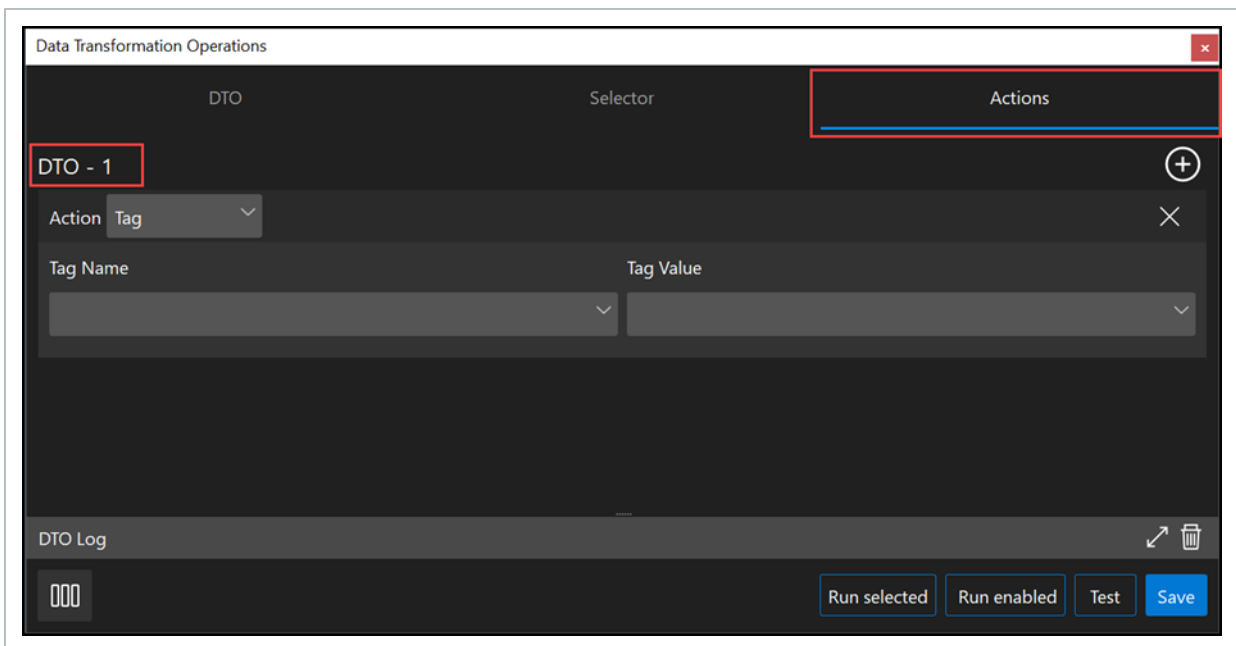

2. Fill in the criteria.
3. Enter the tag name and tag value.
 - Click **Run selected** to execute the DTO and create your tag.
4. You can expand the DTO Log panel to view information about the executed DTO.

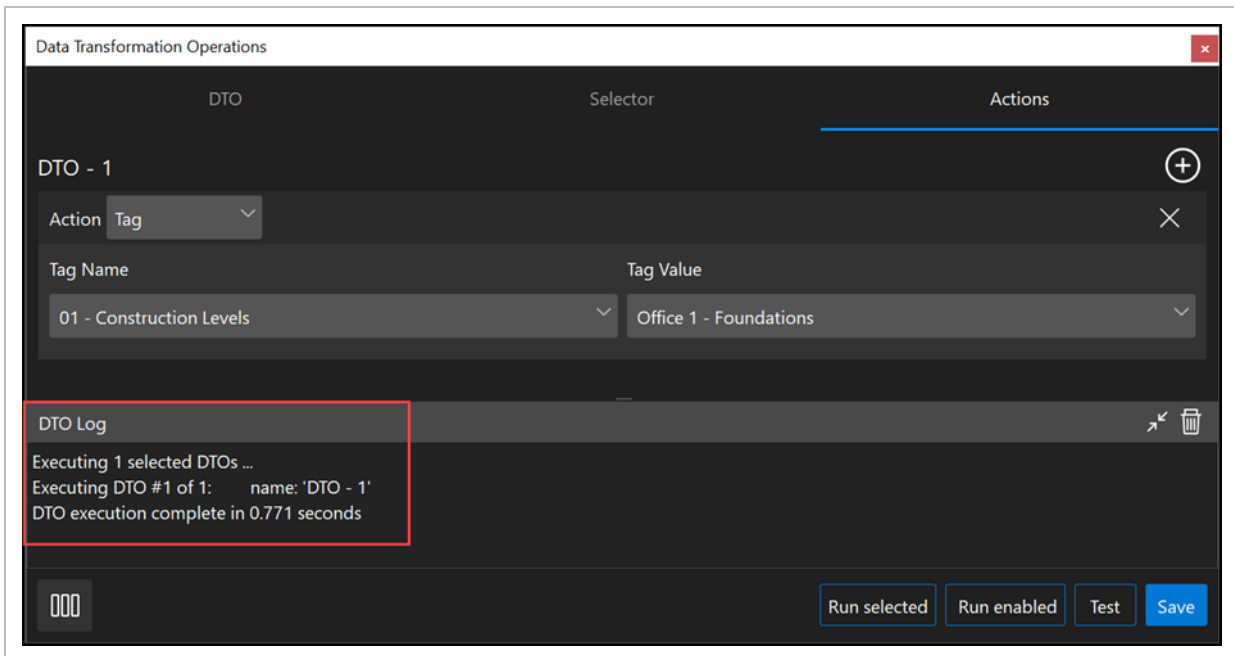

5. Click **Save**.



1.1 DTO EXAMPLES

1.2 CLEAN UP AND NORMALIZE MODEL DATA

DTOs provide flexible and repeatable processes to clean up and normalize model data. Clean up and normalizing data includes grouping the data from multiple models into a tag, grouping similar models into a single tag, converting dimensional text data into a number, and converting lengths such as inches to feet using tags and object properties.


For additional information on tags go to [Tags and Objects](#).

The following are examples that will show you how you can use tags and object properties to clean up and normalize data.


1.2.1 Group similar models into a tag

When you have multiple models in your project that have many differences, you can create tags that combine similar models for easier and faster accessibility.

You can group models that contain Garage into a tag named Garage. Tags such as Office 1, Office 2, and Garage can be used.

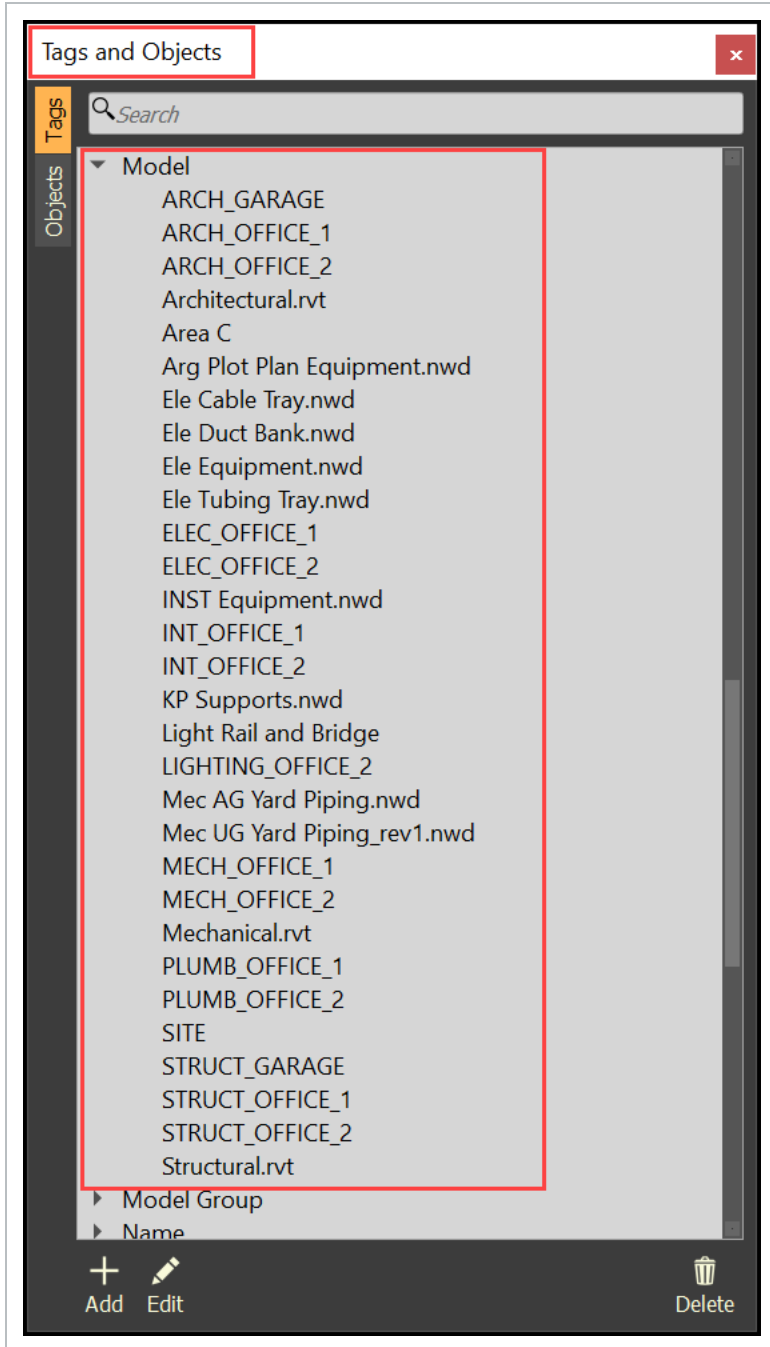


Add a DTO group and name it **Normalize**. In the group, add a DTO and name it **Model Group – Garage**.

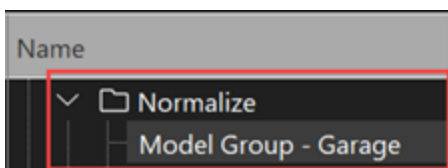

In the **Selector** tab create the following rule criteria:

Rule Type	Tag
Tag / OP Name	Model
Operator	contains
Value	Garage

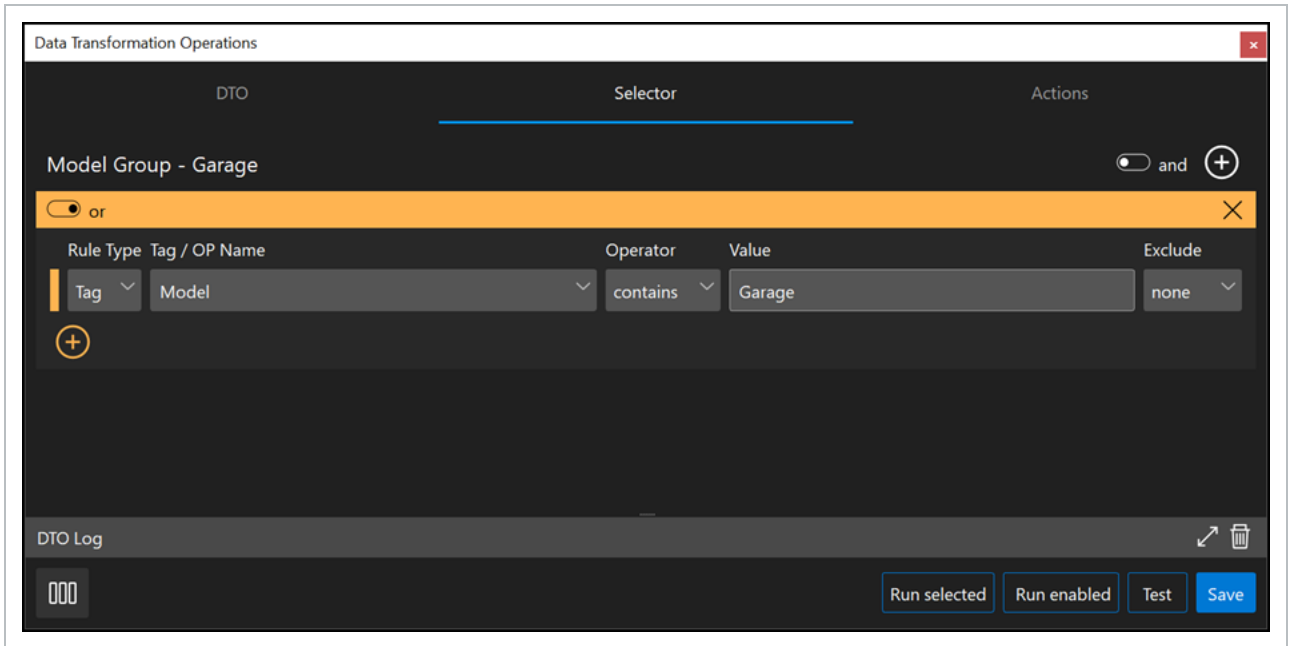

Click the **Test** button to review and validate your selection criteria in the Selection Information panel.


▼ Model	
ARCH_GARAGE	7121
STRUCT_GARAGE	2181

In the **Actions** tab use the following criteria:

Action	Tag
Tag Name	Model Group
Tag Value	Garage

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria. The results


will include Tags associated with your selection as shown in the screenshot below.

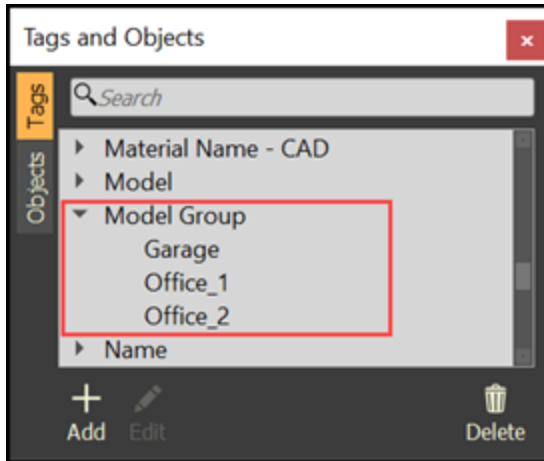

1.2.2 Convert dimensional text data into a number

If many of the models have dimensional data in text format, as opposed to a number format, you can normalize this into something more standard.

The model has NPD (Nominal Pipe Diameter), whereas other design applications use size. This can be normalized into something standard.

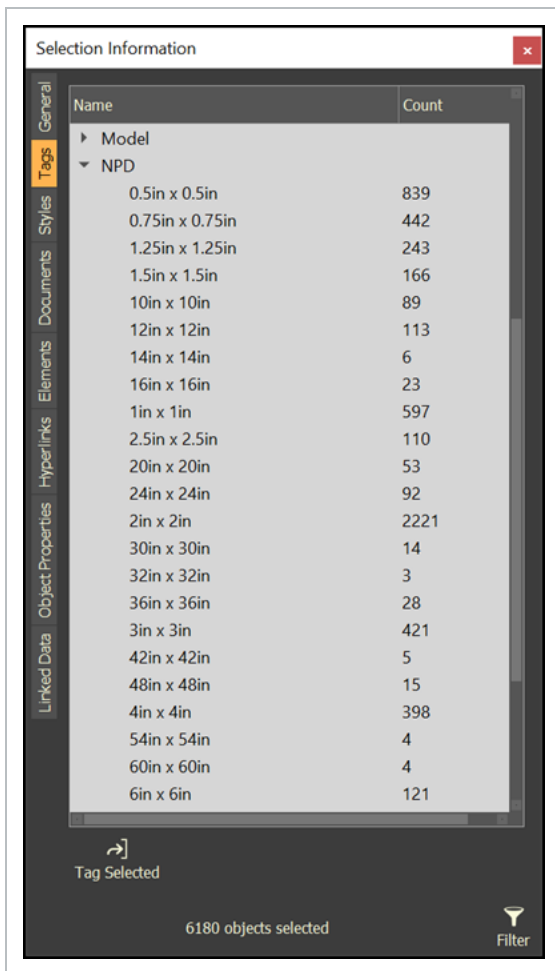

Add a new DTO group in a new group or an existing group such as Normalize, and then name it **Piping**. Add a new DTO in the group named **NPD to Size_Pipe**. You can add a note in the Notes column to communicate the purpose of the DTO.

In the **Selector** tab use the following criteria:

Rule Type	Tag
Tag / OP Name	NPD
Operator	not null

Click the **Add row** icon below the row to add another row. Add an additional rule that will filter for Piping:

Rule Type	Tag
------------------	-----


Tag / OP Name NPD

Operator =


Value Piping

Click the **and/or** toggle above the first rule on the top left to select **and**. Selecting **and** means that both rules must apply to

the model object data.

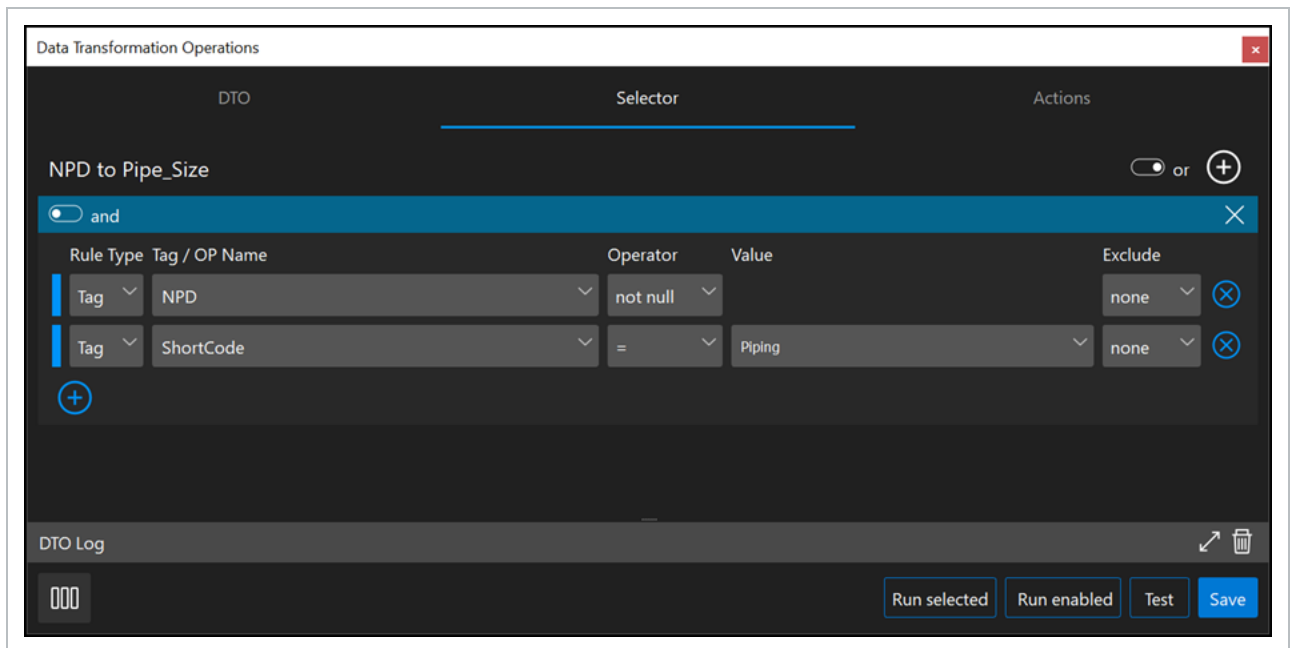

You can click the **Test** button to review and validate your selection criteria in the Selection Information panel.

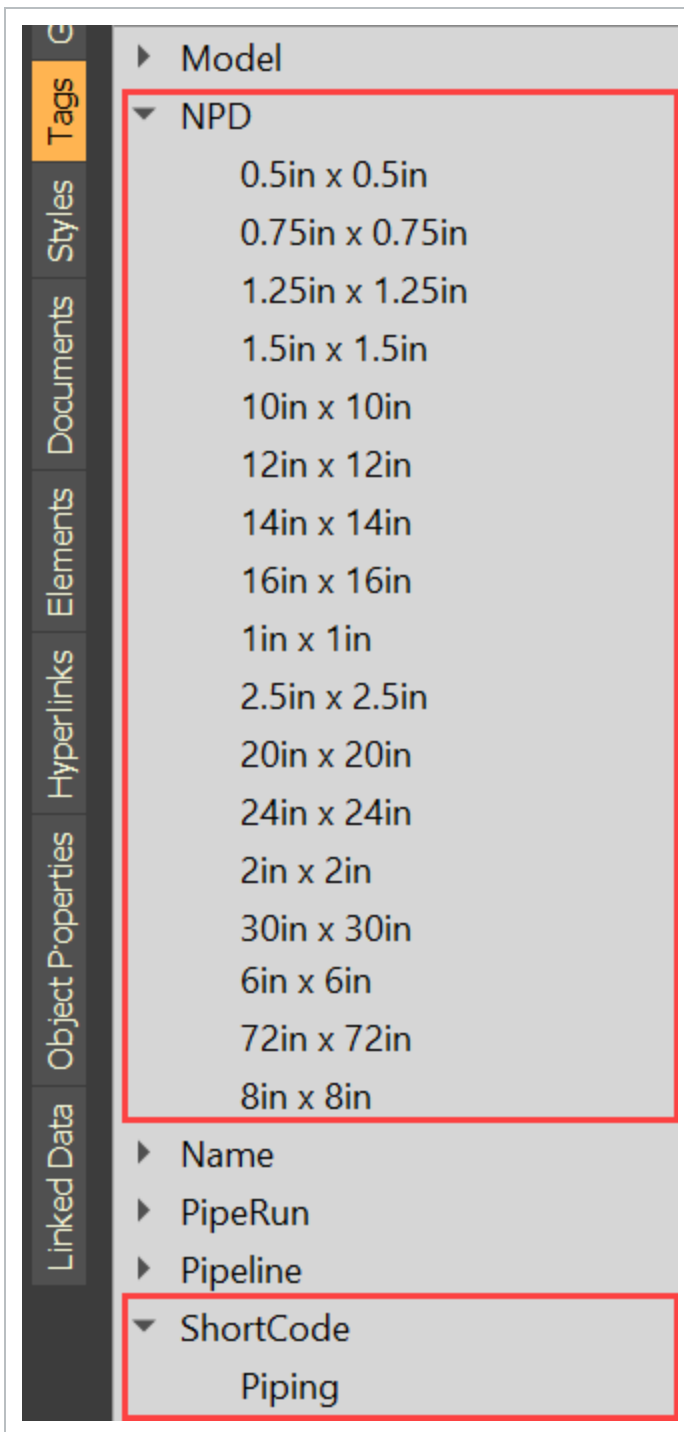

In the **Actions** tab select **Calculated** for Action.

Click the **Add row** icon next to Action to add a new function, and then use the following criteria:

Function	number()
-----------------	----------

Tag	NPD
Position	0


NOTE The *number()* function will convert the text data to number data.

Add another function, and then use the following criteria:

Function	tag()
Tag	IN8_Size_Pipe

IN8_Size_Pipe is a custom tag name. You can create and give your tag a specific name that will help you organize your data.

In the DTO Log window, the Tag Name and Value shows the expected results after the DTO is executed.

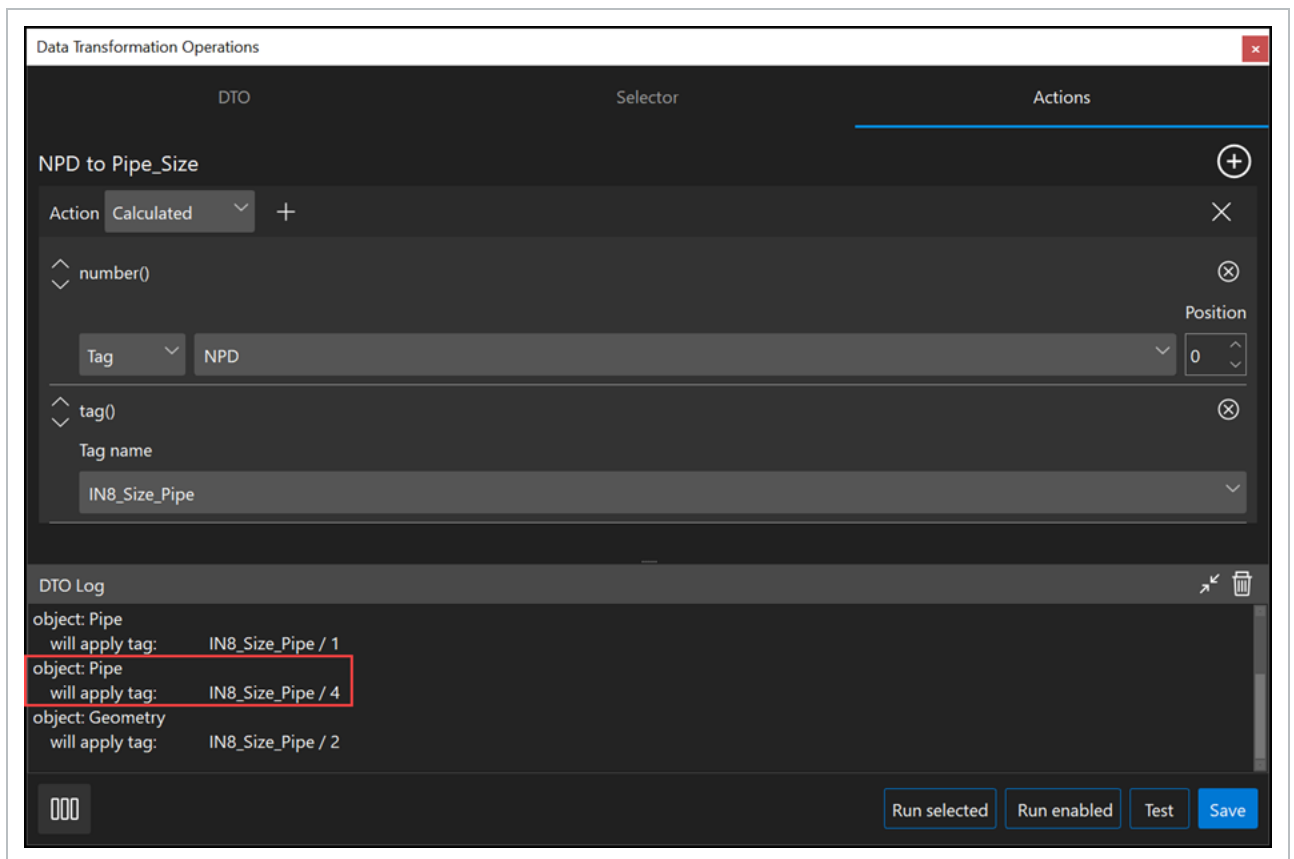

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.2.3 Convert inches to feet

You can use DTOs to convert units. If you have models that have piping length in inches, and you need to convert the length to feet for take-off, you can create a DTO to convert the units.

1.2.3.1 Convert text format to number format

Add a new DTO to convert the length of piping from text format to number format. Name the new DTO **Pipe Length (in)**.

In the **Selector** tab use the following criteria:

Rule Type	Tag or Object Property
Tag / OP Name	Length
Operator	not null

Use the **and/or** group toggle at the top right to select **and**.

Click the **Add group** icon at the top right and include the following group criteria:

Rule Type	Tag
Tag / OP Name	Model
Operator	=
Value	Mec AG Yard Piping.nwd


Click the **Add row** icon on the bottom left, and then then use the following criteria:

Rule Type	Tag
Tag / OP Name	Model
Operator	=
Value	Mec UG Yard Piping_rev1.nwd

Use the **and/or** row toggle on the top left above the group rows to select **or**.

The criteria selected will find all objects with a Length value. The **and** group toggle at the top right means that both

listed model tag groups will be included.

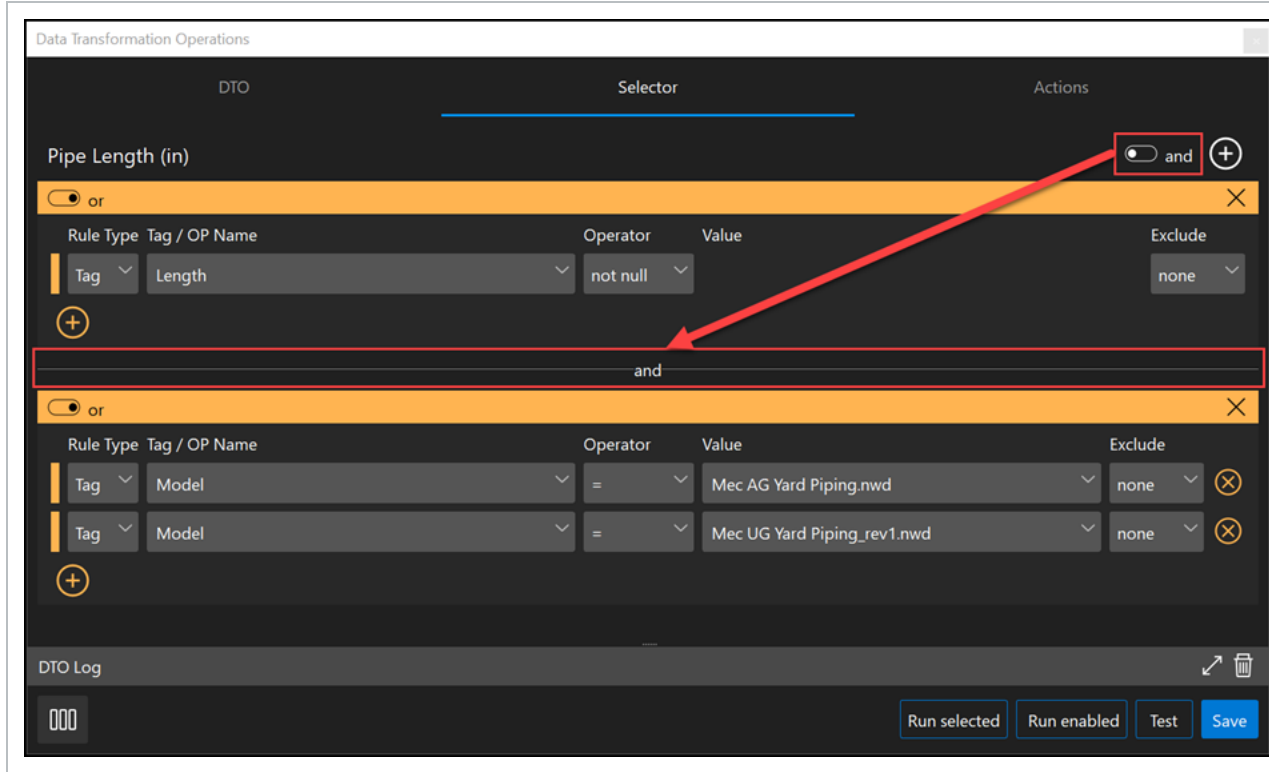


In the **Actions** tab select **Calculated** for Action.

Click the **Add** icon next to Action to add a function, and then use the following criteria:

Function	number()
Tag	Length

Add another function with the following criteria:

Function	tag()
Tag	Length_Pipe (in)

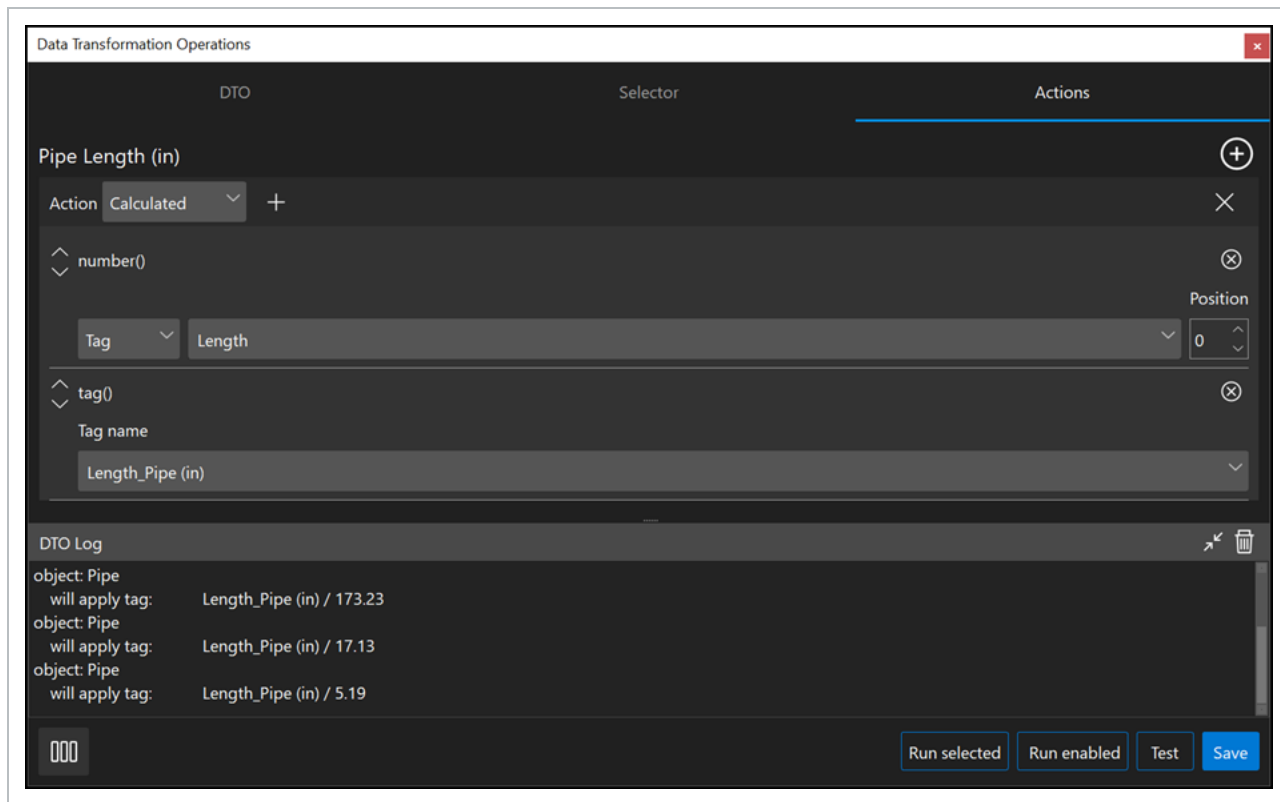


Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.2.3.2 Convert piping length from inches to feet

Add a new DTO, and then name it **Pipe Length (ft)**.

In the **Selector** tab create the following criteria:

Rule Type	Tag
Tag / OP Name	Length_Pipe (in)
Operator	not null

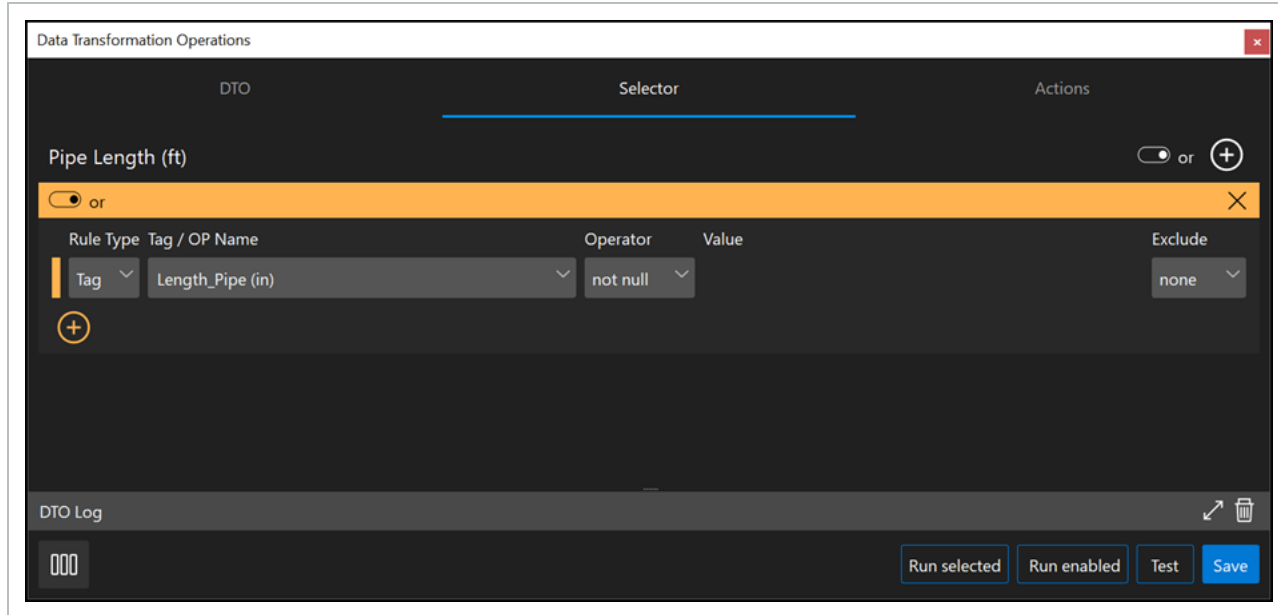

In the **Actions** tab select **Calculated** for Action.

Click the **Add** icon next to Action to add a function, and then use the following criteria:


Function	math()
Tag	Length_Pipe (in)
Operator	/
Constant	12

NOTE

The *math()* function can be used with Tags, Object Properties, and Constants. Constant will equal type in a number as opposed to using a tag.

Add another function with the following criteria:

Function	tag()
Tag	Length_Pipe (ft)

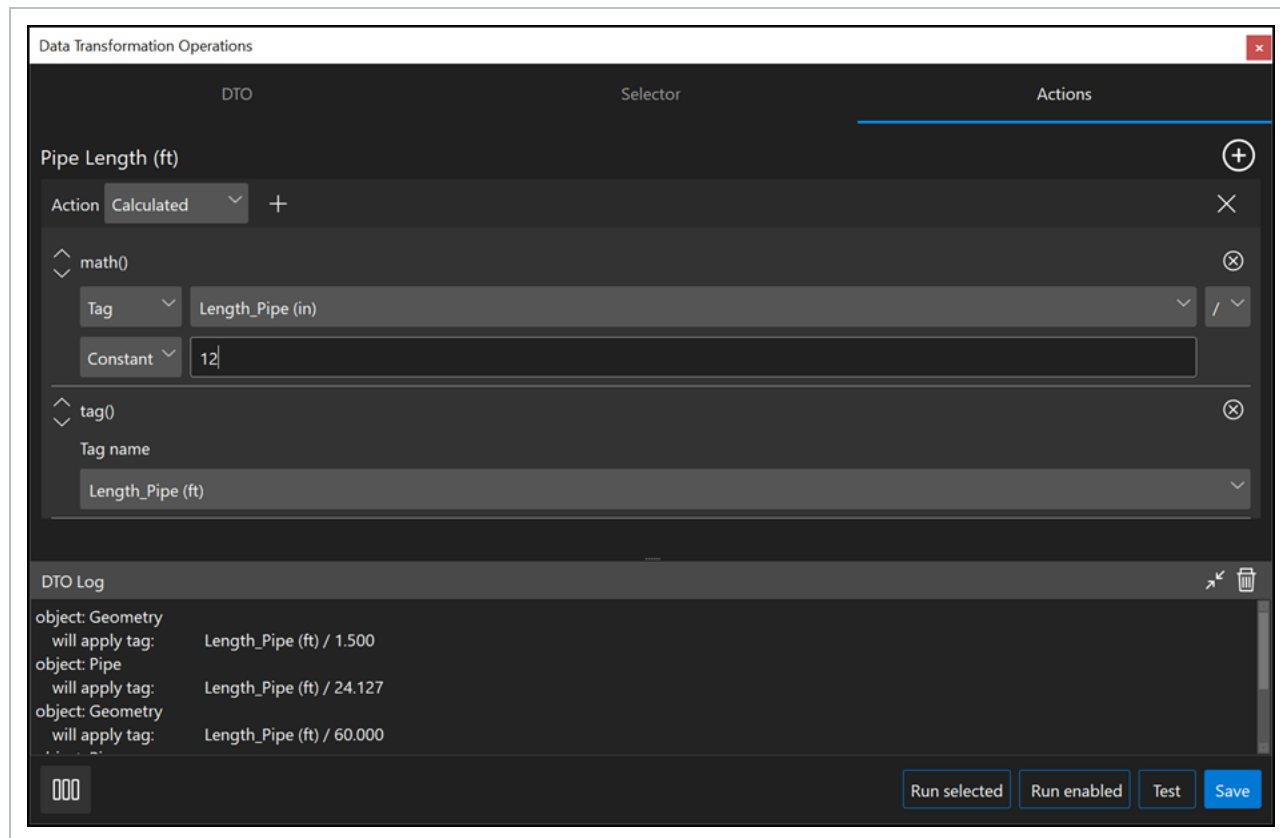

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.3 IDENTIFY AND ADD ADDITIONAL MODEL DATA

DTOs provide flexible and repeatable processes to add additional model data. The following are examples to show you processes to identify specific model data and add model data using DTOs.

1.3.1 Identify model data

You can differentiate between above ground large bore piping (AG/LB), above ground small bore piping (AG/SB), underground large bore piping (UG/LB) and underground small bore piping (UG/SB).

1.3.1.1 Identify and use AG/LB Piping

You can add a DTO to find all large bore piping according to your standards (>2.5"). Also, create a new tag named AG LB to

find all above ground piping.

Add a new DTO, and then name it **Pipe – AG LB**.


In the **Selector** tab create the following criteria:

Rule Type	Tag
Tag / OP Name	Model
Operator	=
Value	Mec AG Yard Piping

Use the **and/or** row toggle on the top left to **and**.

Click the **Add row** icon below the row, and then use the following rule criteria:

Rule Type	Tag
Tag / OP Name	IN8_Size_Piping
Operator	>
Value	2

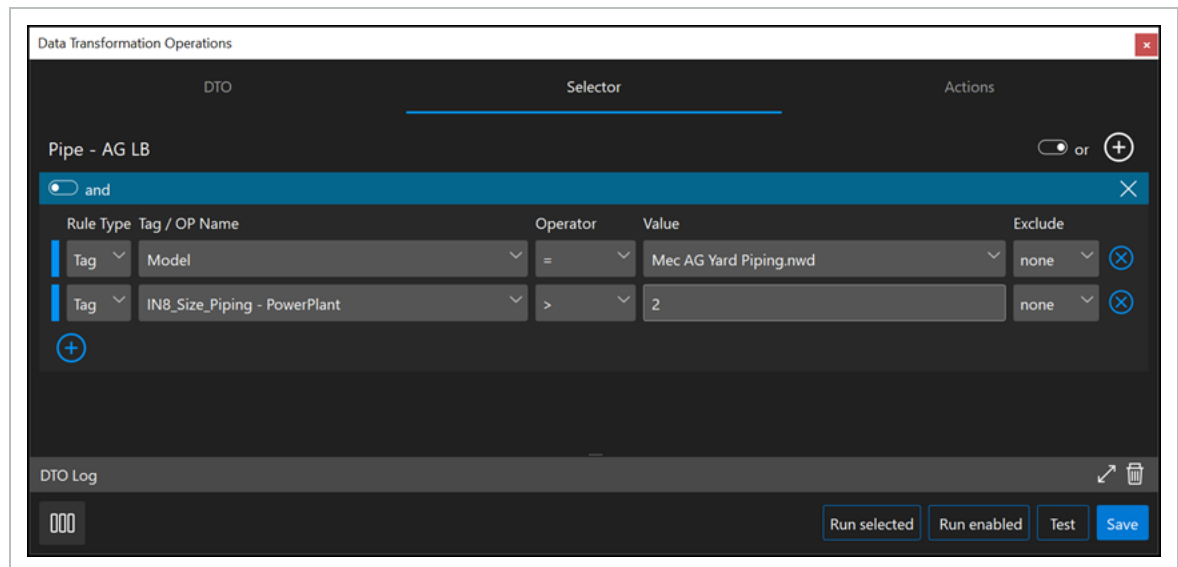


In the **Actions** tab use the following criteria:

Action	Tag
---------------	-----

Tag Name IN8_PipeAG/UG_LB/SB - PowerPlant

Tag Value AG LB

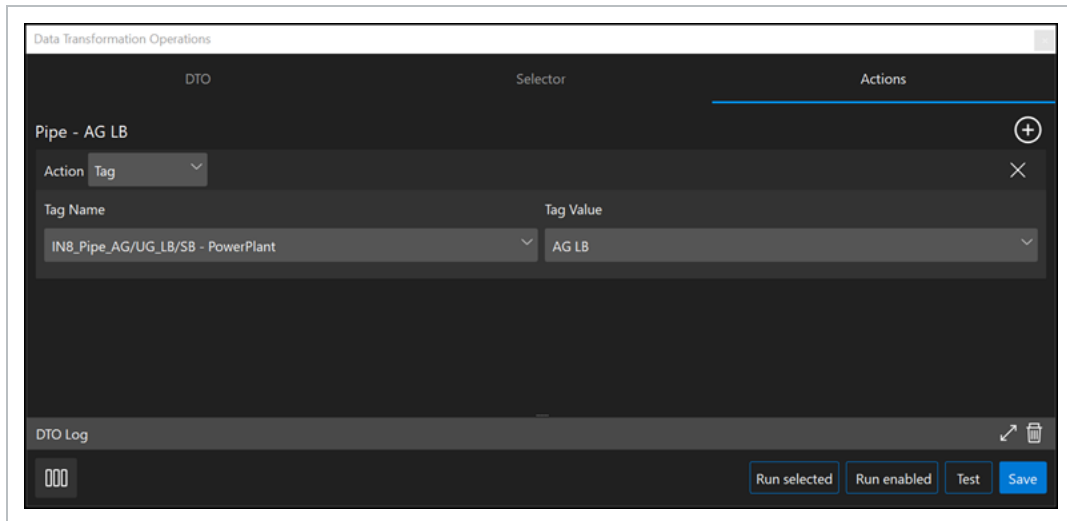

Click on the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.3.1.2 Identify and use AG/SB

Add a new DTO to find all small bore piping according to your standards (<2"). Also, create a new tag named AG SB to find


all above ground piping.

Duplicate the previous DTO, and then rename the new DTO **Pipe – AG SB**.


In the **Selector** tab update the following criteria:

Operator	<
Value	2.5

Leave the rest of the criteria the same.

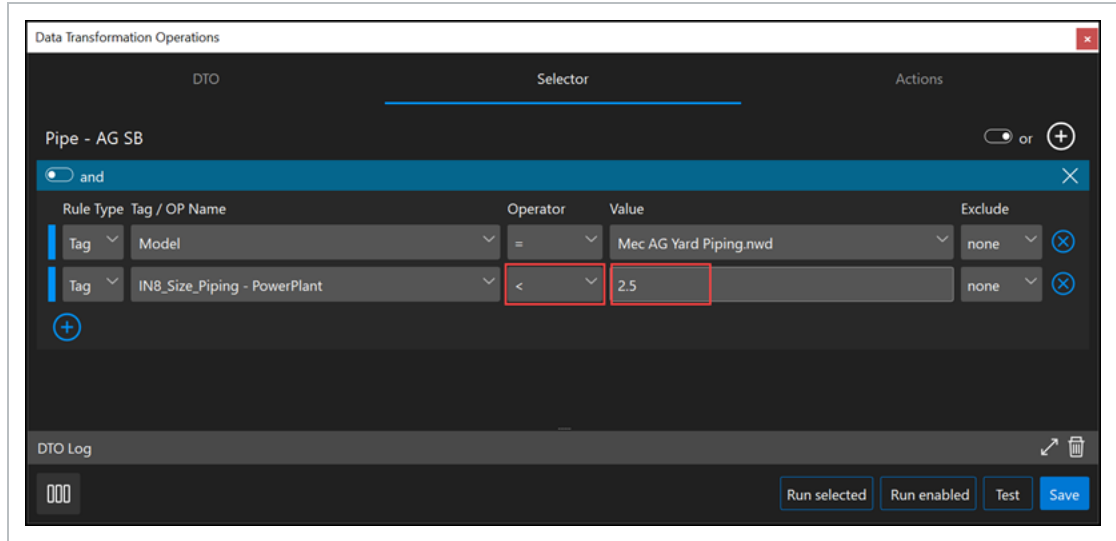

In the **Actions** tab update the Tag Value to **AG SB**. Leave the rest of the criteria the same.

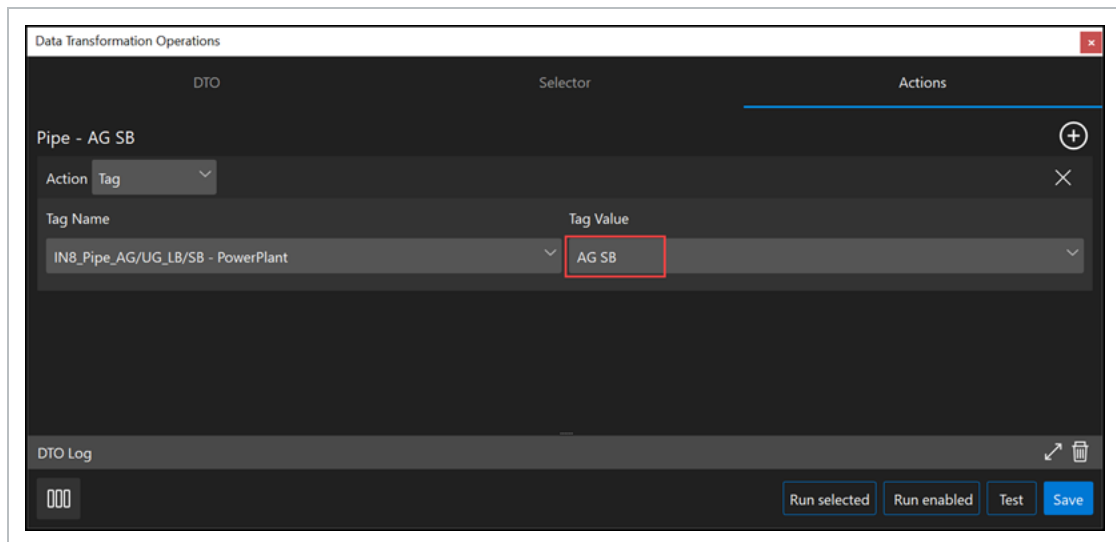

Action	Tag
Tag Name	Model Group
Tag Value	Office_1

Click on the **Run selected** button to execute the DTO, and then create the new tag according to your selection criteria.

1.3.2 Add weight to steel members using length

If your model includes the steel members length but does not have the weight, you can calculate the length into weight for take-off.

Add a new DTO, and then name it **W Shapes in LBs**.


In the **Selector** tab create the following new rule criteria:

Rule Type	Tag
Tag / OP Name	Revit_Family_Type
Operator	contains
Value	W Shape

Use the **and/or** row toggle on the top left to select **and**.

Click the **Add row** icon on the bottom left, and then use the following criteria:

Rule Type	Tag
Tag / OP Name	Length
Operator	not null
Value	W Shape

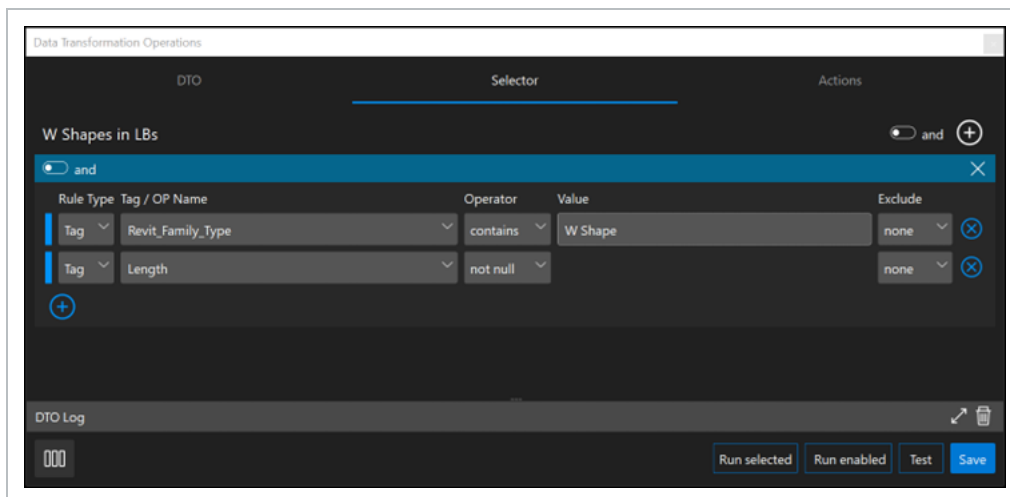

In the **Actions** tab select **Calculated** for Action.

Click the **Add** icon next to Action to add a function with the following criteria, assuming 90 lbs. per foot:


Function	math()
Constant	90
Operator	*
Tag	Length

NOTE

The *math()* function can be used with Tags, Object Properties, and Constants. Constant will equal *type* in a number as opposed to using a tag.

Add another function with the following criteria:

Function	Tag()
Tag name	Calculated Nominal Weight (lbs)

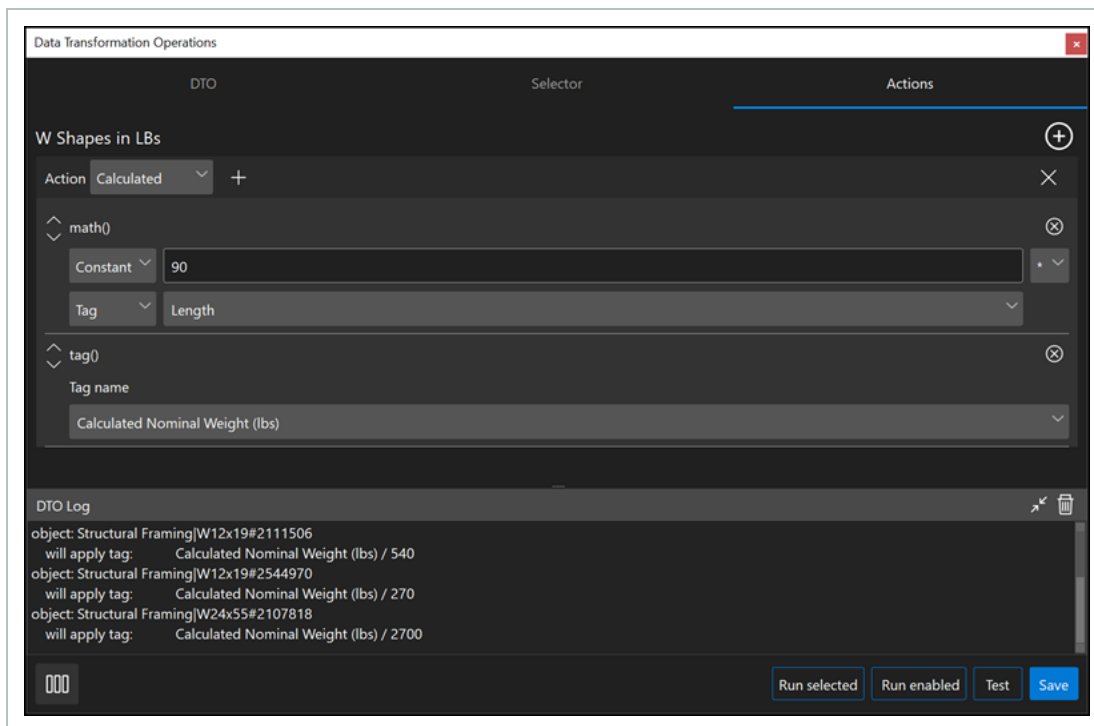

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.3.2.3 Convert weight from pounds to tons


Now that the previous DTO calculates the length of your steel members into weight in pounds, you need to calculate the

weight into tons for take-off.

Duplicate the previous DTO, and then name the new DTO **Weight (ton)**.

In the **Selector** tab create the following new rule criteria:

Rule Type	Tag
Tag / OP Name	Calculated Nominal Weight (lbs)
Operator	not null

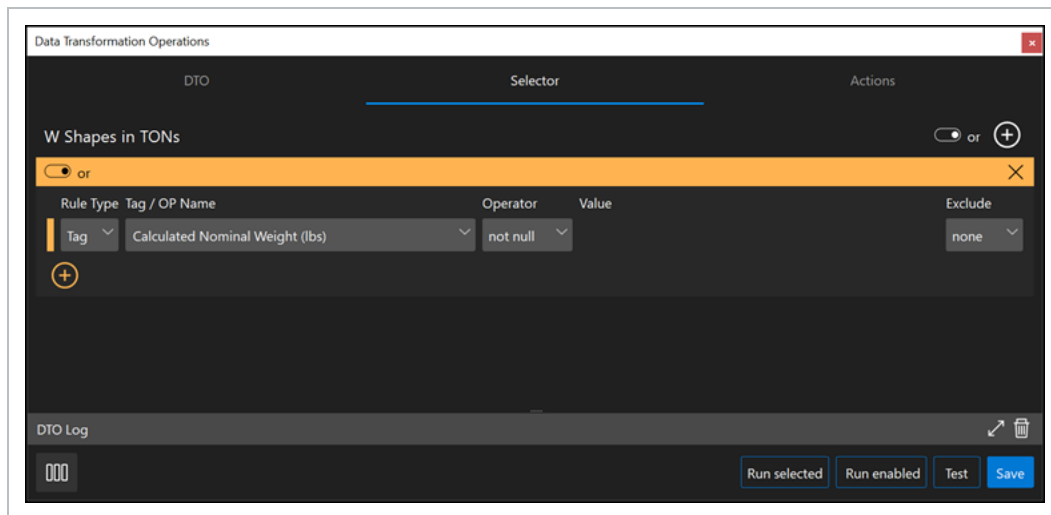


In the **Actions** tab select **Calculated** for Action.

Click the **Add** icon next to Action to add a function with the following criteria:

Function	math()
Tag	Calculated Nominal Weight (lbs)
Operator	/
Constant	2000

Add another function with the following criteria:

Function	Tag()
Tag name	Weight (ton)

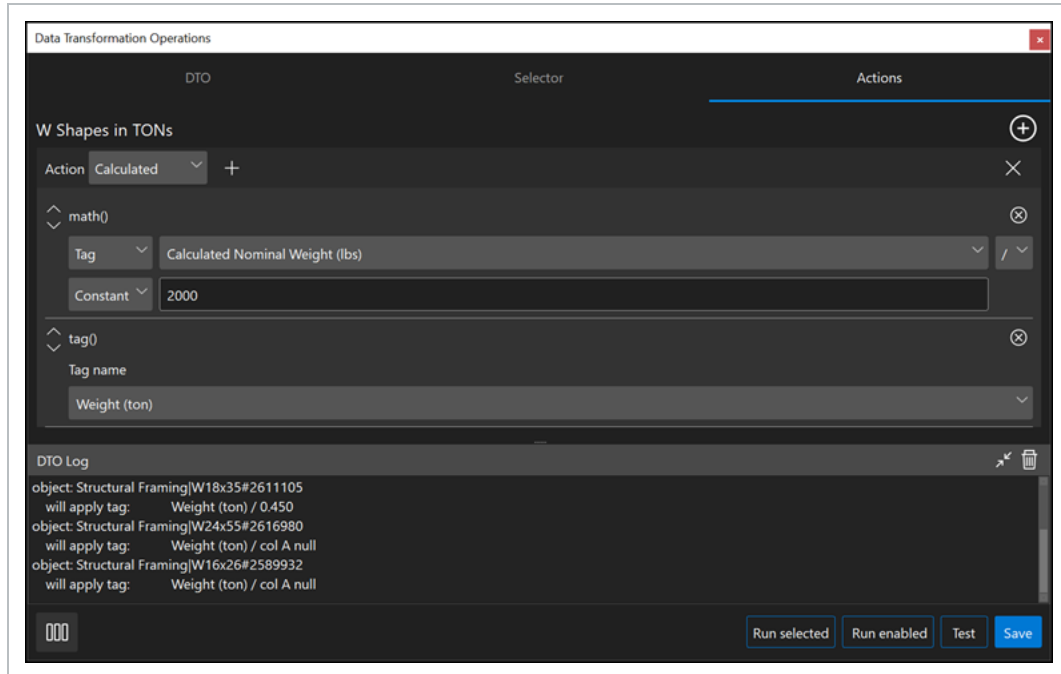

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.4 CONCATENATE MODEL DATA

Data Transformation Operations (DTOs) provide flexible and repeatable processes to concatenate model data. In the following examples you will see how you can concatenate model data using DTOs.

Data structured in models that you receive do not always provide data in a way that you can use. You need to concatenate data to create unique tags.

1.4.1 Make unique tag values for multiple objects

Add a new DTO, and then name it **Spool Number**.


In the **Selector** tab use the following criteria:

Rule Type	Tag
Tag / OP Name	Pipeline
Operator	contains
Value	RWS

Use the **and/or** row toggle on the top left to select **and**.

Click on the **Add row** icon on the bottom left to create a new row, and then use the following criteria:

Rule Type	Tag
Tag / OP Name	00-CWA
Operator	not null

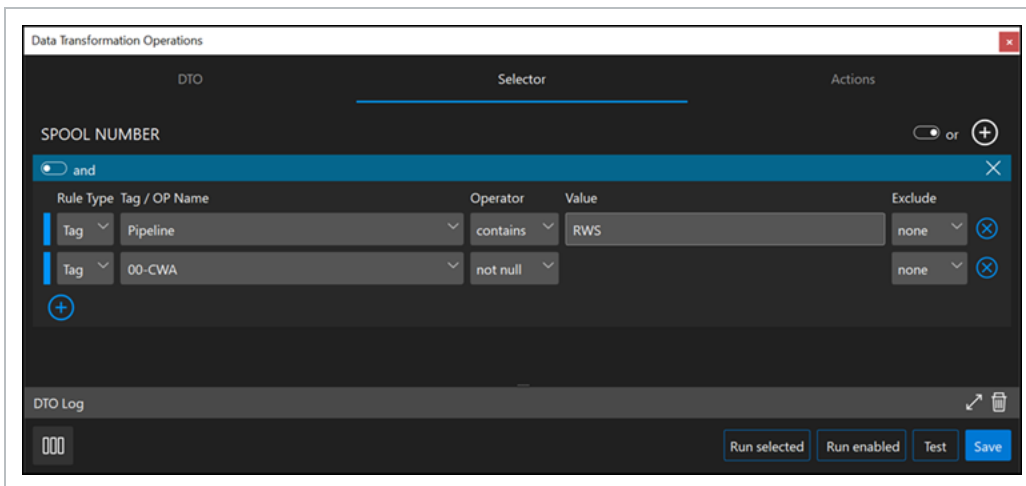

In the **Actions** tab select **Calculated** for Action.

Click the **Add** icon next to Action to add a function, and then use the following criteria:

Function	text()
Tag Name	00-CWA

Add additional rows, and then create a series of functions using dash as a constant as shown:

Function	text()
-----------------	--------

Tag Name	-
-----------------	---

Function	text()
-----------------	--------

Tag Name	IN8_System - PowerPlant
-----------------	-------------------------

Function	text()
-----------------	--------

Tag Name	-
-----------------	---

Function	text()
-----------------	--------

Tag Name	IN8_LineNumber - PowerPlant
-----------------	-----------------------------

Function	text()
-----------------	--------


Tag Name	-
-----------------	---

Function	text()
-----------------	--------

Tag Name	-01
-----------------	-----

Function	tag()
-----------------	-------

Tag Name	IN8_SpoolNumber
-----------------	-----------------

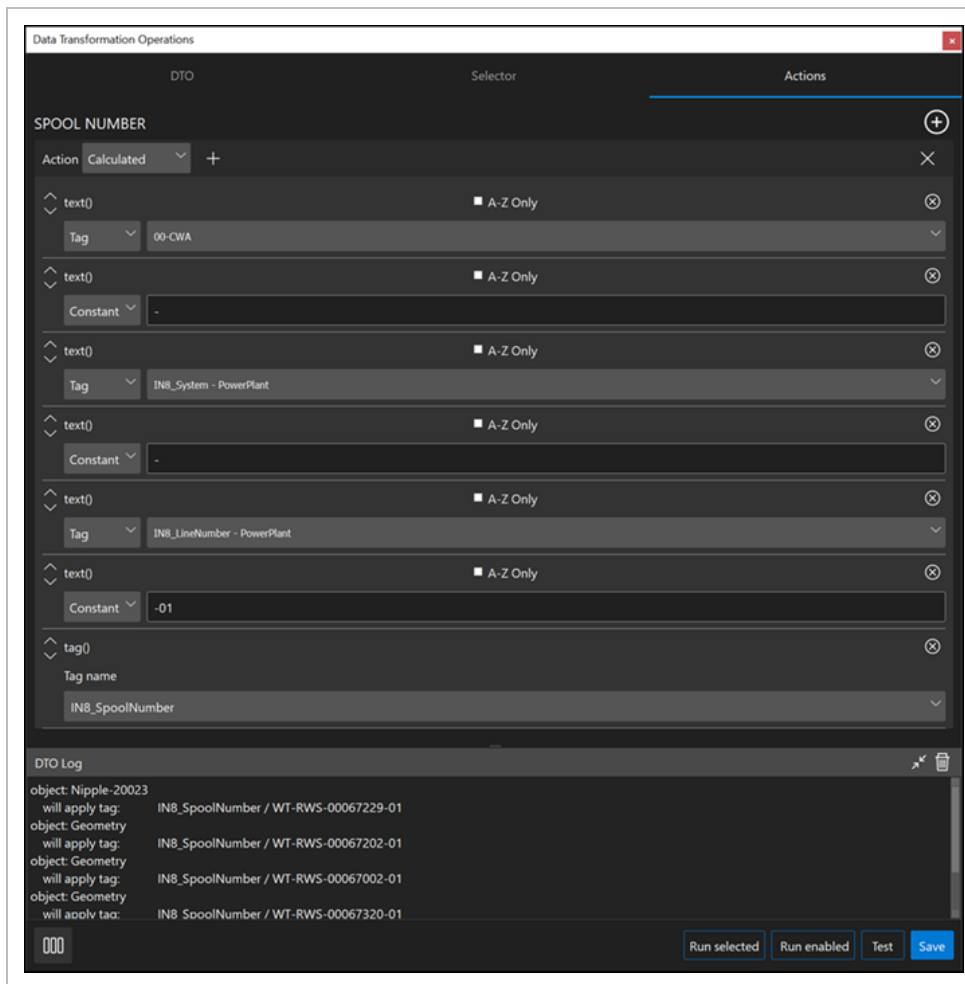

Click on the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.5 PARSE MODEL DATA

Data Transformation Operations (DTOs) provide flexible and repeatable processes to parse model data. An example is if your project systems are concatenated into other metadata, you can parse it to its own tag. In the following example you will see how you can parse model data using DTOs.

1.5.1 Parse system information

If your project systems are concatenated into other metadata, you should parse it to its own tag to easily access the model by systems.

Add a DTO, and then name it **Systems – Piping**.

In the **Selector** tab use the following criteria:

Rule Type	Tag
Tag / OP Name	Pipeline
Operator	not null

Use the **and/or** group toggle at the top right to select **and**.


Click the **Add group** icon at the top right, and then include the following group criteria:

Rule Type	Tag
Tag / OP Name	Model
Operator	=
Value	Mec AG Yard Piping.nwd

Click the **Add row** icon below the row to add another row, and then use the following criteria:

Rule Type	Tag
Tag / OP Name	Model
Operator	=
Value	Mec UG Yard Piping_rev1.nwd

Use the **and/or** row toggle above the grouped rows on the top left and select **or**.

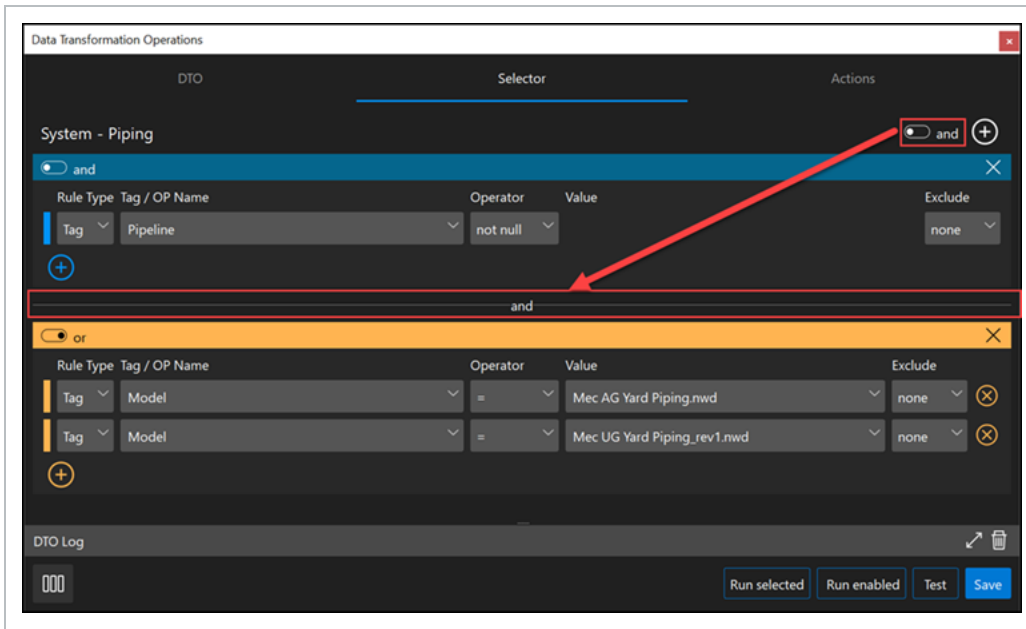

The selected criteria will find all objects with a Pipeline value. When you use the **and** group toggle, it will select the objects from the listed model tag values.

Click the **Test** button to review and validate your selection criteria in the Selection Information panel. Results should

include AQ-00074001and CWR-00064101.

In the **Actions** tab select **Calculated** for Action.

Click the **Add** icon next to Action to add a new function, and then use the following criteria:

Function	substr()
Tag	Pipeline
Index of	-
Offset	1
Length	-3


NOTE The *substr()* function lets you parse out your selected characters within a string of characters.

NOTE


The *Index of* field can be blank, or you can enter any character from where you want to start indexing. This example starts at the dash value in this string of characters for AQ-00074001.

Add another function with the following criteria:

Function	tag()
Tag	IN8_System

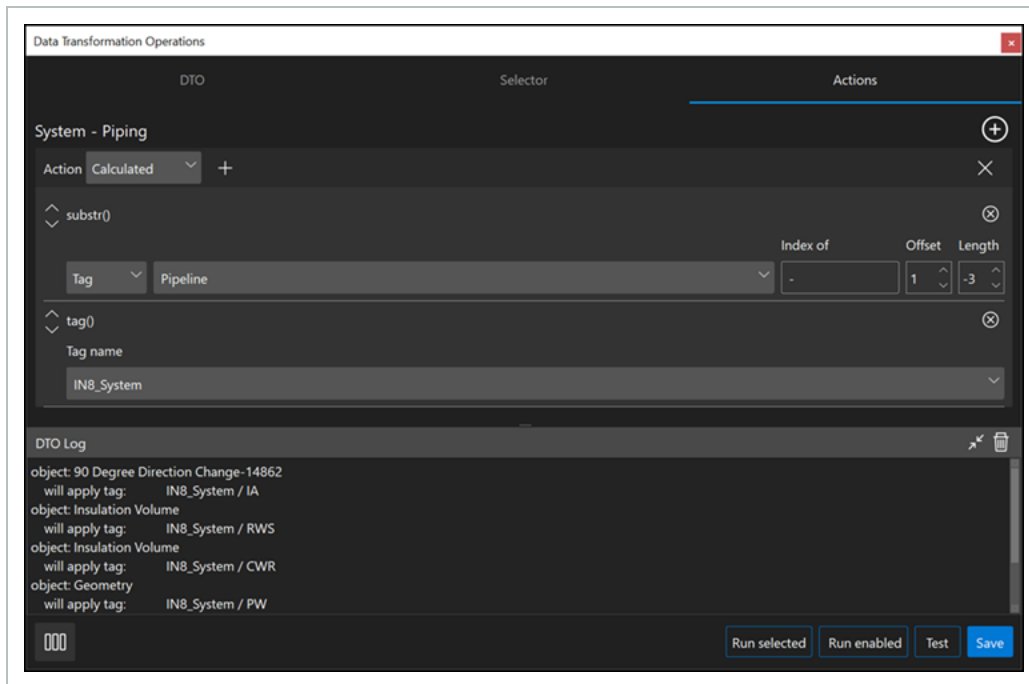

Click on the **Run selected** button to execute the DTO, and then create the new tag according to your selection criteria.

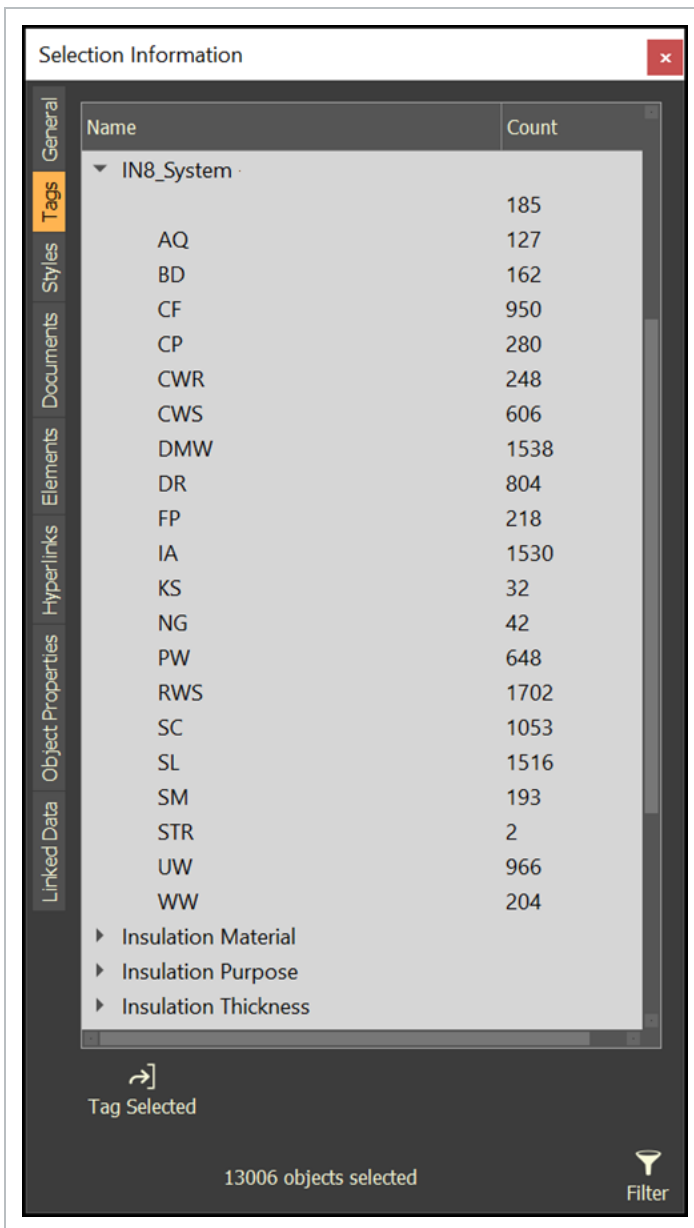

1.6 QUANTIFY MODEL DATA

Data Transformation Operations (DTOs) provide flexible and repeatable processes to quantify model data. In the following examples you will see how you can quantify model data using DTOs.

The InEight Model to InEight Estimate integration is the most efficient way to get quantities from a model into an estimate. See [Model-Based Takeoff Overview](#) and [Model to Estimate integration](#).

NOTE

The following examples do not use the InEight Estimate integration.

1.6.1 Extract quantities from model

You can sum up quantities from your model to use for estimating or tracking subs by installed quantities.

1.6.1.1 Quantities by Count

You can add a DTO to find specific model objects to sum up their quantities, and then utilize the Quantity action type to

sum the quantities by count.

Add a DTO, and then name it **Foundation Pier**.

In the **Selector** tab create the following rule criteria:


Rule Type	Tag
Tag / OP Name	02 - Construction Levels
Operator	=
Value	G-Foundations
Exclude	children

Click on the **Add row** icon on the boottom left, and then use the following criteria:

Rule Type	Tag
Tag / OP Name	80 - Construction Items
Operator	=
Value	Drilled Pier

Use the **and/or** row toggle on the top left to select **and**.

When you use the **and** toggle, it means that both rules must apply to model object data.

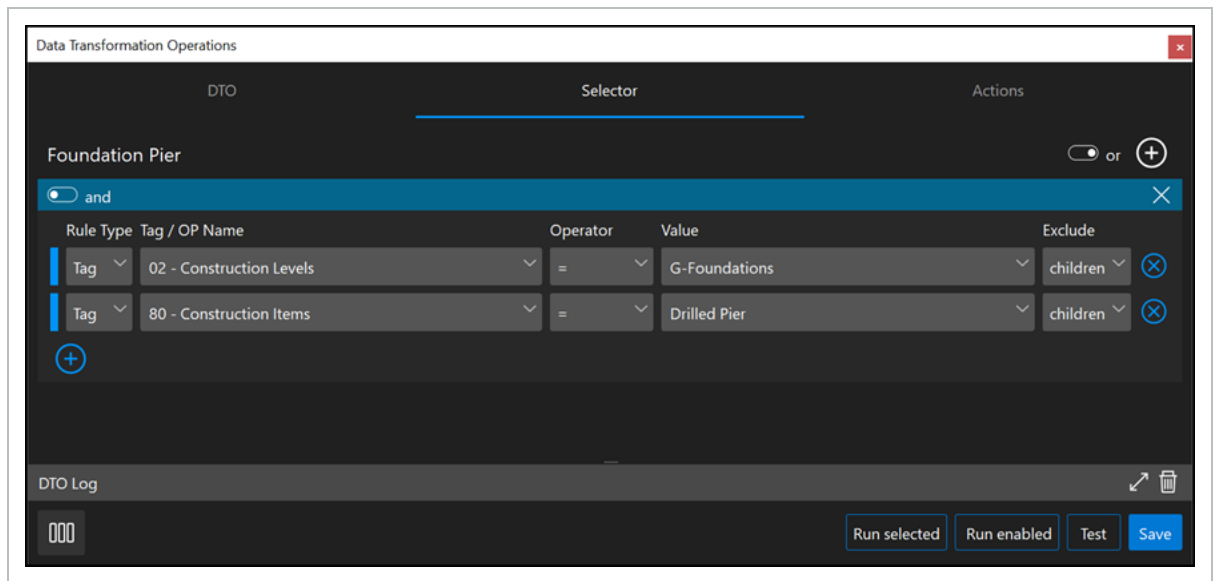


In the **Actions** tab use the following criteria:

Action	Quantity
Quantity Type	count
Code	FND PEIR
Units	Items
Description	Foundation Pier

NOTE You can give the Code and Description fields your own custom input to help organize the data.

Click the **Equals** icon to see your quantities. You can also use the Operation and Value fields to adjust your quantities, and then click the **Equals** icon to see your updated quantities.

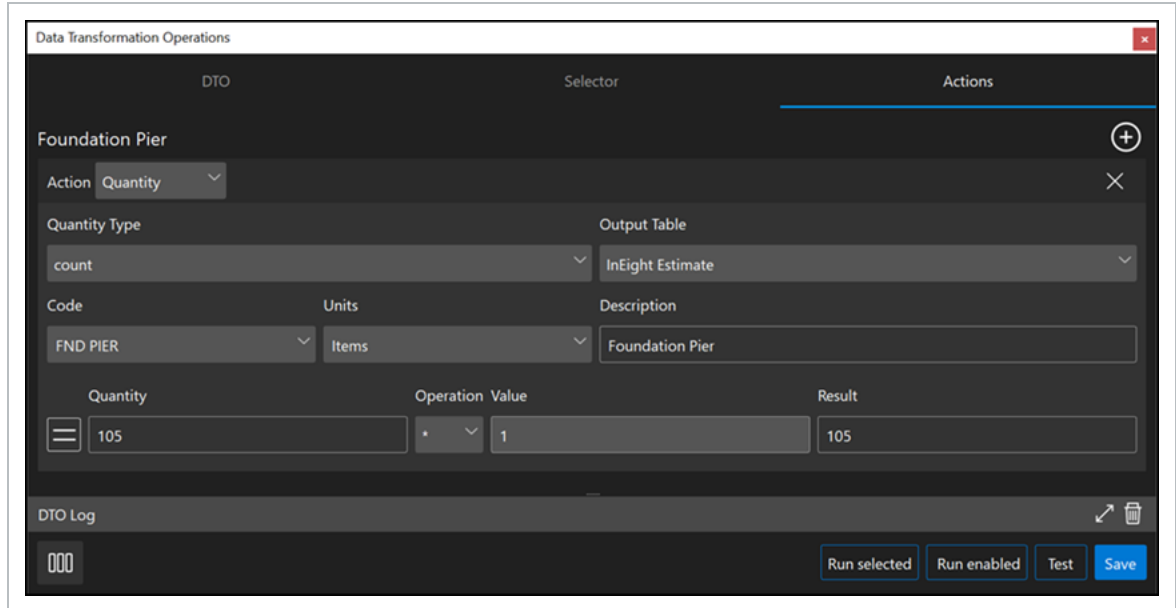

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.6.1.2 Quantities by area

Add a DTO to find specific model object to sum up their quantities and then utilize the Quantity action type to sum the

quantities by area.

Add a DTO, and then name it **Foundation Pier**.


In the **Selector** tab create the following rule criteria:

Rule Type	Tag
Tag / OP Name	02 - Construction Levels
Operator	=
Value	G-Foundations

Use the **and/or** toggle at the top left to select **and**.

Click the **Add** icon on the bottom left, and then add the following criteria:


Rule Type	Tag
Tag / OP Name	80 - Construction Items
Operator	=
Value	Drilled Pier
Exclude	children

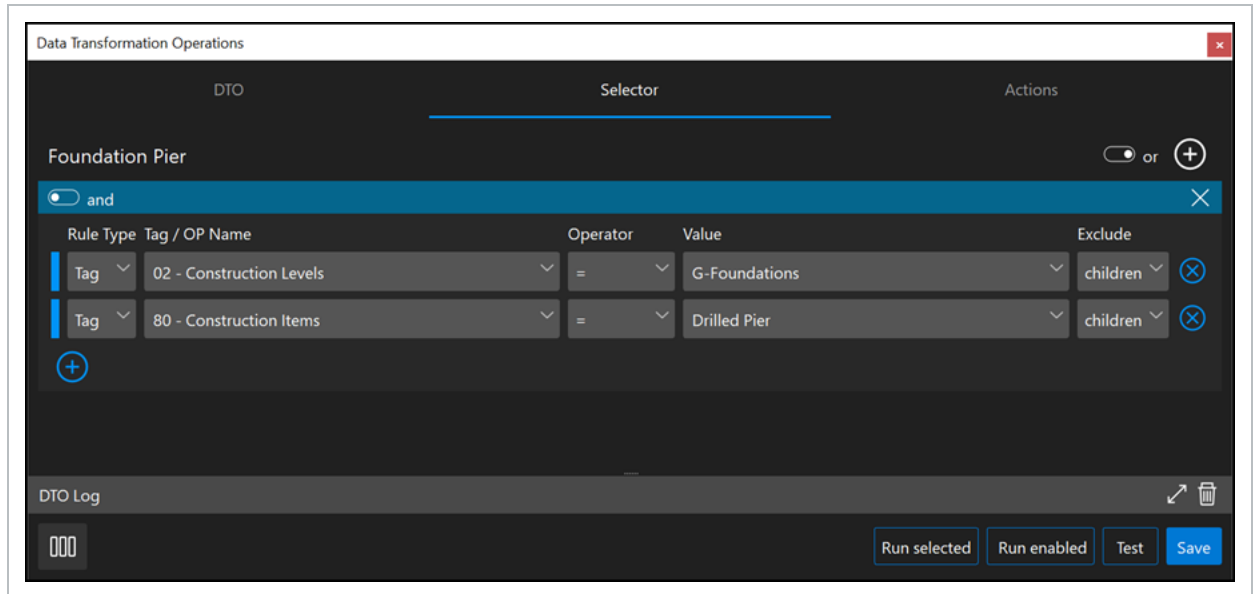

In the **Actions** tab use the following criteria:

Action	Quantity
Quantity Type	sum area
Code	FND PEIR
Units	square feet
Description	Foundation Pier

Click the **Equals** icon to see your quantities. You can also use the Operation and Value fields to adjust your quantities, and then click on the **Equals** icon to see your updated quantities.

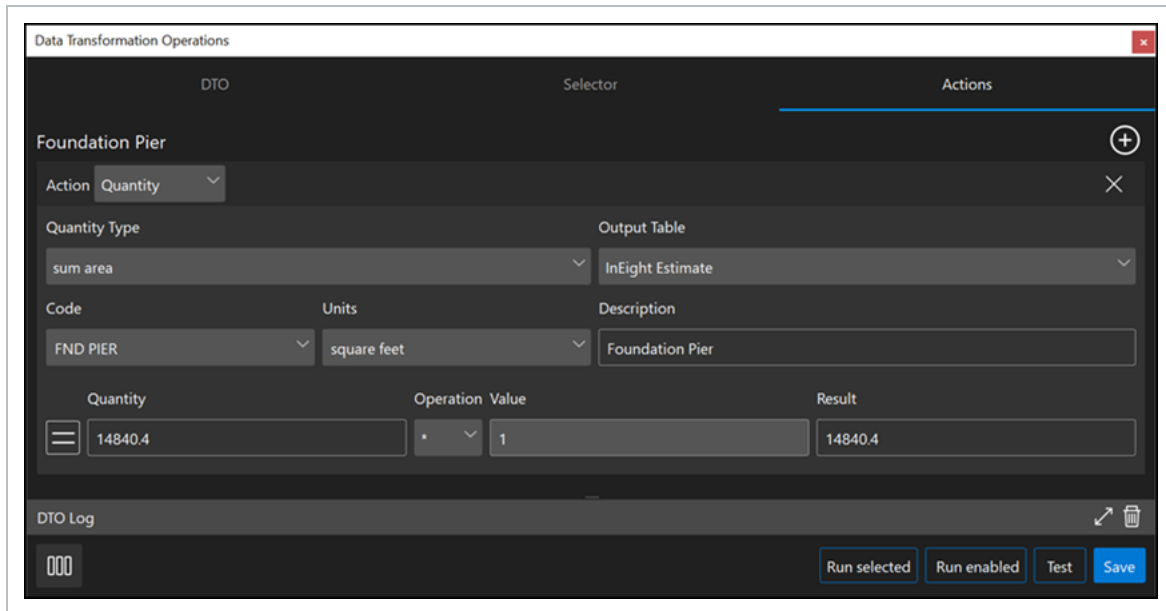

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.6.1.3 Quantities by volume

You can add a DTO to find specific model object to sum up their quantities and then use the Quantity action type to sum up

the quantities by volume.

Add a DTO, and then name it **Foundation Pier**.


In the **Selector** tab create the following rule criteria:

Rule Type	Tag
Tag / OP Name	02 - Construction Levels
Operator	=
Value	G-Foundations

Use the **and/or** row toggle at the top left to select **and**.

Click the **Add row** icon on the bottom left, and then add the following criteria:

Rule Type	Tag
Tag / OP Name	80 - Construction Levels
Operator	=
Value	Drilled Pier
Exclude	children

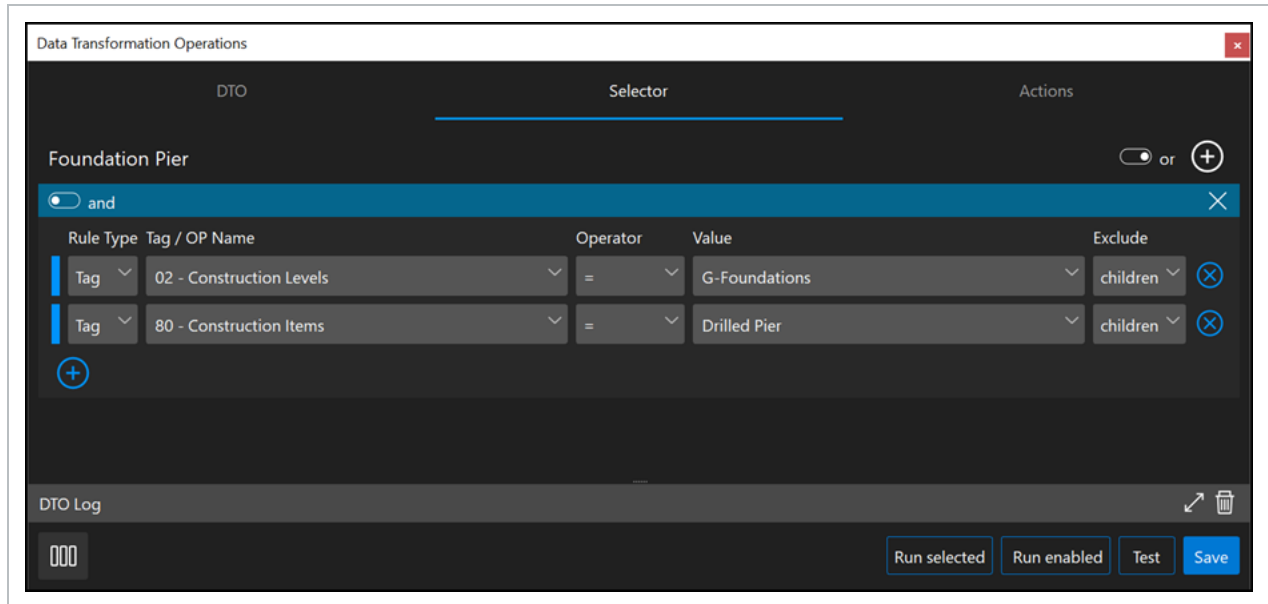


In the **Actions** tab use the following criteria:

Action	Quantity
Quantity Type	sum volume
Code	FND PEIR
Units	cubic yards
Description	Foundation Pier

Click the **Equals** icon to see your quantities. You can also use the Operation and Value fields to adjust your

quantities, and then click the **Equals** icon to see your updated quantities.

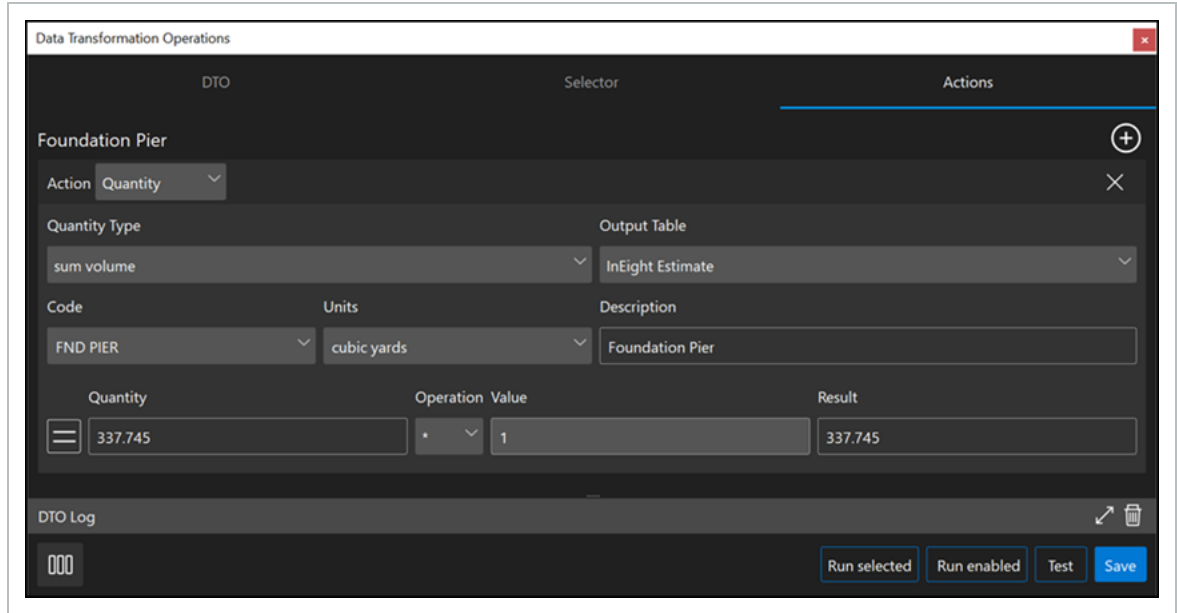

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.6.1.4 Quantities by tag

You can add a DTO to find specific model object to sum up the quantities and then utilize the Quantity action type to sum

up the quantities using a tag.

Add a DTO, and then name it **Foundation Pier**.

In the **Selector** tab create the following rule criteria:

Rule Type	Tag
Tag / OP Name	02 - Construction Levels
Operator	=
Value	G-Foundations
Exclude	children

Use the **and/or** row toggle at the top left to select **and**.

Click the **Add row** icon on the bottom left, and then add the following criteria:


Rule Type	Tag
Tag / OP Name	80 - Construction Levels
Operator	=
Value	Drilled Pier
Exclude	children

In the **Actions** tab use the following criteria:

Action	Quantity
Quantity Type	sum property
Tag	IN8_Area (sf)
Code	FND PEIR
Description	Foundation Pier

Click the **Equals** icon to see your quantities. You can also use the Operation and Value fields to adjust the quantities,

and then click the **Equals** icon to see updated quantities.

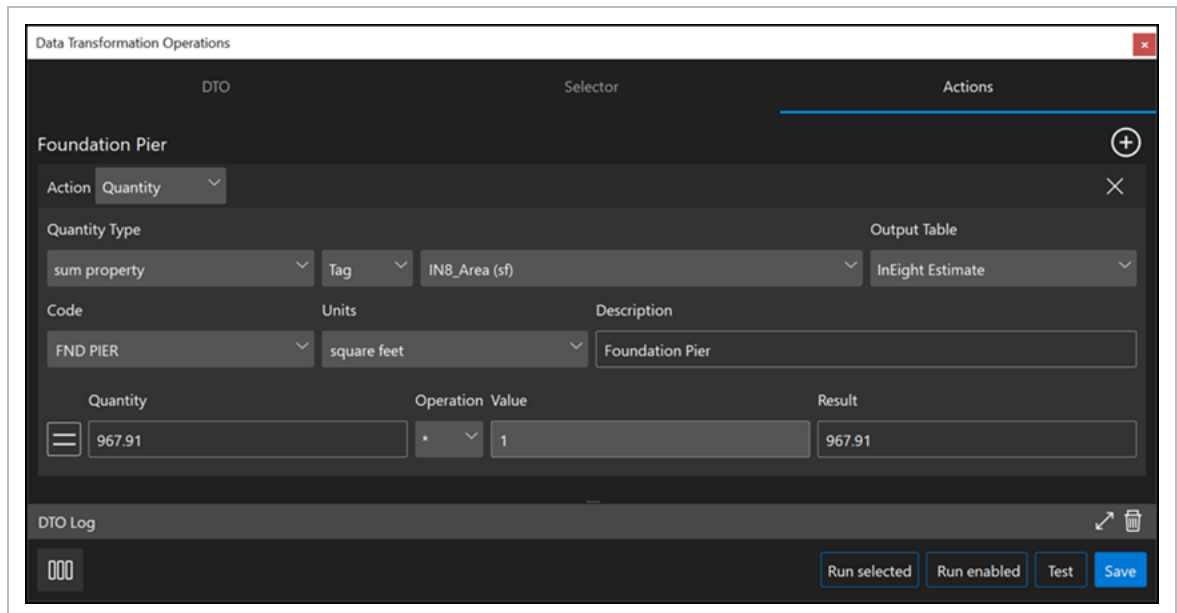


Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

1.6.1.5 Access quantities via Excel

Model has a plugin for Microsoft Excel to access model quantities. To download the Excel Plugin Installer go to

[InEight Downloads.](#)

After you install the plugin, the InEight menu will show in the top menu ribbon of Excel.

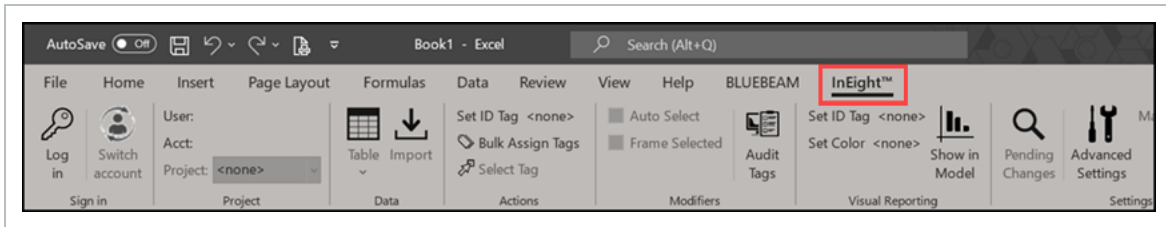


Model and Excel interact with each other without the need to have the Excel application open. However, the data created


using quantity DTOs uses tables. You must be logged in to Model via Excel to access the table data.

When you click on the InEight tab in Excel, you can log in using the same credentials you use for Model.

Click Table-> admin-> config-> DTO-> DTO Estimate Record-> **Query All**.

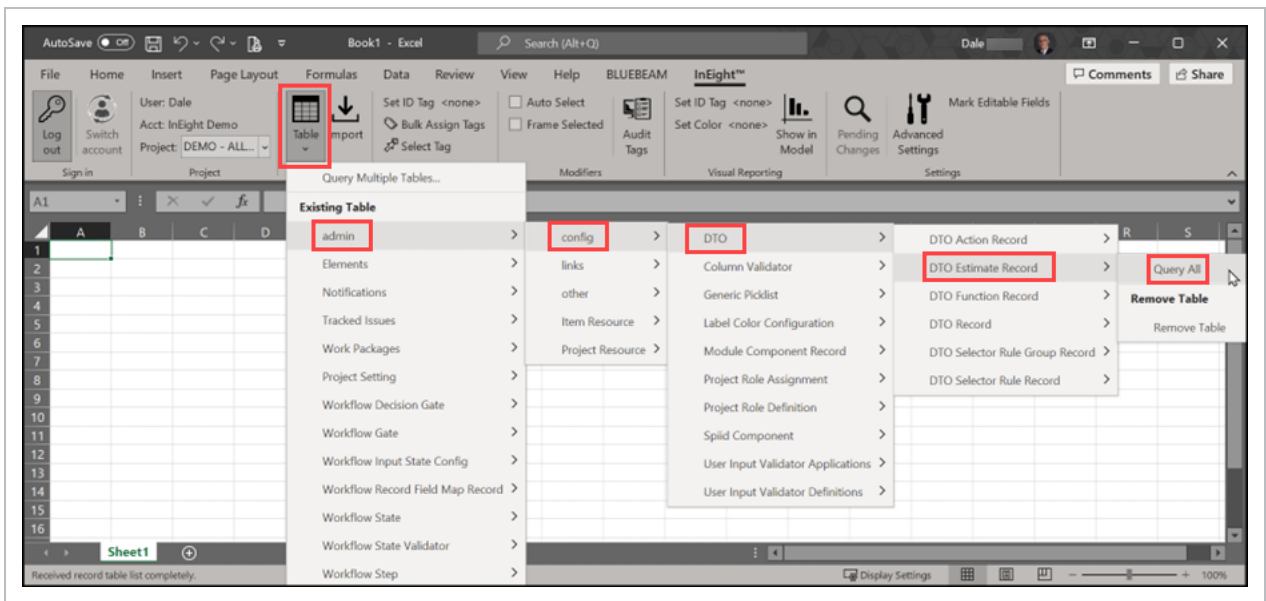

The results of the Quantity DTOs executed in Model will show.

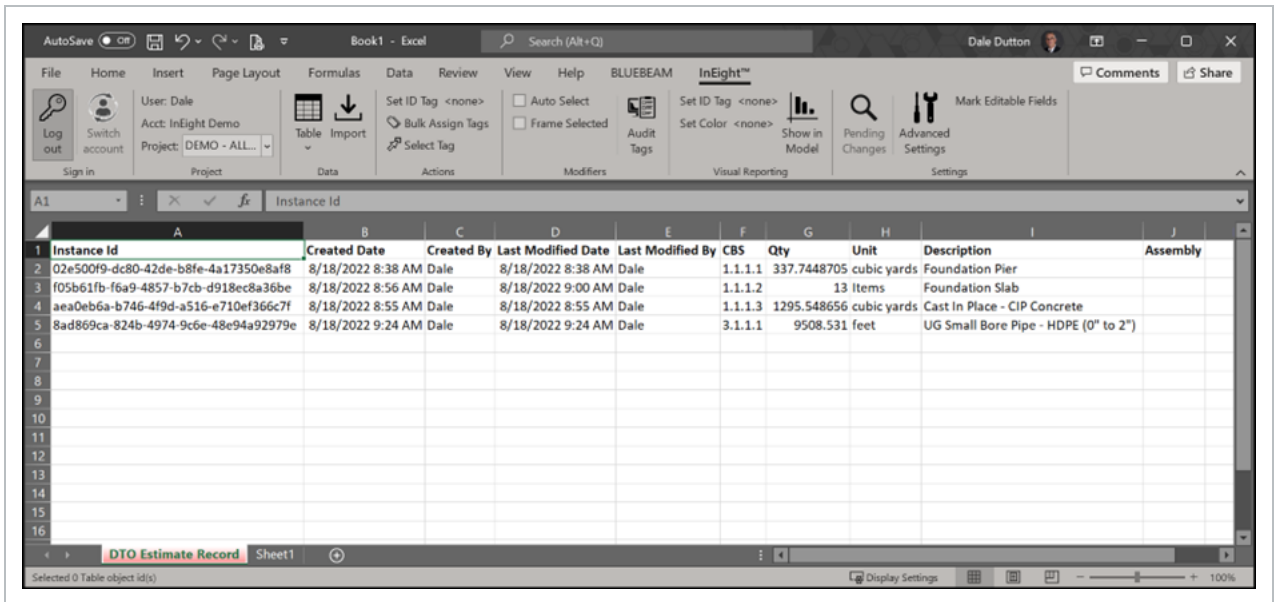

1.7 VALIDATE MODEL DATA

Data Transformation Operations (DTOs) provide flexible and repeatable processes to validate model data. In the following examples you will see how you can find model objects that do not have certain values or validate specific model data format. This information can be used to communicate any model data that does not meet project requirements.

1.7.1 Validate model data is compliant

You can validate that specific model data meets your project requirements.

1.7.1.1 Validate specific model data exists

You can find model objects that do not have certain values, such as length.

Add a new DTO, and then name it **W Shapes have no LENGTH**

In the **Selector** tab use the following criteria:


Rule Type	Tag
Tag / OP Name	Revit_Family_Type
Operator	contains

Value W Shape

Use the **and/or** row toggle on the top left and change it to **and**.


Click the **Add row** icon under the row, and then use the following criteria:

Rule Type	Tag
Tag / OP Name	Length
Operator	is null

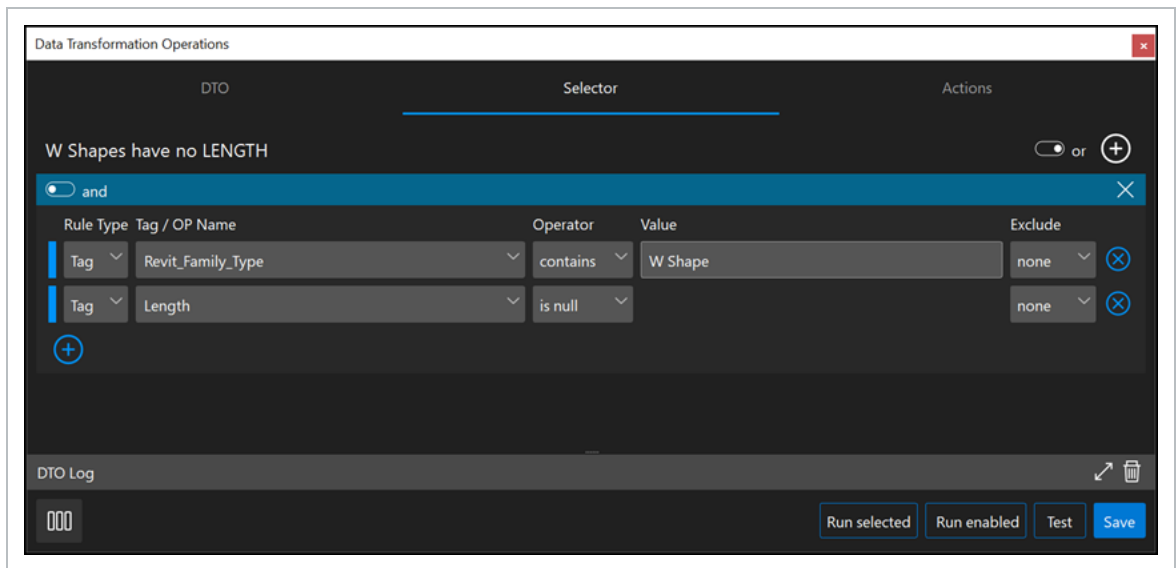

Click the **Actions** tab, and then use the following criteria:

Action	Tag
Tag Name	99 - Validation Issue
Tag Value	No Length

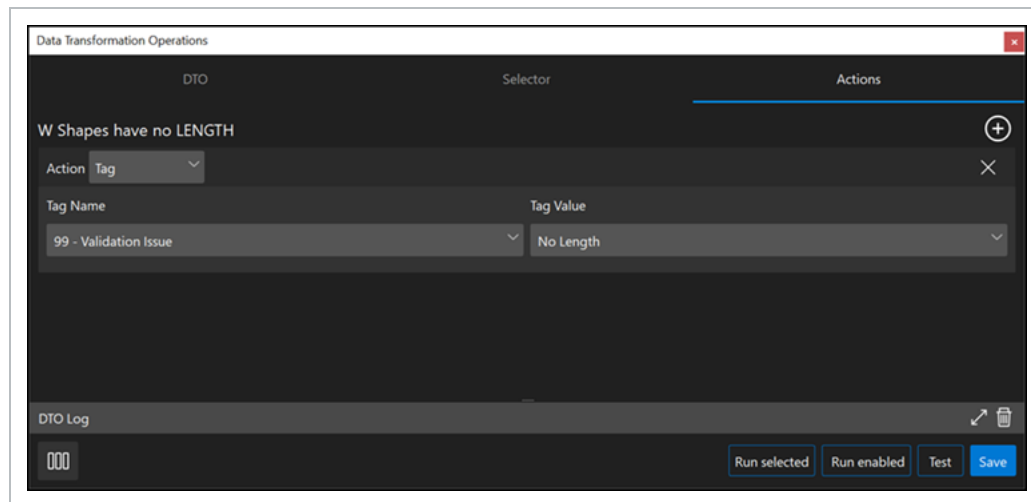

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.


1.7.1.2 Validate model data for specific format

You can validate that your Pipeline data has the system prefix followed by a dash, such as AQ-0001065.

First add a DTO to tag to all relevant data as invalid, and then create another DTO to find validated data. The purpose is to place the invalid and valid tag values in the same tag name. When you use the same tag name, the invalid data will switch to validated because an object can only have one value in a tag name.


You must run both DTOs at the same time, and in the correct order in the list. First run invalid data, and then validated data.

Add a new DTO group, and then name it **Validation**. Add a new DTO in the group for all Pipeline data that will be tagged as invalid data, and then name it **Pipeline – Invalid**.

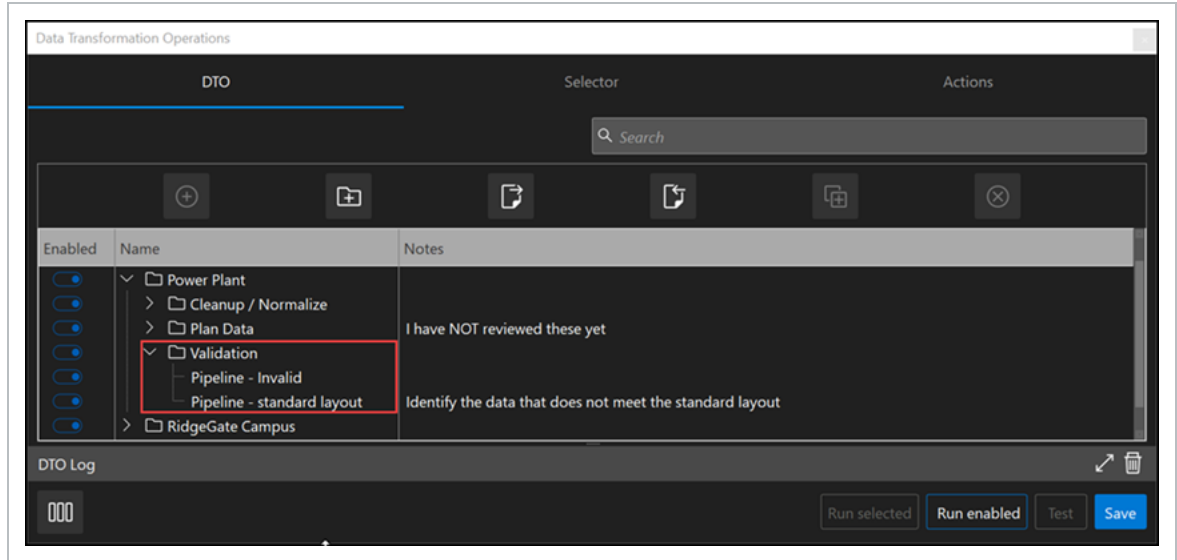


In the **Selector** tab create the following criteria:

Rule Type	Tag
Tag / OP Name	Pipeline
Operator	not null

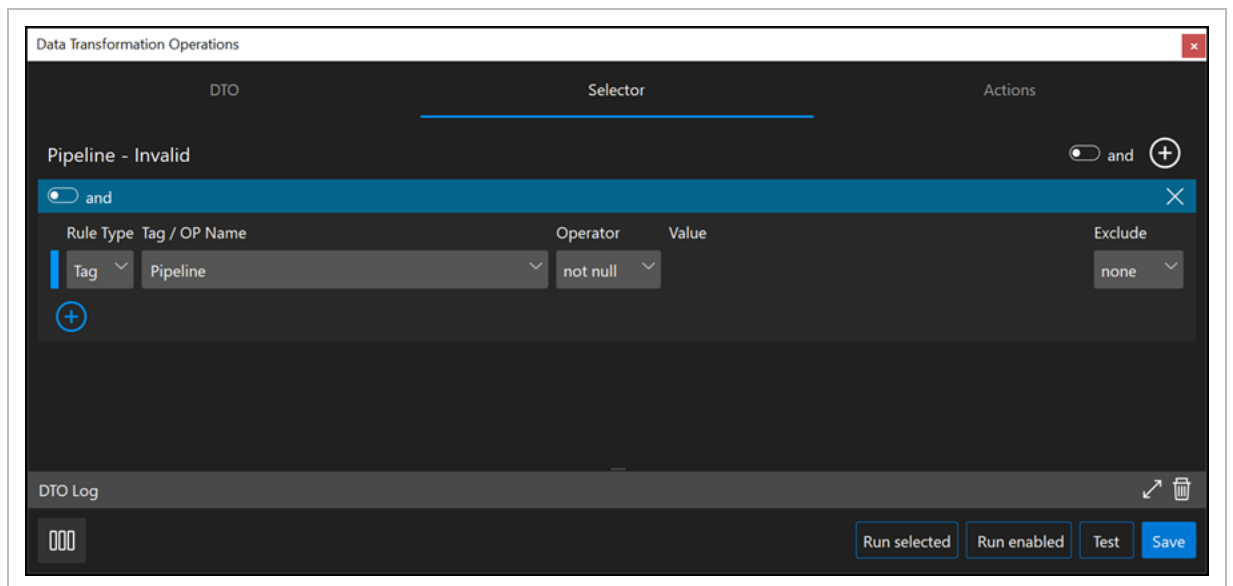

In the **Actions** tab use the following criteria:

Action	Tag
Tag Name	IN8_Validation - PowerPlant
Tag Value	Pipeline - Invalid

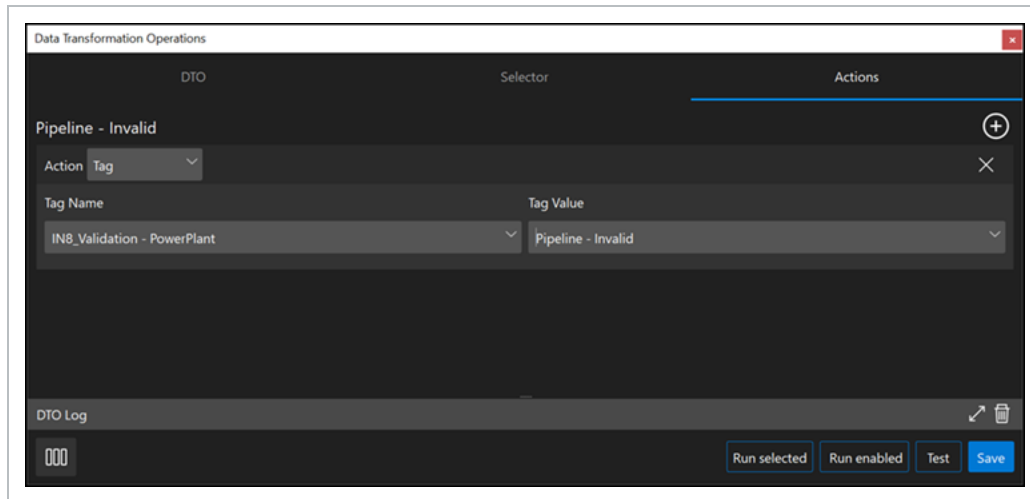

Click the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

Add another DTO in the group for all Pipeline data that will be tagged as valid data, and then name the new DTO


Pipeline – standard layout.

In the **Selector** tab create rule criteria to find all piping systems followed by a dash.

Rule Type	Tag
Tag / OP Name	Pipeline
Operator	contains
Value	List AQ- through WW-
Exclude	none


Use the **and/or** row toggle on the top left to select **or**.

Click the **Add row** icon on the bottom left to add new rows, and then include all your values.

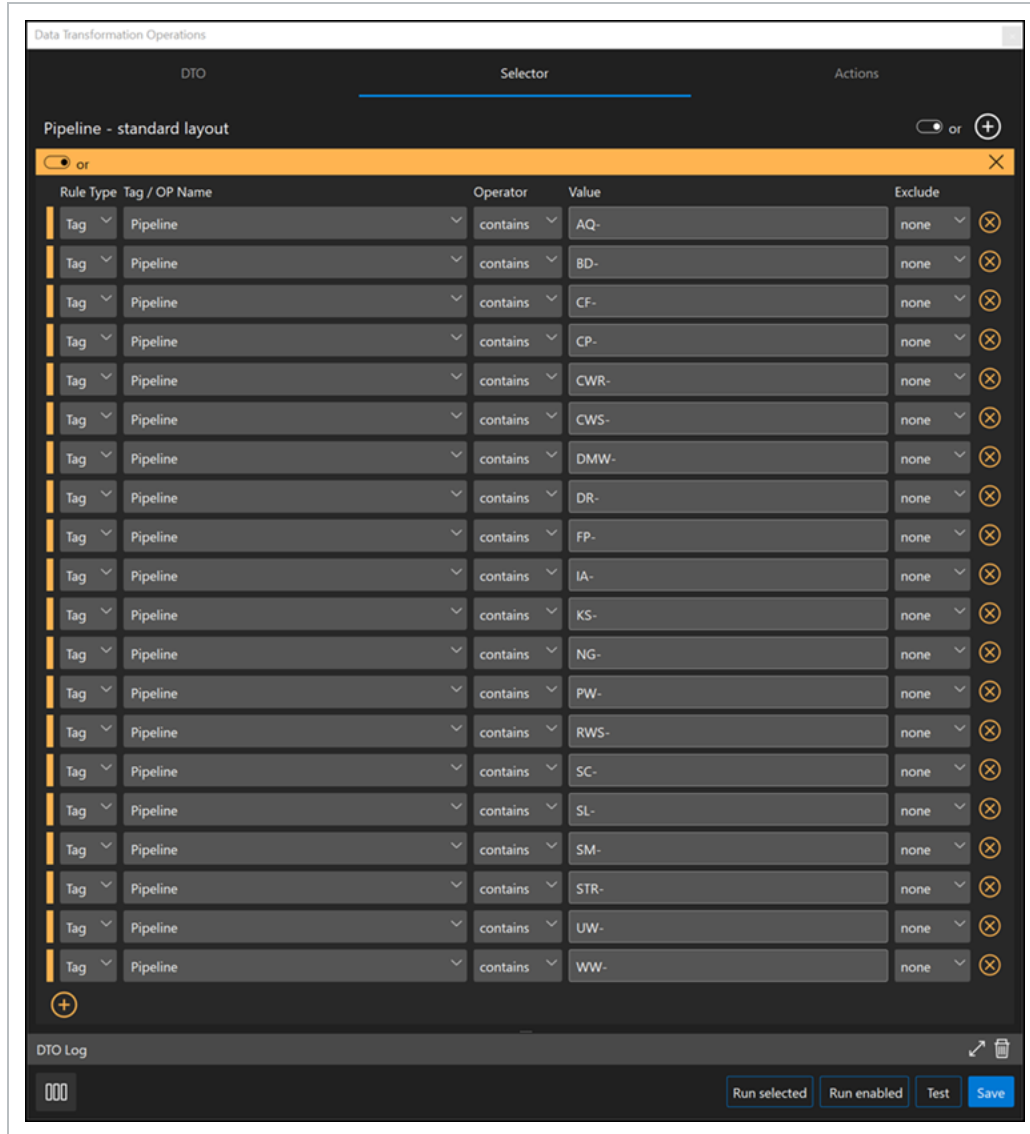

In the **Actions** tab use the following criteria:

Action	Tag
Tag Name	Tag = IN8_Validation
Tag Value	Pipeline - Validated

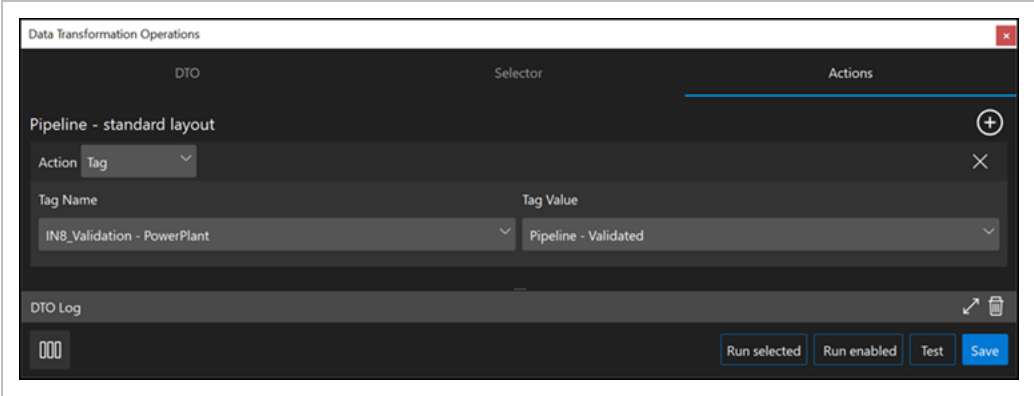

Click on the **Run selected** button to execute the DTO and create the new tag according to your selection criteria.

This page intentionally left blank.



LESSON 2 – STYLES

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Create and manage styles
- Create and manage style sets
- Apply styles to tags
- Assign styles using Excel

Topics in this Lesson

2.1 STYLING OVERVIEW

Materials and colors are not fixed, or assigned universally to all model objects, like they are in other modeling environments. You have the flexibility to view the model in the way that makes sense for yourself. In Model, you need to remember:


- Styles are the materials or colors in Model
- Style Sets are collections of assigned Styles

Styles allow you to switch between Style Sets to change the way you visualize the model. For example, creating a Style Set that emphasizes a system, such as HVAC, or a Style Set that has the colors to conform to an owner's requirements. With these visually highlighted, it helps to identify those areas which you want to focus on when looking at the model.


The Styling panel allows the manipulation of the appearance (surface and line, color and transparency) of geometry. There are two tabs in the Style panel: Styles and Style Sets.

2.1.1 Launch Styling Menu

To access the Styling panel, select **View > Styling**.

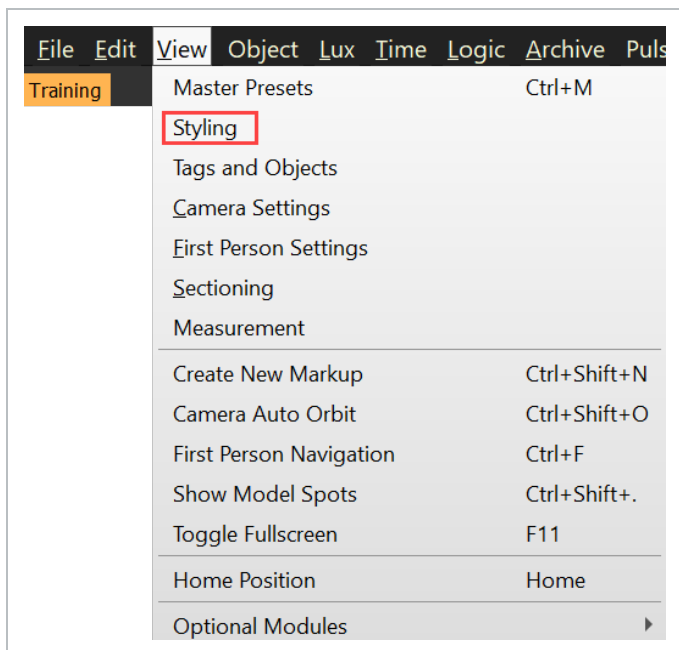


- This will open the Styling window.

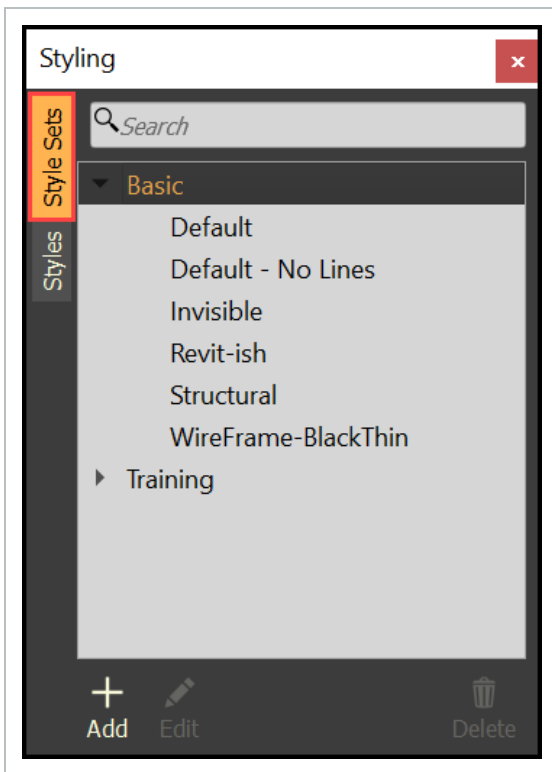

2.2 CREATE AND MANAGE STYLE SETS


There are predefined style sets grouped under Basic when a project is created. New style sets can be created to represent real-world material characters such as glass and steel, or simple colors, to represent different disciplines or systems.

NOTE The predefined style sets cannot be edited. They can be duplicated to create new, custom style sets.

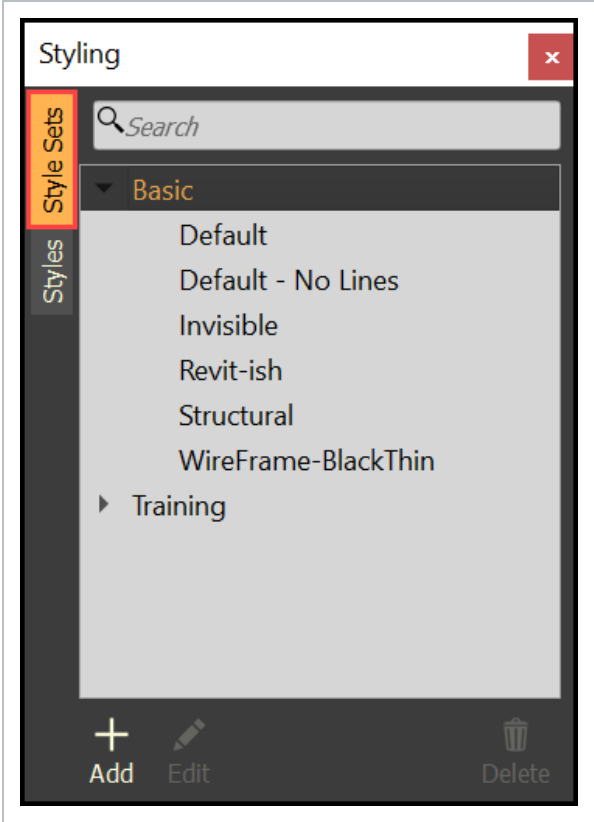


2.2 Step by Step 1 — Create a Style Set

1. Select **Add**.

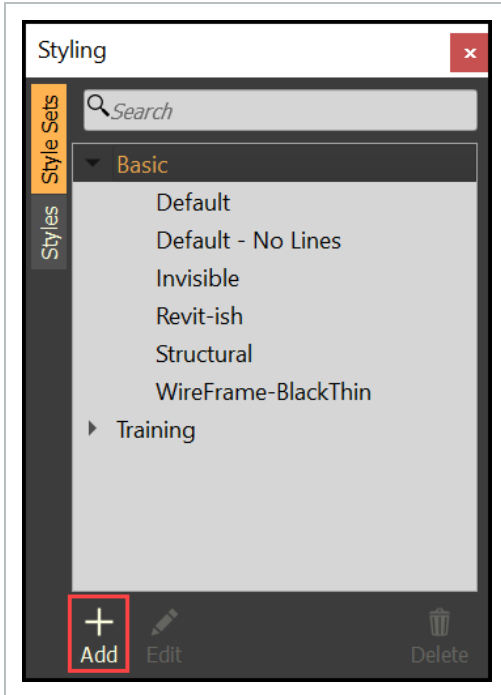


- The New Style Set dialog box will open

2. Type in a desired name for your new style set (i.e. Major Systems).

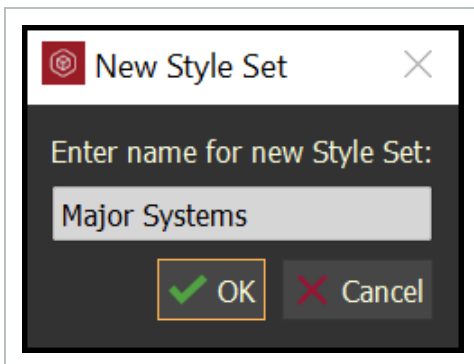

3. Click OK.

- The new style set will be grouped under the project name

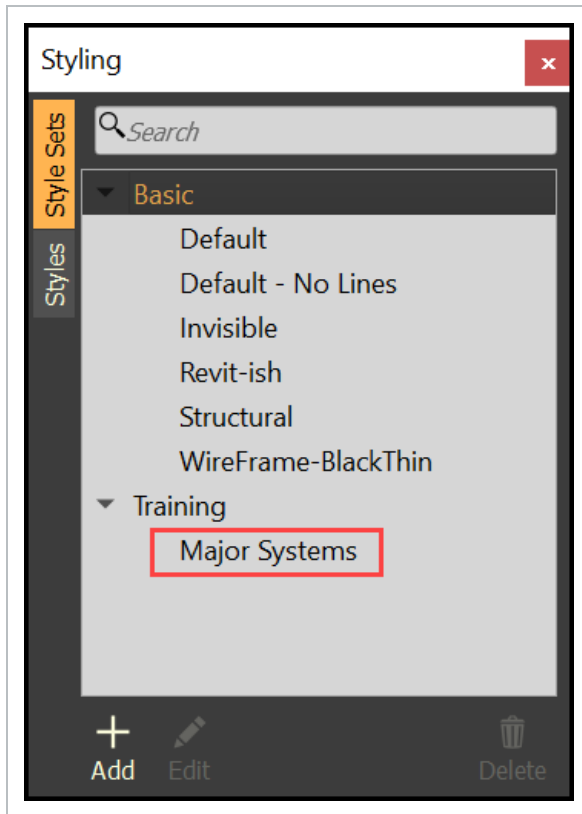
**4. Select the style set to make it active.**

- Any styles applied will be a part of the active style set

2.2 Step by Step 2 — Edit a Style Set


Once one or more styles have been applied to a style set, the style set can be managed.

1. Select a style set.

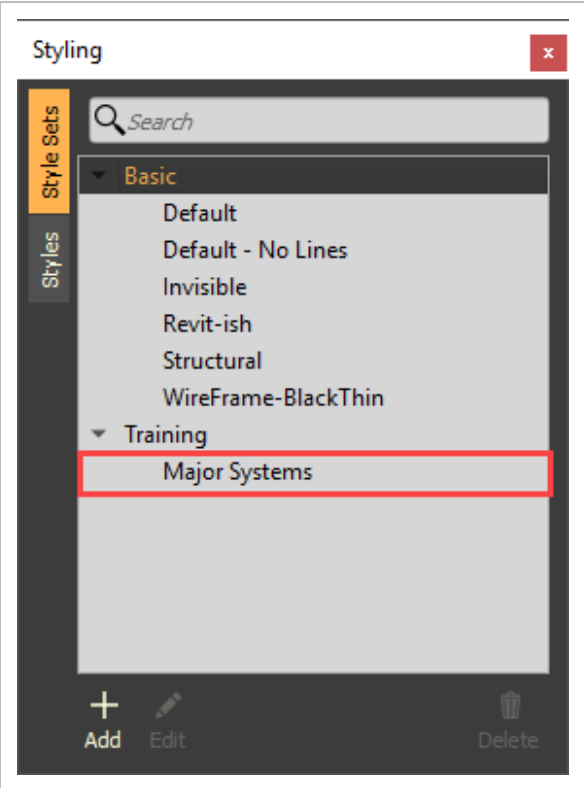

2. Select **Edit**.

- The Edit Style Set dialog box will open

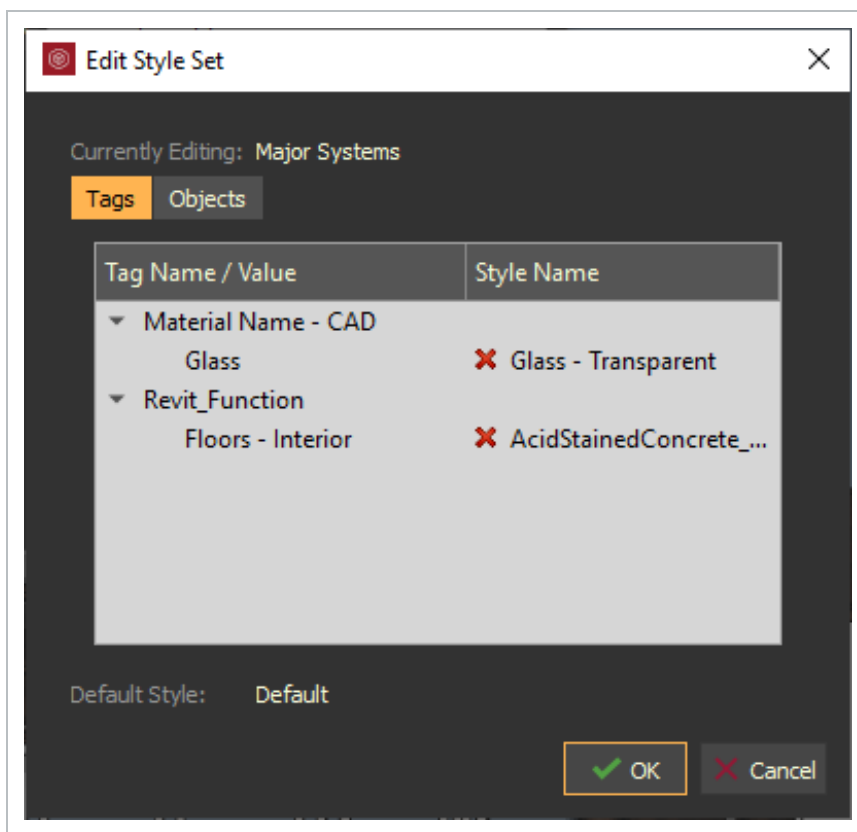


- To remove a style, click the **red X**.
- To reorder styles, **drag a style** up or down within the list.

NOTE When multiple style assignments apply to an object or tag, those higher in the list take precedence.

3. When finished, select **OK**.

2.2 Step by Step 3 — Delete a Style Set

1. Select a style set, then click the **Delete** icon.
 - Or, right click on the style set, then select **Delete Selected Style Set**

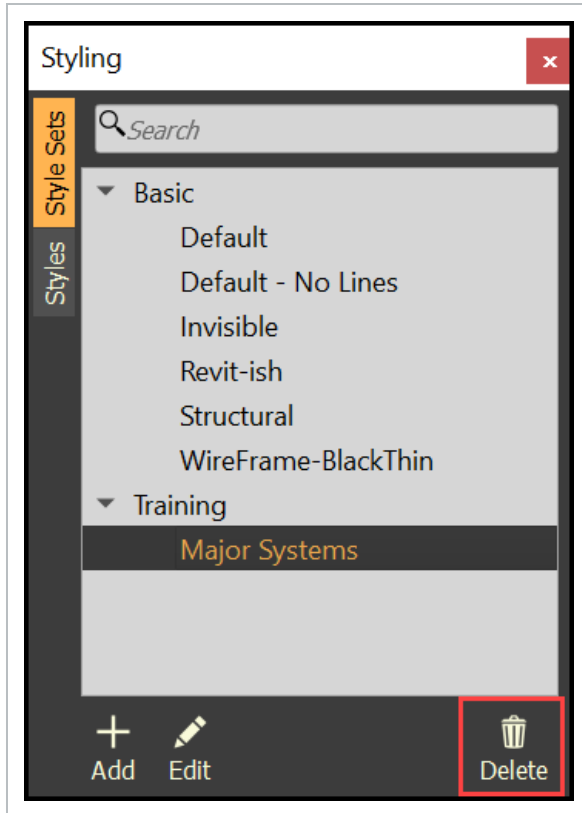


2.3 CREATE AND EDIT STYLES


There are predefined styles, which cannot be modified, but can be duplicated to create a new style. All newly created styles will be grouped under the project name.

2.3 Step by Step 1 — Create a New Style

1. Select the **Styles** tab and then select **Add**.

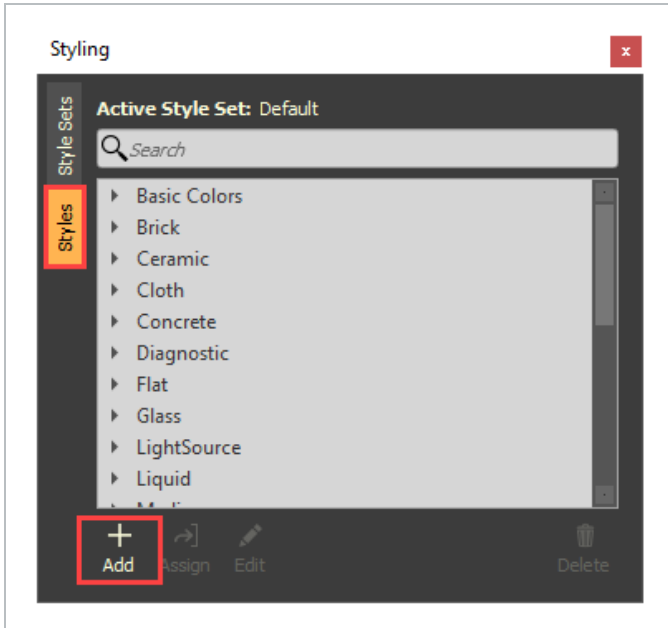


- The Edit Style window will open

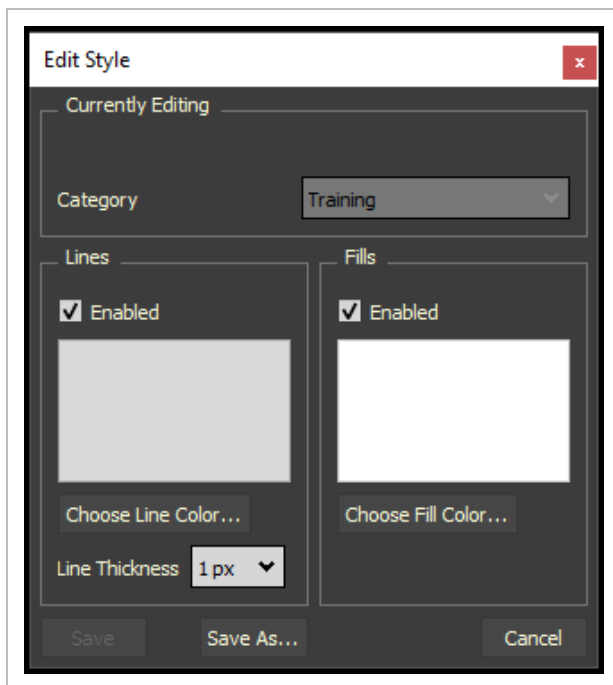


2. Click **Choose Line Color...**

- Or toggle the Enabled box to have no outline color

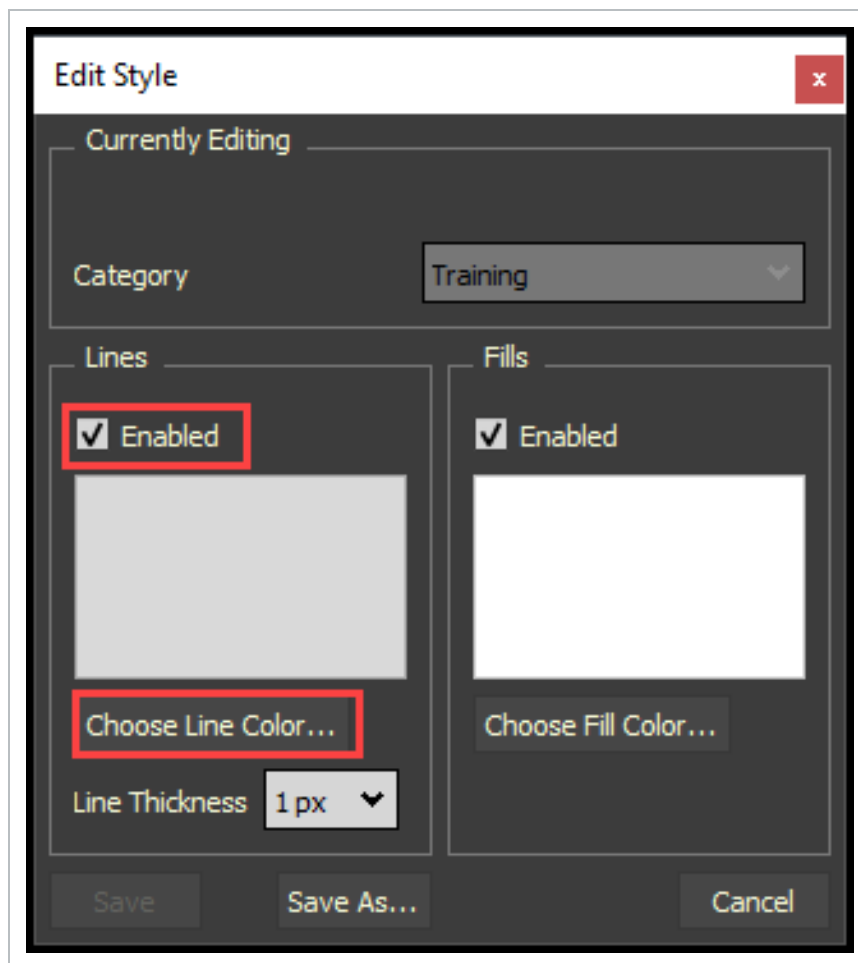


- The Select Color dialog box will open


3. Select your desired color and click **OK**.

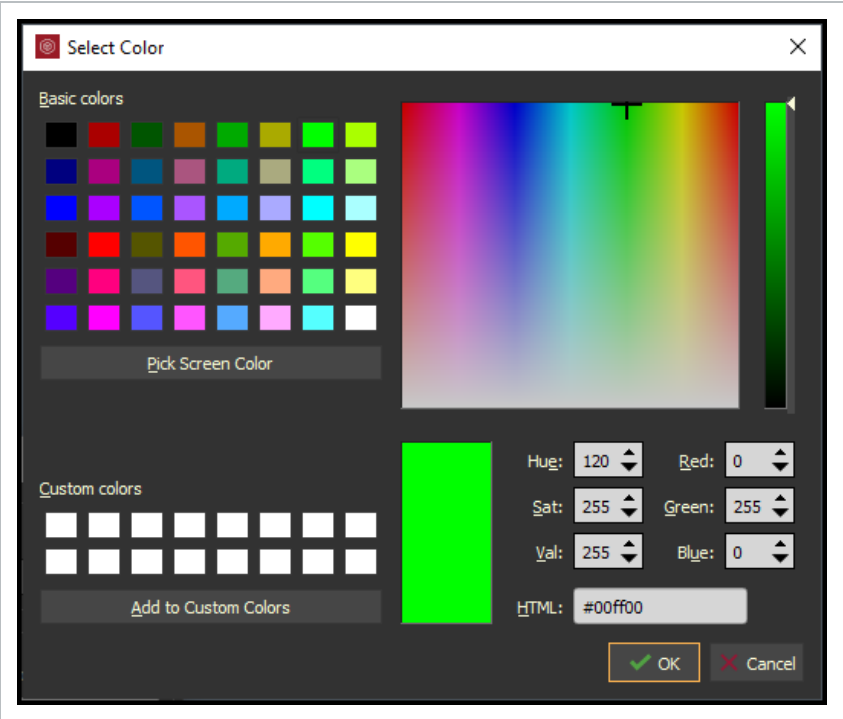

4. Change the line thickness as desired.

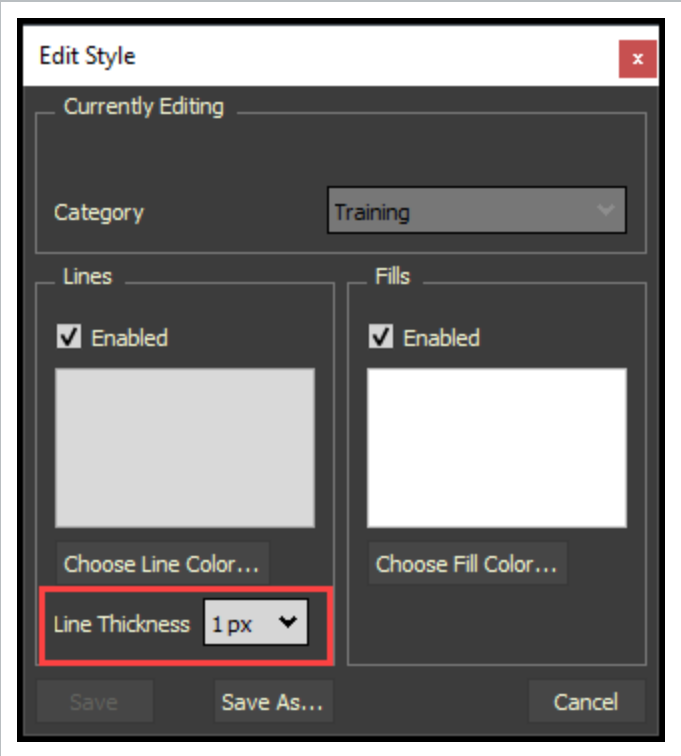


5. Click **Choose Line Color**.


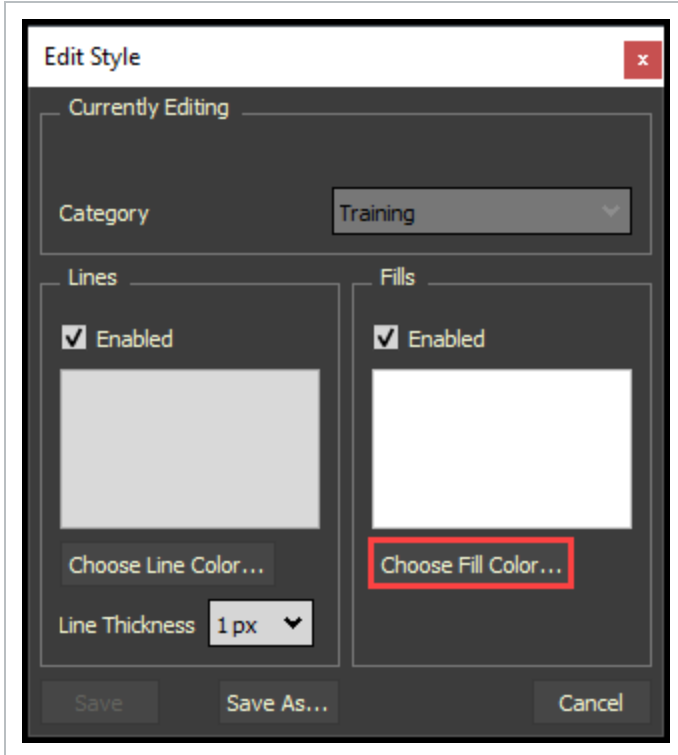


- The Select Fill Color dialog box will open


6. Select you desired color and set an opacity if desired, then click **OK**.

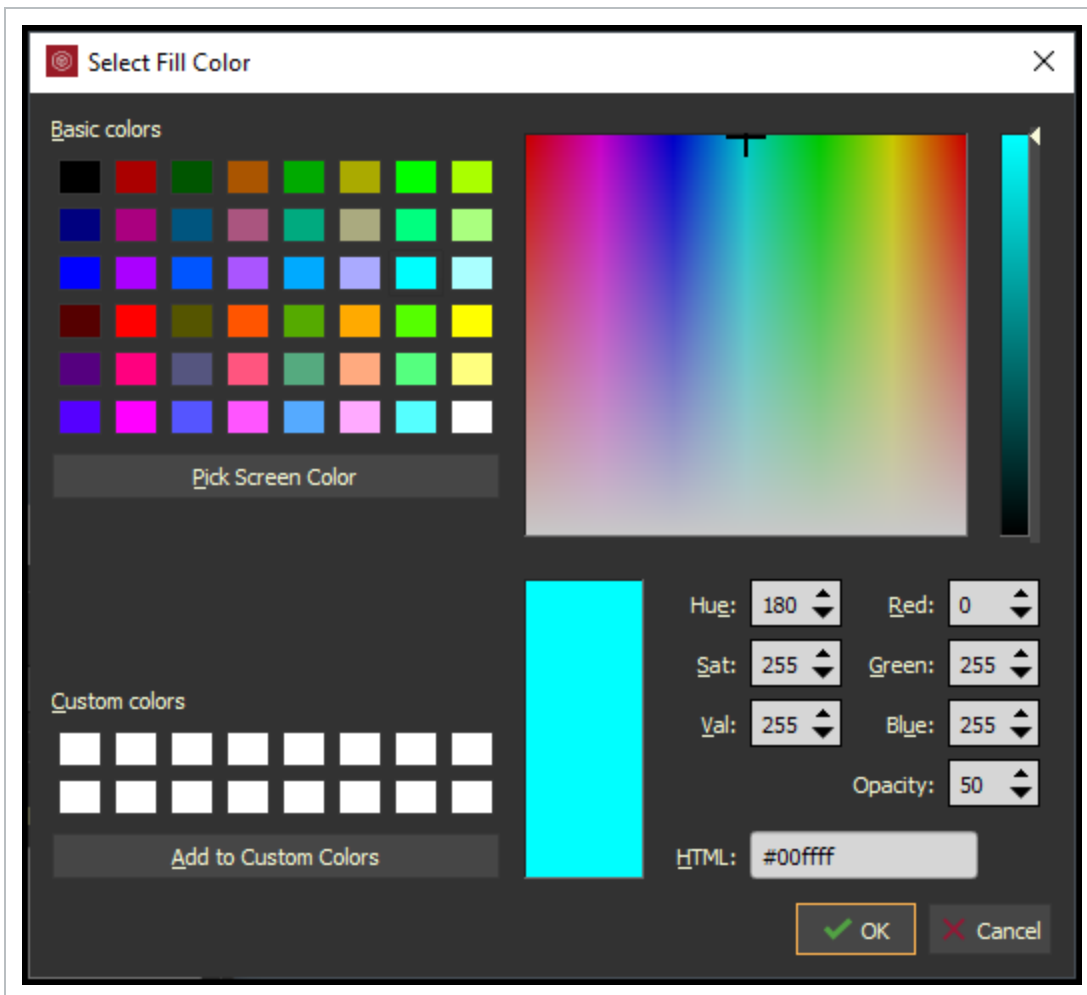

7. Select **Save As...** to save as a new style (i.e. Glass – Transparent).

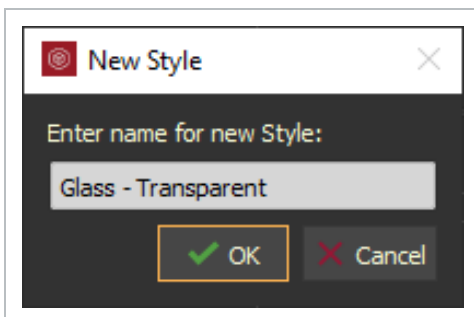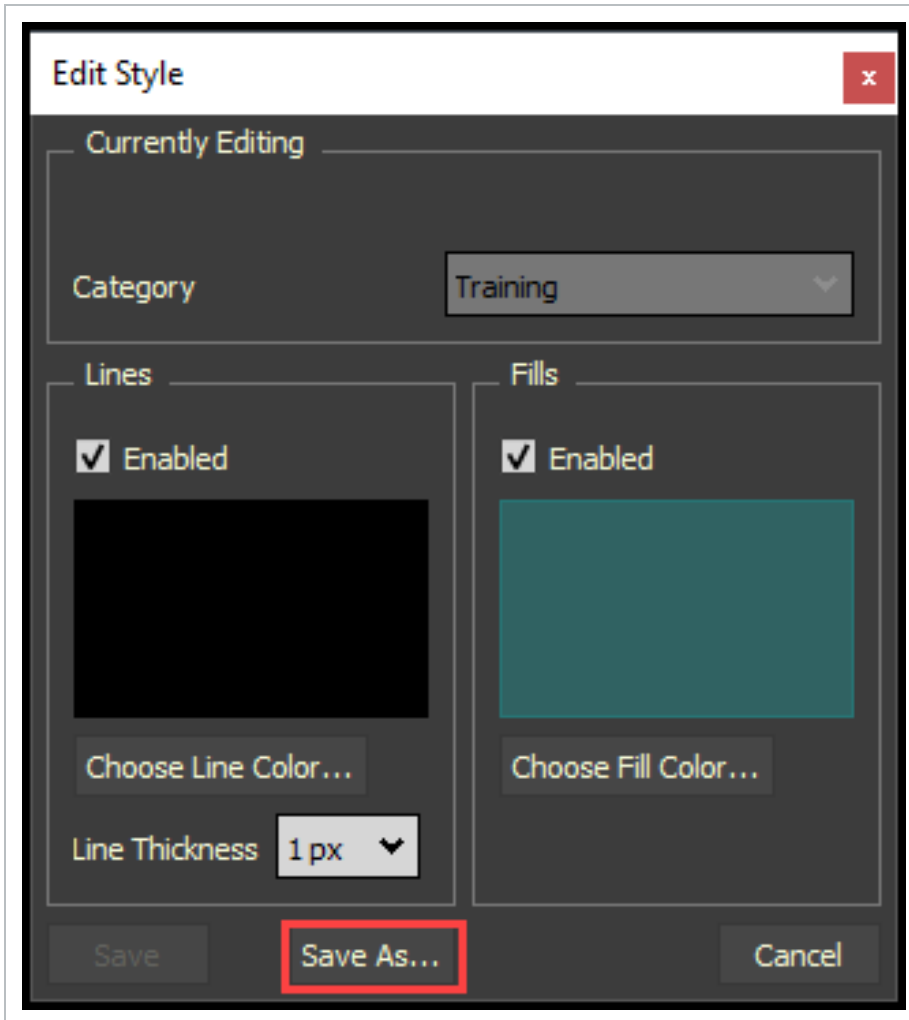


- The new styles will be grouped under the project name

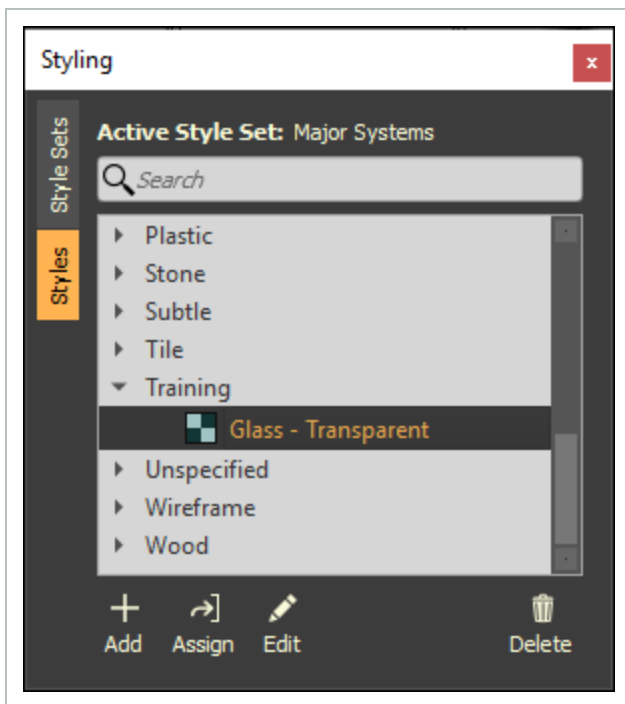


2.3 Step by Step 2 — Edit a Style

1. Select a Style Set, then click the **Edit** icon.

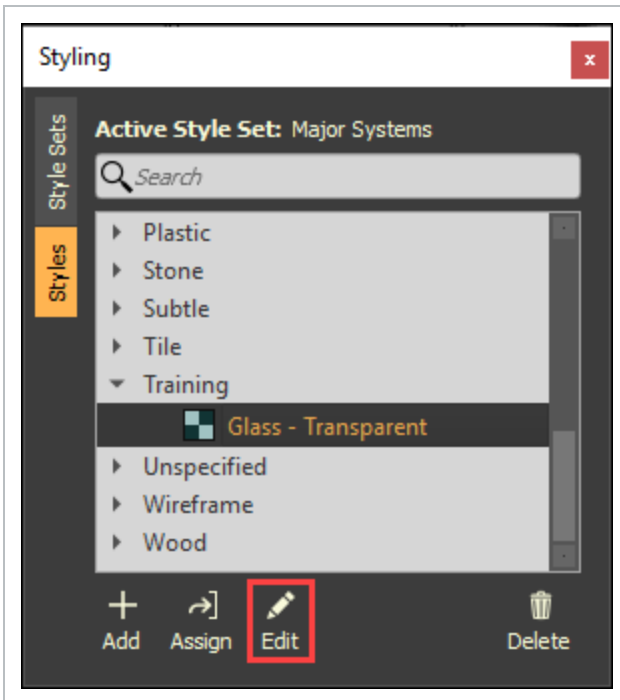

2.3 Step by Step 3 — Set a Style as a Default


1. Select a style, then right click and select **Make default for selected StyleSet**.

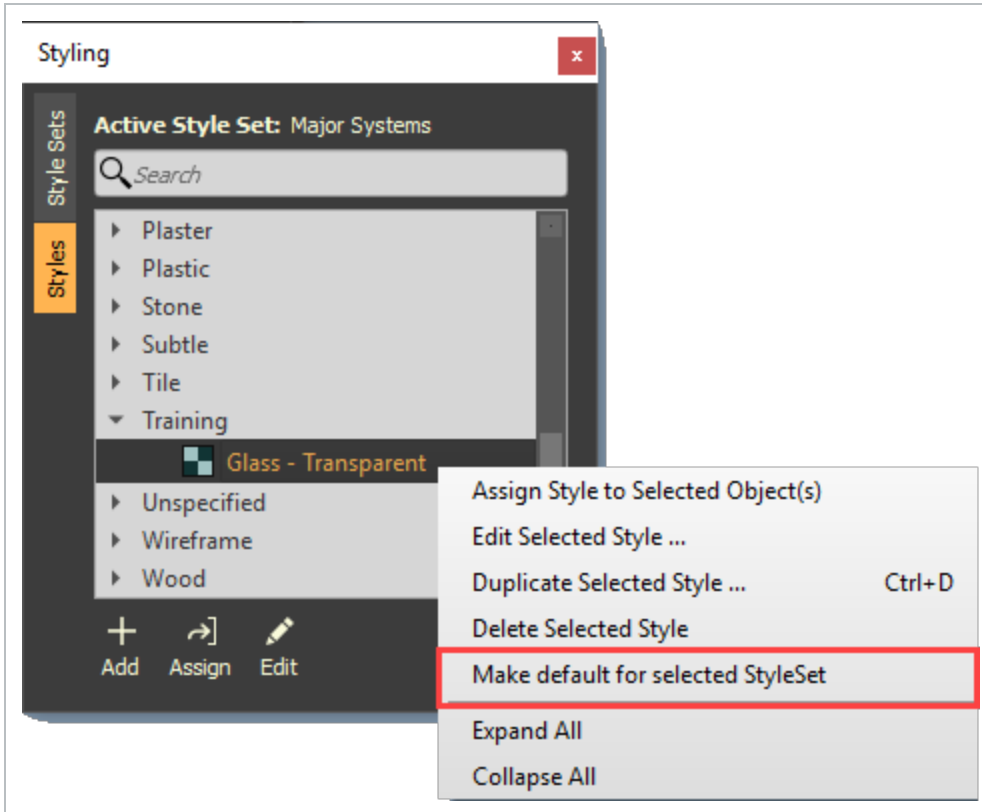**TIP**

Once Styles are assigned, then any style can be identified as the default (i.e. Transparency).


2.3 Step by Step 4 — Delete a Style

1. Select a style, then click the **Delete** icon.
 - Or, right click on the style set, then select **Delete Selected Style**

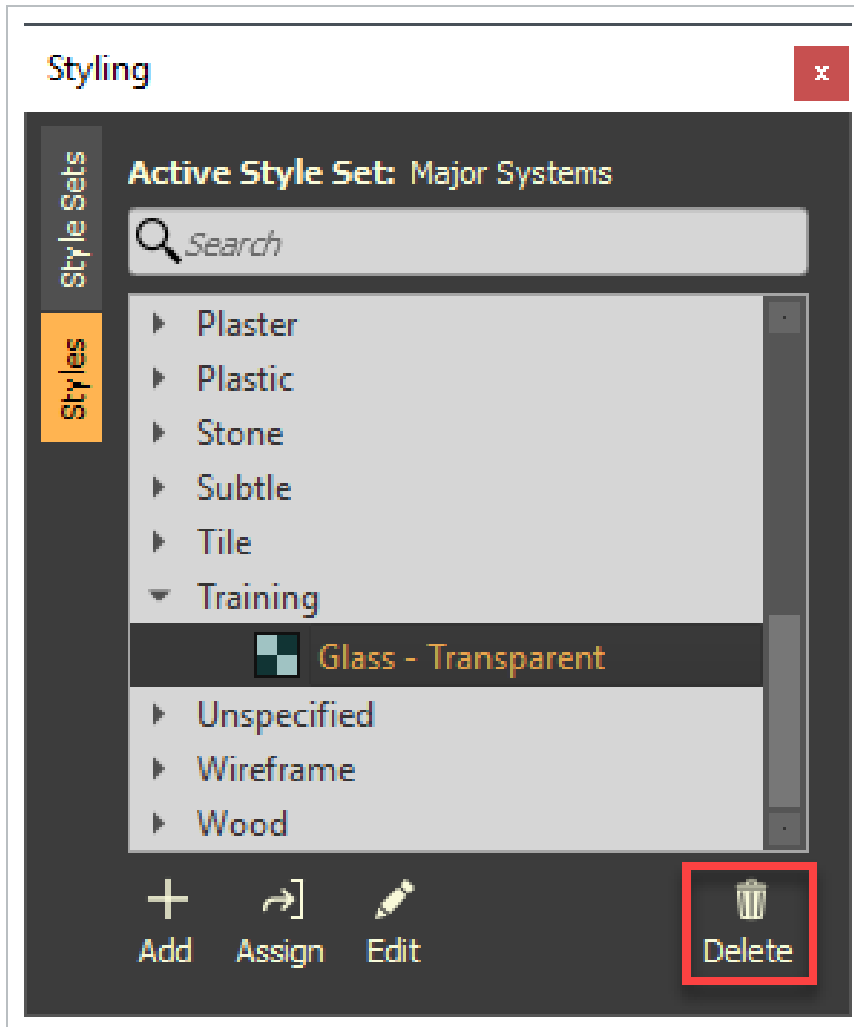

2.4 APPLY STYLES TO TAGS

Styles are appearance definitions. Assigning a style to a tag will change the appearance of model objects with that tag. When a Style Set is active, it will be denoted at the top of the Styling panel.

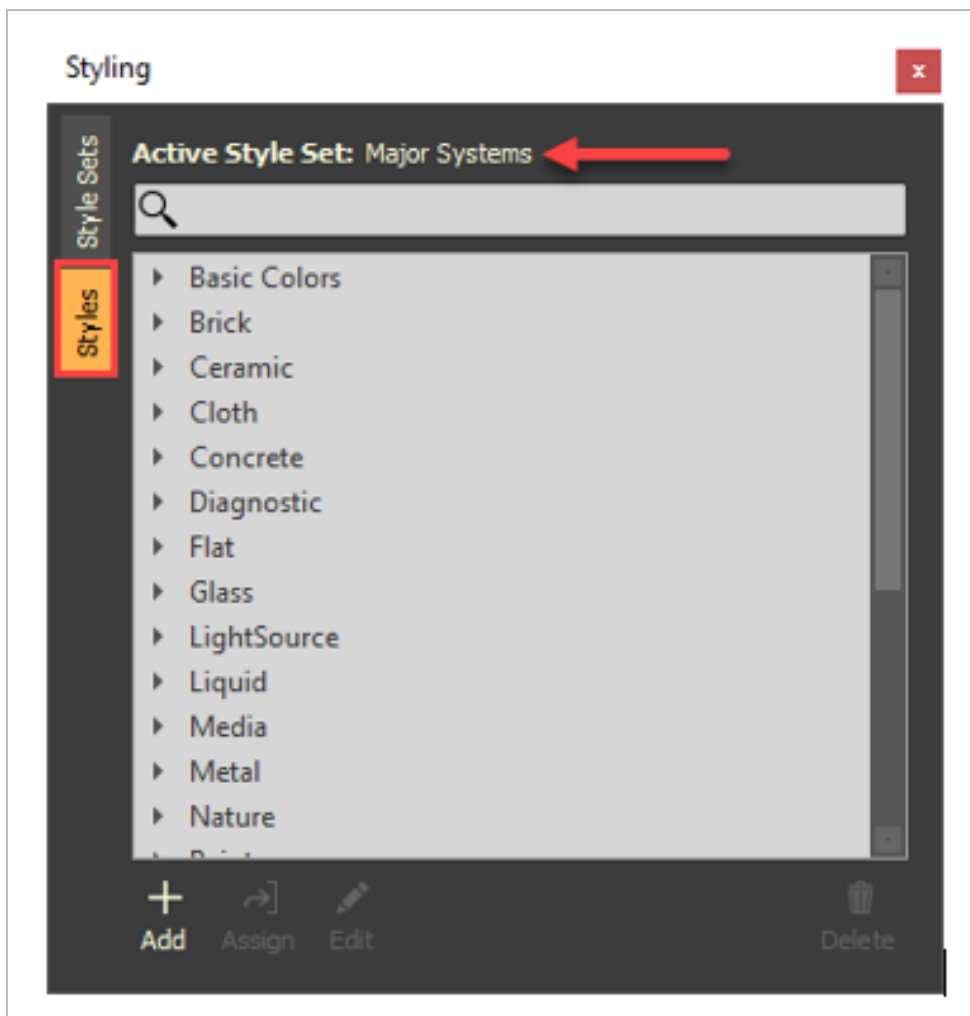**TIP**


Styles can be applied to objects or tags; however, it is always preferable to use tags whenever possible as this provides greater flexibility.

NOTE


If a style was applied to an object and that object was removed and redrawn within the design software, then that object will no longer be assigned the style.

2.4 Step by Step 1 — Apply a Style to a Tag

1. Select a **tag** withing the Tags panel.
 - This will select model objects
2. Withing the Styles tab, select a **style**, then click **Assign**.

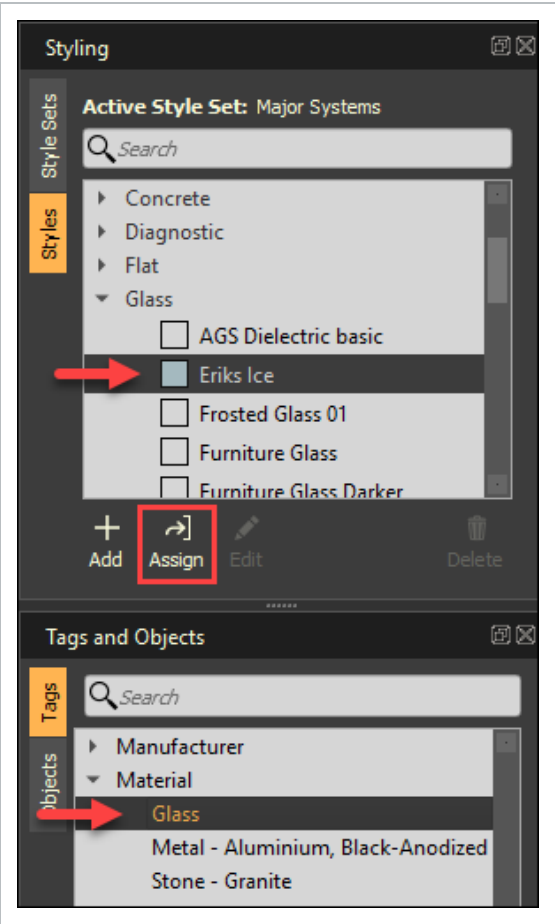

- Or, drag and drop a style on top of a tag

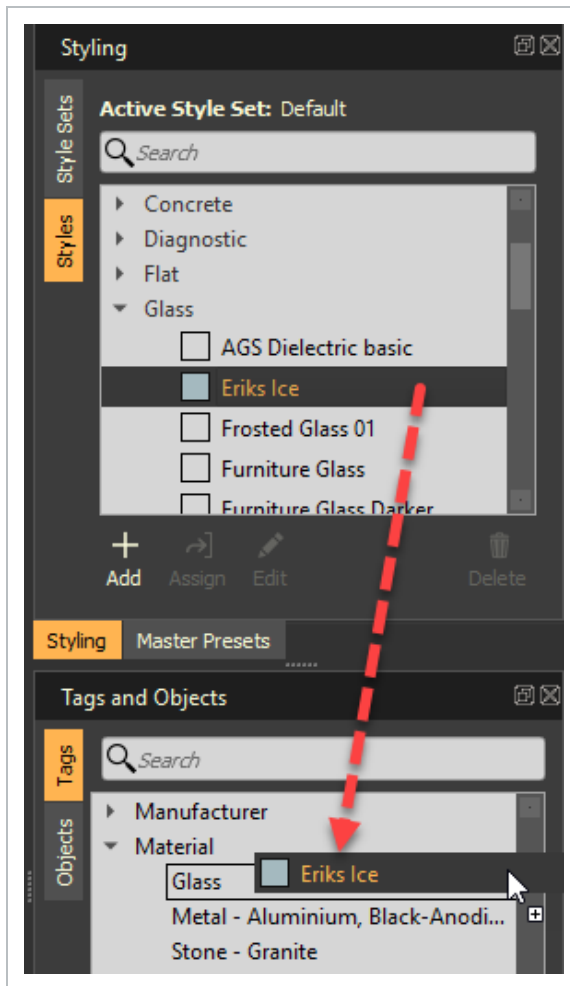


- This method will not select model objects


2.5 ASSIGN STYLES USING EXCEL

Before beginning, ensure you have only one instance of InEight Model and one instance of Excel open. Matching unique tag category and values need to be in the model and in Excel.

Within the Tags and Objects menu, identify a Category Name and its values. For this example, the Tag Category will be Material and the Values are also shown as Glass, Metal and Stone.

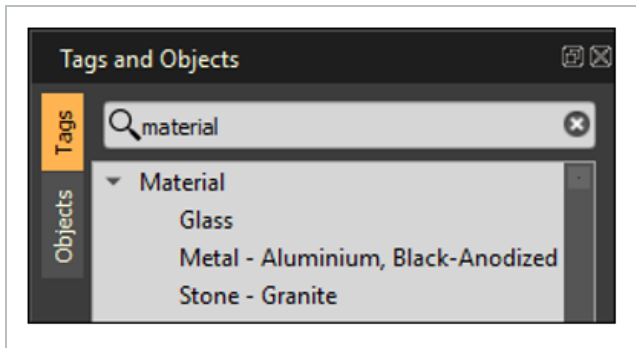


In Excel, type the tag and object names into the first cell on the Excel sheet.

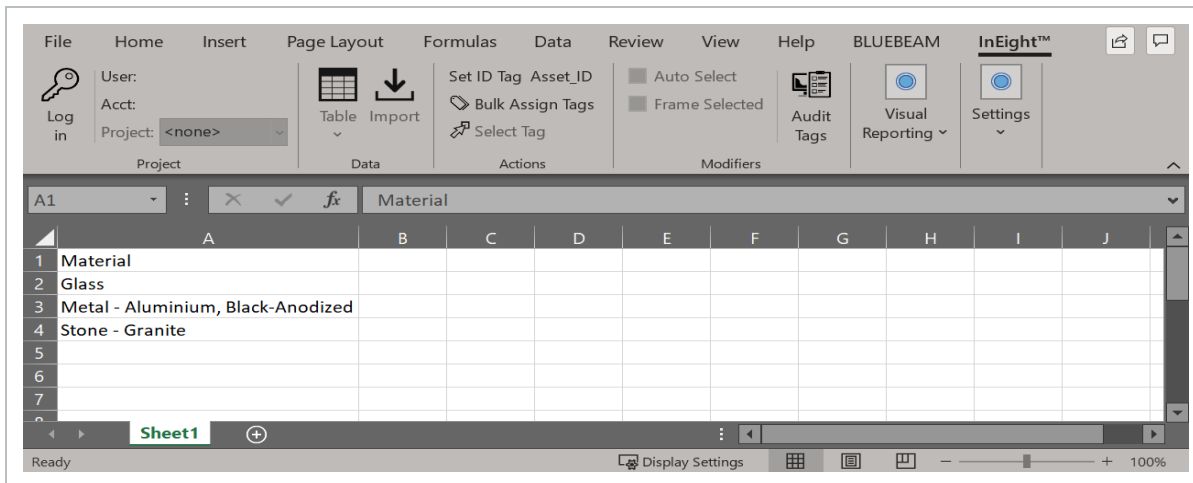


Now that there is a unique tag category with values within excel that match the model, a style set can be pushed from excel into the model.

2.5 Step by Step 1 — Color Excel Cells

1. Add color to the cells.

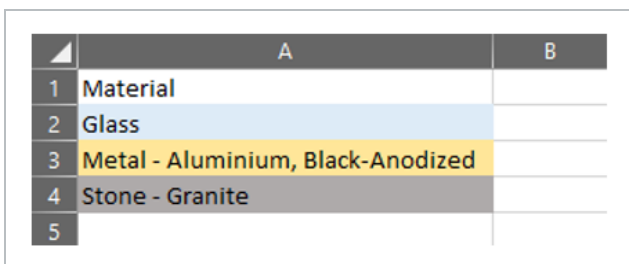


2. Within the Excel menu bar, select the **InEight** tab.

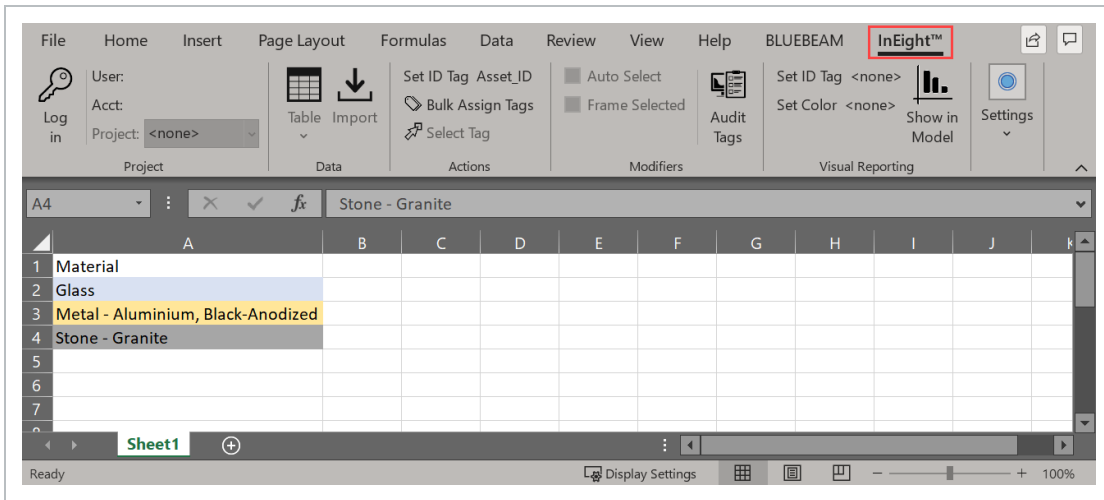


3. Within the Visual Reporting section:


- **Set ID Tag:** click on a cell within the Tag Category, then select **Set ID Tag**.
- **Set Color:** click on a cell that has the color identified, then select **Set Color**.

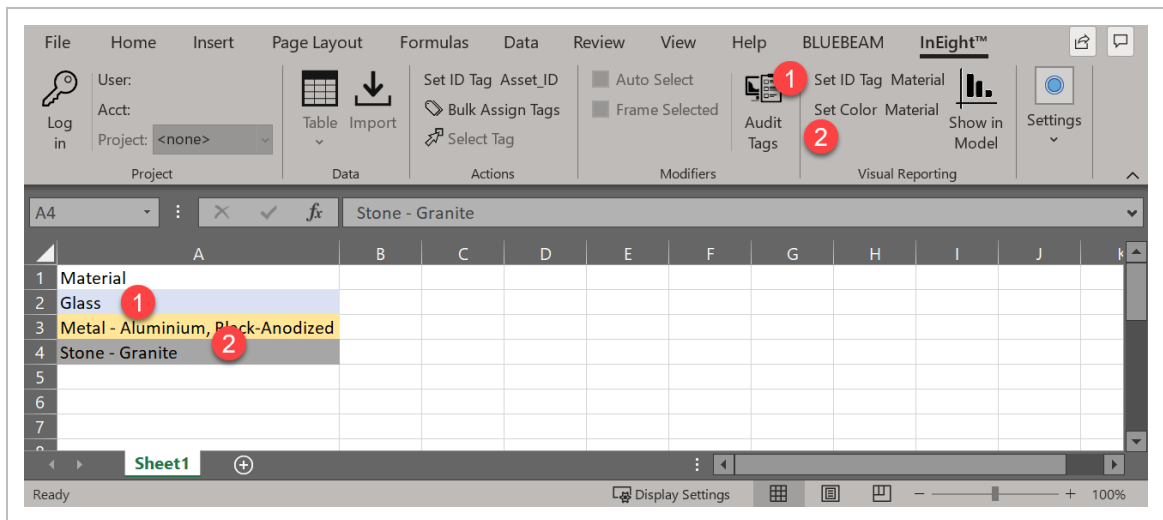

4. In this case, the Set ID Tag and Set Color happen to be in the same column of Material. To push these colors into the model and create a new style set, select **Show in Model**.

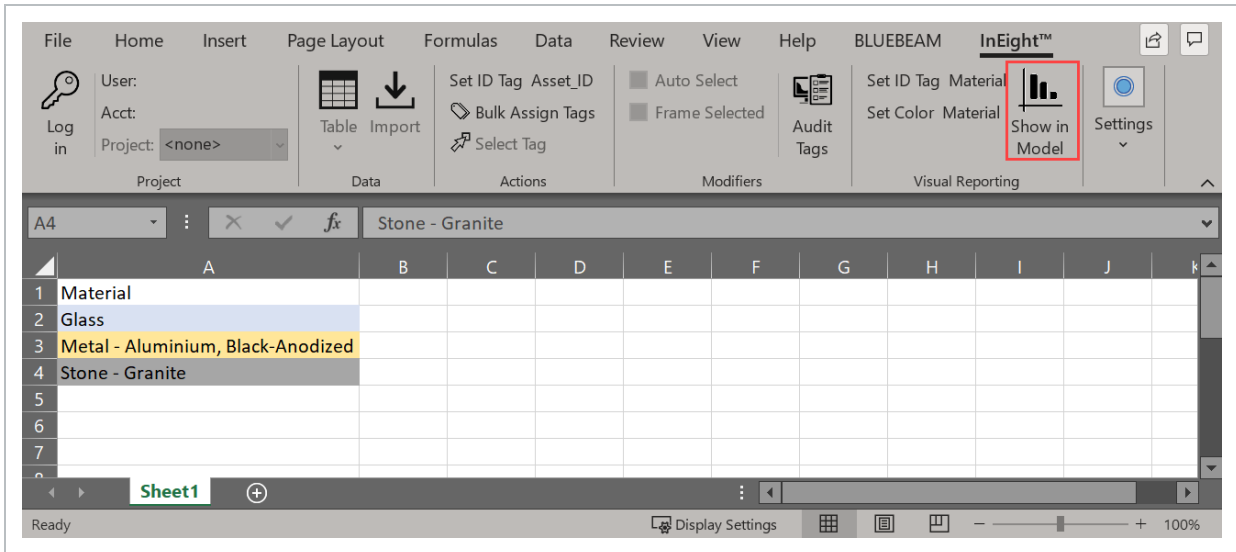


- Your project in Model will reflect the colors selected for those objects. Once Show in Model is executed, a new style set is created within the Styles Sets tab under Visual Reports

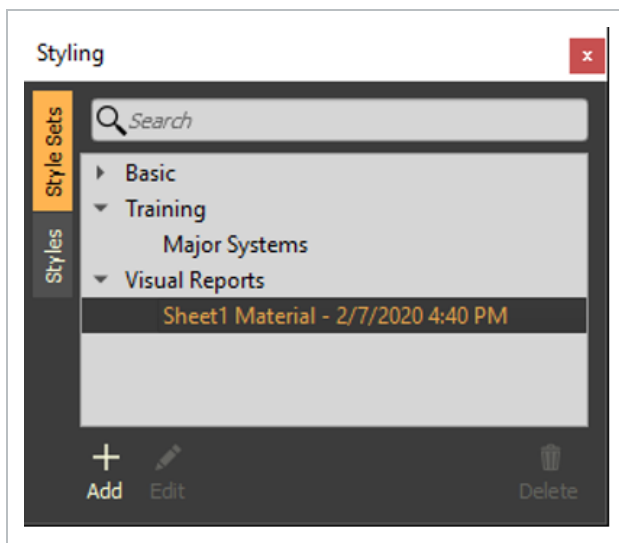

NOTE This style will not be saved with the project in this state.

5. To save this style set with the project, right click on the style set and select **Duplicate Selected Style Set**.

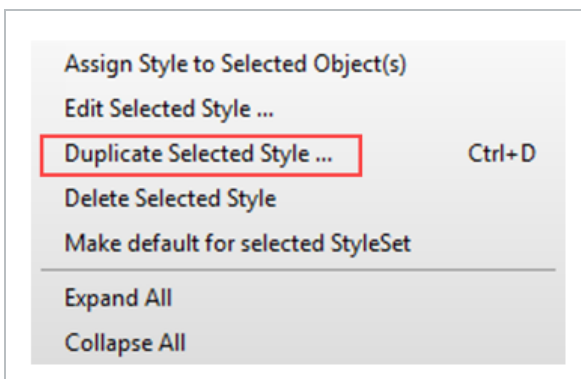

- This new Style Set will appear under the project name


NOTE

All model objects that were not affected by the defined color receive a transparency.

2.6 STYLE LEGEND

The Style legend option provides visibility into the color definitions applied to the geometry. You can easily communicate the information to all project stakeholders.

You can open the Styling legend in View > **Style Legend**.

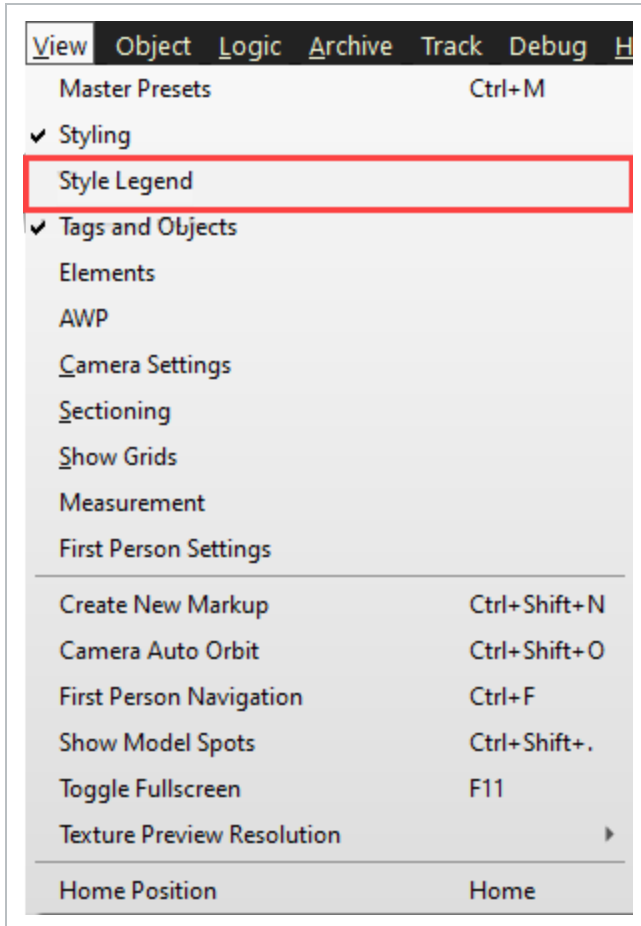

The Style Legend window opens and shows the style name, tag name, and tag value associations that are included in the selected style set.

Style Legend


Active Style Set: RidgeGate Campus

Style	Style Name	Tag Name	Tag Value
	concrete-01_preview	Material Name - CAD	03 30 00_Concrete_Cast-in-Place
Yellow	Yellow	Material Name - CAD	ADA
	Black Oxide Steel_preview	Material Name - CAD	Black Metal
	Black Oxide Steel_preview	Material Name - CAD	Black Metal - Corrugated
	Black Oxide Steel_preview	Material Name - CAD	Black Metal - Flat
	maxwoodCherry4_wCoatings_preview	Material Name - CAD	Casework
	Clearance	Material Name - CAD	Clearance
	concrete-19_preview	Material Name - CAD	Concrete
	concrete_scratched_preview	Material Name - CAD	Concrete - Cast-in-Place Concrete
	pavement_sidewalk_preview	Material Name - CAD	Concrete (Standard)
	concrete-19_preview	Material Name - CAD	Concrete TYP 2
	concrete_scratched_preview	Material Name - CAD	Concrete, Cast-in-Place gray
	concrete-01_preview	Material Name - CAD	Concrete, Precast
	Rough dirty metal_preview	Material Name - CAD	Duct Fittings
	Rough dirty metal_preview	Material Name - CAD	Duct Insulations
	browntowel_preview	Material Name - CAD	Earth
	blue_lmetal_preview	Material Name - CAD	Electrical Equipment
	cyanlmetal_preview	Material Name - CAD	Electrical Fixtures
	Glass - Transparent	Material Name - CAD	Glass
	Glass - Transparent	Material Name - CAD	Glass - Clear
	Glass - Transparent	Material Name - CAD	Glass - Frosted
	Glass - Transparent	Material Name - CAD	Glass - Spandrel
	Glass - Transparent	Material Name - CAD	Glass Screen
	blackmetal_preview	Material Name - CAD	Haworth - Plastic - Black

The window automatically refreshes after you make a change to the active style set.

A selected Percent complete style set shows the percent complete for each element style color.

This provides the visibility of the status of each element, so you have the data to plan accordingly.

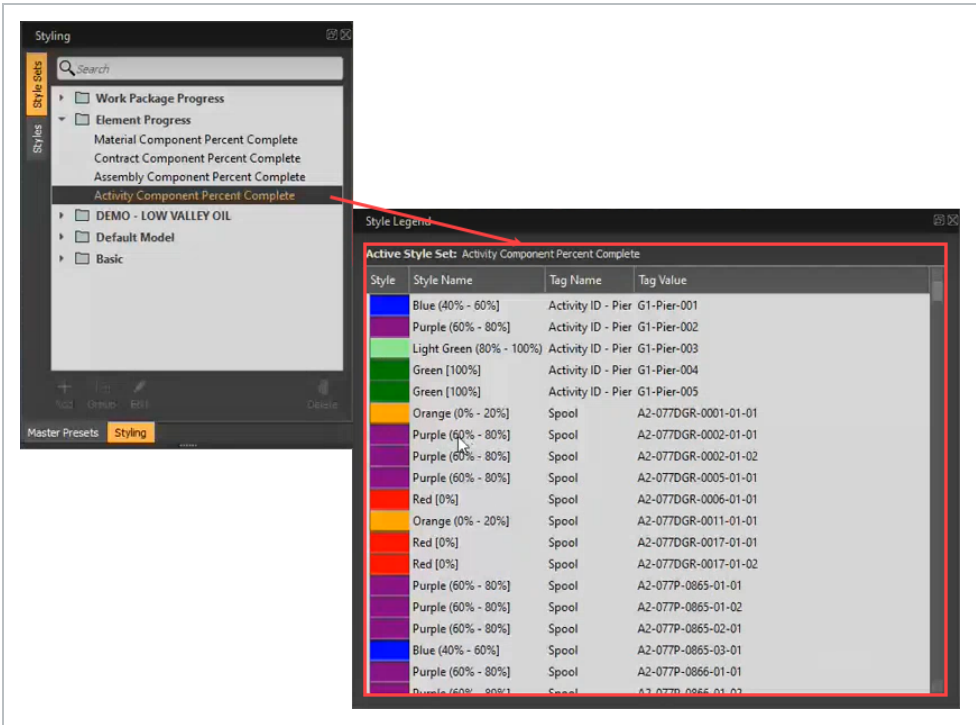

Lesson 2 Review

1. InEight Model offers basic, pre-defined styles.
 - a. True
 - b. False

2. When creating a new style, what two features can you set?
 - a. Line color, fill color
 - b. Fill color, shadow
 - c. Shadow, line color
 - d. None of the above

3. You can only apply a style at the project level.
 - a. True
 - b. False

Lesson 2 Summary

As a result of this lesson, you can:

- Create and manage styles
- Create and manage style sets
- Apply styles to tags
- Assign styles using Excel



LESSON 3 – MASTER PRESETS

Lesson Duration: 30 Minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Create and edit master presets
- Group master presets
- Share master presets

Topics in this Lesson


3.1 MASTER PRESETS OVERVIEW

Create a master preset to capture and save the context or state of your project through a filtered lens or camera angle. Navigate between master presets to help you effectively manage your model and share your perspective with other users.

NOTE Master presets are created on a project level. Once created, anyone can use or edit your master presets.

3.1.1 Master Preset Editor

From an open model(s), navigate to the view that you want to save as a master preset. When ready to capture that viewpoint, navigate to **View** and select **Master Presets**. Then, select **Add** and select your preset preferences.

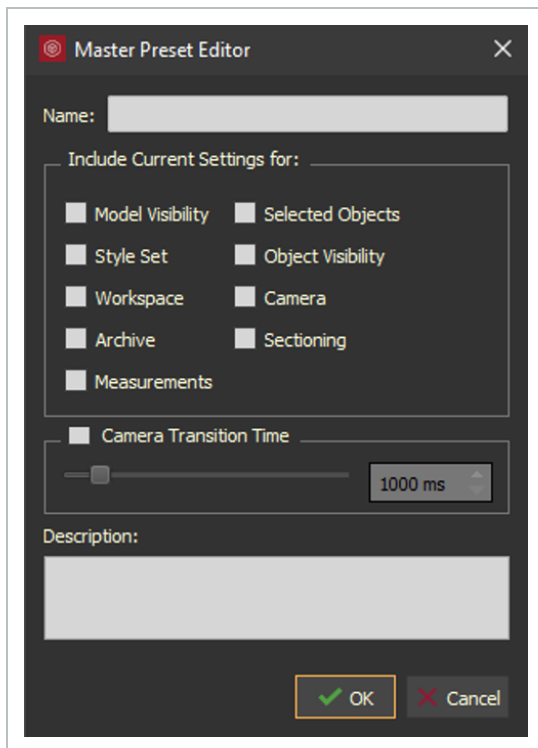

- **Model Visibility** shows models that are visible and in-view

NOTE

Once selected, Model Visibility will not show any new model streams that may be added to the project. To set or adjust model visibility settings, open the Object panel or right click menu to view the show/hide and selection options.

- **Selected Objects** shows any objects you have selected on the model
- **Style Set** shows any styles already assigned to the visible objects of your model
- **Object Visibility** saves the objects' states so that any objects already hidden remain hidden
- **Workspace** saves the user interface configuration, their location, and current screen resolution

NOTE

Selecting Workspace may cause undesirable results for users with different screen resolutions and configurations. Avoid selecting the Workspace when working in a shared preset.

TIP

When a custom Workspace is necessary, create and label a folder in your master preset panel where you can save that preset. Add your Workspace selection (and parameters, if possible) to the master preset description.

- **Camera** saves the current camera settings (i.e. the camera's position in space, direction, and depth of view)
- **Archive** saves any open documents in the Archive Library

TIP

Using Archive, you can bookmark pages within a document so that users open to a specific page while viewing the project from your master preset.

- **Sectioning** shows any planes or sections of your model(s) that are visible
- **Measurements** shows selected measurements graphically or visually
- **Camera Transition Time**, with the Camera option selected, allows you to adjust the speed of the camera's transition time. The default Camera Transition Time is 1,000 milliseconds

NOTE

If Camera is not selected, you cannot adjust the Camera Transition Time.


3.1.2 Reset Workspace

If a master preset has messed up your workspace, you can reset your workspace by going to the Settings and selecting **Reset Workspace**.

3.1.3 Right Click Menu Features

Quickly access additional master preset options by right clicking within the Master Preset panel.


- **Edit and Update Selected ...** opens the Master Preset Editor so you can quickly make and save changes to a preset for the selected assets
- **Update Select w/ Current Values** updates a Master Preset with the current model view configuration without opening the Master Preset Editor
- **Set as Project Default** will make the selected master preset the default view (of the project you have open) anytime you load that project
- **Copy URL to Clipboard** copies the master preset of your project to share with other collaborators
- **Delete Selected** deletes any selected master preset(s)
- **Add Group ...** allows you to add a group from the right click menu
- **Rename Group ...** allows you to rename a group from the right click menu
- **Delete Group** deletes any selected group(s)
- **Expand All** shows all folders in the master preset panel
- **Collapse All** collapses all folders in the master preset panel
- **Export as Viewpoints** allows you to create an XML file that you can import into Navisworks. In other words, you can share your viewpoint (including any presets you have, the order of those presets, and your spatial view of the model) with others through Navisworks

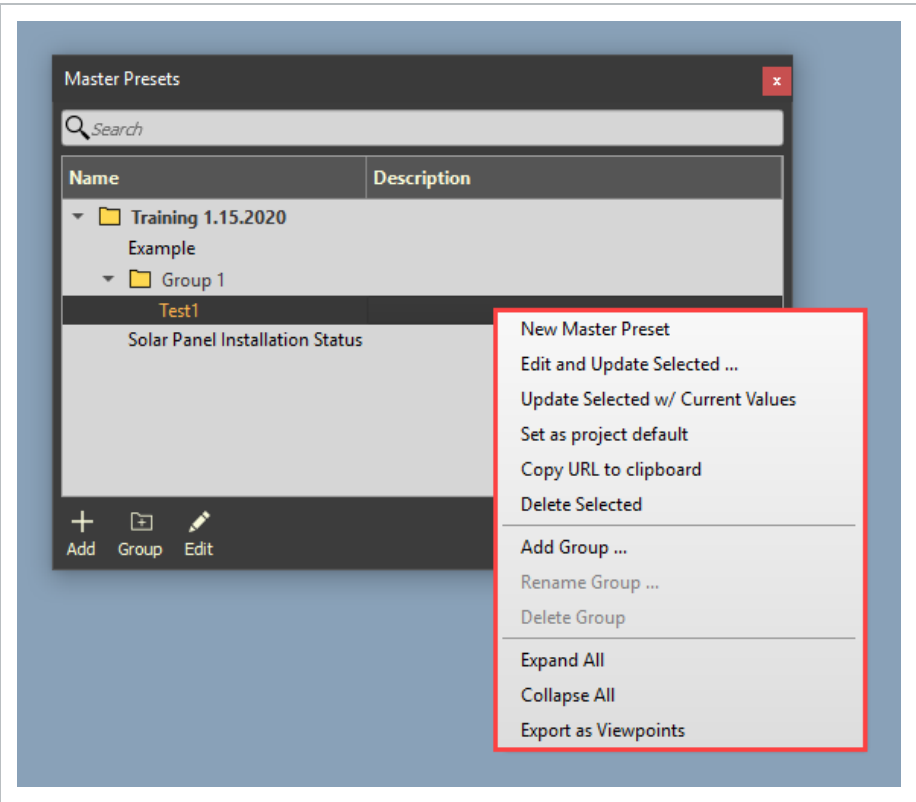


3.2 CREATE AND MANAGE MASTER PRESETS

3.2 Step by Step 1 — Creating a Master Preset

1. Select **Add** to create a new preset.

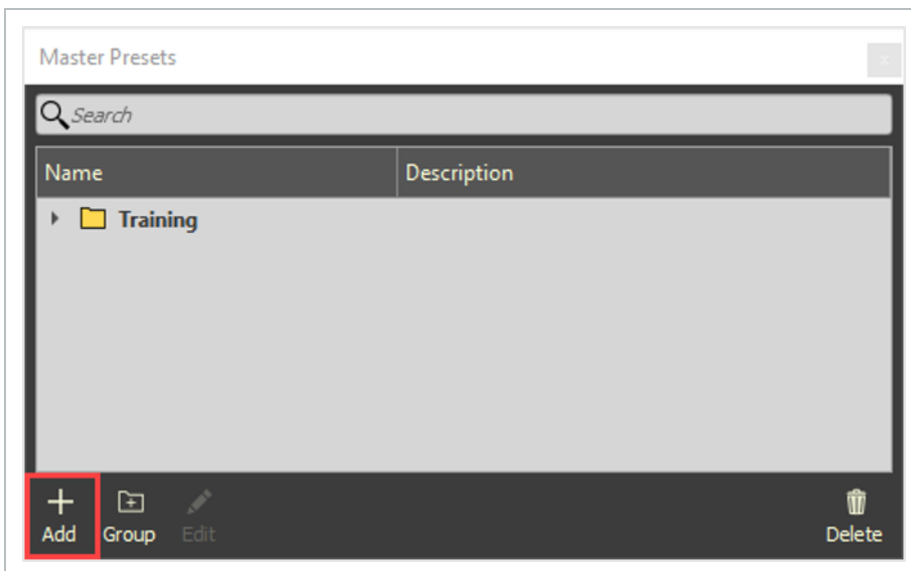

- The Master Preset Editor will open
2. Name your master preset.

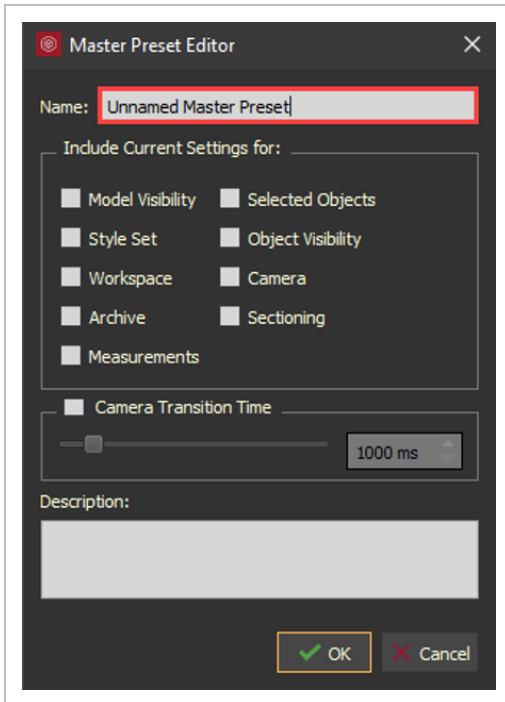**TIP**

It is good practice to create one or more HOME master presets.

3. Next, check the filter selections you would like to apply to this preset.

TIP

Mouse over settings for tool tips.

4. Add a description to help others who use this preset to know what view of the project they are seeing and why (optional).
5. When finished, select **OK**.


NOTE

The description text does not wrap, so it is best practice to keep the description short.

3.2.1 Master preset object visibility maximum dialog box

This is a rare notification that you could encounter when you are trying to Hide Unselected while you are also selecting the Object Visibility option when creating the Master Preset.


You can also get that dialog box if you published one entire model from Navisworks.

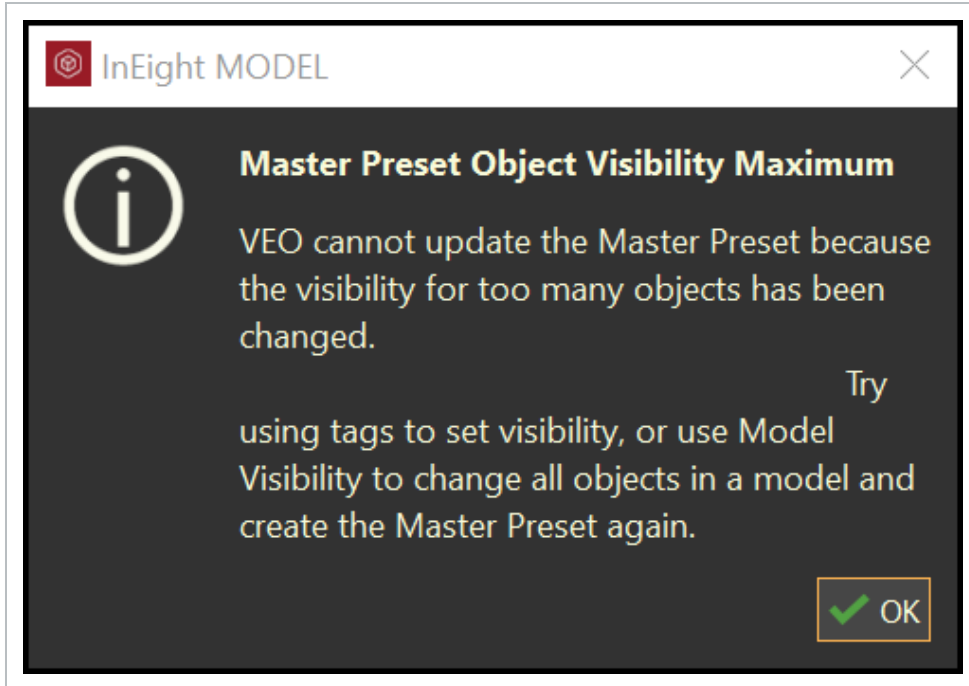

It is recommended that you publish discipline specific models or area specific models. Then select objects, RMC, and select Hide Models from Unselected. Then RMC and select Hide Unselected. After that, create the Master Preset with Object Visibility option.


3.2 Step by Step 2 — Editing a Master Preset

1. Select the master preset that you want to modify and select the **Edit** icon.

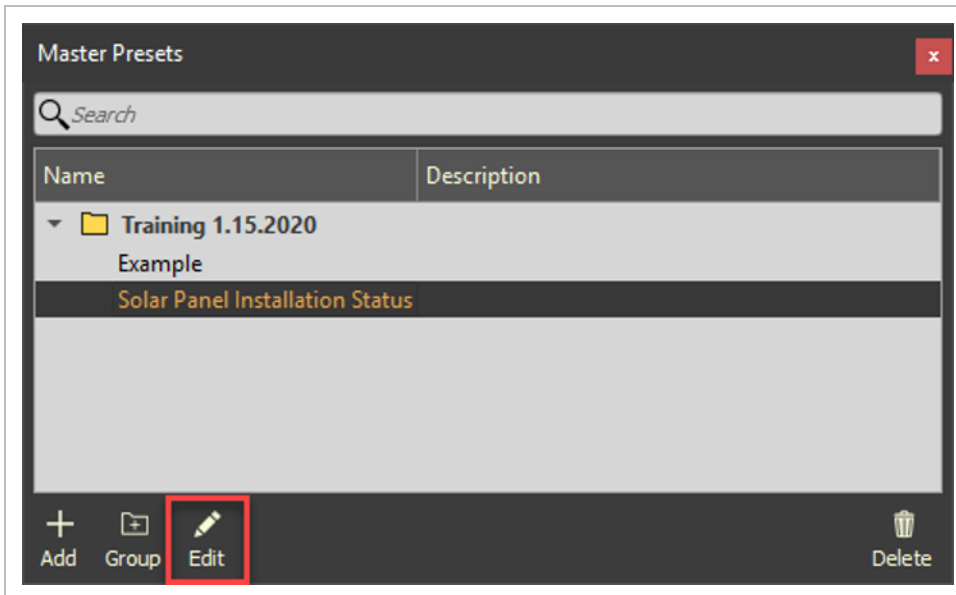

- The Master Preset editor will open


2. Make your changes and select OK.

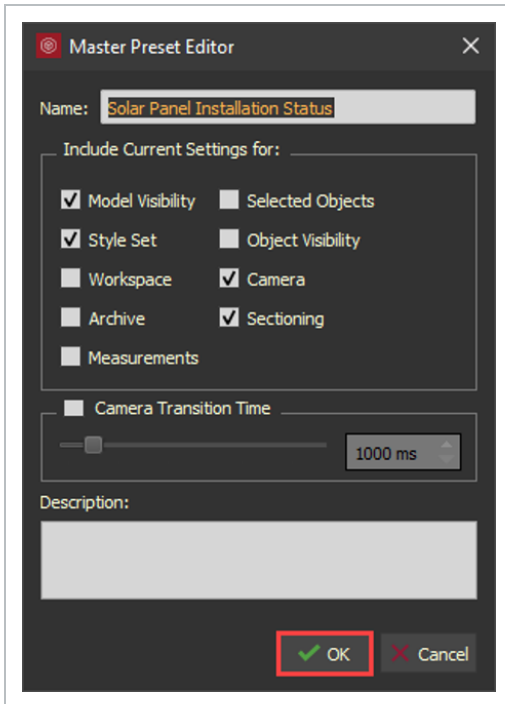

3.2 Step by Step 3 — Editing a Master Preset - Model View


1. Prepare your model view.
2. Select a master preset and click the **Edit** icon. Then, select **OK**.
 - Or, right click on a master preset, then select **Update Selected w/Current**

Settings

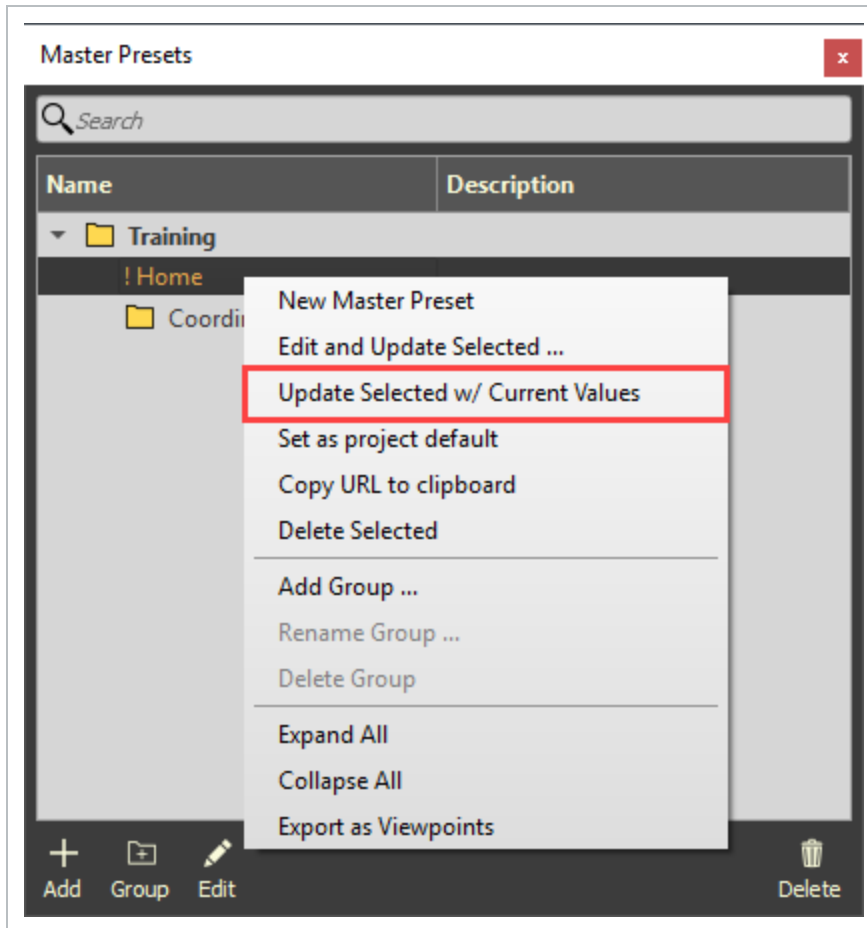

3.2 Step by Step 4 — Deleting a Master Preset

1. Select the master preset that you want to remove and select the **Delete** icon.

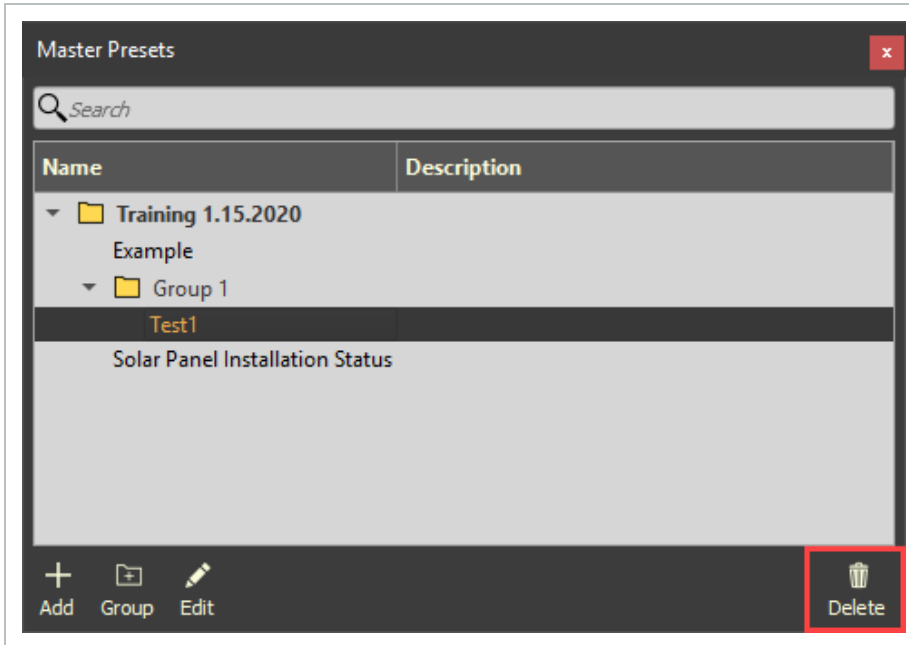



3.3 ORGANIZE MASTER PRESETS

Organize master presets into contextual groups to distinguish between executive-level, task-specific, team-specific views. Drag and drop master presets and groups within the Master Preset panel to create comprehensive organization.


3.3 Step by Step 1 — Grouping Master Presets

1. Select the **Group icon** and enter a group name. Then select **OK**.

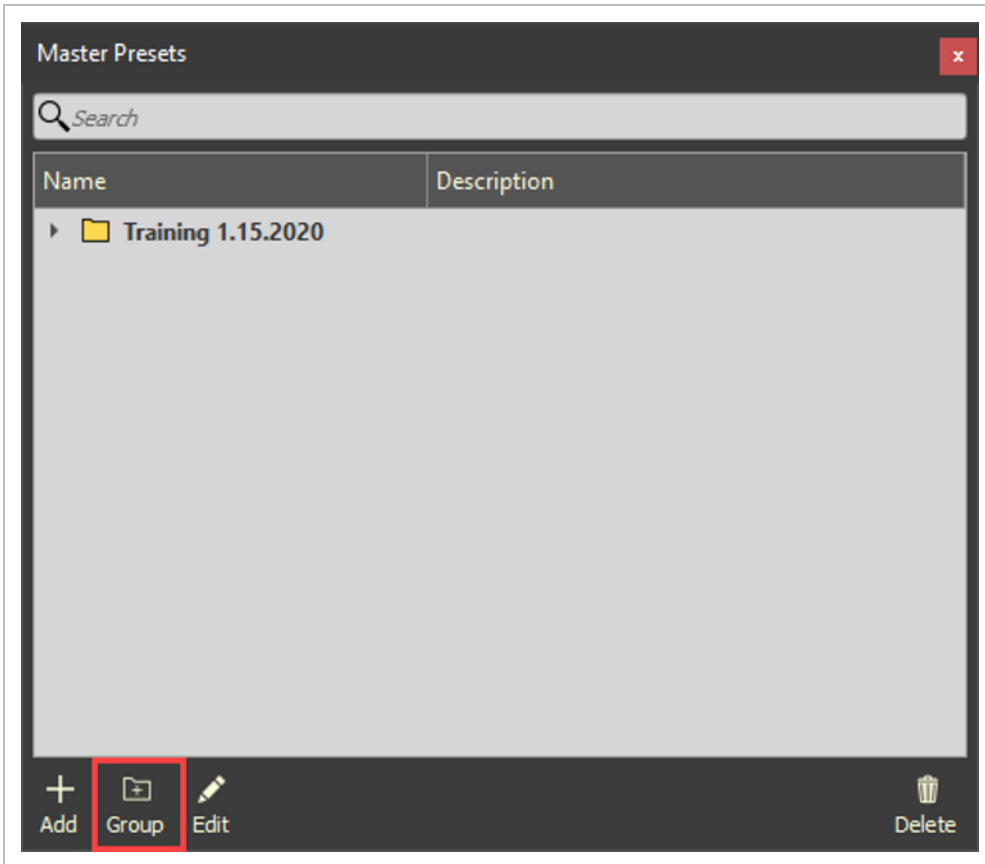

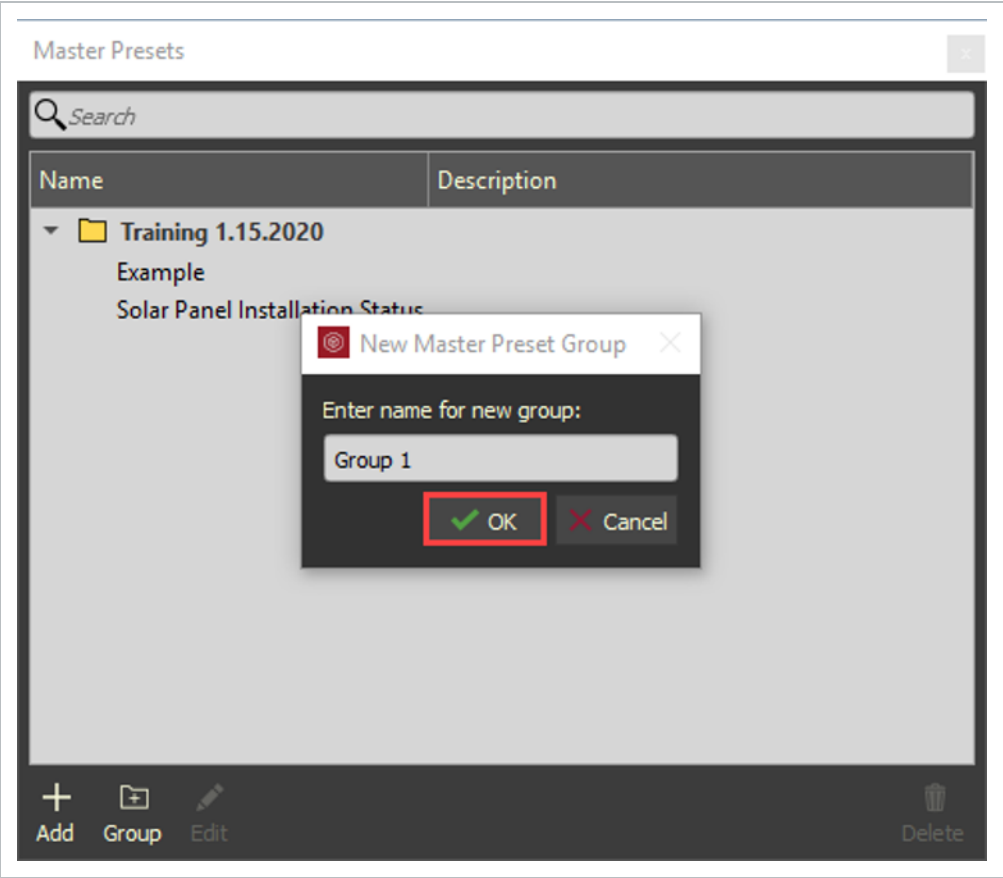

2. Now, you can add presets to this group.

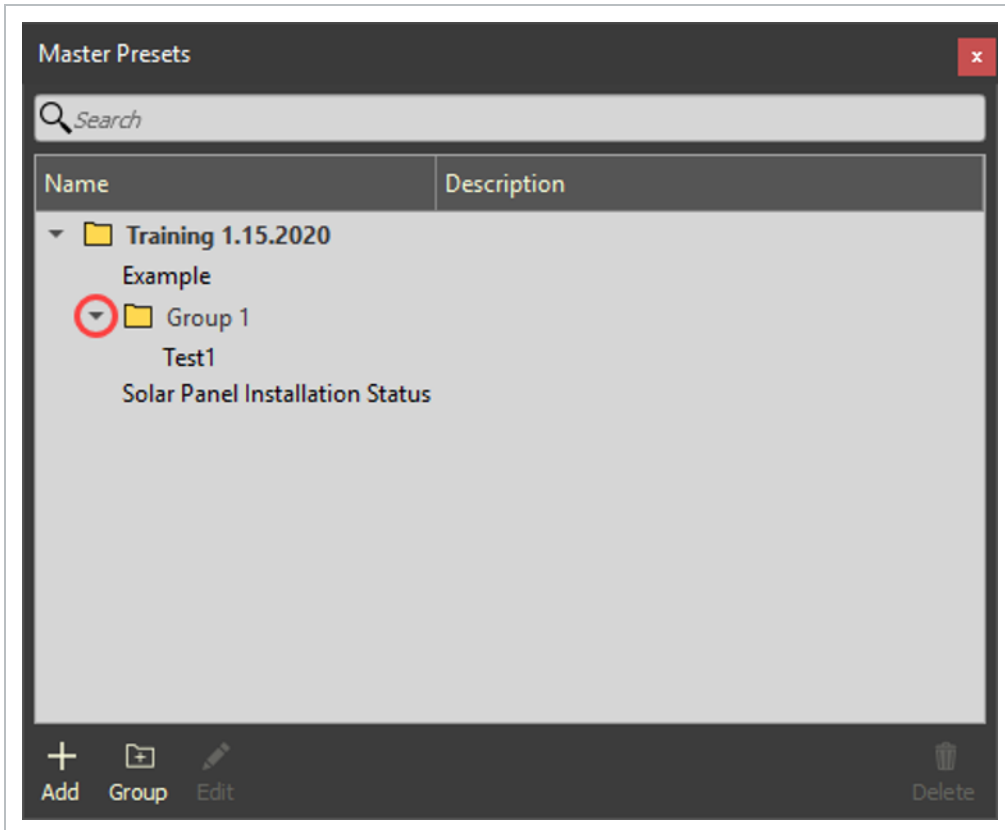
**NOTE**

Notice, you cannot drag and drop a group above the project name. That's because groups are created under the parent project.

3.3 Step by Step 2 — Set a Master Preset as the Project Default

A master preset can be set as the project default so that when a project loads the model view is set to the default master preset.

1. Right click on a master preset, then select **Set as project default**.

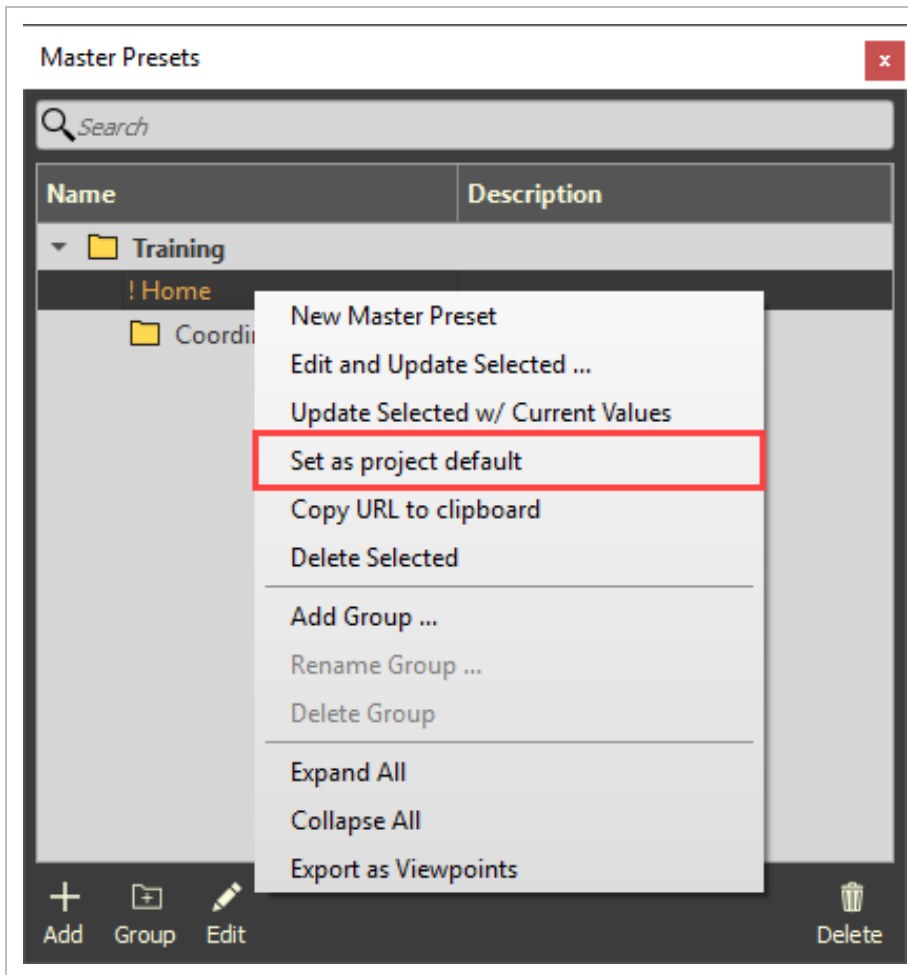


3.4 SHARE AND EXPORT MASTER PRESETS

Quickly communicate by sharing a master preset with other project collaborators. Add emphasis or clarity by assigning colorful style sets and tags to your master preset. Or, use master presets to check project progress or review changes by comparing the captured viewpoint against its archived state in the Project History folder (View > Project History).

3.4 Step by Step 1 — Sharing a Master Preset


1. Select and right click on the master preset that you want to share. Select **Copy URL to Clipboard**.

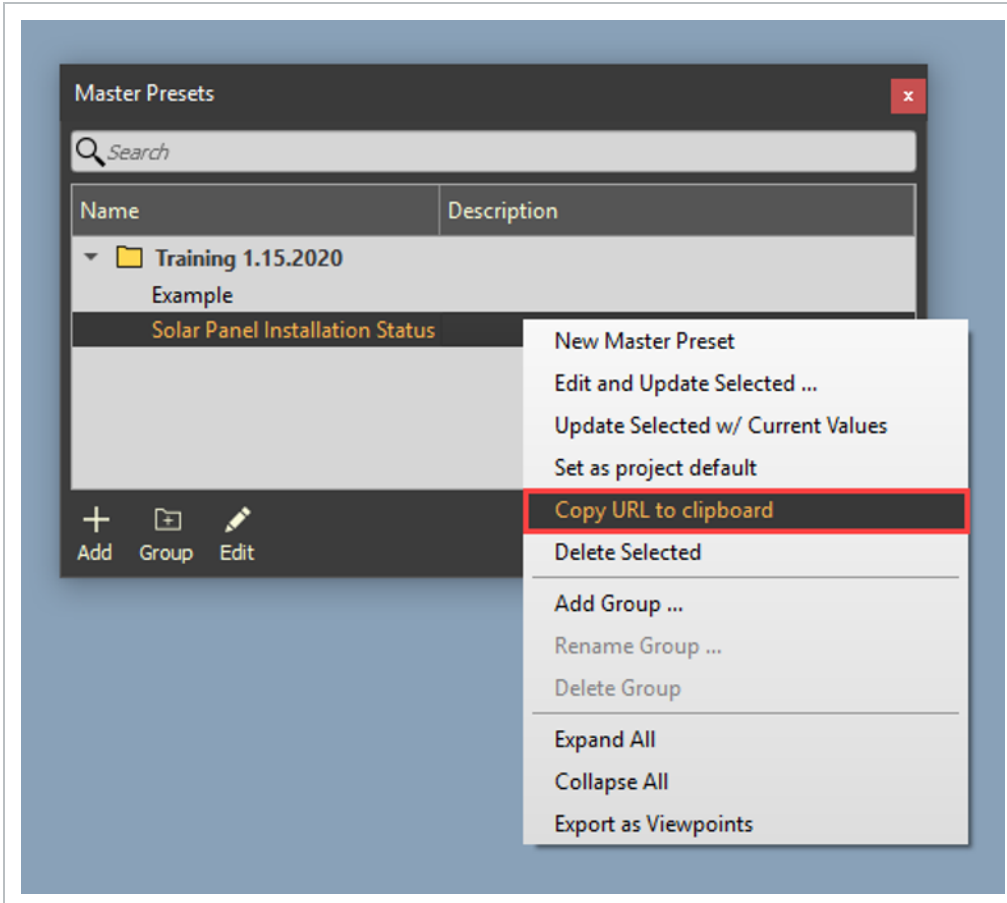

- You can now paste your preset URL to an email, message, or other means of communication.

3.4 Step by Step 2 — Exporting Master Presets

1. Right click on a master preset, then select **Export as Viewpoints**.

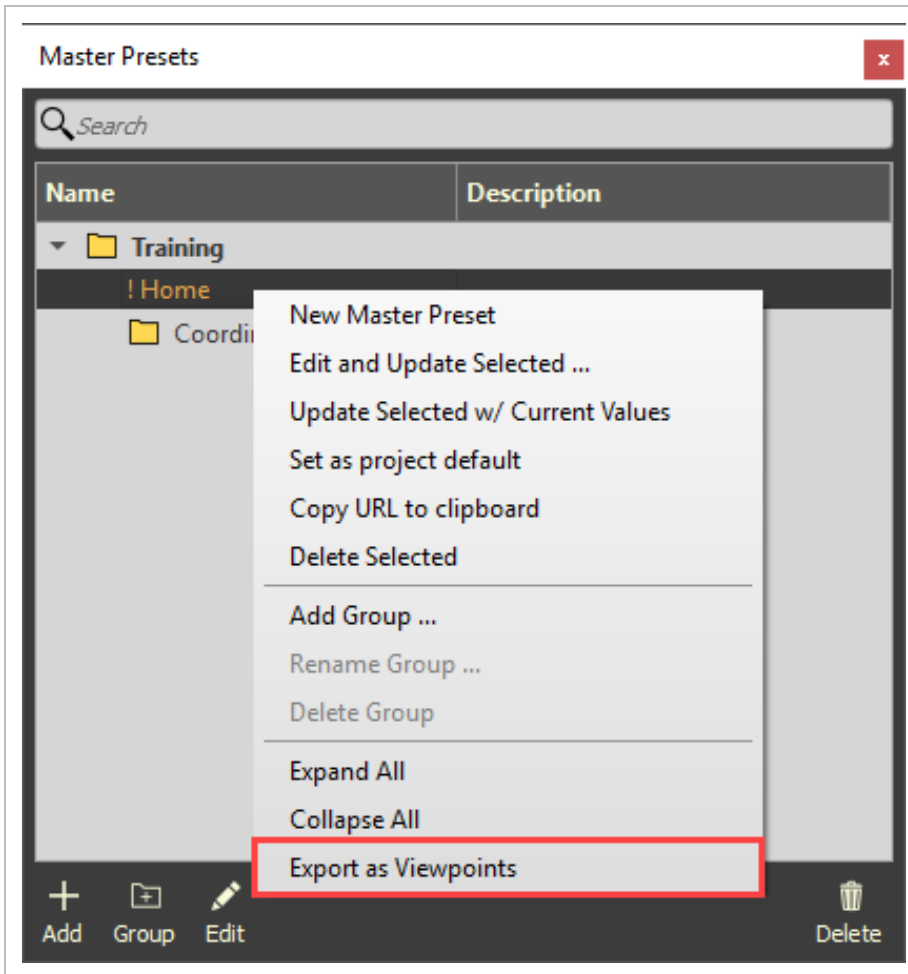

Lesson 3 Review

1. Master presets can help you to...
 - a. configure a custom workspace.
 - b. create profiles or filters of your model to convey specific information.
 - c. All of the above
 - d. None of the above

2. From the Master Preset Editor, selecting _____ will show any planes of your model that are visible.
 - a. Measurements
 - b. Sectioning
 - c. Archive
 - d. Model Visibility

3. Only project administrators can group or share presets.
 - a. True
 - b. False

Lesson 3 Summary

- Create and edit master presets
- Group master presets
- Share master presets

This page intentionally left blank.



LESSON 4 – COORDINATION - CLASH MANAGER

Lesson Duration: 20 Minutes

Lesson Objectives

After completing this lesson, you will be able to:


- Create and manage a coordination rule
- Create and manage coordination rule groups
- Define clearance settings

Topics in this Lesson


4.1 CLASH MANAGER OVERVIEW

Coordination is the process of using rules to identify hard and soft clashes, creating grouped clashes into trackable issues, and assigning them to users or user groups to resolve.

Clash Manager rules are flexible rules established to detect clashes between model objects by examining geometric relationships between tags. Clash manager rule groups can be created to organize rules and to quickly execute multiple rules at the same time.

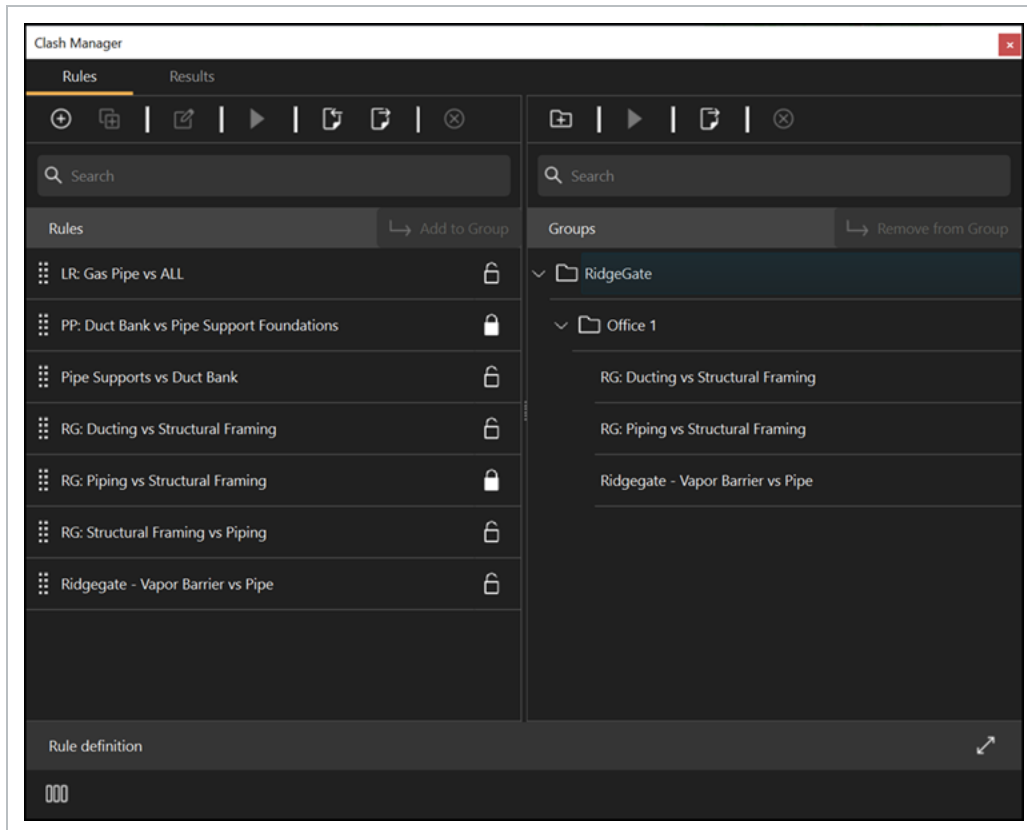

The Clash Manager results tab shows the clashes detected after running a rule.

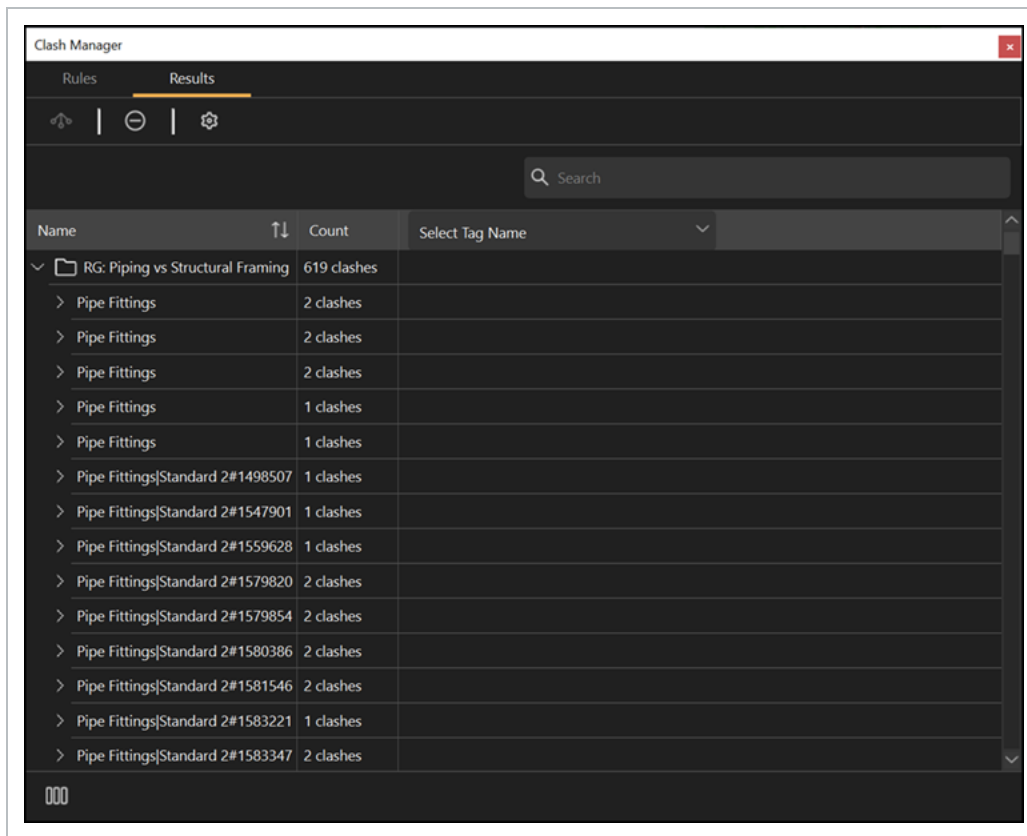

Name	Count	Select Tag Name
RG: Piping vs Structural Framing	619 clashes	
> Pipe Fittings	2 clashes	
> Pipe Fittings	2 clashes	
> Pipe Fittings	2 clashes	
> Pipe Fittings	1 clashes	
> Pipe Fittings	1 clashes	
> Pipe Fittings Standard 2#1498507	1 clashes	
> Pipe Fittings Standard 2#1547901	1 clashes	
> Pipe Fittings Standard 2#1559628	1 clashes	
> Pipe Fittings Standard 2#1579820	2 clashes	
> Pipe Fittings Standard 2#1579854	2 clashes	
> Pipe Fittings Standard 2#1580386	2 clashes	
> Pipe Fittings Standard 2#1581546	2 clashes	
> Pipe Fittings Standard 2#1583221	1 clashes	
> Pipe Fittings Standard 2#1583347	2 clashes	

4.2 CREATE AND MANAGE COORDINATION RULES

Coordination rules are triggers from tags. In Clash Manager, rules are created to fine-tune the workload and the focus of the coordination.

A best practice is to create discipline focused rules. For example, when you clash piping/plumbing versus steel, then make the piping/plumbing your primary tag and steel your secondary tag. This type of rule groups related steel clashes to a single piping/plumbing clash.

4.2.1 Considerations

Admin and Standard users can create coordination rules. Read-only users can also create coordination rules but cannot save any actions to the project.


Rules that are linked to issues are locked and cannot be modified.

4.2.2 Steps

To open the Clash manager, go to Logic > **Clash Manager**.

Create a coordination rule

1. In the Rules tab, click the **Add** icon. The Rule definition dialog box shows.
2. Enter a name in the **Title** field.
3. Select a **Primary Tag Name** and **Primary Tag Value**.
4. Select a **Secondary Tag Name** and **Secondary Tag Value**.
5. Add Tolerance Settings as needed. For more information, see [Tolerance Settings](#).
6. Select the **Include Objects From Same Model Stream** checkbox if your primary and secondary tags are within the same model stream.

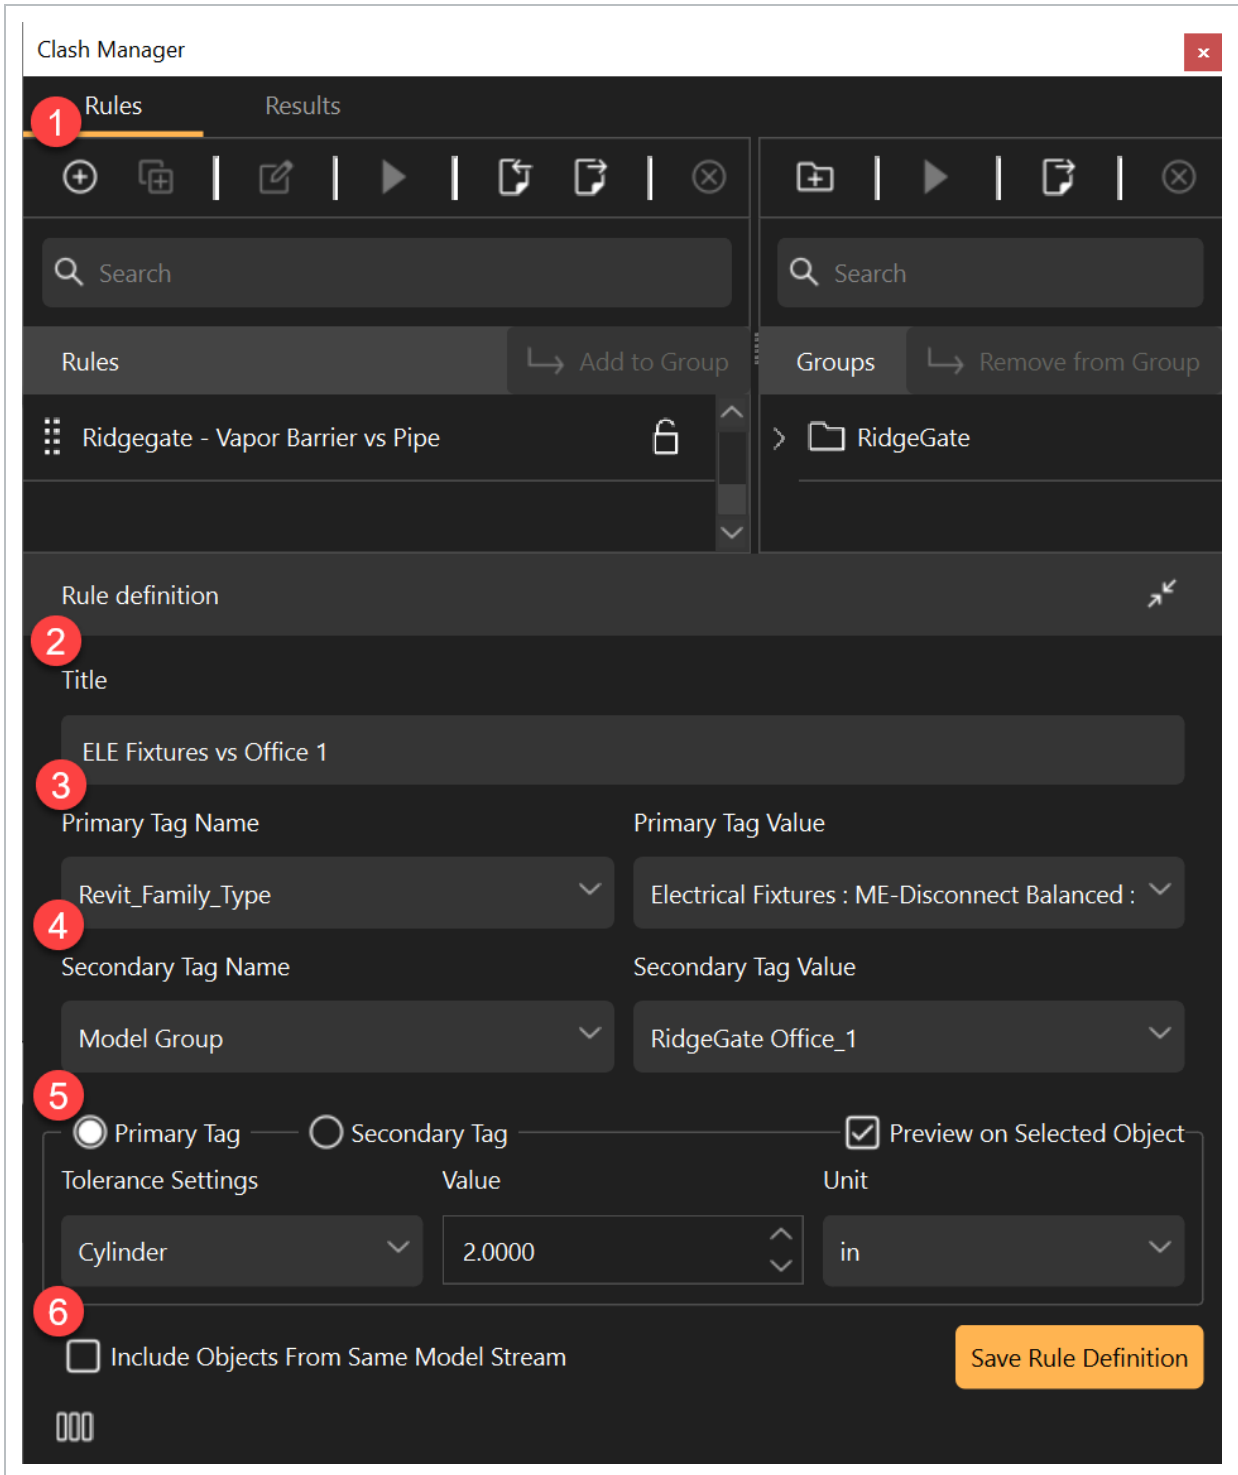

Edit a coordination rule


1. Select a rule from the list.
2. Click the **Edit** icon. The Rule definition dialog box opens.
3. Make your rule definition changes in the **Rule Definition** dialog box.
4. Click the **Save Rule Definition** button.

The screenshot displays the Clash Manager application window, which is divided into several sections. At the top, there are tabs for 'Rules' and 'Results'. Below these are two panels: 'Rules' on the left and 'Groups' on the right. The 'Rules' panel contains a list of rules, with 'Pipe Supports vs Duct Bank' selected and highlighted in blue. A red circle with the number '1' is placed over this rule. Above the 'Rules' list, there is a toolbar with various icons, including a red circle with the number '2' over the edit icon. The 'Groups' panel shows a folder named 'RidgeGate'. Below these panels is the 'Rule definition' section, which contains several input fields and options. A red circle with the number '3' is placed over the 'Title' field, which contains the text 'Pipe Supports vs Duct Bank'. Below the title are fields for 'Primary Tag Name' (set to 'Model_Stream'), 'Primary Tag Value' (set to 'KP Supports.nwd'), 'Secondary Tag Name' (set to '30_EstimatingTags_PowerPlant_WT'), and 'Secondary Tag Value' (set to 'WT_ELE_DUCT_BANK'). There are also radio buttons for 'Primary Tag' (selected) and 'Secondary Tag', and a checkbox for 'Preview on Selected Object'. At the bottom of the 'Rule definition' section, there are 'Tolerance Settings' (set to 'None'), 'Value' (set to '0.0000'), and 'Unit' (set to 'm'). A red circle with the number '4' is placed over the 'Save Rule Definition' button.

To view the Rules and Results tab side-by-side, click the **Expand** icon at the bottom left of the panel.


Export rules

1. Click the **Export** icon.
2. Select **Export All Rules...** or **Export Selected Rules...**. The export file is saved in a `.cr` file extension in xml format.

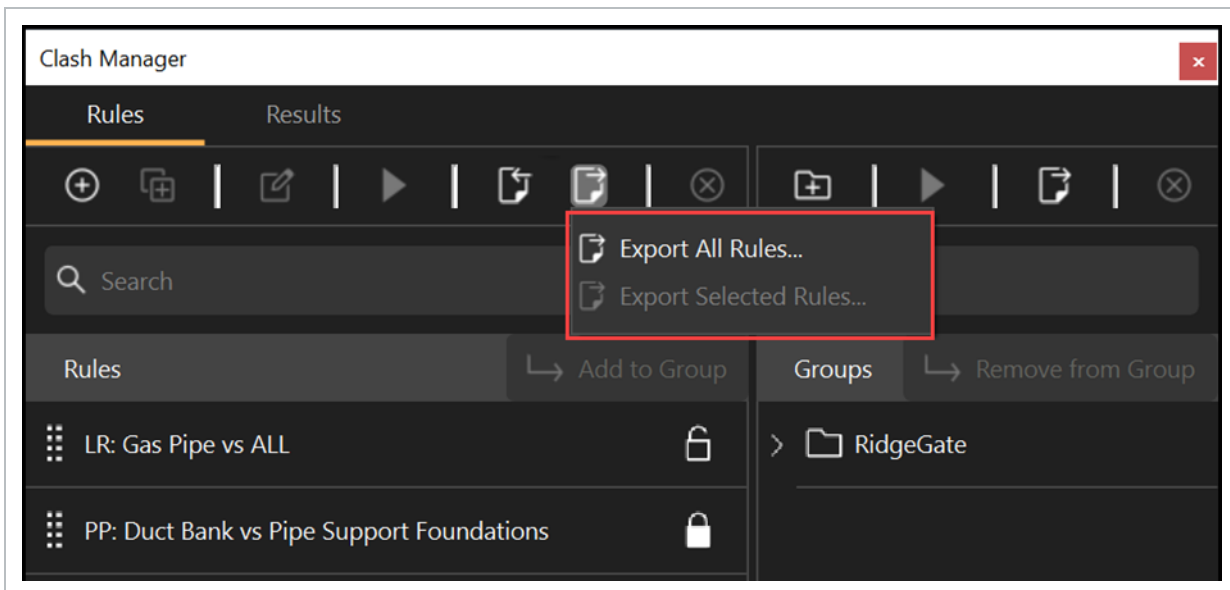

Import rules

1. Click the **Import** icon.
2. Select the file to import, and then click the **Import** button.

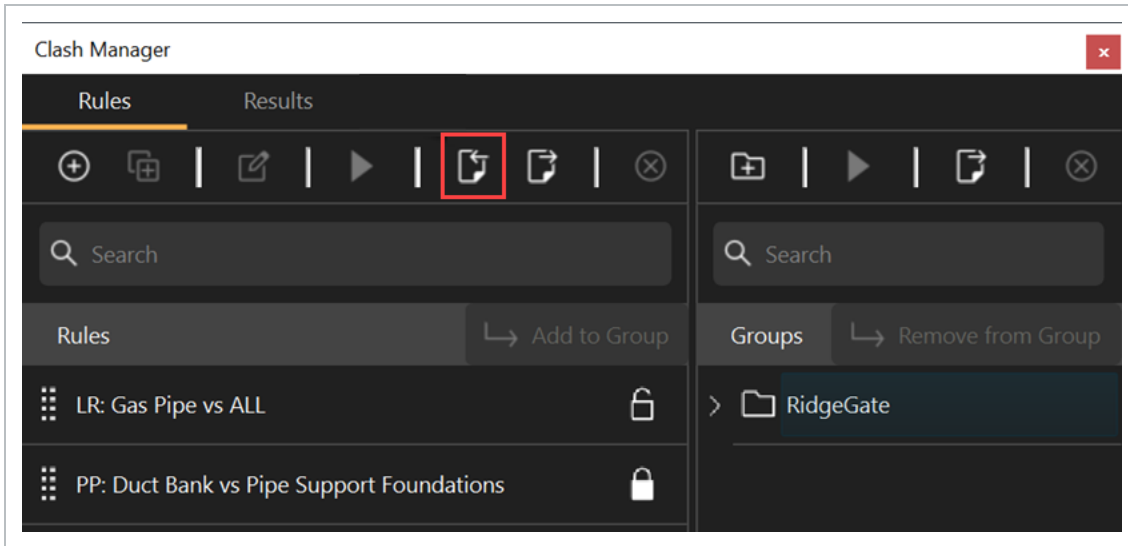


NOTE When importing, the tags identified in the rules are created as tags in the project if they do not already exist.

4.3 TOLERANCE SETTINGS

Tolerance settings are used to define minimum clash tolerances or tolerance zone requirements around objects. You can isolate an object, and then preview the selected object to visualize and experiment with these settings.

The following table is a list of the available tolerance settings:

Setting	Description
None	Used to detect any geometric intersection.
Expand	<p>Expands the geometry in all directions by the defined value.</p> <ul style="list-style-type: none"> Use a negative number to require a minimum Clash Tolerance. Negative a tenth of an inch will require a collision of a tenth of an inch or more before listing it as a Clash. Use a positive number to establish a clearance zone around the object. Positive one foot will list any geometry within a foot of the object as a Clash.
Sphere	Establishes a spherical Clash Tolerance or Clearance Zone.
Cylinder	Establishes a cylindrical Clash Tolerance or Clearance Zone.

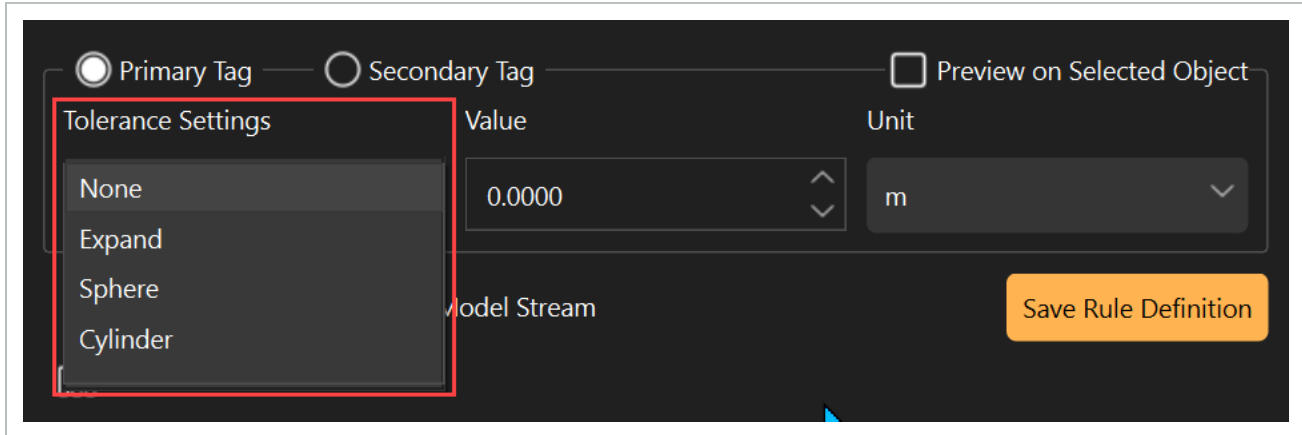


4.3.1 Steps

NOTE You must first select an object. The object selected represents all objects with the same Primary or Secondary Tag Value selected.


Create rules for Expand, Sphere, and Cylinder tolerance settings

1. Fill in the Rule definition fields to create a rule.
2. Select Expand for Tolerance Settings.
3. Select the Preview on Selected Object checkbox.
4. Select a Unit from the drop-down list.
5. Enter a value in the Value field.

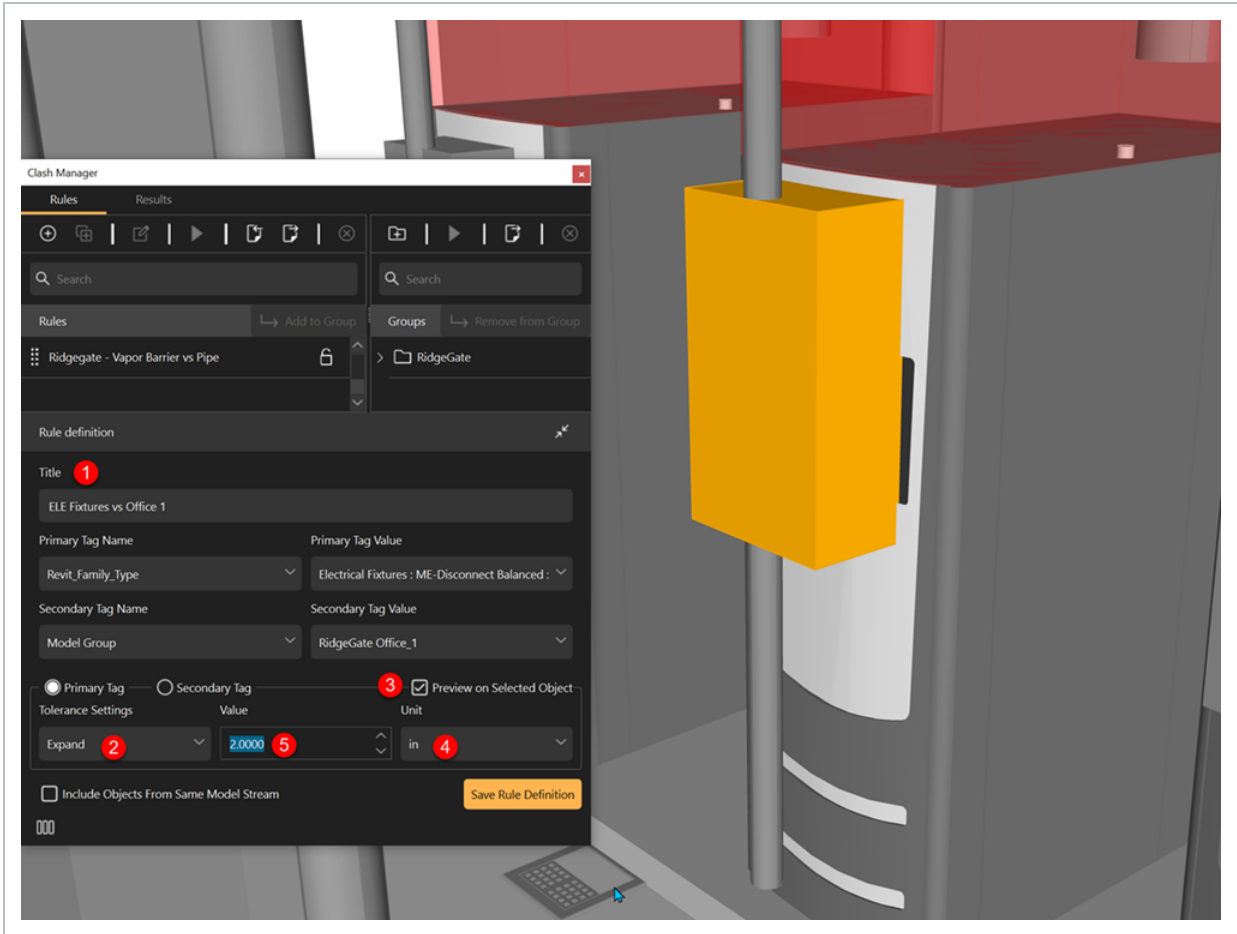


You can follow the same steps for Sphere and Cylinder tolerance settings as shown in the images below:

Sphere

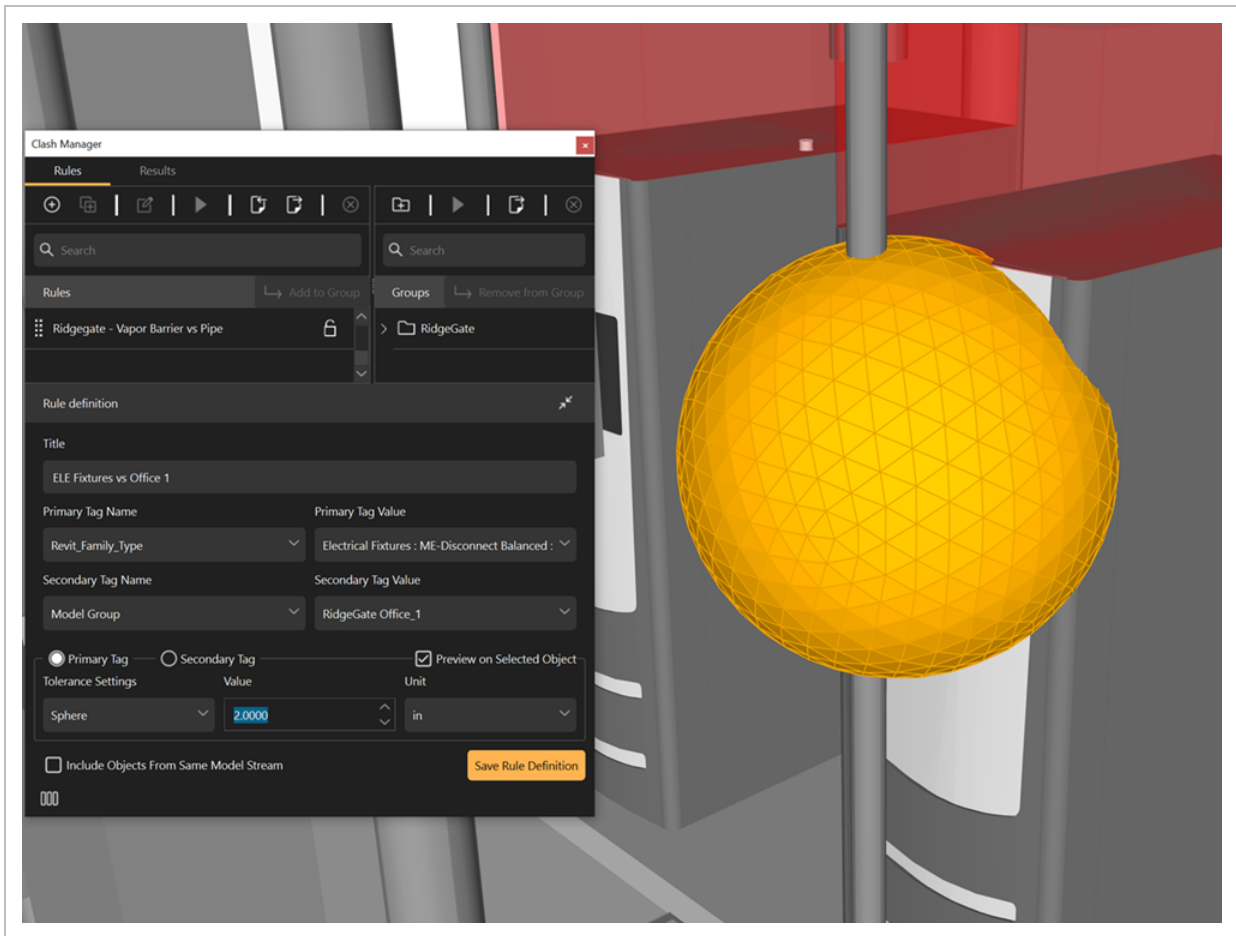

Cylinder

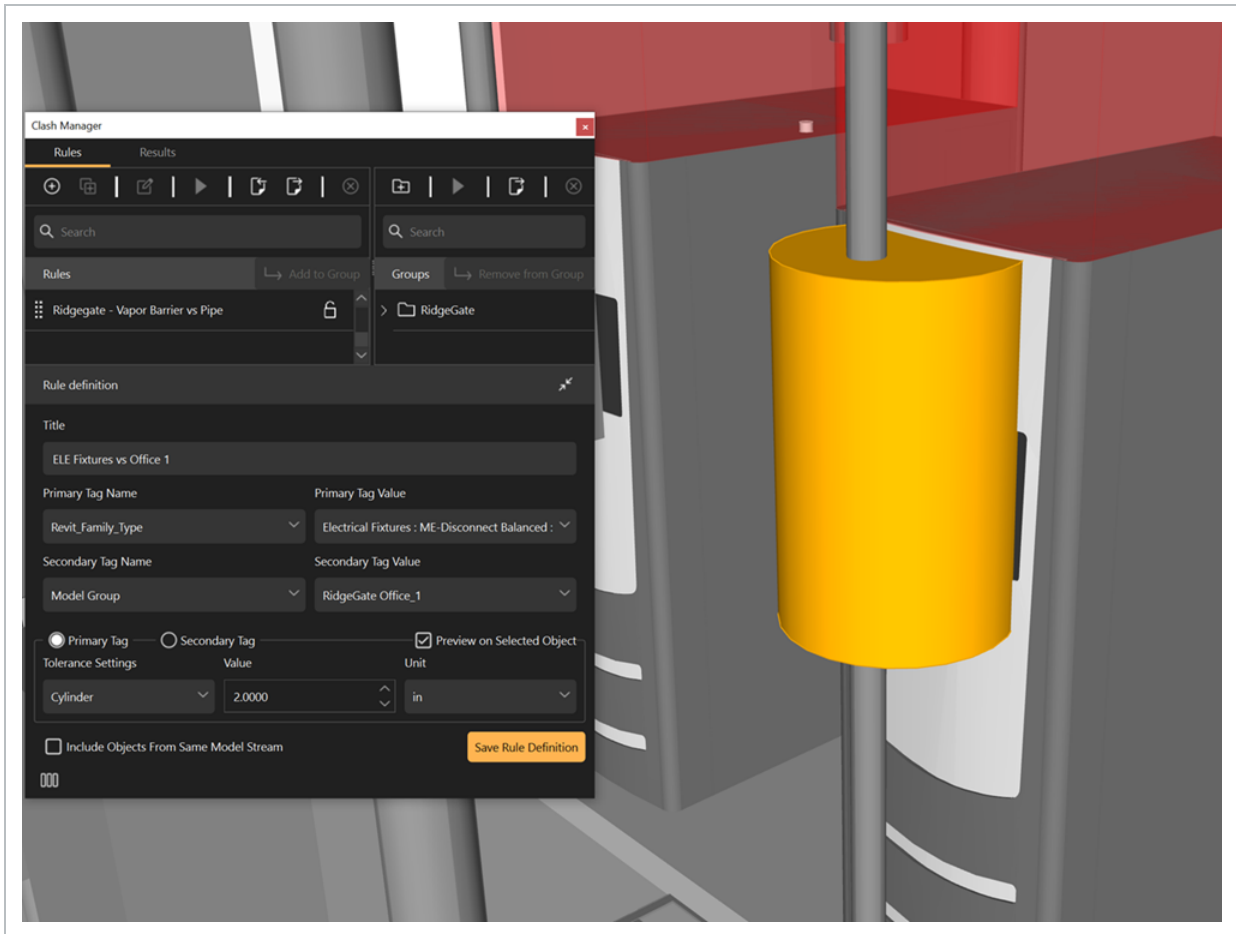

4.4 CREATE AND INTERROGATE CLASH RESULTS

In Clash Manager you can run clash rules or rule groups to get clash results. The clash results can then be reviewed and interrogated. To open Clash Manager, go to Logic > **Clash Manager**.

NOTE A best practice is to use a master preset to focus on a specific area of the federated discipline models before running a rule to review focused clash results.


4.4.1 Considerations

Admin and Standard users can create coordination rules. Read-only users can also create coordination rules but cannot save any actions to the project.


4.4.2 Steps

Create clash results


1. In the Clash Manager Rules tab, select a rule or rule group, and then click the **Run rule** icon.

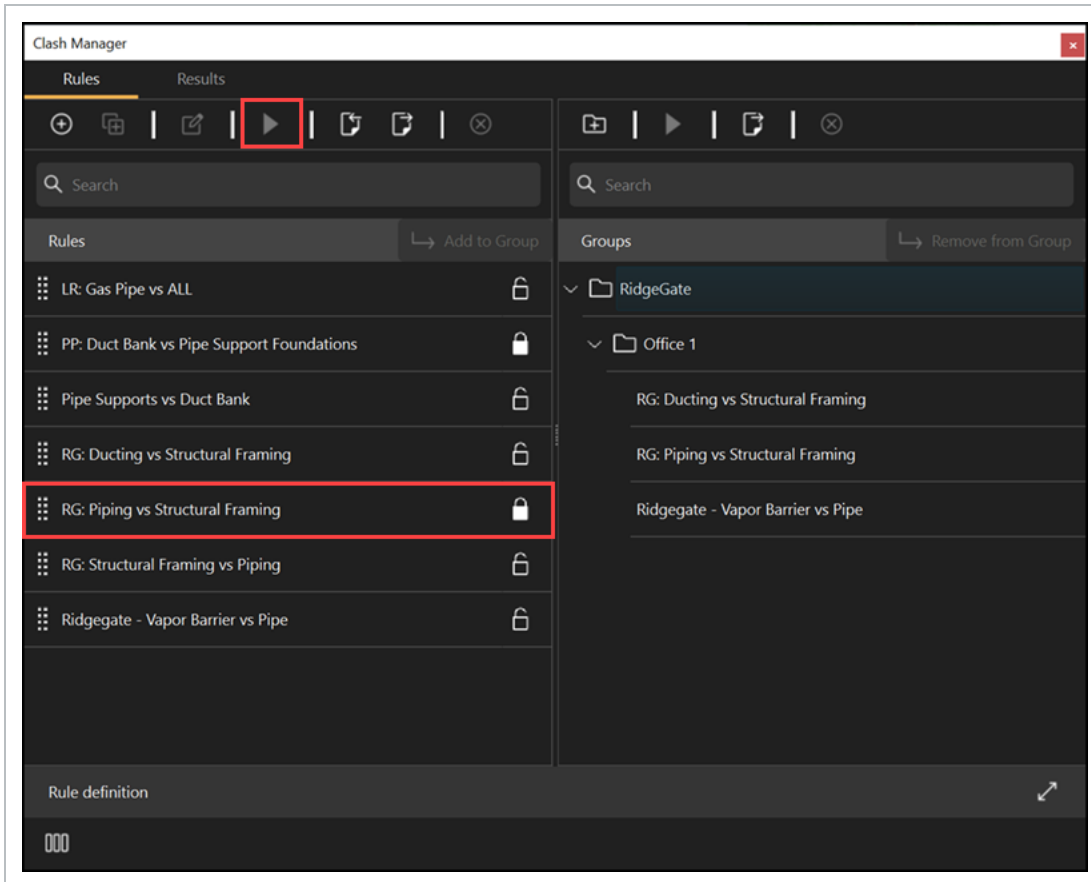

The Results tab will open and show the clash results grouped by the primary tag selected in the rule creation.

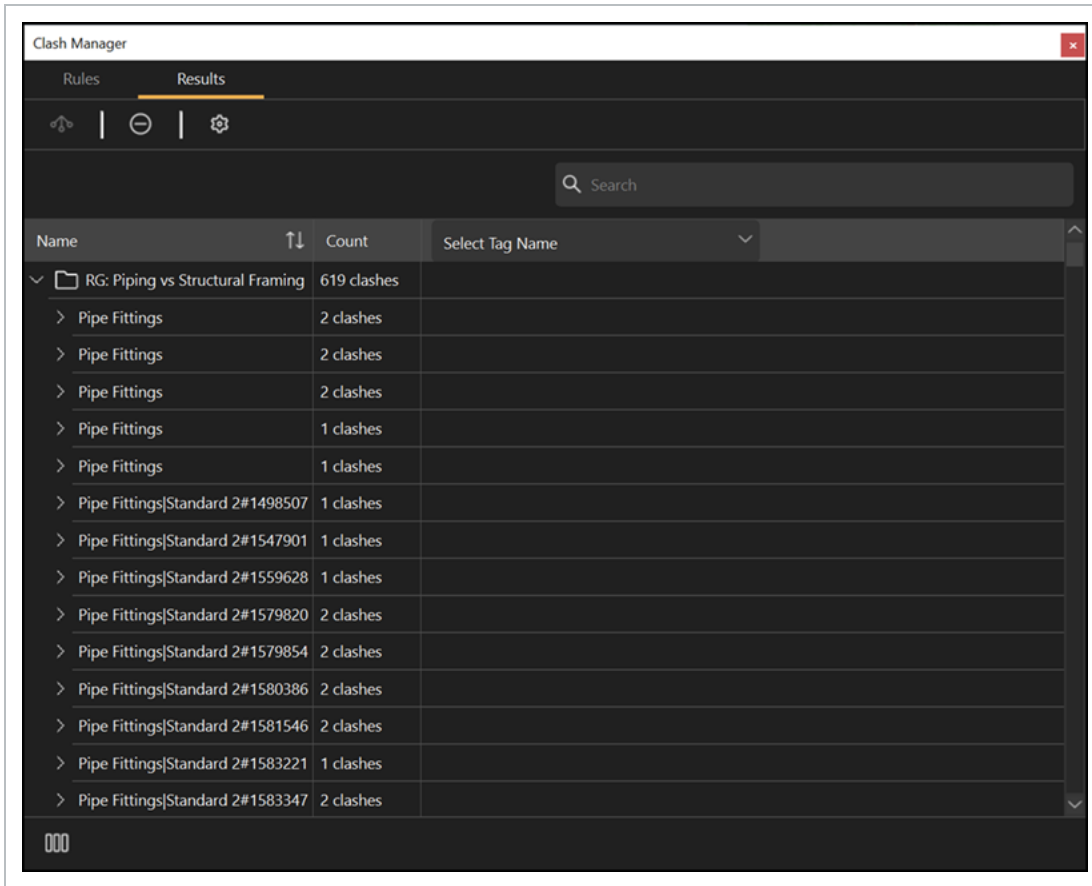


2. In the Results tab, select a clash result, and then select a tag in the **Select Tag Name** drop-down to view additional insight of the clash results.
3. To view a heatmap of results, click the **Clash results settings** icon to enable **Issued Result** and **Clash Points**.

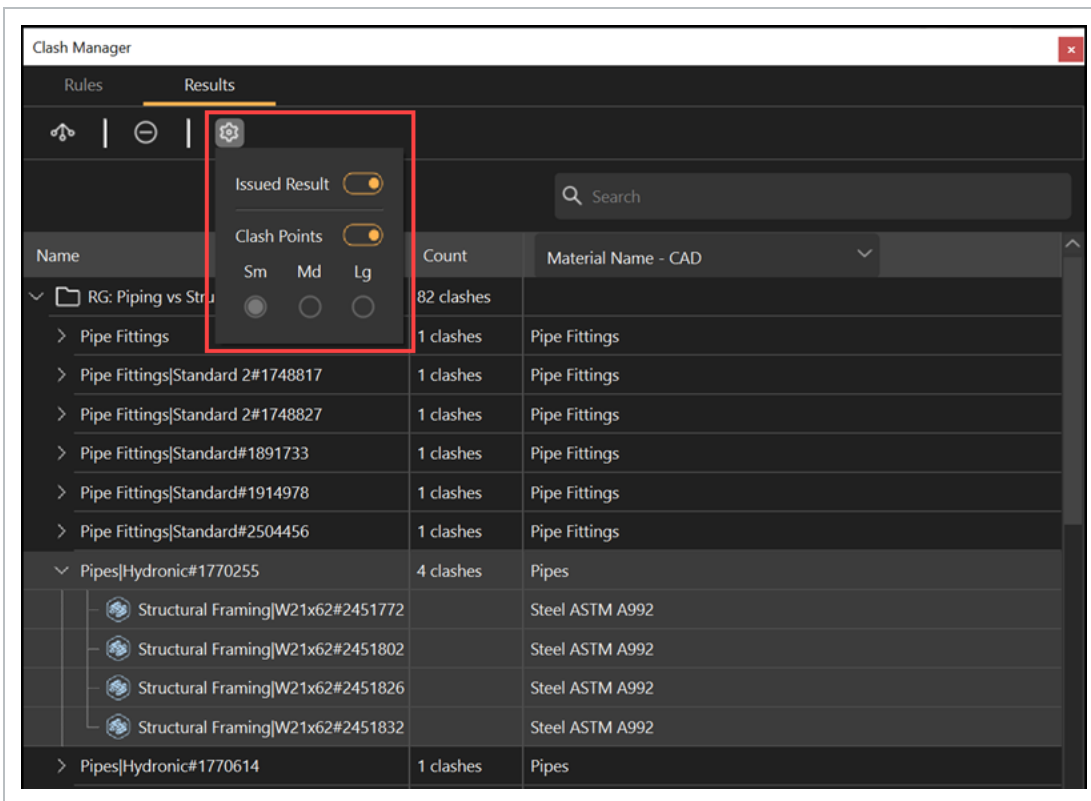

- 4. Click the **Select all clash results** icon at the top left to group and view additional related clashes to group into a single issue.
- 5. Click the **Clear the results list** icon to clear and deselect clash results.

To view the Rules and Results tab side-by-side, click the **Expand** icon at the bottom left of the panel.

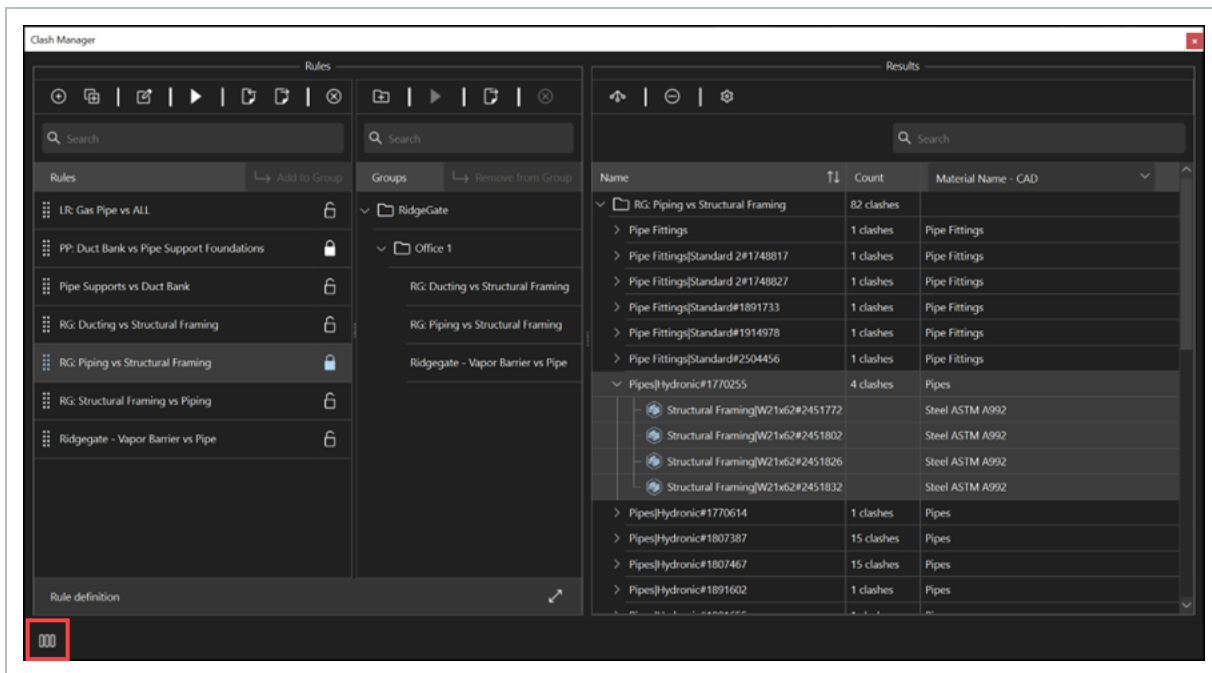

4.5 CREATE AND MANAGE COORDINATION RULE GROUPS

Coordination rules can be run individually or as groups in the Clash Manager Rules panel. Coordination rule groups let you run all rules that are relevant to a scope item at the same time. Rule grouping is helpful when the project's overall scope is divided across the project team.

A best practice is to create discipline focused rules. For example, when you clash piping/plumbing versus steel, then make the piping/plumbing your primary tag and steel your secondary tag. This type of rule groups related steel clashes to a single piping/plumbing clash.

4.5.1 Considerations


Admin and Standard users can create coordination rules. Read-only users can also create coordination rules but cannot save any actions to the project.

4.5.2 Steps

To open Clash Manager, go to Logic > **Clash Manager**.

Create a coordination rule group


1. In the Rules tab, click the **Add Group** folder icon in the Groups section, and then enter the group name.
2. Click the new group folder, and then click **Add folder** to create a sub-folder.
3. Select one or more rules, select a Group folder, and then click the **Add to Group** button.

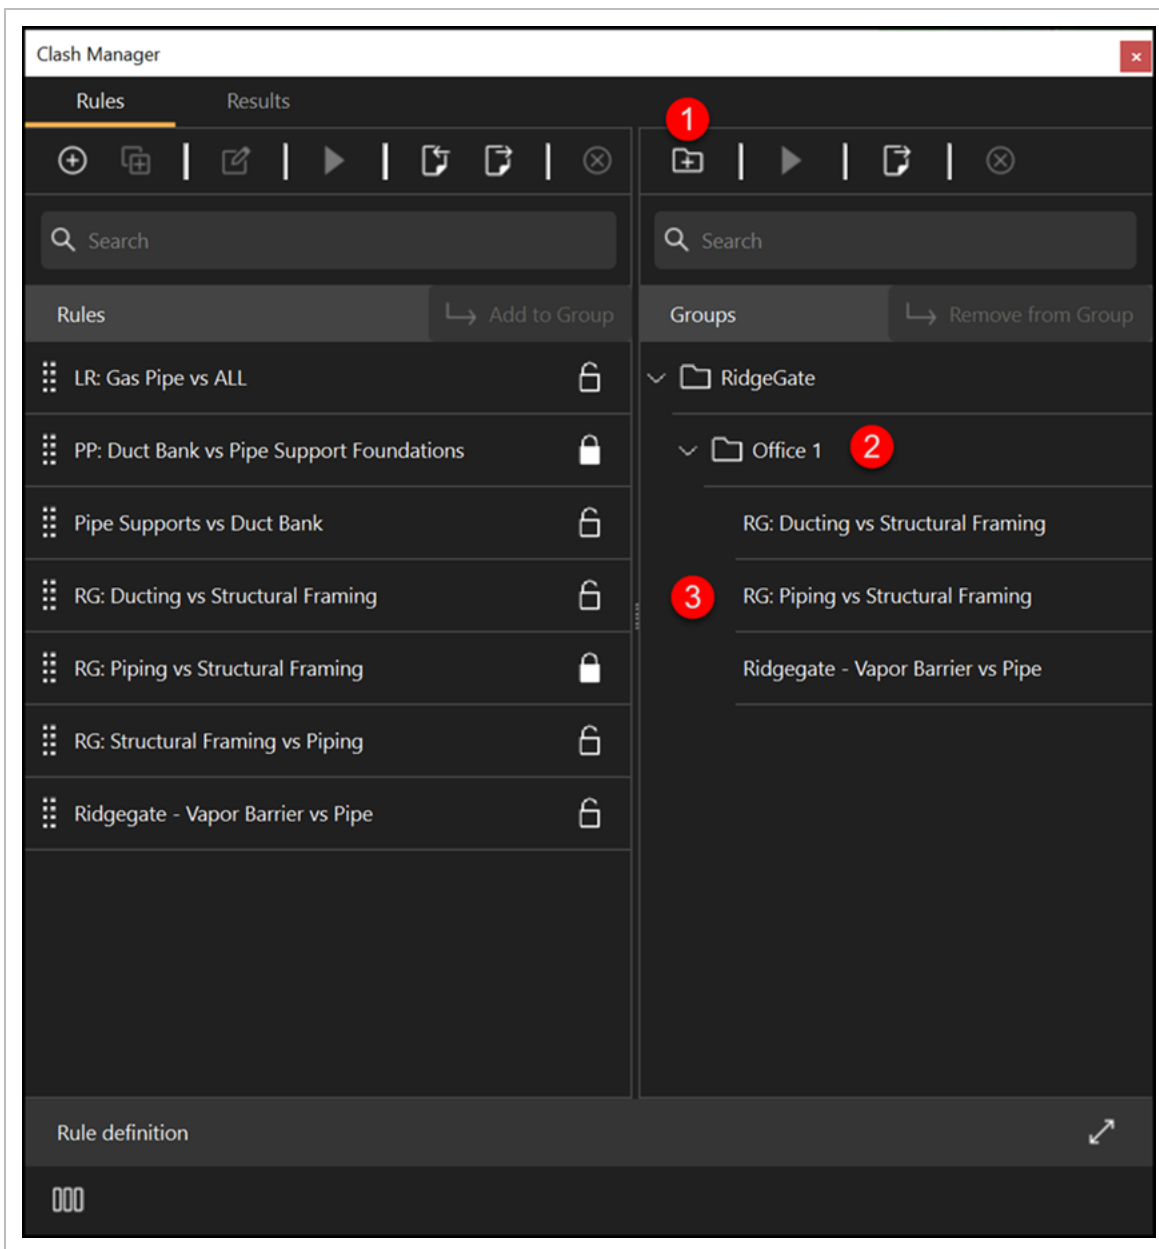

To view the Rules and Results tab side-by-side, click the **Expand** icon at the bottom left of the panel.

Export rules groups

1. Click the **Export** icon.
2. Select **Export All Groups...** or **Export Selected Groups...**. The export file is saved in a `.cr` file extension in xml format.

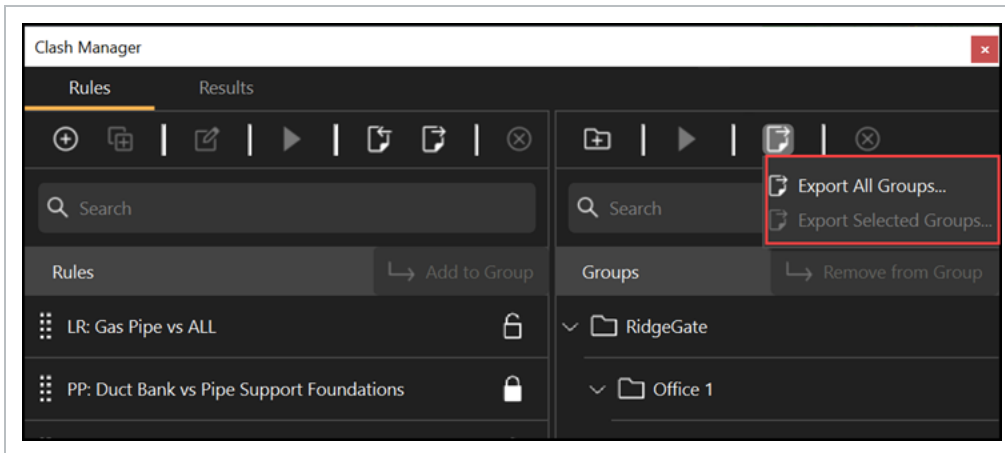


4.6 SHOW DUPLICATE OBJECTS

The Show Duplicate Objects option lets you perform duplicate checking operations in the aggregated Model environment.

Based on the data reported using the show duplicate option, the design team can remove duplicate object geometry from the authoring environment.

To see a list of duplicate objects, run the report in Logic > **Show Duplicate Objects**.

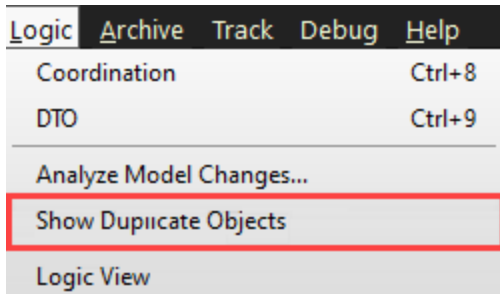

A new window opens that shows grouped duplicate objects and provides the source file information so you can remove the duplicated geometry at the source.

Duplicate Objects				
Group	Source ID	Object Name	Model	InEight Model GUID
1	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d39	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
1	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d39	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
2	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3a	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
2	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3a	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
3	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d39	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
3	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d39	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
4	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3a	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
4	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3a	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
5	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3b	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
5	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3b	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
6	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3a	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
6	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3a	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
7	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3b	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
7	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3b	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
8	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3b	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
8	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d3b	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
9	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d37	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3
9	83cf130e-0e6f-4fa3-b8fa-7b54eaca5e17-00143d37	UHMW, White	INT_OFFICE_2	6d817188-6587-49b7-af76-7dd65728c0d3

8278 Duplicate Objects found in 14 Different Models

Export

4.6.0.1 Export duplicate objects

You can export and view the data in an Excel file. Click the **Export** icon at the bottom right to start the export.

NOTE The default export file type is .csv.

The exported duplicate objects file can be imported to the archive library and attached to issues. You can then export them to a BCF export for the engineering team to review.

Lesson 4 Review

1. _____ are created to detect clashes.
 - a. Styles
 - b. Tags
 - c. Coordination Rules
 - d. None of the above

2. Coordination rules can only be run individually.
 - a. True
 - b. False

3. _____ define the parameters around objects for clash detection.
 - a. Clearance settings
 - b. Coordination issues
 - c. Coordination rules
 - d. None of the above

Lesson 4 Summary

As a result of this lesson, you can:

- Create and manage a coordination rule
- Create and manage coordination rule groups
- Define clearance settings



LESSON 5 – COORDINATION - ISSUE MANAGER

Lesson Duration: 60 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Create clash results
- Create and manage coordination issues
- Find nearby clashes and add clashes to an existing issue
- Create and manage coordination results


Topics in this Lesson

5.1 ISSUE MANAGER OVERVIEW

Issue Manager lets you turn geometric clash issues, model review, and site-walk findings into issues. Issues can be grouped and then assigned and tracked all the way to completion.

The Issue Manager contains 3 tabs:

- **Issues** – View the list of issues grouped in folders.
- **Details** - Lets you add additional information such as status, assignee, set location pins, resolution information, add additional views, attachments, and markups.
- **Summary** - Shows all clashes associated with the issue.

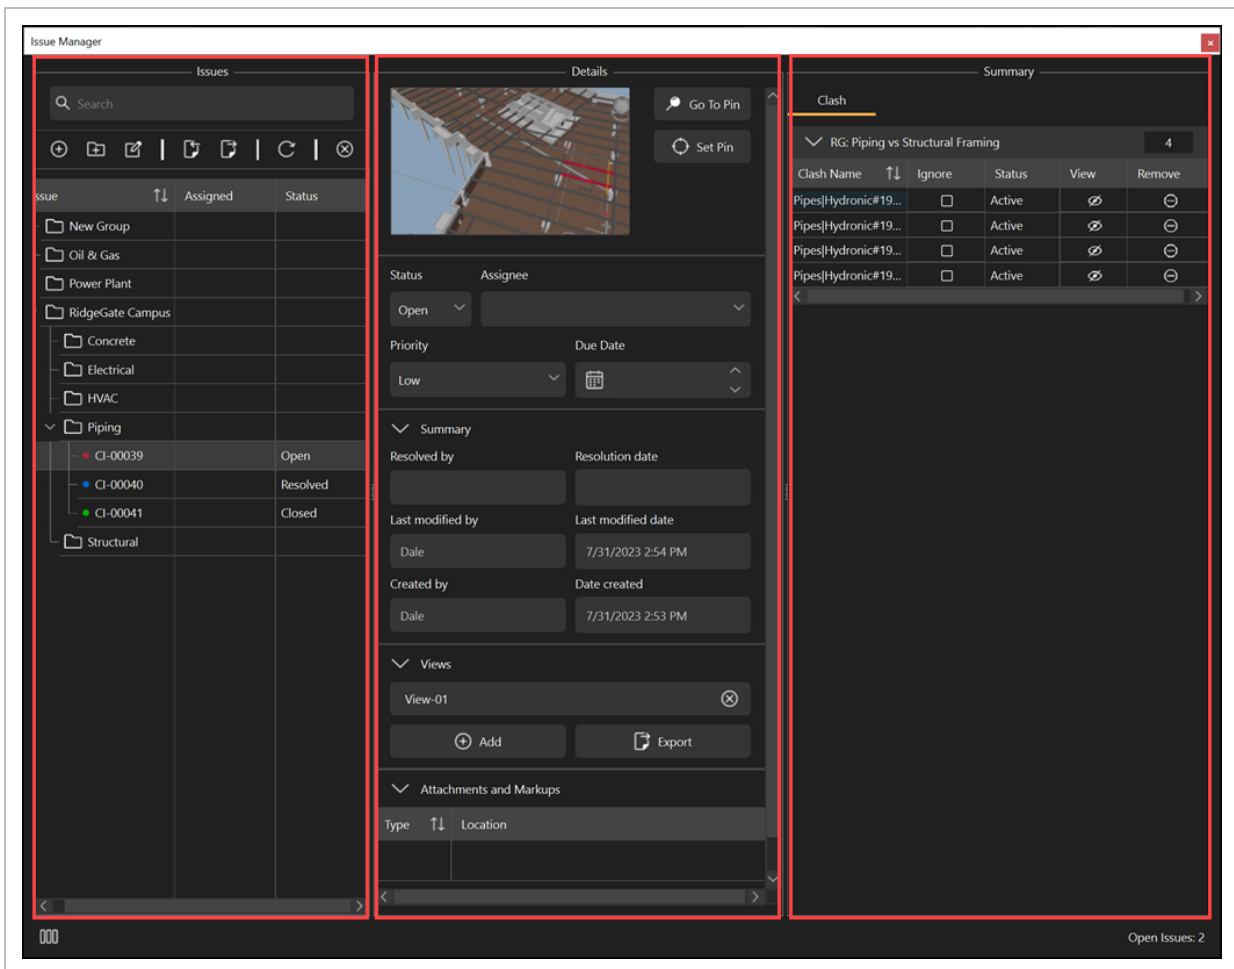

To view all tabs side-by-side, click the **Expand** icon at the bottom left of the panel.

5.2 CREATE AND MANAGE COORDINATION ISSUES

Coordination issues are groupings of geometric clashes, viewpoints, documents, and markups that can be assigned to a user or a user group. You can create coordination issues without a geometric clash. All issues created can be exported.

5.2.1 Considerations

When creating and managing issues, one best practice is to have the Clash Manager's Results panel and Issue Manager panel open side-by-side. After you run a clash rule or rule group, your focus will be on their results in the Clash Manager's Results tab and the Issue Manager.

5.2.2 Steps


To open the Clash or Issue Manager, go to Logic > **Clash Manager** or **Issue Manager**.

Add folders and sub-folders to organize issues

1. In Issue Manager, to add a new folder, click the **Add folder** icon, and then name the folder.
2. To add sub-folders, select a folder, and then click **Add folder** icon.


Create a non-geometric clash issue

1. Select a folder, and then click the **Add issue** icon. A new issue is created, and the Details panel opens to fill in the issue details.

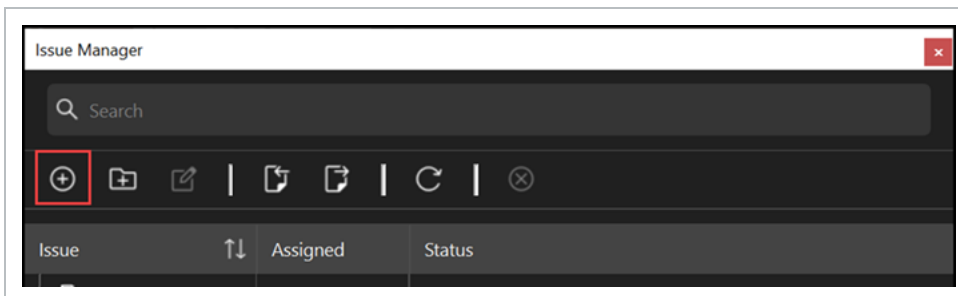

Create a coordination issue from clash results

1. Open the Clash Manager and the Issue Manager's panels side-by-side.
2. In Clash Manager, run a rule or rule group.
3. In Issue Manager, select or create a folder to push the clash results into.

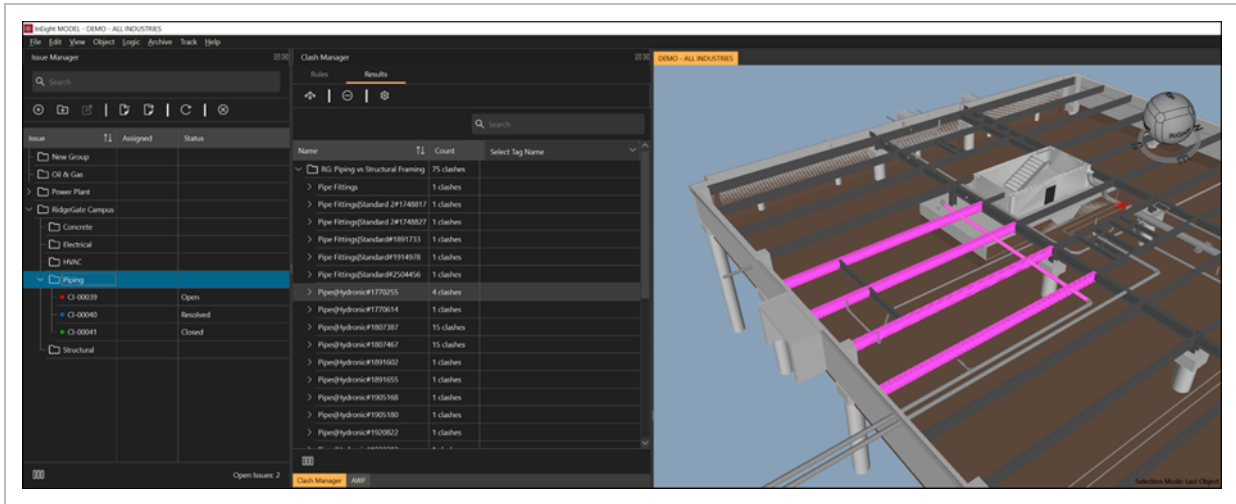

4. Select a clash result, and then in the viewer, zoom into the result.
5. Right-click the clash result, and then select **New Issue from selected result** or **Add selected results to current Issue**. The Details tab shows.

In the Details tab you can view and manage thumbnails, clashes, status, summary, views, attachments, and markups. For more information about the Details panel, see Details panel overview.

Issue Manager

RidgeGate Campus/Piping/CI-00050

Go To Pin

Set Pin

Clashes 4

Status: Open
Assignee: Sub_Piping

Priority: Medium
Due Date: 8/18/2023

Summary

Resolved by	Resolution date
Last modified by: Dale	Last modified date: 8/10/2023 8:34 AM
Created by: Dale	Date created: 8/10/2023 8:32 AM

Views

Add Export

Attachments and Markups

Type	Location

Add Link

Open Issues: 4


To view the all tabs side-by-side in Issue Manager, click the **Expand** icon at the bottom left.

NOTE

When you create an issue offline, the issue ID number shows as a GUID. An issue ID number is assigned the next time you are online.

Add markup

1. In the Details panel, under **Attachments and Markups**, click the **Add** button. A New Markup tab opens in the viewer window.

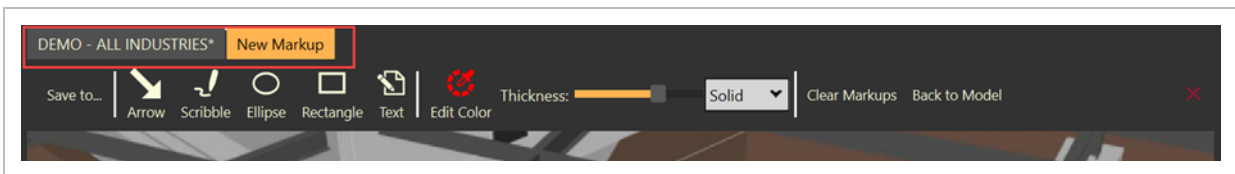


2. Markup the view using the markup tools.

NOTE

You can edit the size of the text by highlighting the text and then using the **Thickness** bar.

3. To save the markup, click **Save to...**, and then you can select **Issue...** or **File...**. When saving to Issue, it saves the markup to the issue. When saving to File, it saves the markup to a PDF file.

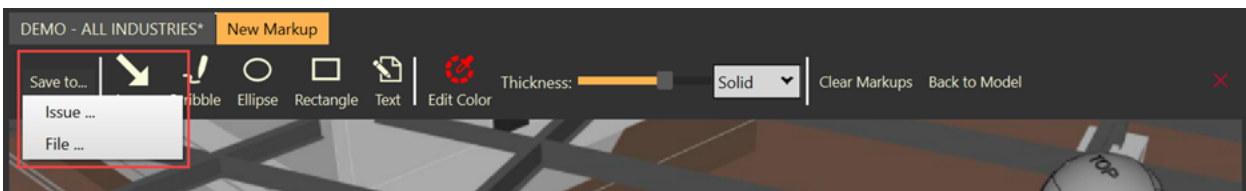


4. Click the **Back to Model** button to go back to the viewer.
5. To close the markup view, click the **Close** icon at the far right.

Edit an issue

1. Select an issue, and then click the **Edit issue** icon. The issue opens in the Details panel.
You can view and edit thumbnails, pins, clashes, status, assignee, priority, due date, summary, views, attachments, and markups.

2. Select **Clashes** to view all clashes in the issue. You can edit active clashes and change to **Ignore** or **Resolved**. When all the clashes are set to Ignored or Resolved, the issue status automatically shows as Resolved.

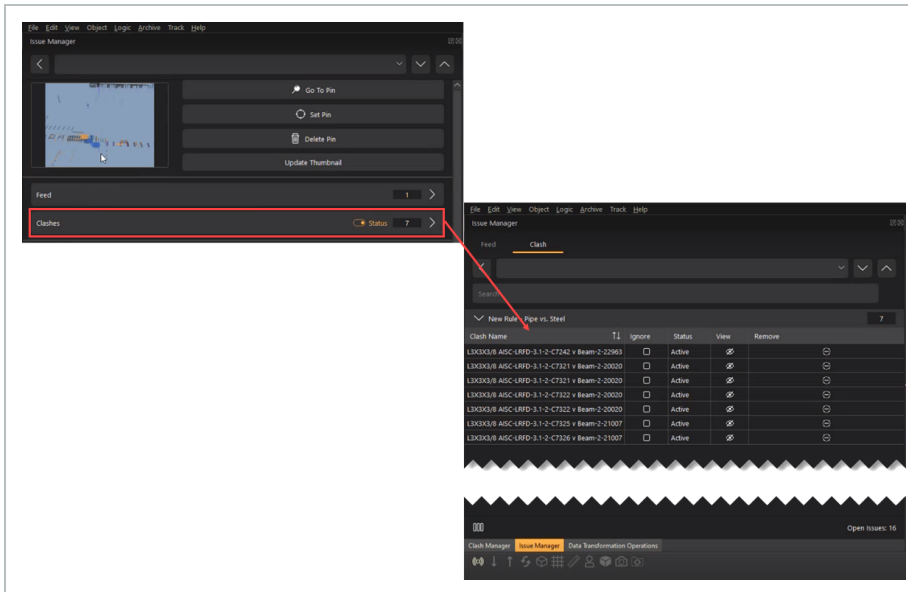**NOTE**

When an issue is in Resolved status, the coordinator responsible should visually inspect the issue to ensure it has been resolved in a satisfactory manner. The coordinator can then change the issue status to **Closed**.

The status for a clash or clashes is automatically set to invalid when one or both intersecting objects are deleted in the design application, the model is published to InEight Model, and the **Update Issue** function is executed.

An invalid status indicates that InEight Model can no longer detect the clash since it cannot detect the source object or objects. Invalid clashes are treated as resolved.

Import issues

1. In the Issues panel, select the **Import** icon.
2. Select your BCF file, and then select **Open**. Your files are imported to an **Imported Issues** folder.

Export issues

1. In the Issues panel, select one or more issues or select a group folder that contains issues.
2. Click the **Export** icon, and then select **BCF 2.1** or **BCF 3.0**.
3. You can then name and save the file. The file is saved in a *.bcfzip* file format which can be opened in other applications as shown in the image below:

The screenshot displays the BIMcollab BCF Manager interface. At the top, the title bar reads "BIMcollab BCF Manager". Below the title bar is a toolbar with icons for home, save, print, and refresh. The main area is divided into two sections: "Offline" and "All issues". The "All issues" section shows a grid of six thumbnails representing coordination issues, numbered 1 through 6. Issue 4, CI-00009, is highlighted in blue. Below the grid is a toolbar with icons for zoom, list, and search. The detailed view of issue CI-00009 shows a 3D model of a pipe and a table with the following information:


CI-00009
Unassigned
Active, Undefined, Undefined
Undecided

Below the detailed view is a table with the following columns: "C.. Comment", "Created by", and "Snapshot".

C.. Comment	Created by	Snapshot
0... Move pipe down	dale	
0... Move pipe down	dale	
0... Move pipe down	dale	

Update issues

1. Publish a new model revision.
2. Click the **Update Issues** icon.

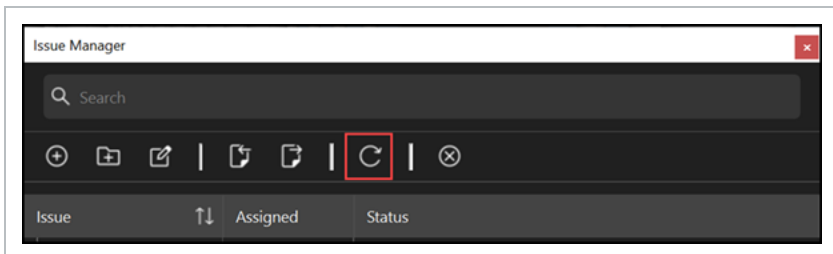

The resolved clashes automatically change the clashes in the issues to a Resolved status. If all clashes are resolved, the status for the Issue also shows as Resolved.

Delete a coordination issue


1. Select a coordination issue, and then click the **Delete** icon.

5.3 COORDINATION ISSUE REPORTING


Coordination Issue Reporting can be achieved by accessing Issues through the Excel plugin.

Access Issues via Excel Plugin for Reporting

1. In Excel, select **InEight** in the menu ribbon.
2. Click the **Login** icon to log into your project. The Login to InEight dialog box opens.

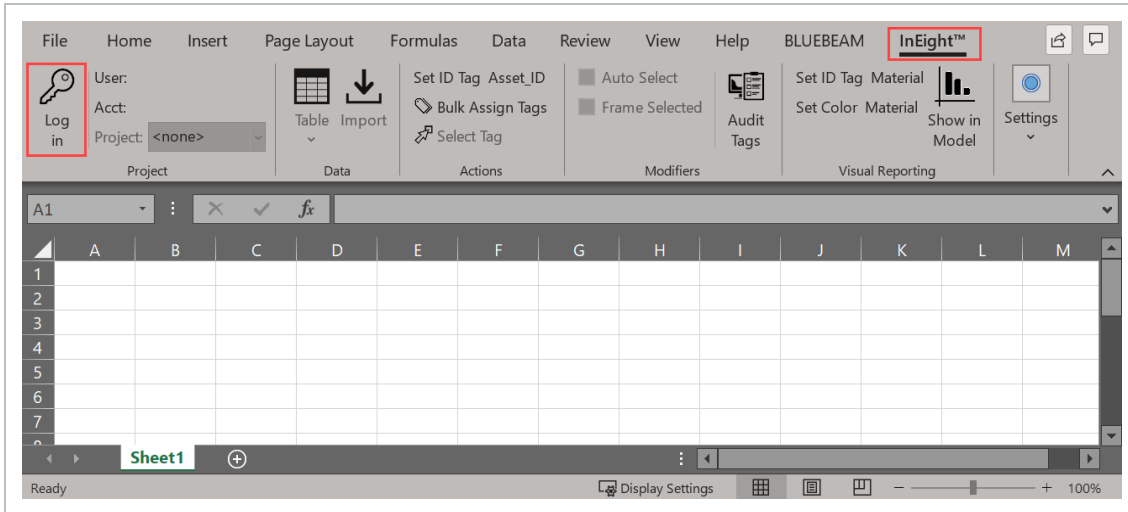


3. Enter your **password**.

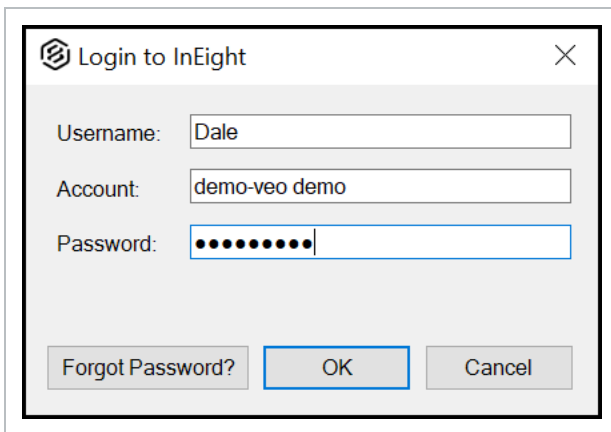


- The Select Project dialog box opens.

4. Select your project, then click **OK**.

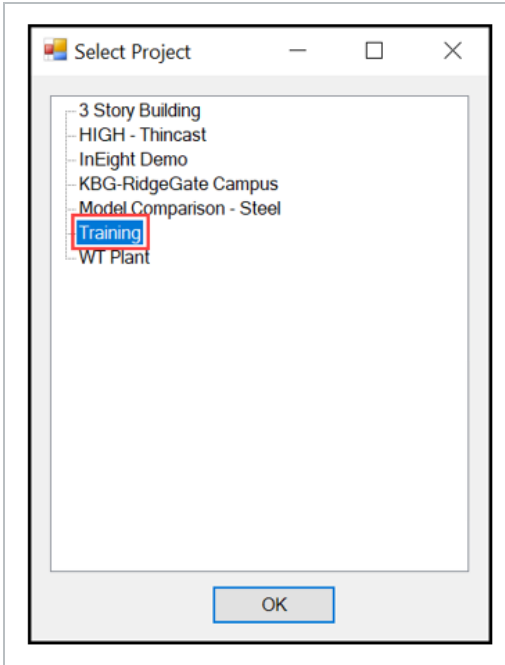


- User, Acct, and Project are shown.

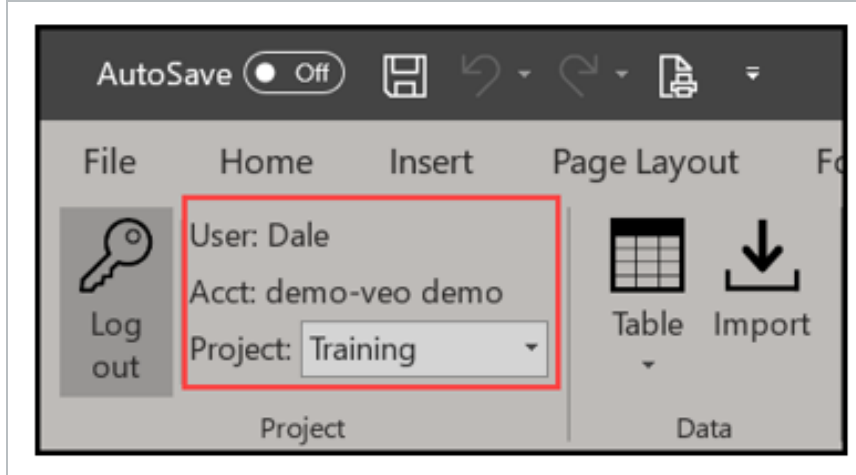


5. Select the **Table** icon.

6. Hover over Tracked Issues > Tracked Issue, and then click **Query All**.

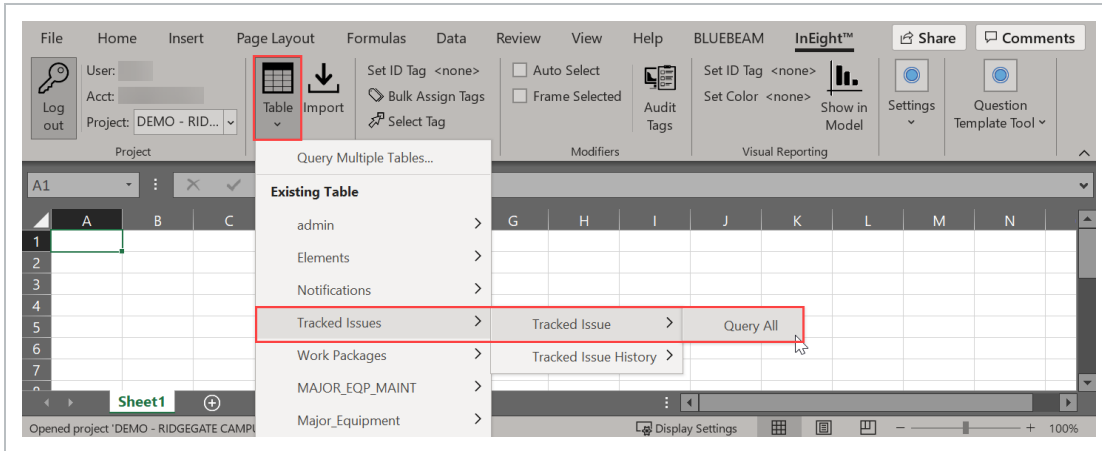

NOTE All the Coordination issues are shown. This is a direct view into the database tables

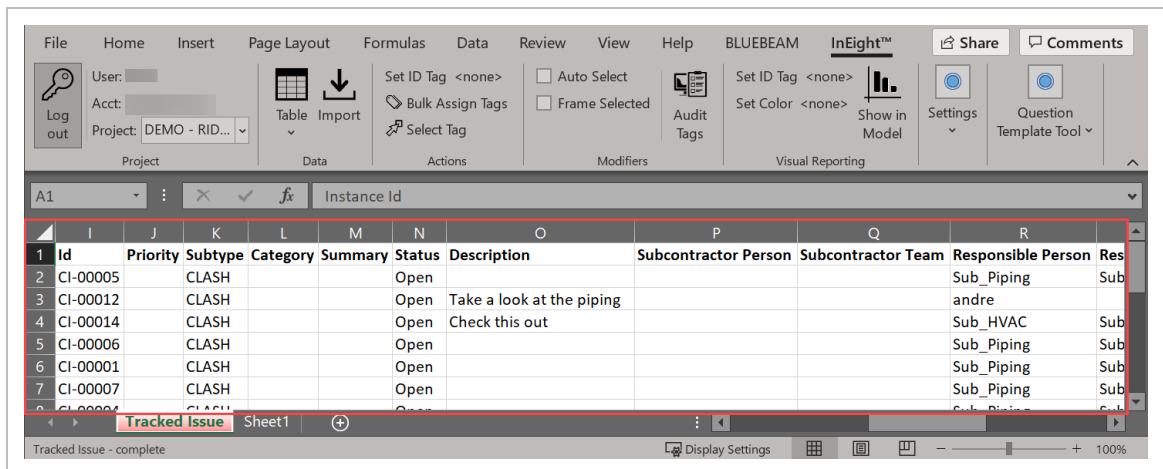

Lesson 5 Review

1. Coordination issues are created from _____ .
 - a. Model streams
 - b. Tags
 - c. Master presets
 - d. Clashes

2. Issue statuses always start as _____ .
 - a. In progress
 - b. Open
 - c. Closed
 - d. Flagged

3. After resolving a coordination issue, the reviewer should physically review the site to ensure the issue (and any potential related issues) is resolved.
 - a. True
 - b. False

Lesson 5 Summary

As a result of this lesson, you can:

- Create clash results
- Create and manage coordination issues
- Find nearby clashes and add clashes to an existing issue
- Create and manage coordination results



LESSON 6 – ARCHIVE

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Import and manage project documents
- Link documents to objects and tags
- Link specific pages
- View documents within InEight Model

Topics in this Lesson

6.1 ARCHIVE OVERVIEW

The **Archive** is a repository for documents. Archive supports files of any size and type, provides fine-grained permission controls, and retains a complete revision history. The Archive is accessible within InEight Model, Mobile and Web applications.

Archive includes **Archive Library** for storing and managing files, and the **Archive Viewer** for viewing supported files types.

Archive Library

Library Selection Filter Search

File Name	Labels	Type	Last Modified
Issue Attachments			
Duct Insulation.docx		DOC	Wed Mar 25 10:32:59 2020
What is InEight Model.pdf		PDF	Mon Apr 6 10:22:33 2020

Import Folder Assign Label Download Delete

Archive Library Selection Information

Archive Viewer Selection What is InEight Model.pdf

52 % 1

What is InEight Model


Common Data Environment

- Models
- Integrations
- Quality
- Maintenance
- Project Analytics
- Project Status and Health
- Field Execution
- Estimate
- Schedule
- Documents
- Planning and Execution
- Quantity and Cost Tracking
- Receiving Material
- Commissioning and Turnover

6.1.1 Archive Library

View, manage, and organize all project documents within the Archive Library. Create labels and link documents to model object tags for enhanced usability.

To launch the Archive Library panel, select **Archive > Library**.

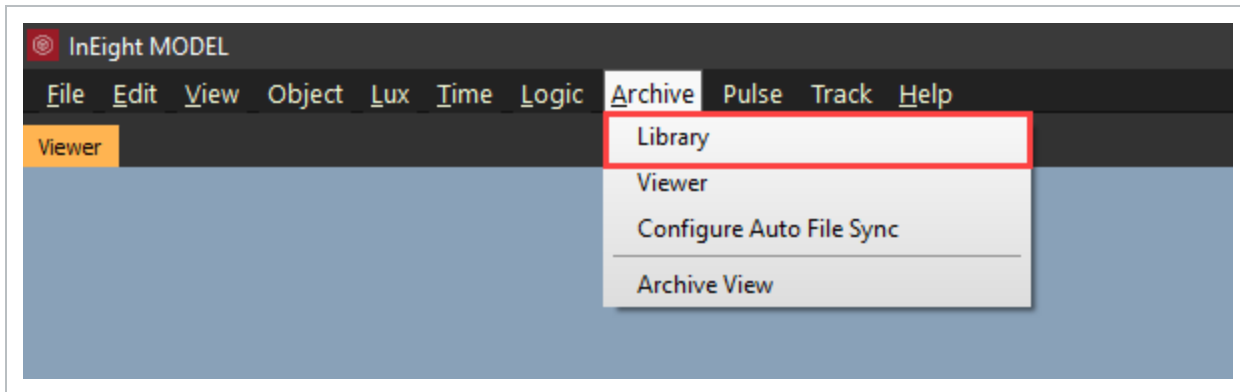


The **Archive Library panel** has two tabs: the Library tab and the Selection tab.

6.1.1.1 Library Tab

The **Library Tab** contains all the documents imported into the project. It provides the means to organize documents within a folder structure and to link documents to model object tags.

TIP Documents associated to tags will maintain its association through model updates, assuming no manipulation to tags.

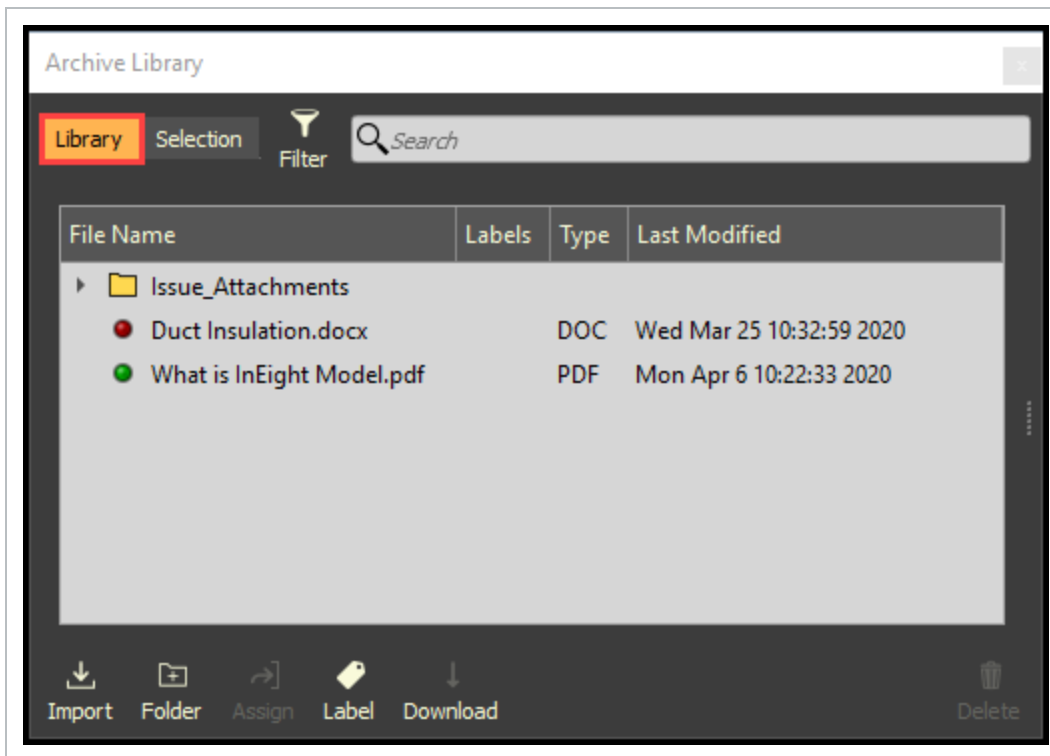


6.2 MANAGE DOCUMENTS

Documents can be grouped in a folder structure, have permissions set at the folder level, have labels assigned, and access document information.

6.2 Step by Step 1 — Import Documents

Documents in the Archive Library are either cached locally or only indexed from the online database. Any document uploaded is automatically cached locally on the computer that uploaded it and is represented by a green dot.

1. Select the **Import** icon.
2. Then select either **File** or **Directory** from the drop-down menu.

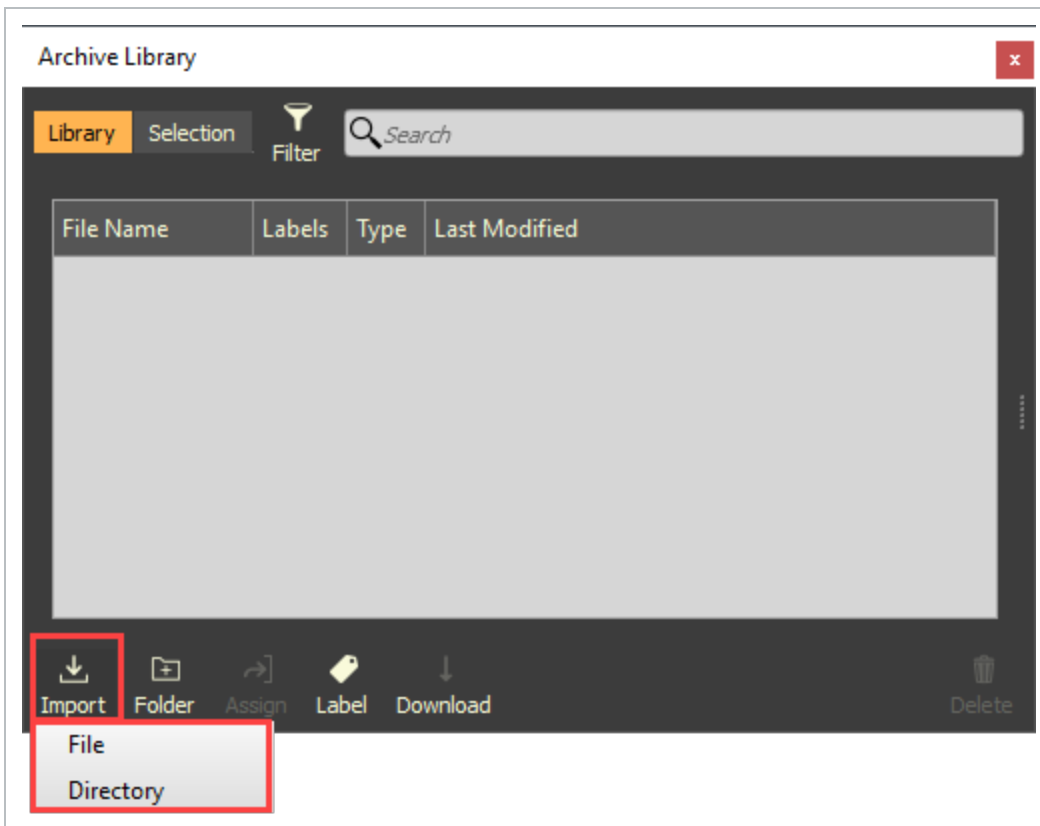


- Windows Explorer opens

TIP

Drag and drop files and/or file folders into the Archive Library panel.

3. Browse to the File or Directory location.
4. If **File** was selected, select one or multiple documents to be imported, then click **Open**.
If **Directory** was selected, select on the directory folder to be imported, then click **Open**.

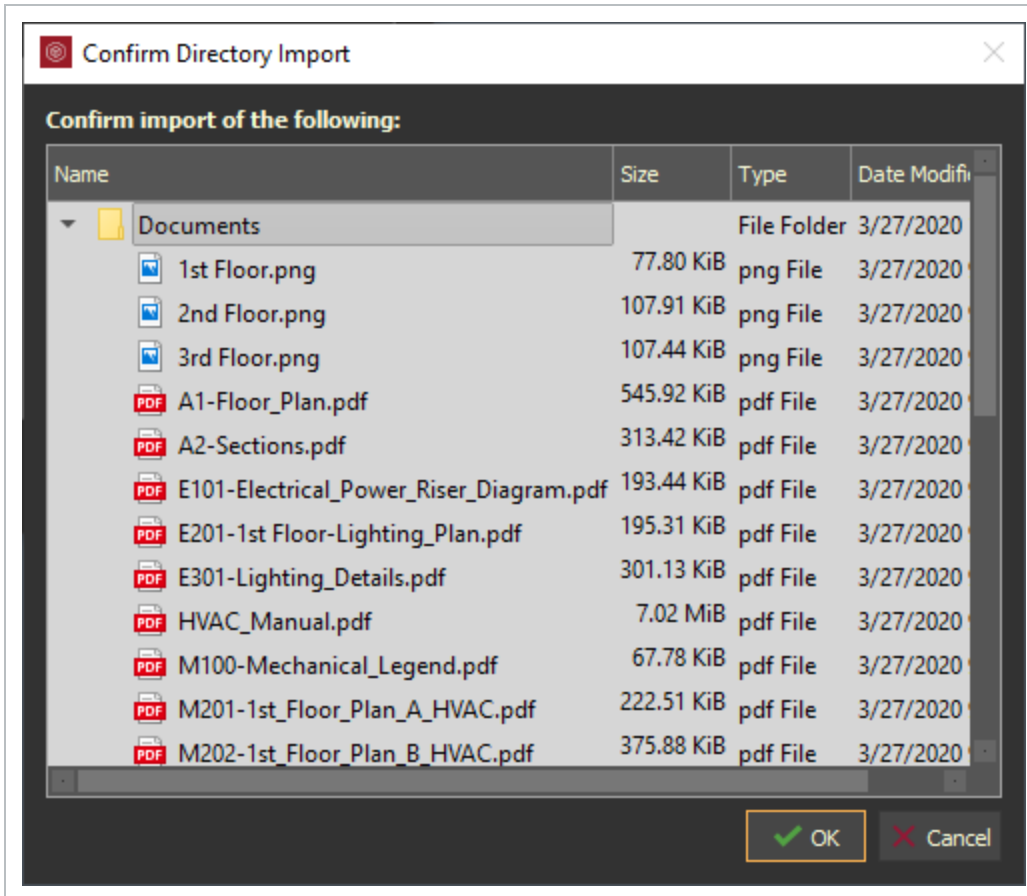

- The Confirm Directory Import dialog box opens


5. Click **OK**.

6.2 Step by Step 2 — Download Documents

Any document within the Library represented with a red dot is only indexed from the online database and needs to be downloaded to access it.


1. Within the Archive Library panel, select one or multiple documents.
2. Then select the **Download** icon.

- Or right click and select **Download Selected**

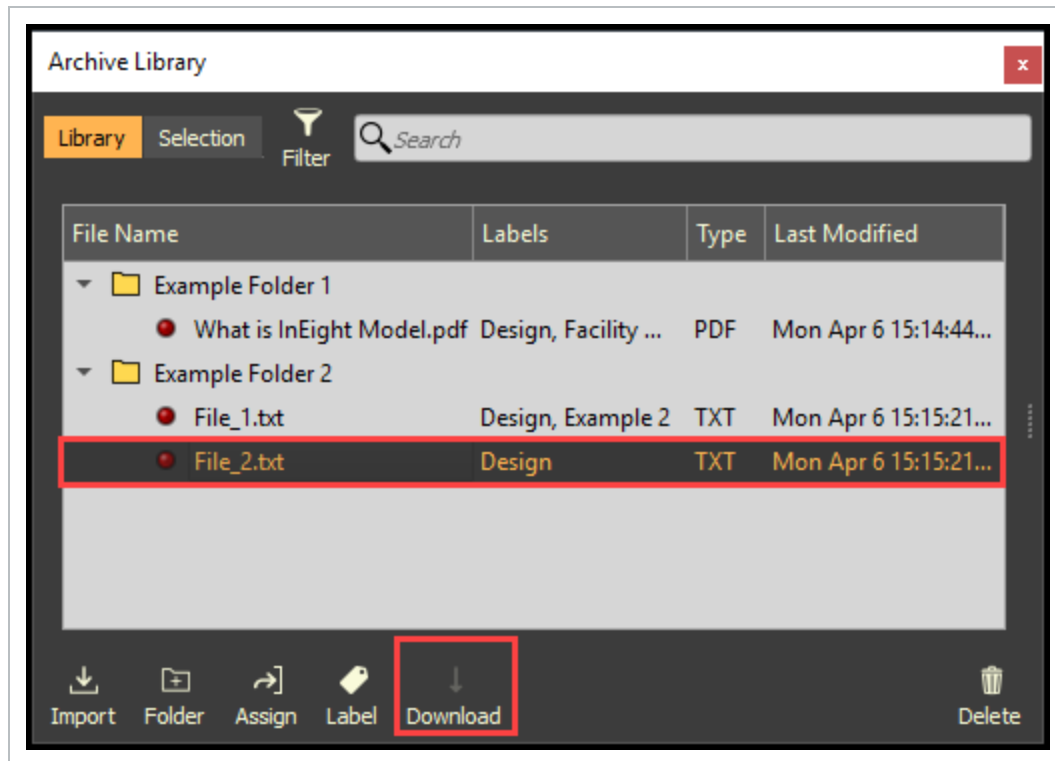

- The Download dialog box opens

3. Click **Download Selected**.

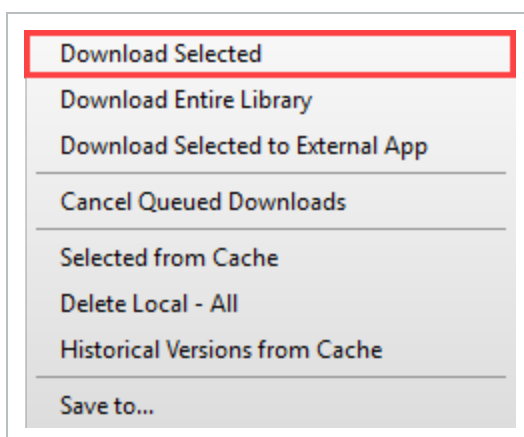


- **Download Entire Library**: downloads and caches the entire library. **Warning**: this can take a long time and use a lot of disk space with large libraries

- **Download Selected to External App:** downloads the file directory to the local computer without caching it locally to VEO_Cache
- **Save to...:** saves selected to a specific location

6.2 Step by Step 3 — Organize Documents


Organize and group documents by creating folders. Drag and drop folders and documents to rearrange them as desired. Right click on the document or folder to rename it.

1. Within the Archive Library panel, click the **Folder** icon.
2. Name the folder.

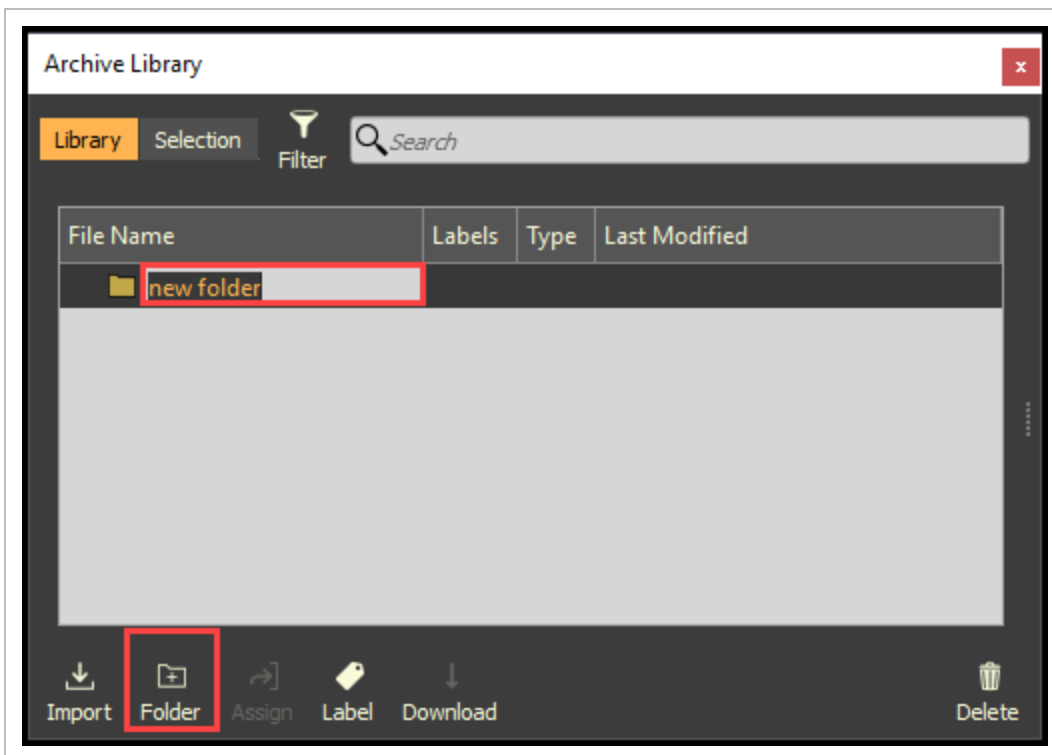

6.2 Step by Step 4 — Delete Documents or Folders

1. Select one or multiple document(s) or folder(s), then click the **Delete** icon.
2. Answer the validation response(s).

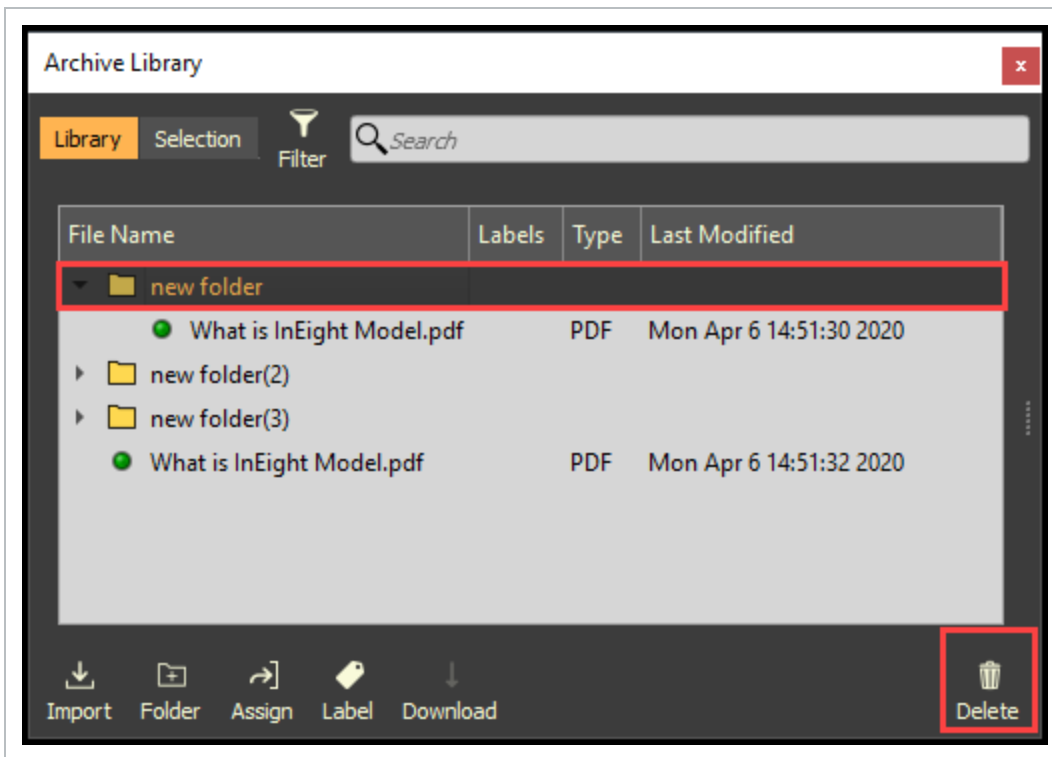**NOTE**

Deleting a folder will delete all documents within the folder. The deleted document/folder is not deleted from the local cache.


There are additional options for removing documents/folders within the **Right Click menu** under **Delete**:

- Delete > **From Archive Library**: removes document/folder from library (same as Delete icon)
- Delete > **Selected from Cache**: removes only the local cache copy of a document
- Delete > **Historical Versions from Cache**: removes previous versions of document/folder from local cache
- Delete > **Upload Data from Cache**: removes all locally uploaded document/folders from local cache **Warning**: this can take a long time and InEight Model will be unresponsive while it is in progress


6.2 Step by Step 5 — Accessing Document Information

Additional document information is maintained within the document information window within the Archive Library panel.

1. Select a document.
2. With the mouse on top of the slider bar, click and slide open.
 - Or right click on a document and select **Show Document Information**

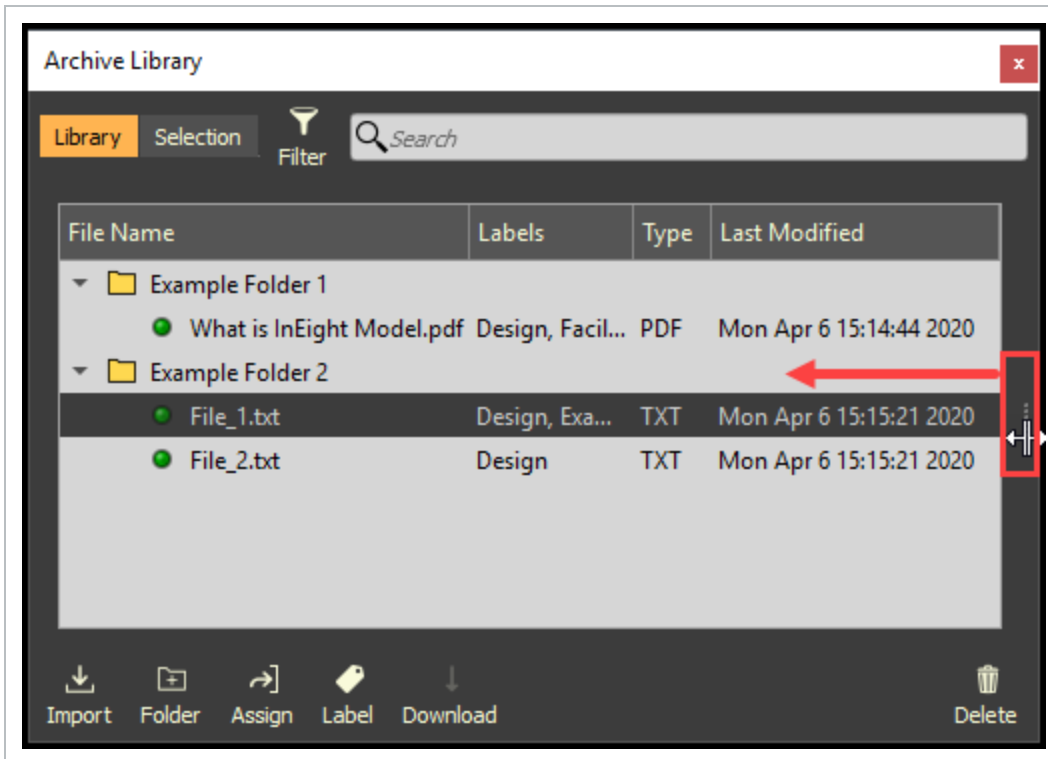

- The Document Information window opens

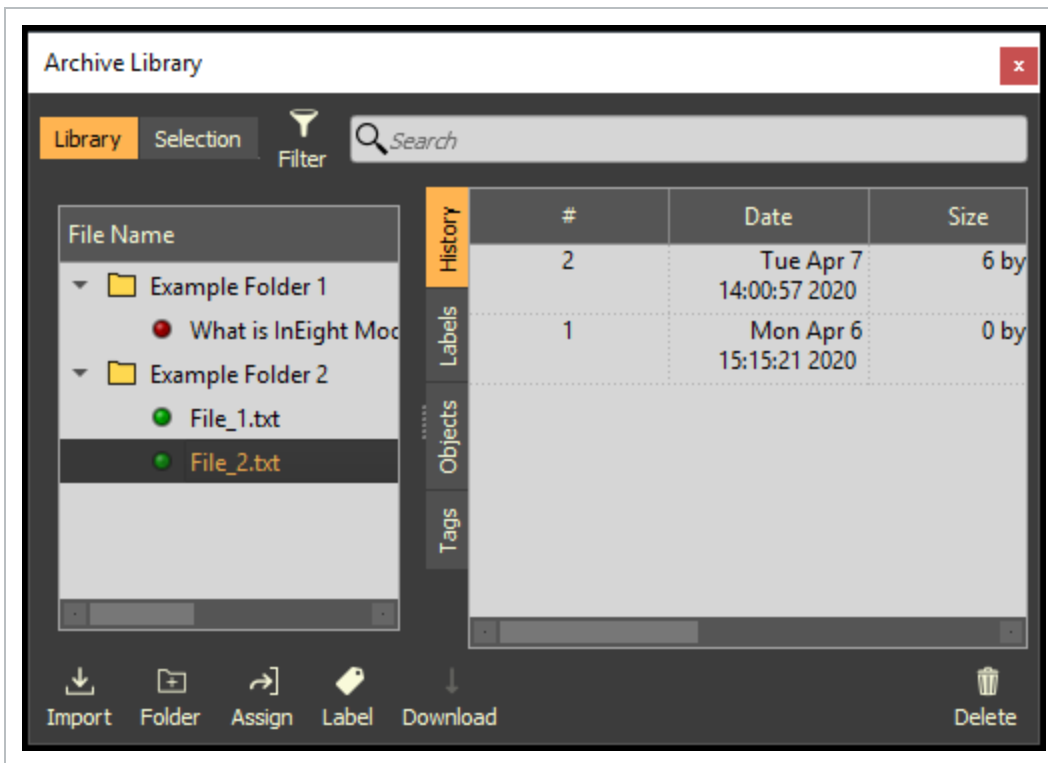

- **History:** displays the historical information of the document
- **Labels:** displays the list of available labels and which labels are associated to the document
- **Objects:** displays objects linked to the document
- **Tags:** display tags linked to the document

TIP

Right click on a document and select **Copy Selected File Information to Clipboard** to paste document information to an external application (i.e. MS Excel, Word, Email, etc.).


6.2 Step by Step 6 — Apply Permissions to Folders

NOTE

Only Admin users can apply specific folder permissions. By default, folder permissions are inherited by project level permissions.


Permissions can be set at the folder level. Nested folders inherit parent folder permissions. By default, folder permissions inherit project permission for users.

1. Select a folder, then right click and select **Edit Folder Permissions**.
 - The Set Archive permissions dialog box will open

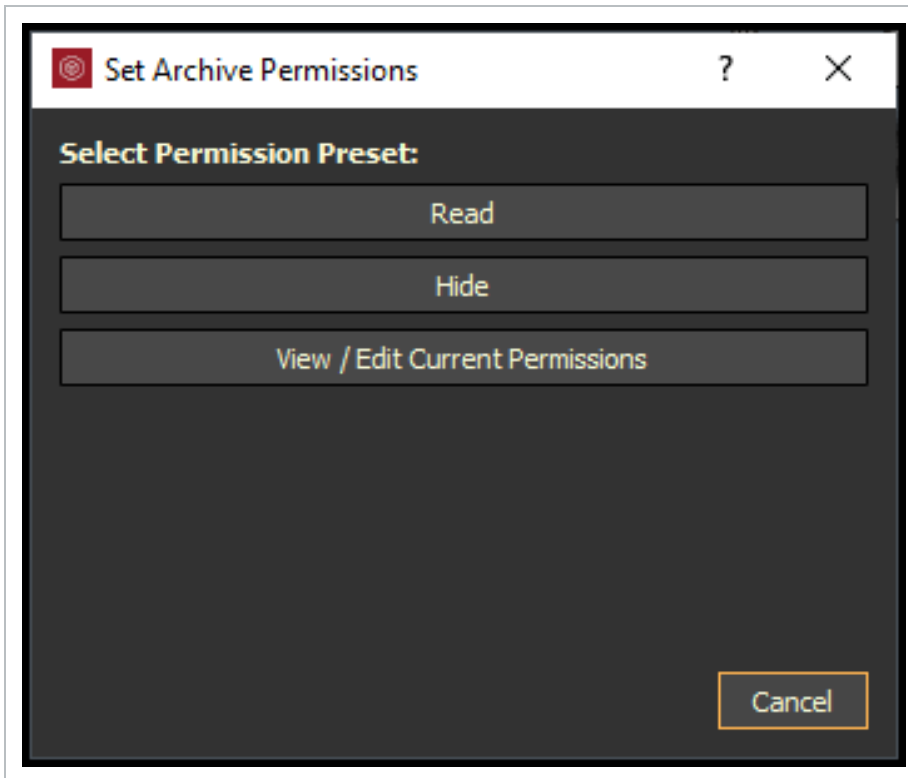


There are three permission levels:

- **None Granted:** folder is hidden
 - **Can Read:** read-only permissions
 - **Can Read and Write:** has read, write, and edit permissions
2. Select a Read permission.
 - Can Read permissions are auto assigned to all groups within the system and all users assigned to the project

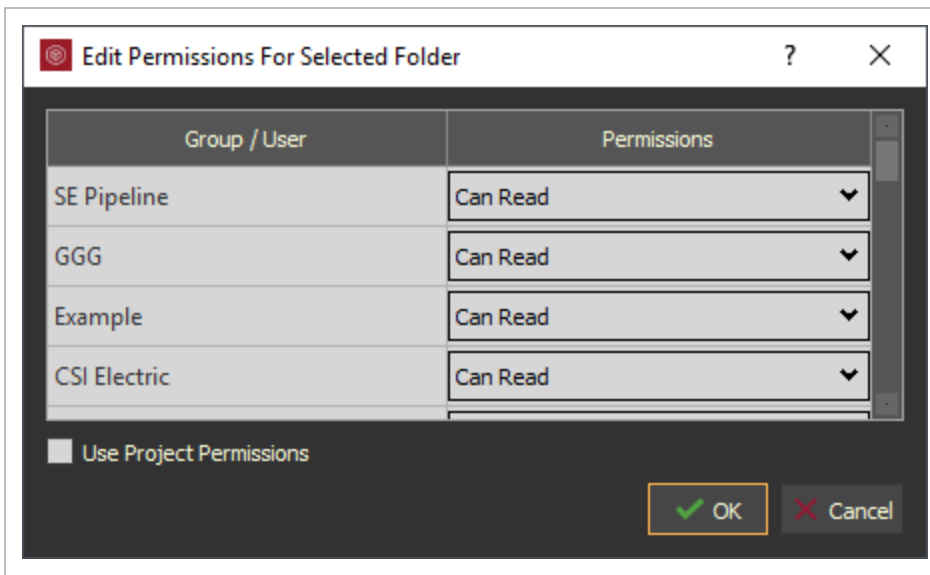

3. Make any changes as desired, then click **OK**.
4. Select a **Hide permission**.
 - None Granted permissions are auto assigned to all groups within the system and all users assigned to the project

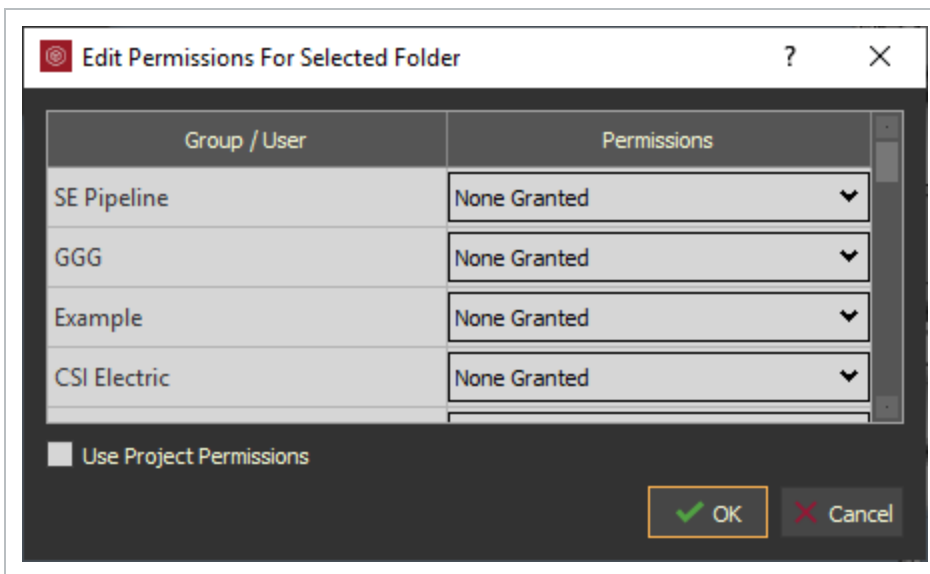


5. Make any changes as desired, then click **OK**.
6. Select **View / Edit Current Permissions**.
 - Displays all Current Permissions for the folder with applying any changes as it opens

6.2 Step by Step 7 — Search Documents

Search filters the library list to the criteria in the search bar and only searches on the File Name of the Document and/or Folder.

NOTE When using Filters in conjunction with Search, only visible content is searched.

1. Type in criteria within the Search bar.

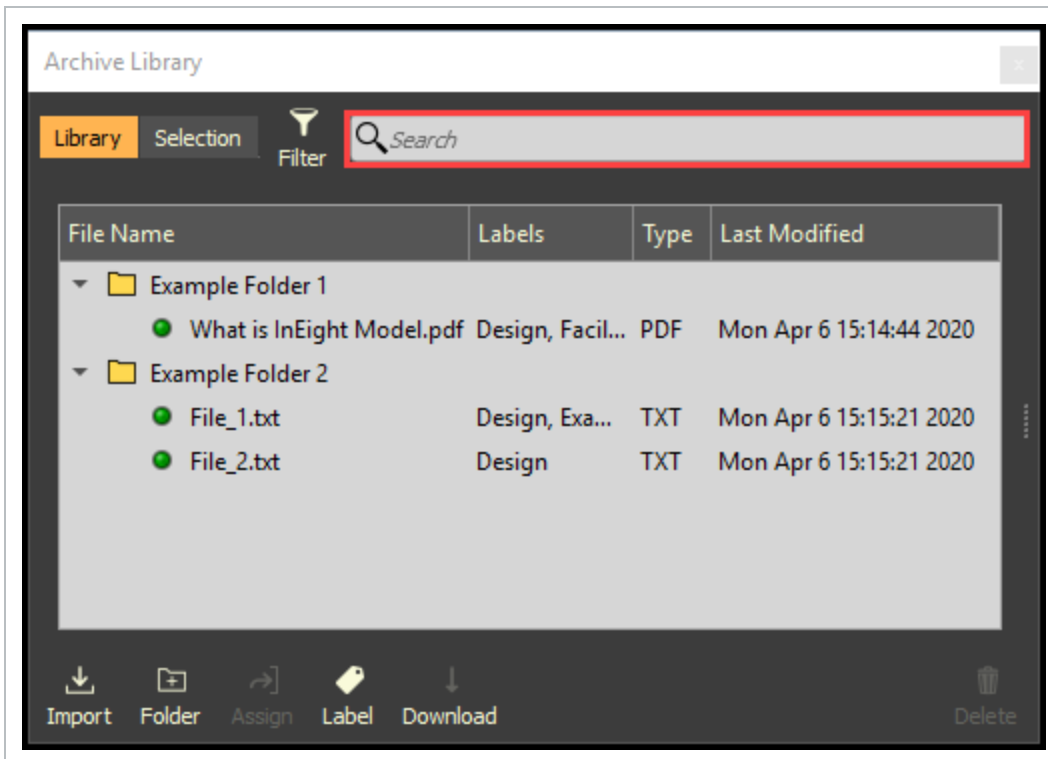


6.3 CREATE AND MANAGE LABELS

Labels can be utilized to quickly group and filter files. Multiple labels can be assigned to files.

6.3 Step by Step 1 — Create and Apply a Label to a Document


1. Select one or more documents.
2. Click the **Label** icon.

- Or, right click and select **Label Selected**

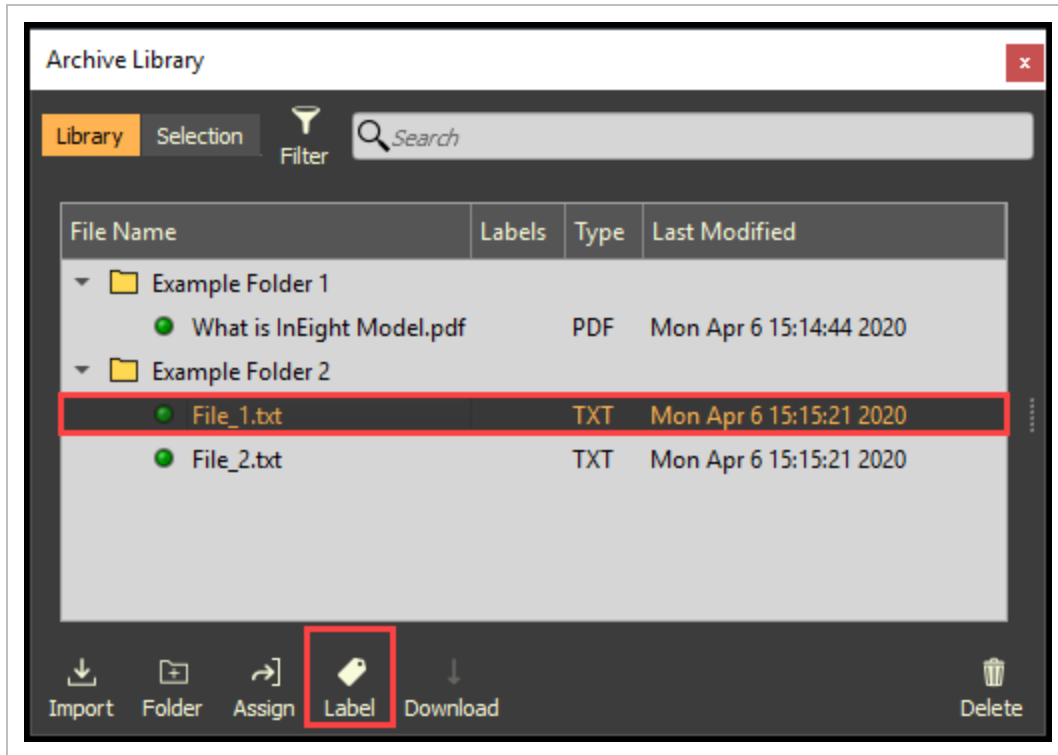


- The Add or remove labels dialog box will open

3. Type in a name, then click **Add**.




- The Label dialog box will stay open and show a checked box with a new label

**NOTE**


Labels only display in the Add or Remove Label dialog box if they have been applied to document. Once a label has been removed from all documents, it will no longer appear in the Add or Remove Label dialog box.

1. Select anywhere outside of the Label dialog box to close it and apply the checked label.

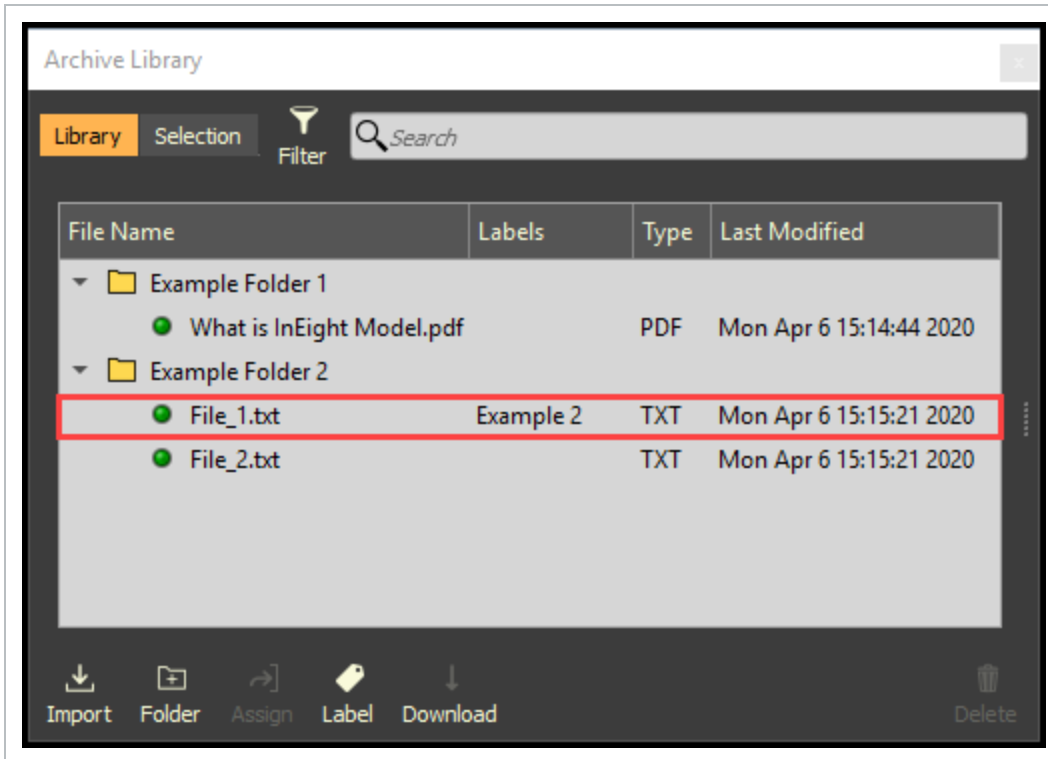

6.3 Step by Step 2 — Apply an Existing Label to a Document


1. Select one or multiple documents.
 - And/Or select one or more folders
2. Click the **Label** icon.
 - Or right click and select **Label Selected**

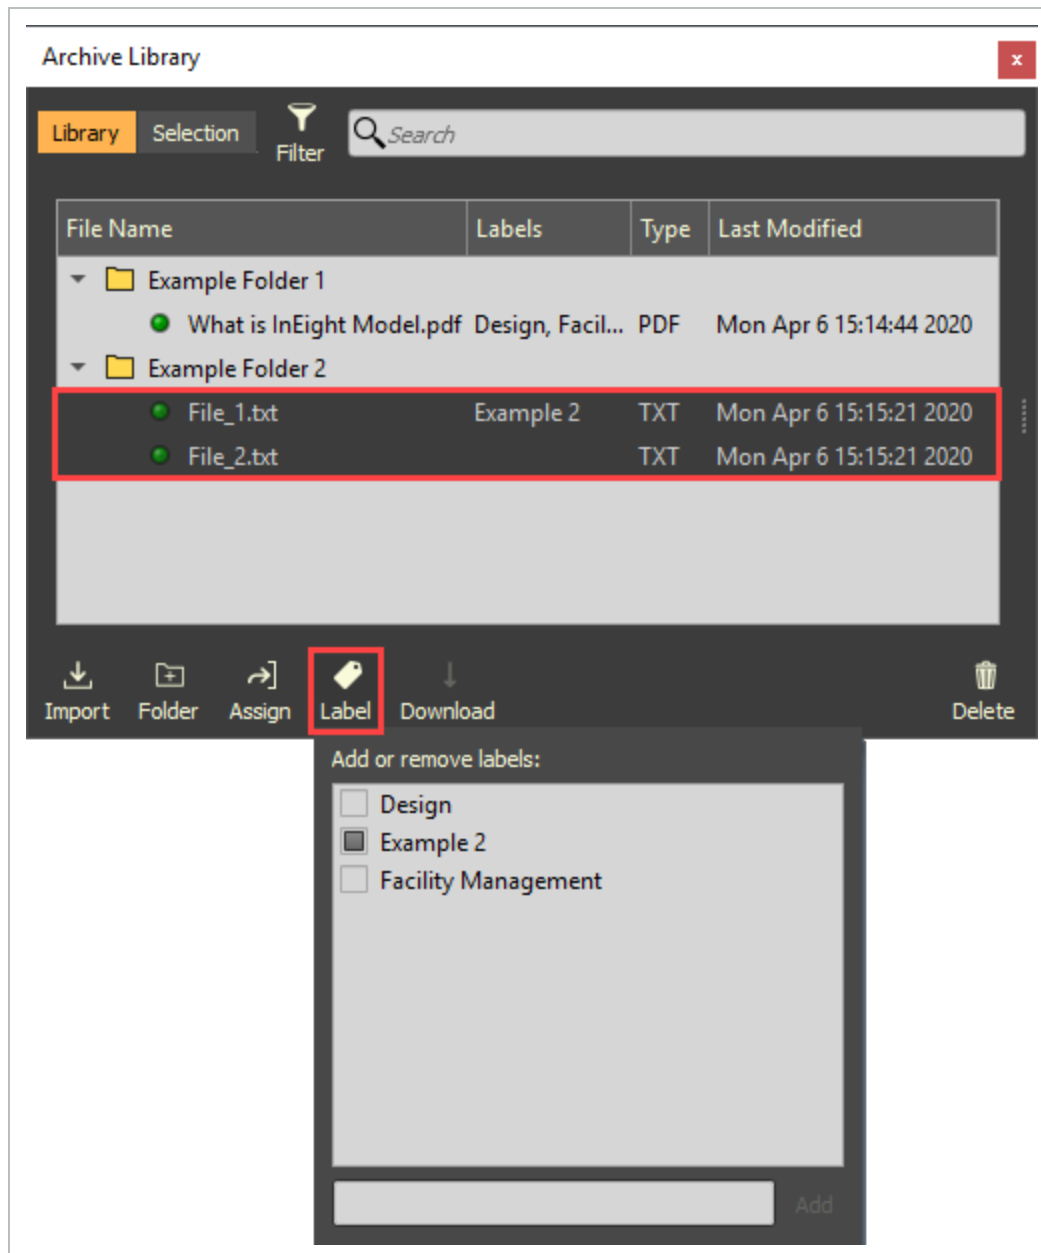


3. Select the desired labels to apply to the selected documents.
4. Select anywhere outside of the Label dialog box to close it and apply the checked label(s).

6.3 Step by Step 3 — Apply or Remove Labels within the Document Info area

1. Select one or multiple documents.
2. With the mouse on top of the slider bar, click and slide the advanced panel open.

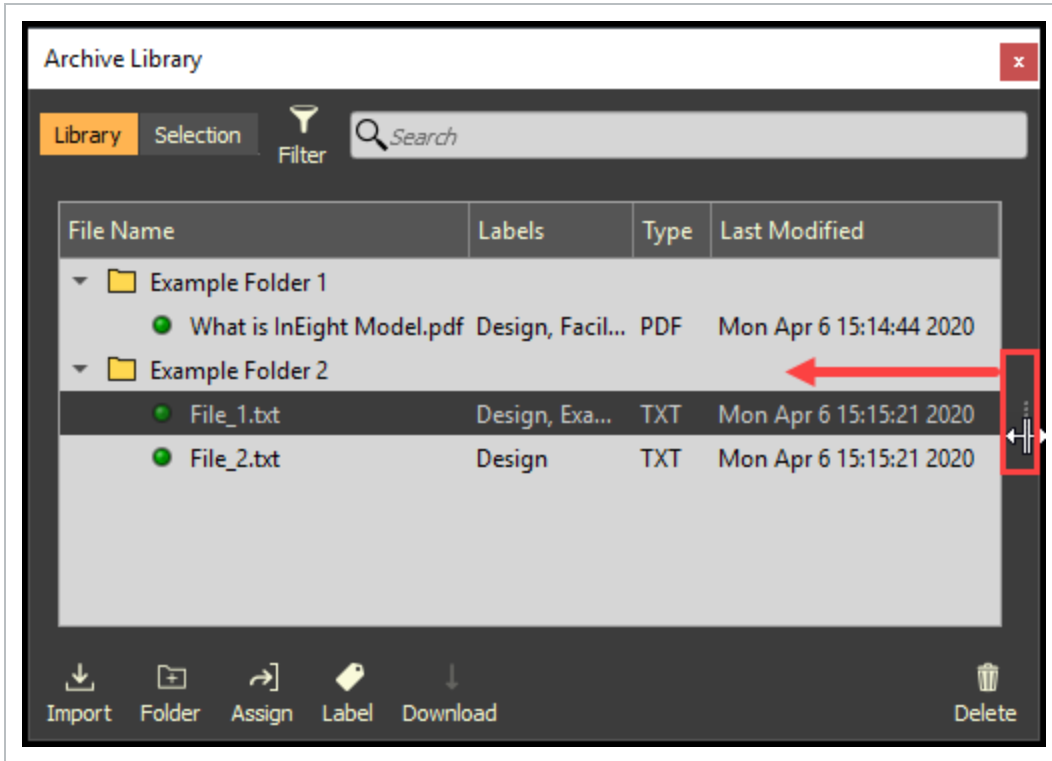


- Manage labels within the **Labels** tab

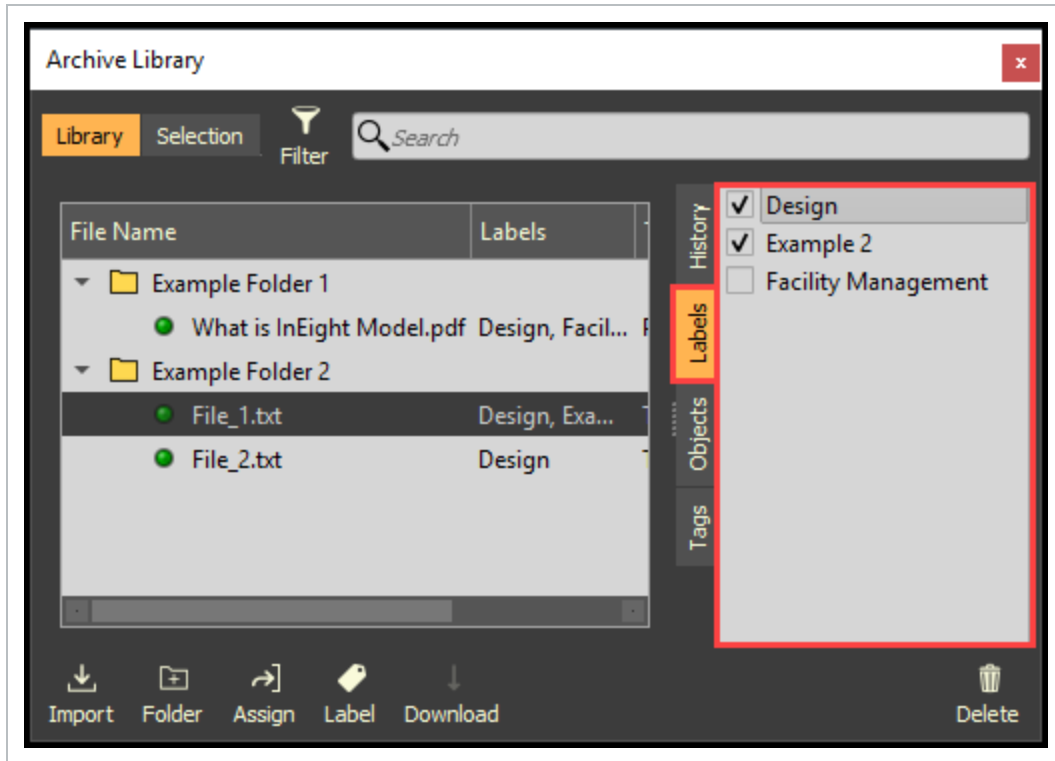

6.3 Step by Step 4 — Filter Documents by Labels

1. Select the **Filter** icon.

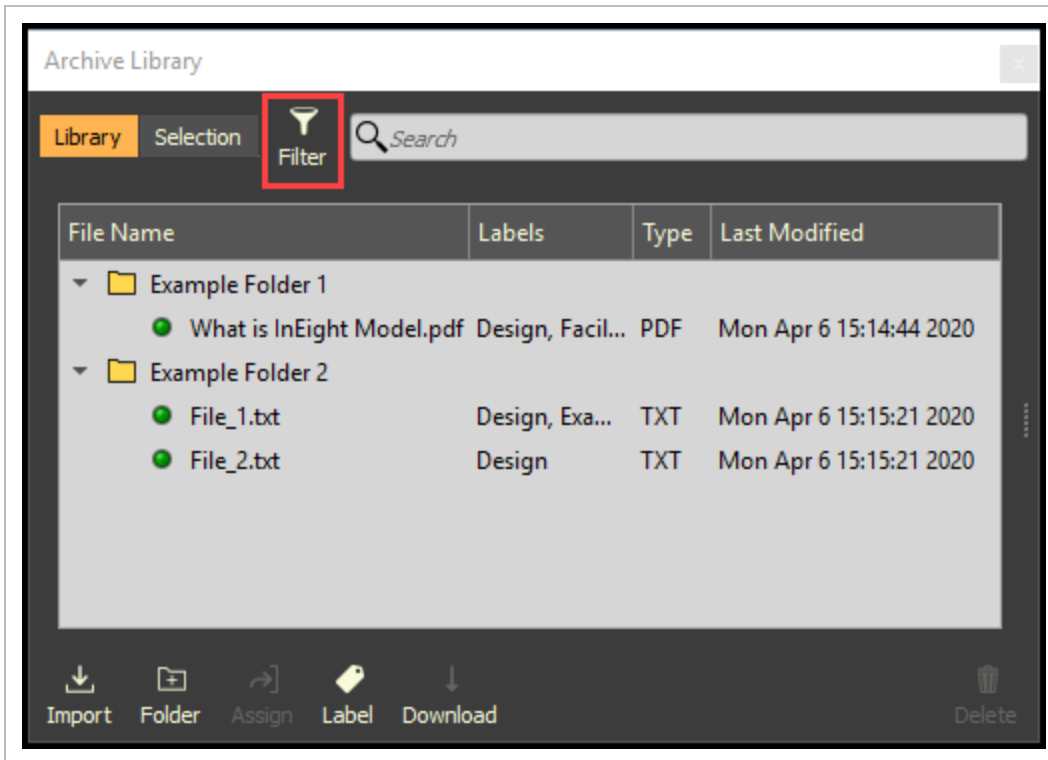

- The Filter Criteria dialog box opens

NOTE

The Filter Criteria is configured as an ALL criteria. The documents are filtered as ALL criteria is met within the Filter Criteria dialog box.

Filter Criteria

Has Label:

- All
- Unlabeled
- Facility Management
- Design
- Example 2

Status:

All

Upload Date:

Is Before

4/8/2020 4/8/2020

Uploaded By:

Any

File Type:

Any

Clear


- **Has Label:** Filter documents according to checked labels
- **Status:** Filter documents according to their status (All, Unlinked Docs, Not Downloaded, or Downloaded)
- **Upload Date:** Filter documents according to Uploaded Date criteria
- **UploadBy:** Filter documents according to who uploaded the documents
- **FileType:** Filter documents by file type
- **Clear:** Clear

6.4 LINK AND MANAGE DOCS TO TAGS


Documents can be linked directly to model object tags. Linking documents provides a convenient way to quickly access applicable documents by selecting model content within the 3D Viewer window.

6.4 Step by Step 1 — Link Documents to Tags

1. Within the Tags and Objects panel, select a **Tag Value** (i.e. Pile).

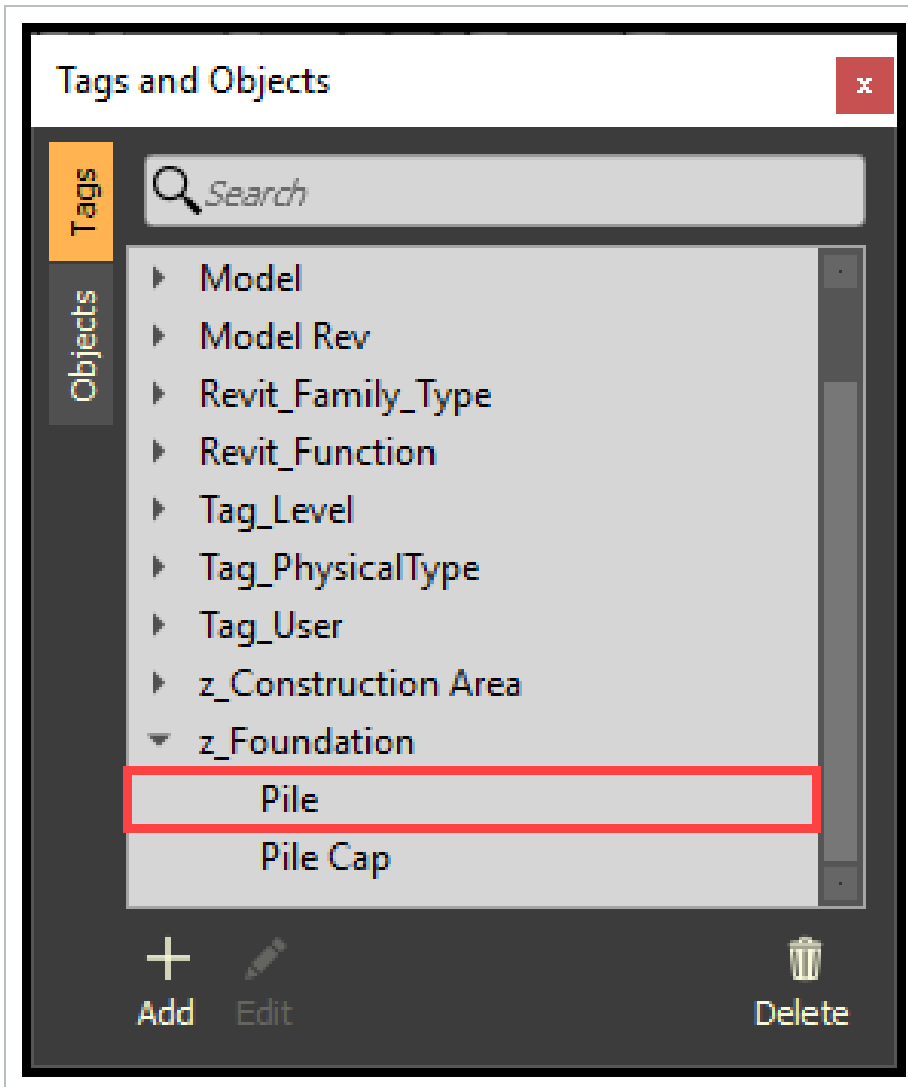

2. Within the Archive Library panel, select one or multiple documents.
3. Click the **Assign** icon.

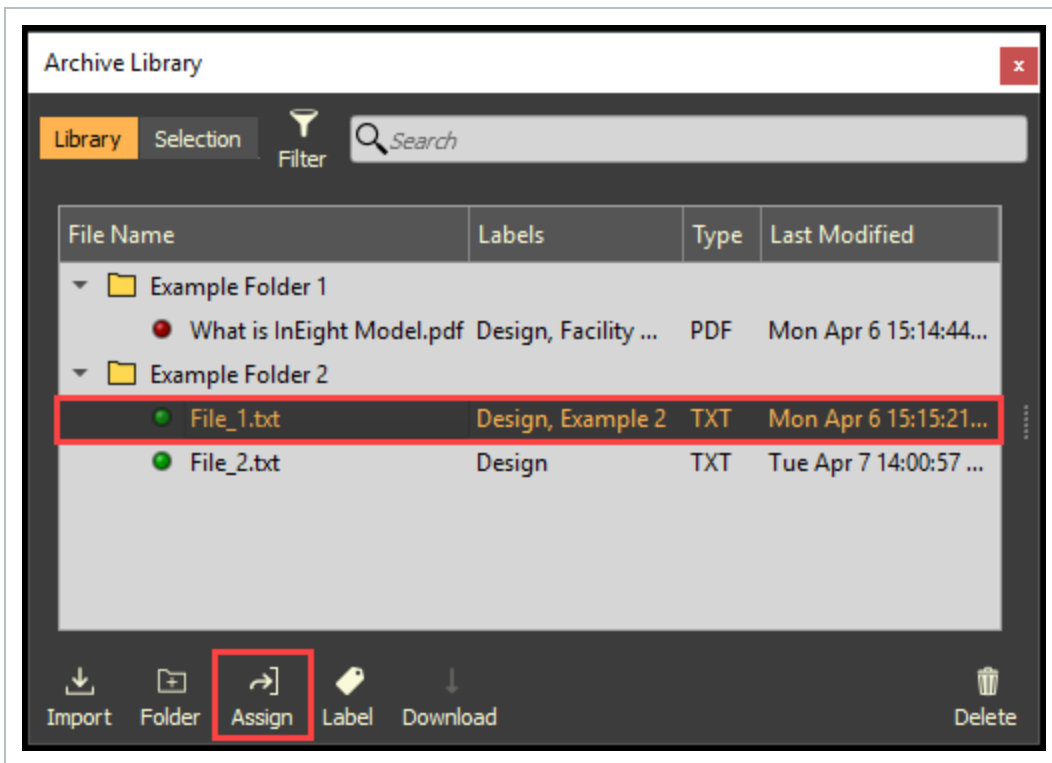
**TIP**

Drag and drop a document onto a Tag Value within the Tags and Objects panel.


6.4 Step by Step 2 — Associate a Specific Page within a PDF document to a Tag

After a PDF document has been linked to one or more model object tags, a specific page within the PDF can be associated to the link, so that, when the document is opened via the link, it will open to the associated page.

1. Select a PDF document that has been associated to a tag.
2. Open the Document Information window.

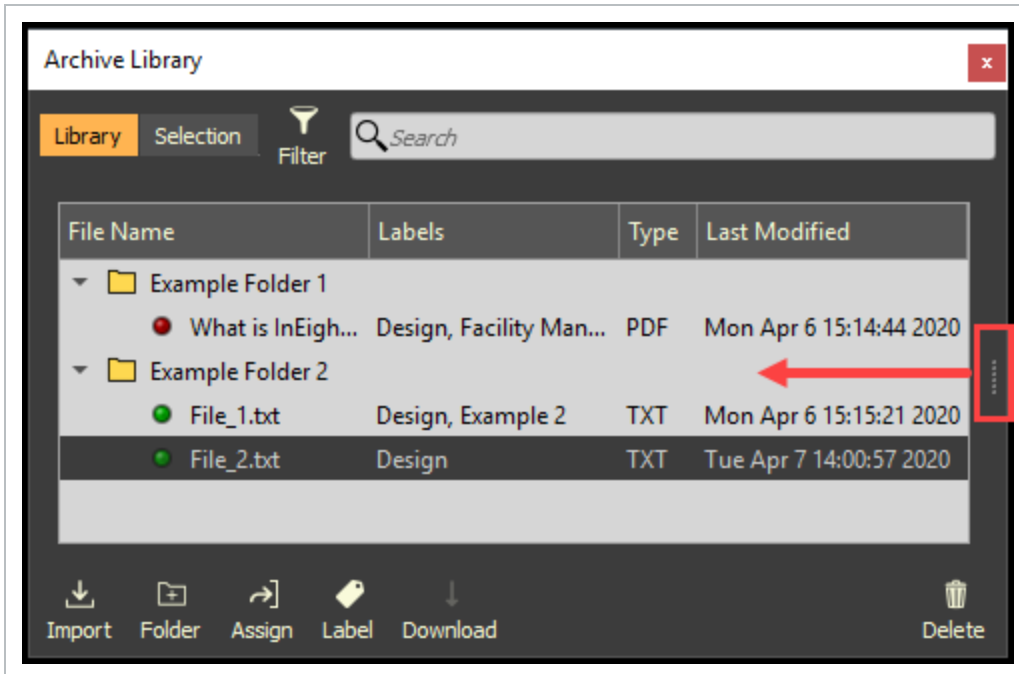


3. Double click on the **page number**, then type in the desired page number.

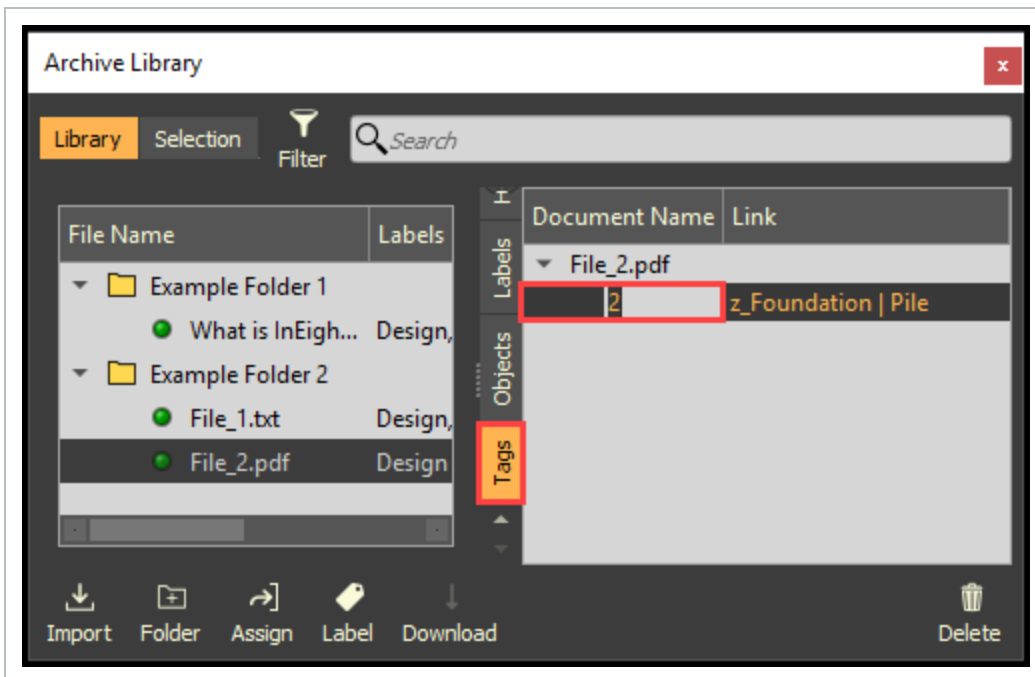


6.4 Step by Step 3 — View and/or Remove an Object Tag Link via the Document Information Window

1. Select a document.
2. Open the Document Information window.

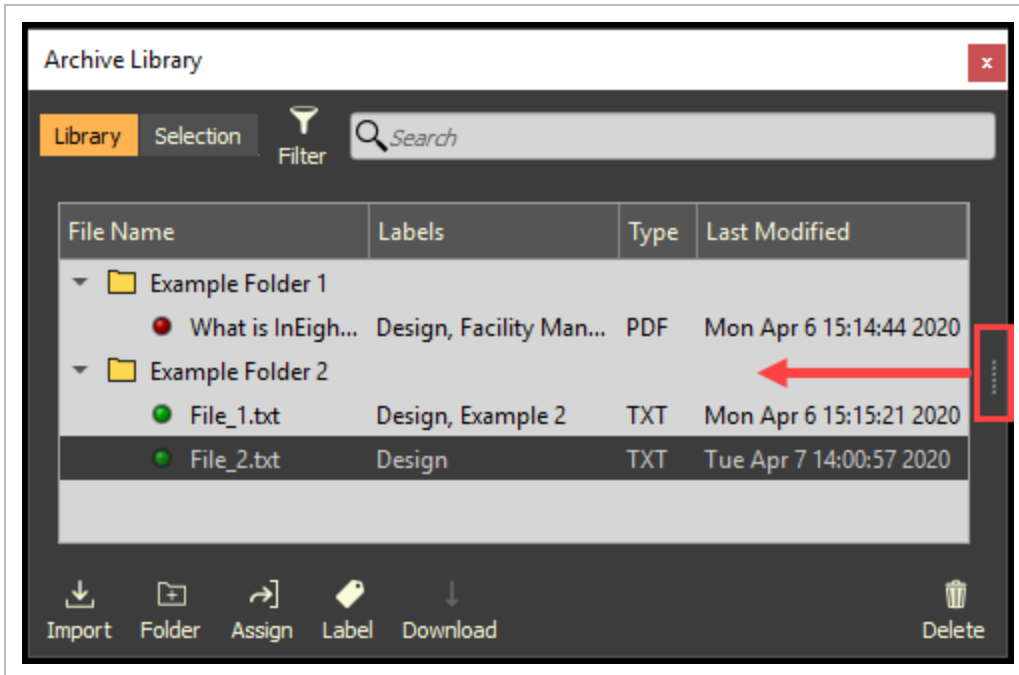

3. Select the **Tags** tab.
4. Select the **Tag Link** to view the linked model object.
5. Right click and select **Remove Tag Link** to remove the link.

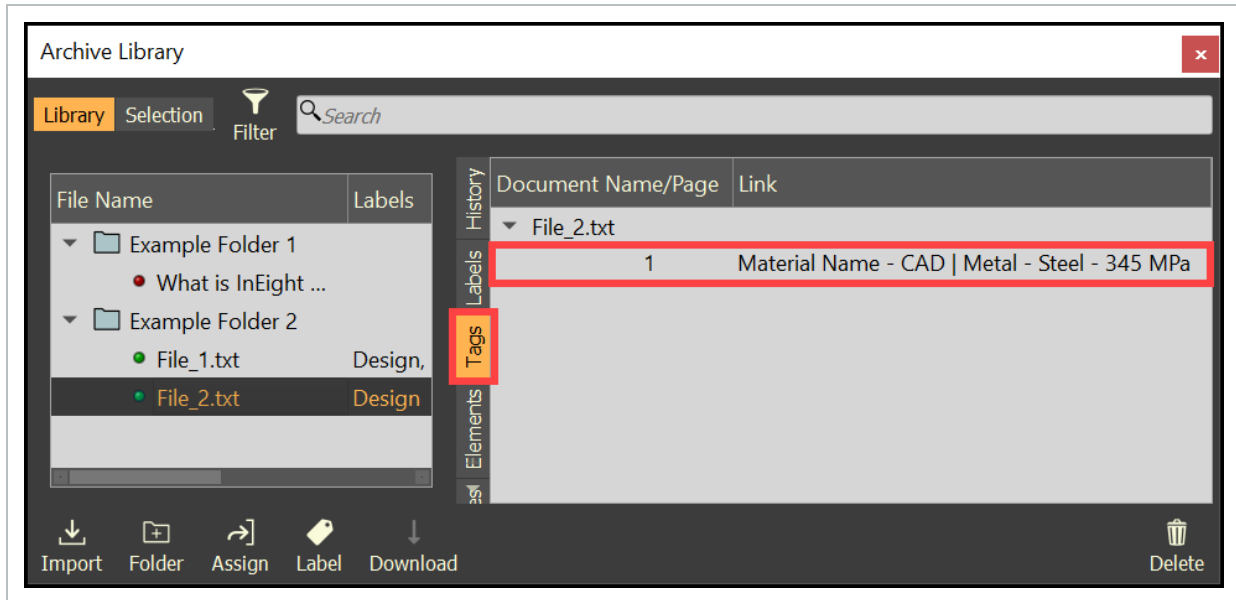


6.4 Step by Step 4 — View and/or Remove a Document Link via the Selection Tab

The Selection tab within the Archive Library displays all documents linked to the Actively Selected Model Objects.

1. Select one or multiple model objects or a tag.
2. Within the Archive Library, select the **Selection** tab.
3. View associated document content by double clicking on the document.

- 4. To remove a link, select a document from the list, then click on the **Unassign** icon.

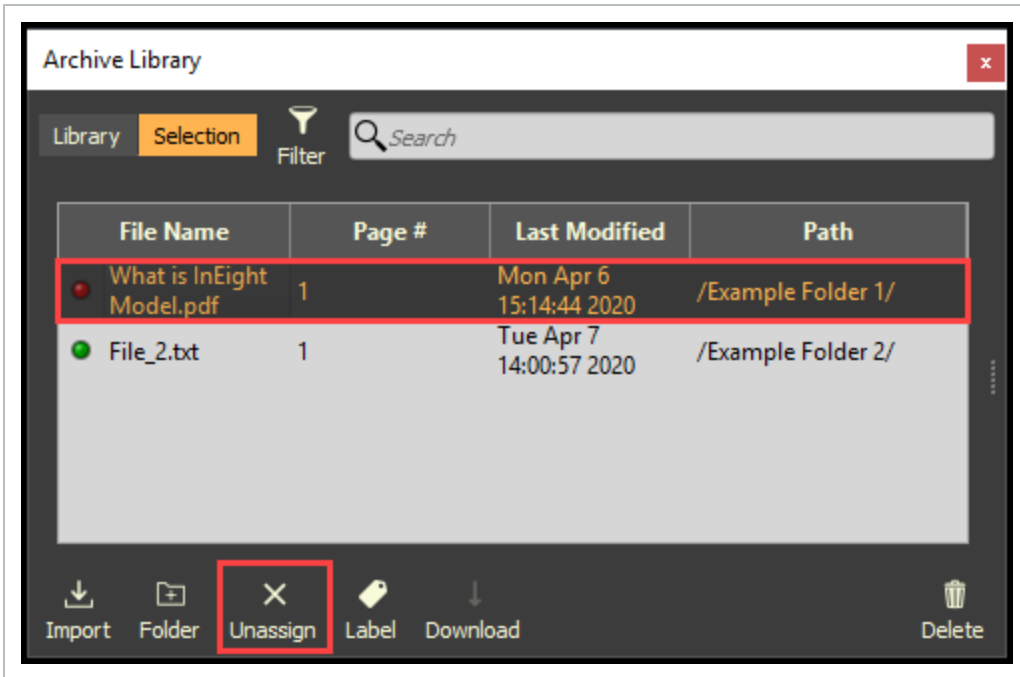

Lesson 6 Review

1. You can view all project documents from the _____ tab of the Archive Library.
 - a. Objects
 - b. Tags
 - c. Selection
 - d. Library

2. You can only link a document to one object.
 - a. True
 - b. False

3. You can download documents from a model to keep on your desktop.
 - a. True
 - b. False

Lesson 6 Summary

As a result of this lesson, you can:

- Import and manage documents
- Link documents to objects and tags
- Link specific pages
- View documents within InEight Model

This page intentionally left blank.



LESSON 7 – SELECTION INFO

Lesson Duration: 10 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Navigate the Selection Information panel

Topics in this Lesson


7.1 SELECTION INFO OVERVIEW

The **Selection Information panel** displays attribute data of actively-selected model objects. The displayed attribute data will change accordingly to the actively-selected model objects. The tabs within the Selection Information panel displays grouped attribute data. If there are no model objects selected, then the Selection Information panel will be blank.




7.1.1 Selection Information Panel

To access the Selection Information panel, select **Object** from the menu bar at the top left of the screen. Then, select **Selection Information**.

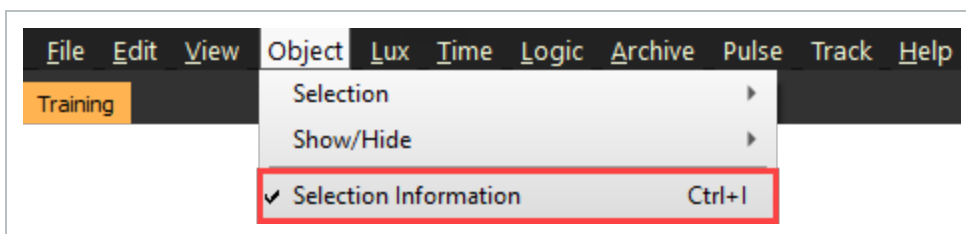


7.1.2 General Tab

The **General tab** displays the Model Stream name of the selected objects, the Material Name – CAD tag value for each model object selected, the total surface area, the total volume, and the total number of objects currently selected.

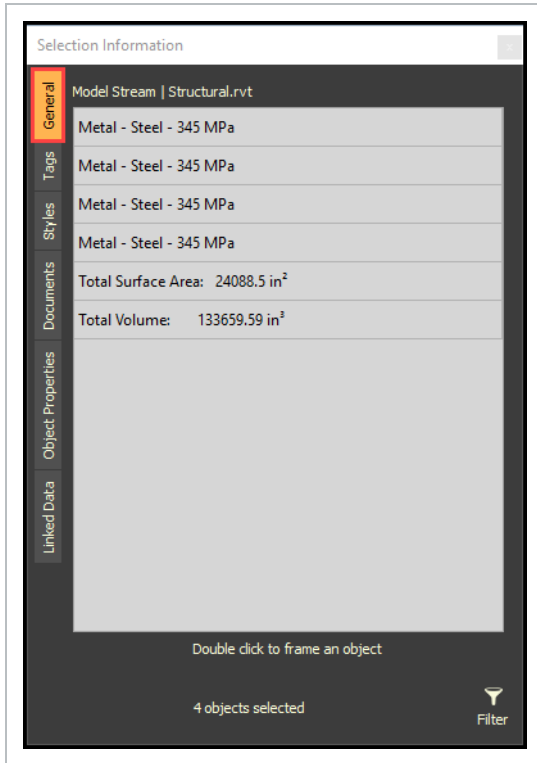


7.1.3 Tags Tab

The **Tags tab** displays all metadata for the selected objects, the number of objects per metadata, and the total number of objects currently selected.

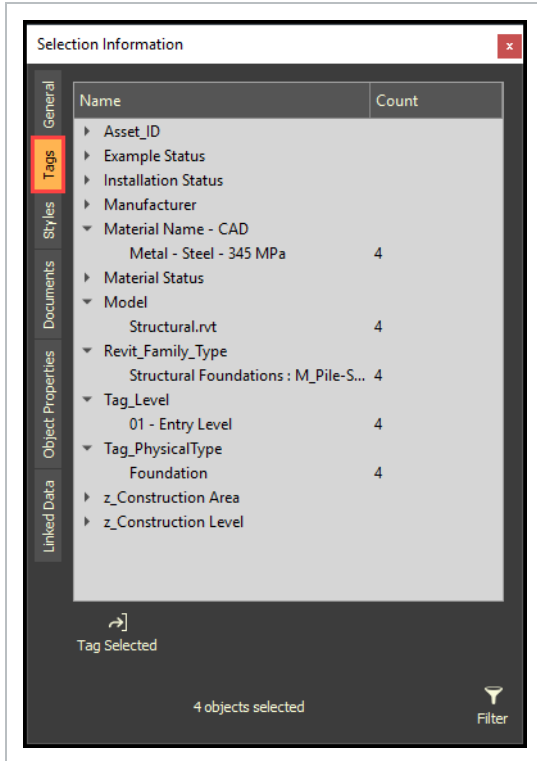
**NOTE**

There are additional actions that can be taken within the Tags tab: Filter the Selection, Select similar tags, and Tag Selected objects with a new tag.

- **Select Tag** - Right Click on a tag value, then click Select Tag to select all objects with the same tag

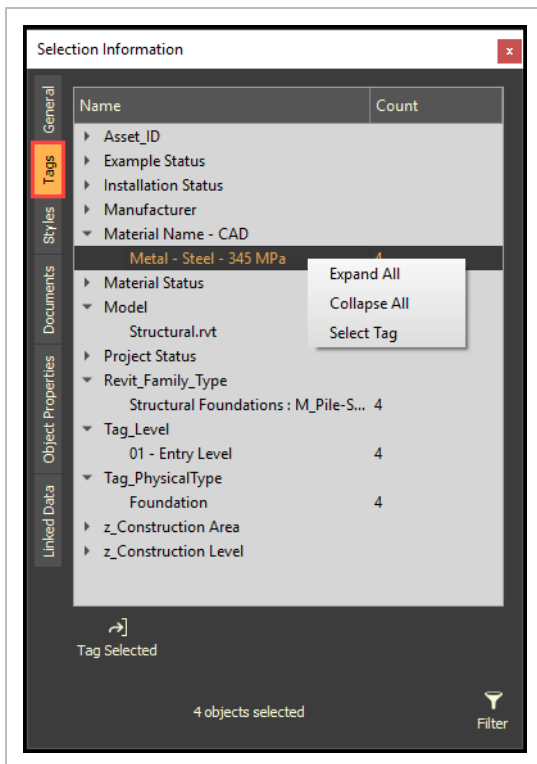


- **Tag Selected** - Click the Tag Selected icon to open the Create Tag dialog box

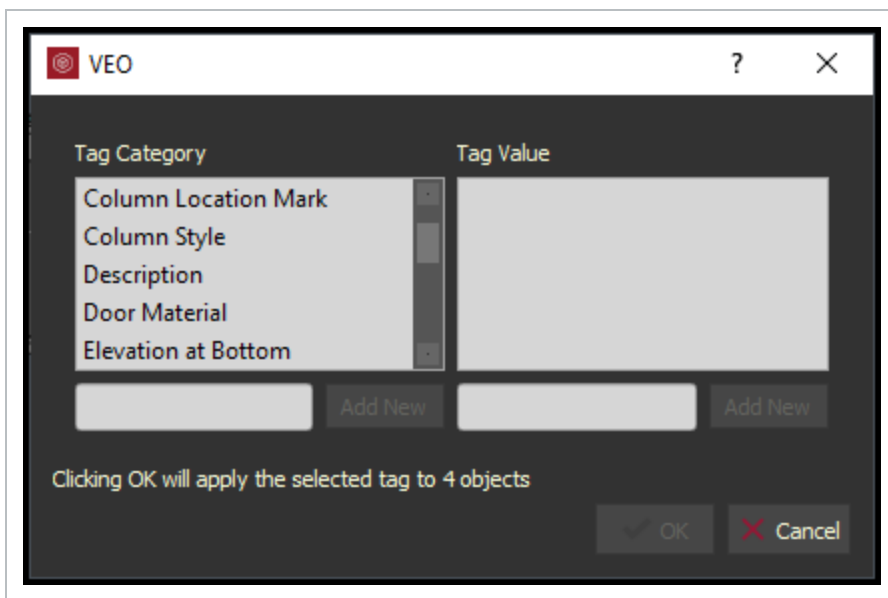

7.1.4 Style Tab


The **Style tab** displays all the styles associated with the selected object.

NOTE The Style tab will not display information when multiple objects are selected.

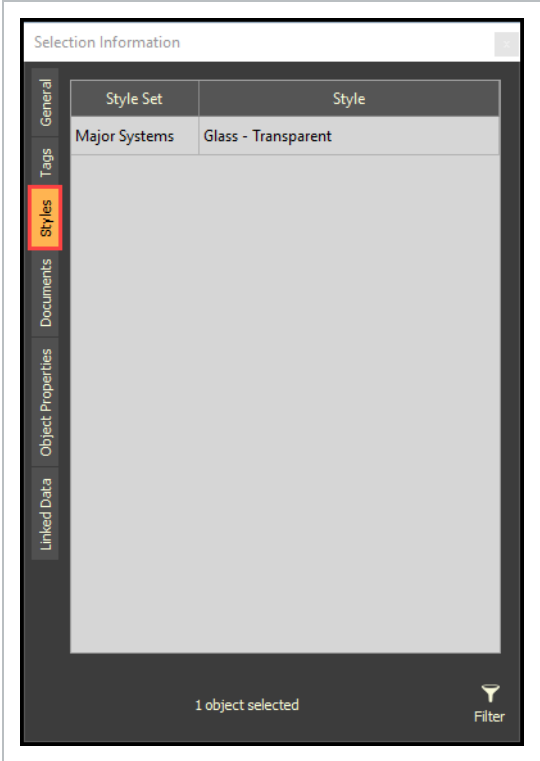


7.1.5 Documents Tab

The **Documents tab** displays the documents associated to the selected objects.

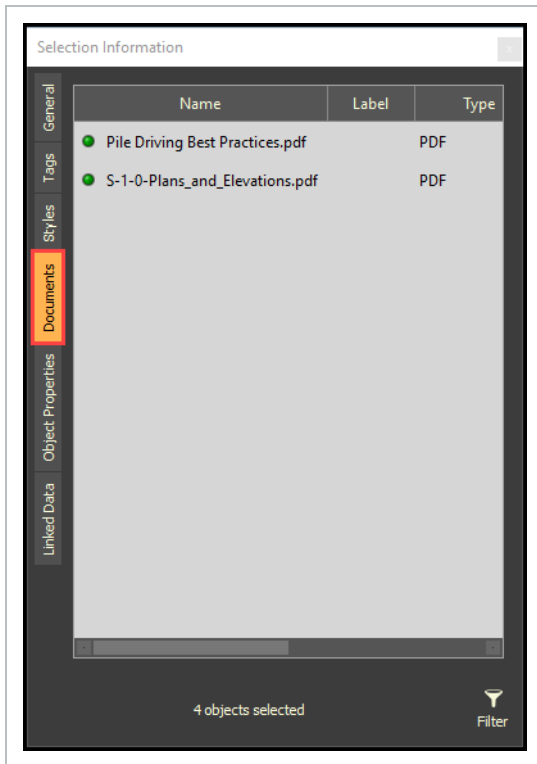


NOTE There are additional actions that can be taken within the Documents tab: Filter the Selection, Open the Documents, or Reveal the documents in Archive Library.

Right Click on a document for additional actions.

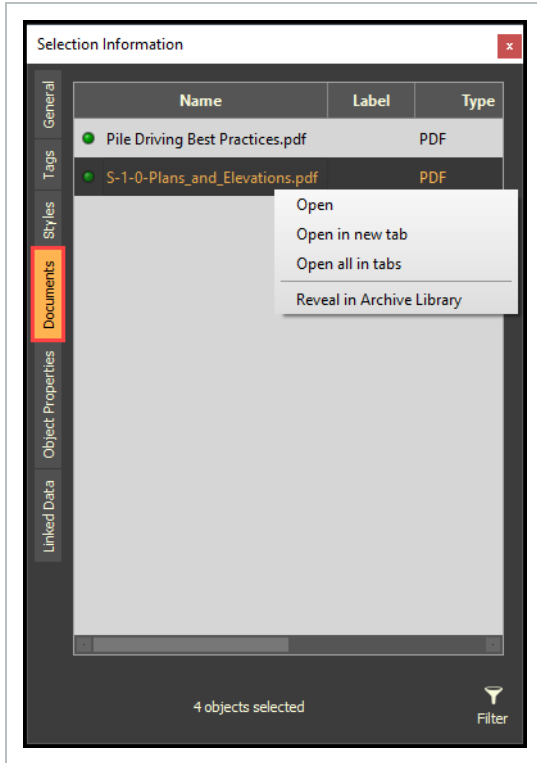

7.1.6 Object Properties Tab

The **Object Properties tab** displays only the metadata that was selected as Object Property during the Model Stream Export/Import process.

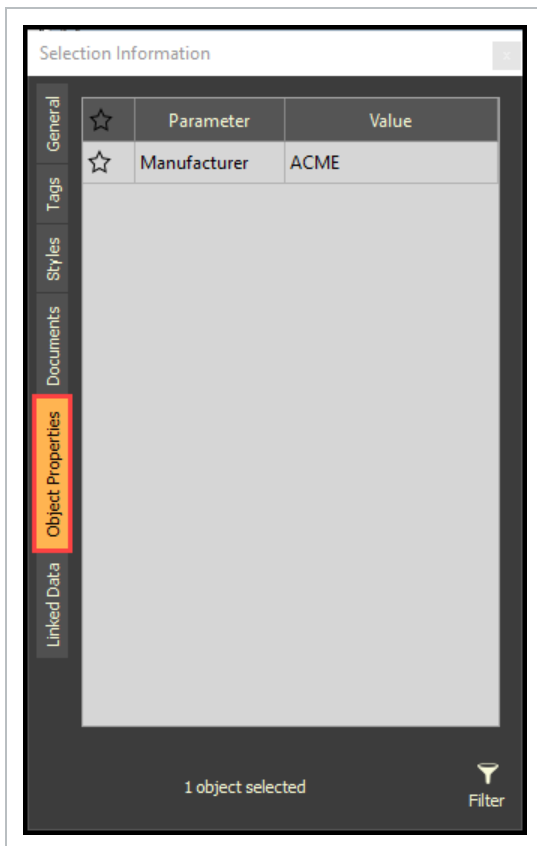**NOTE**

There are additional actions that can be taken within the **Object Property tab**: Filter the Selection and toggle a Parameter as a favorite. The favorited Parameters will appear at the top of the list.

7.1.7 Linked Data

The **Linked Data tab** can be associated to Record Tables created within InEight Compliance.


The screenshot shows a 'Selection Information' dialog box with a sidebar on the left containing tabs: General, Tags, Styles, Documents, Object Properties, and Linked Data. The 'General' tab is active, displaying a 'Record Table' dropdown set to 'Fab22_Subfab_Assets'. Below this is a table with two columns: 'Parameter' and 'Value'. The table contains the following data:

Parameter	Value
UNIQUE_ID	10-01AW-FEE-SBU-02
ASSET_TYPE	POC
AVAILABILITY	AVAILABLE
RESERVED_BY	N/A
TOOL_ID	N/A
Location	OC > Fab22 > Subfab > Bay 29F
Created By	NGray
Created On	3/21/2019 9:12 PM
Property ID	{c814d3c7-a6cc-4b51-ad41-d9491399f806}

At the bottom of the dialog, it states '1 object selected in tag: UNIQUE_ID | 10-01AW-FEE-SBU-02' and includes a 'Filter' icon.

7.1.7.1 Selection Filter

The **Selection Filter** can be launch by clicking on the Filter icon from any of the tabs. Then uncheck any of the Enable check boxes to fine tune your selection.

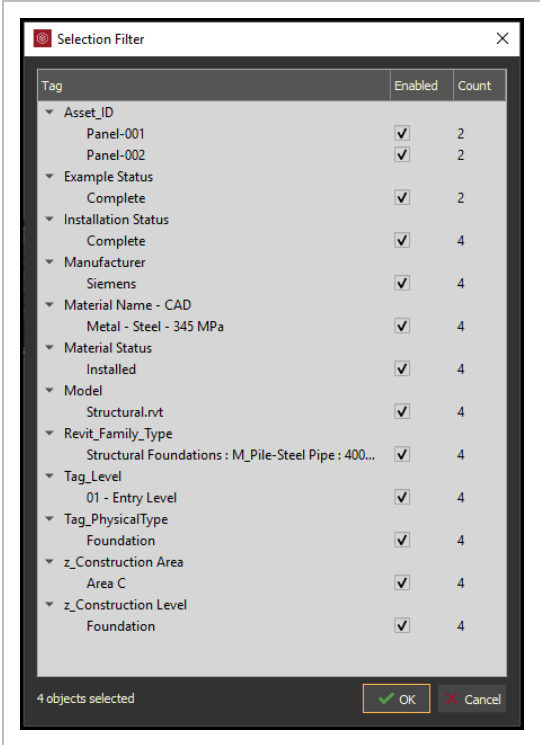

Lesson 7 Review

1. Which of the following is NOT a tab on the Selection Information panel?
 - a. Object Properties
 - b. Documents
 - c. Coordination
 - d. Linked Data
-

Lesson 7 Summary

As a result of this lesson, you can:

- Navigate the Selection Information panel



LESSON 8 – SECTIONING

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Apply sectioning using the set box
- Apply sectioning by dragging and dropping a tag
- Apply sectioning by the offset
- Reset the sectioning box to model boundary
- Use sectioning with master presets

Topics in this Lesson

8.1 SECTIONING OVERVIEW


Sectioning lets you isolate a certain section or area of a project to easily visualize model content. Adjust the Sectioning box in the 3D viewer by managing the Top, Bottom, Left, Right, Front, and/or Back planes of the box.

TIP

When the mouse cursor moves through the Sectioning panel a yellow outline is shown along with a corresponding yellow line in the 3D view indicating the current edge of the section.


8.1.1 Sectioning Panel

To access the Sectioning panel, select **View** from the menu bar at the top of the screen. Then, select **Sectioning**.

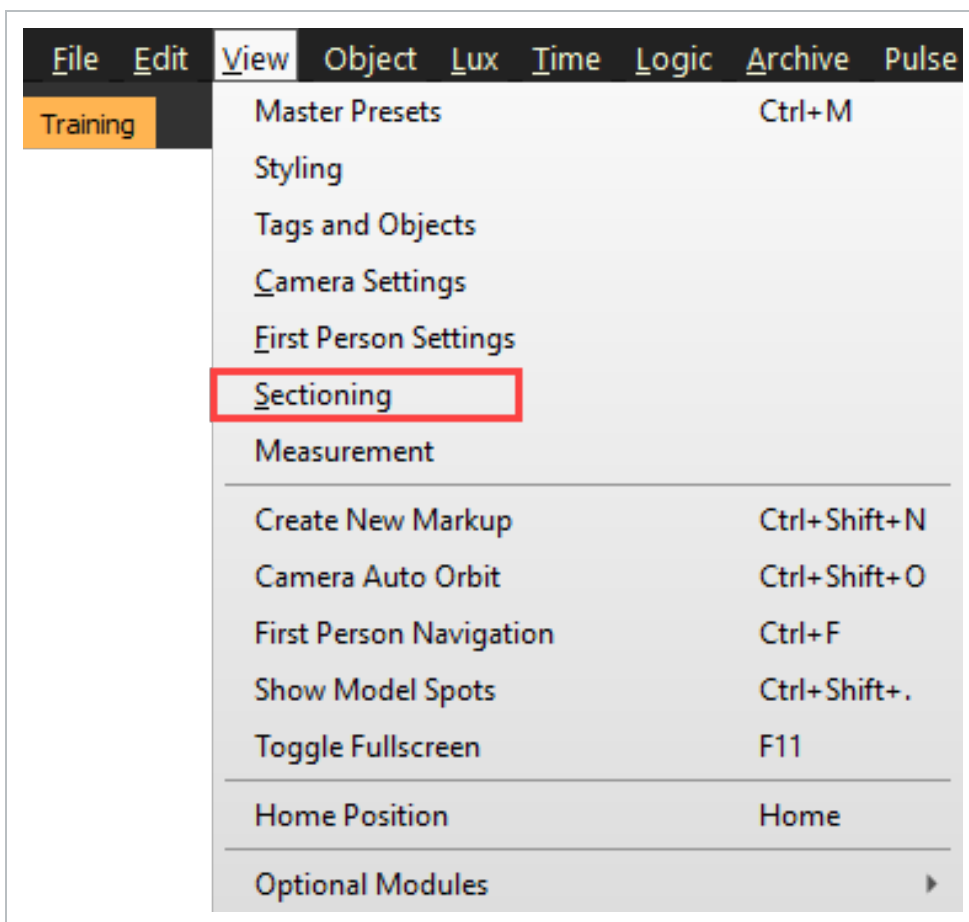

This opens the Sectioning Panel.


Toggle **OFF** to **ON** to initiate a section box. Toggle **HIDE** to **SHOW** to see the section box in the 3D View.

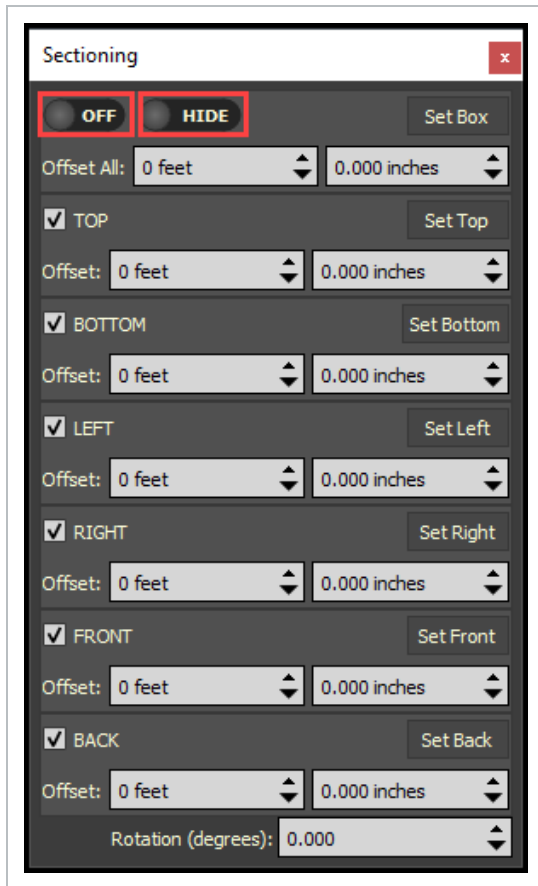

- **Set Box** - Sets the entire section box to the selected objects boundary. Or if no objects are selected, then it resets the section box to the model boundary.
- **Offset / Offset All** - Adjusts the section box according to the entered criteria.
- **TOP / BOTTOM / LEFT / RIGHT / FRONT / BACK** - Can be enabled and can be set according to selected objects or no objects selected. If objects are selected, then the section is set to the object boundary. If no objects are selected, then the section is set to the model boundary.
- **Rotation** - Rotates the section box.

8.1.2 Sectioning Icon

Sectioning can also be switched **ON** or **OFF** with a left mouse click on the **Section icon** located at the bottom left of the screen. Switch **SHOW/HIDE**, and launch the **Sectioning Panel** with a right click on the icon.

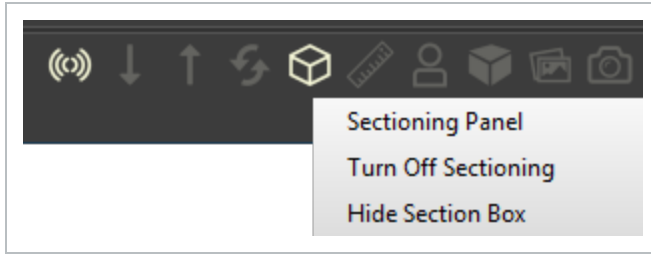

8.2 CREATE AND APPLY SECTIONING


Sectioning can be applied in different ways to yield desirable results.

8.2 Step by Step 1 — Apply Sectioning Using the Set Box

1. Switch Sectioning **ON**.
2. To see the sectioning box in the 3D viewer, toggle **SHOW**.




3. Select a model object or a tag.

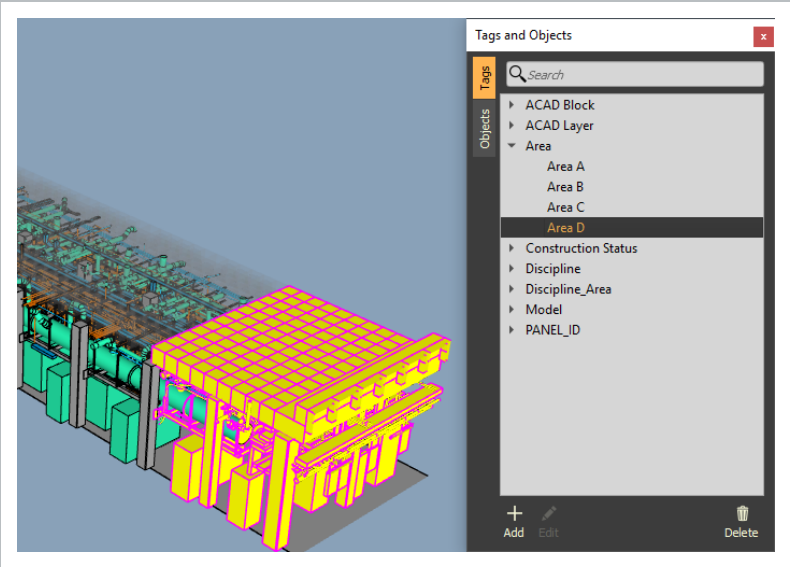

4. Click the **Set Box** icon.




- The Sectioning box has been set to the model objects boundaries

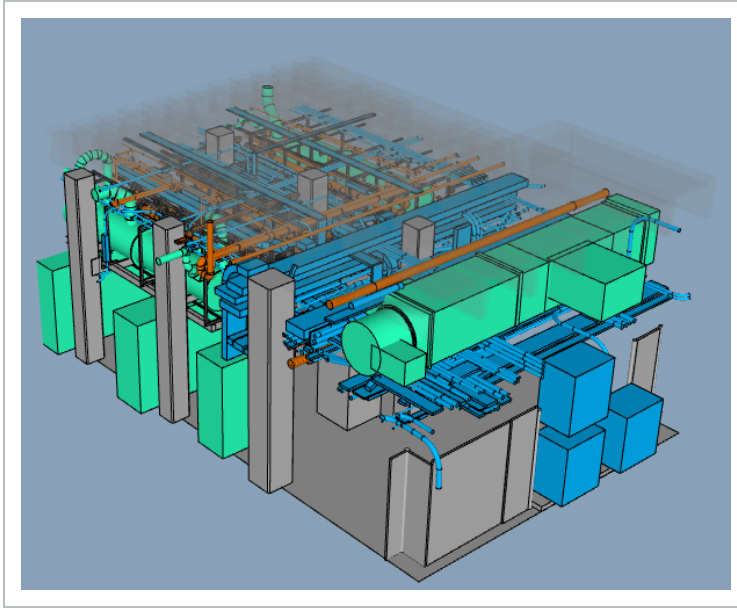


8.2 Step by Step 2 — Apply Sectioning by Dragging and Dropping a Tag

1. Switch Sectioning ON.
2. From the Tags and Objects Panel, select a tag.
3. Drag and drop the tag onto a section part in the Sectioning Panel.

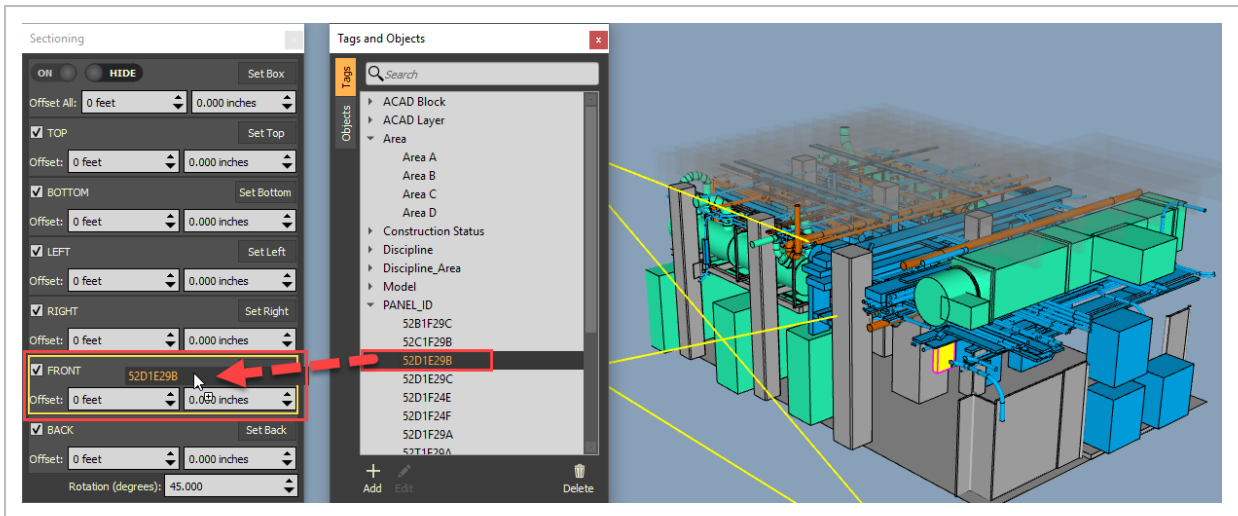


8.2 Step by Step 3 — Apply Sectioning by the Offset

1. Switch Sectioning **ON**.
2. With the mouse over an Offset field, scroll the mouse wheel to set a numeric offset
3. Or type in the preferred numeric offset.

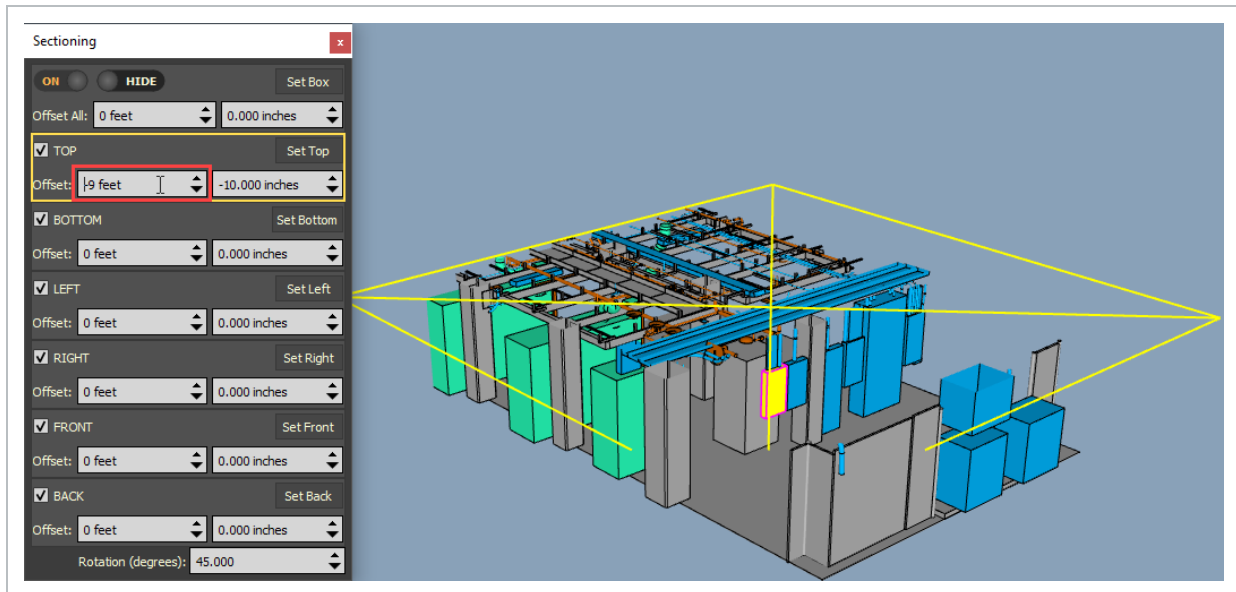


8.2 Step by Step 4 — Move Sectioning Panes with Grips

1. Switch Sectioning **ON**.
2. Switch Section Box **ON**.
3. Hold the **CTRL** key and hover over the sectioning panes to see them highlight.
4. Hold **CTRL + LMC** (left mouse) to move a sectioning pane.

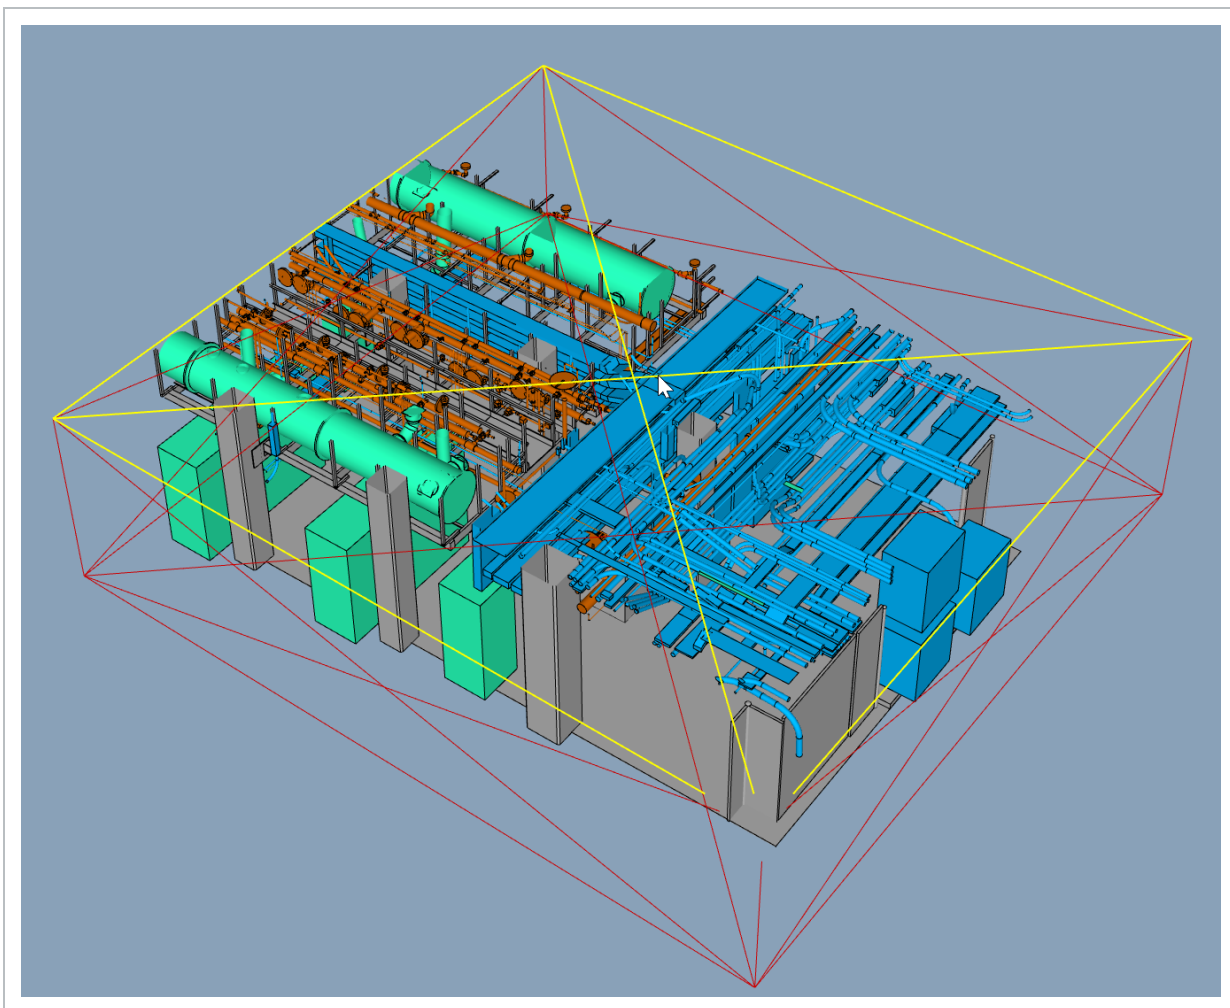


8.2 Step by Step 5 — Reset the Sectioning Box to Model Boundary

1. Switch Sectioning **ON**.
2. Ensure no model object is selected.
3. Click the **Set Box** icon.

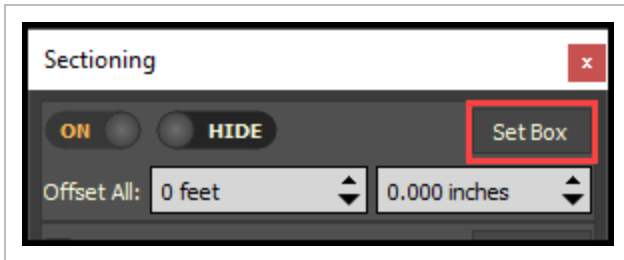
**NOTE**

Any of the Section Parts can be reset individually by ensuring that no model objects are selected, then select the specific Section part Set icon (that is, Set Top).

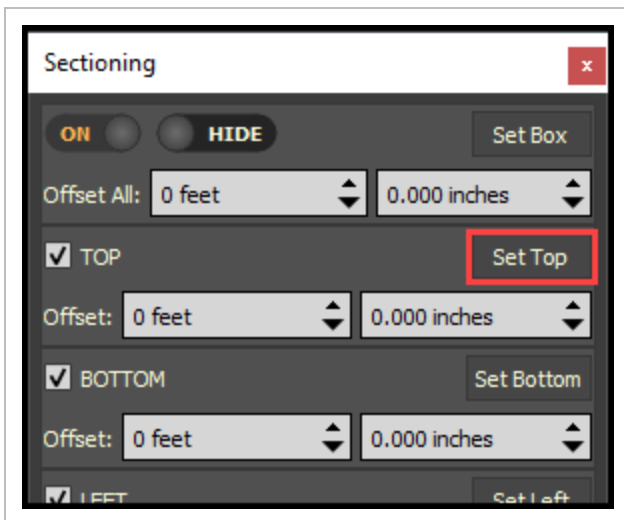

8.2 Step by Step 6 — Use Sectioning with Master Presets

1. Switch Sectioning **ON**.
2. Adjust the Sectioning as desired.
3. In the Master Preset Editor, click **Sectioning**.

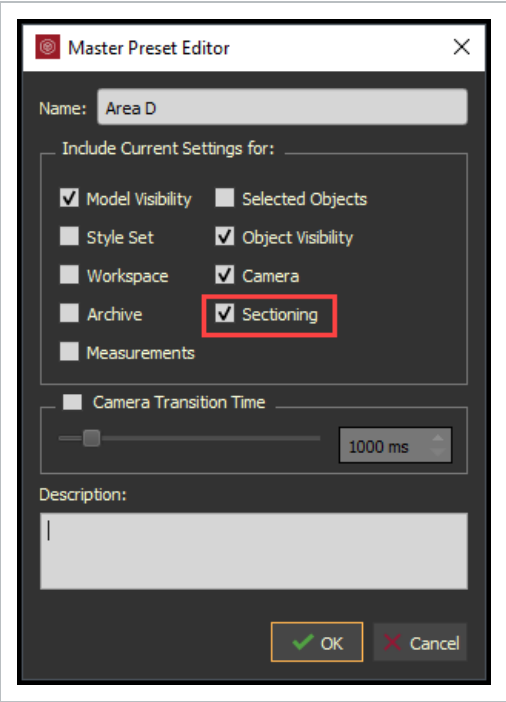

Lesson 8 Review

1. You can quickly access sectioning from the Sectioning icon on the menu in the bottom, left.
 - a. True
 - b. False

2. You can apply sectioning to master presets.
 - a. True
 - b. False

Lesson 8 Summary

As a result of this lesson, you can:

- Apply sectioning using the set box
- Apply sectioning by dragging and dropping a tag
- Apply sectioning by the offset
- Reset the sectioning box to model boundary
- Use sectioning with master presets

This page intentionally left blank.



LESSON 9 – MEASUREMENTS

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Navigate the Measurement panel and enter Measuring Mode
- Take and delete measurements
- Organize and clear measurements


Topics in this Lesson

9.1 MEASUREMENTS OVERVIEW


The Measurements module lets you enter values to view your model in 3D, and then save the values in a folder for reference and use later. You must select a measure Mode to take measurements.

9.1.1 Measurement window

To access the Measurements window, select View > **Measurement**. The Measurement window opens.

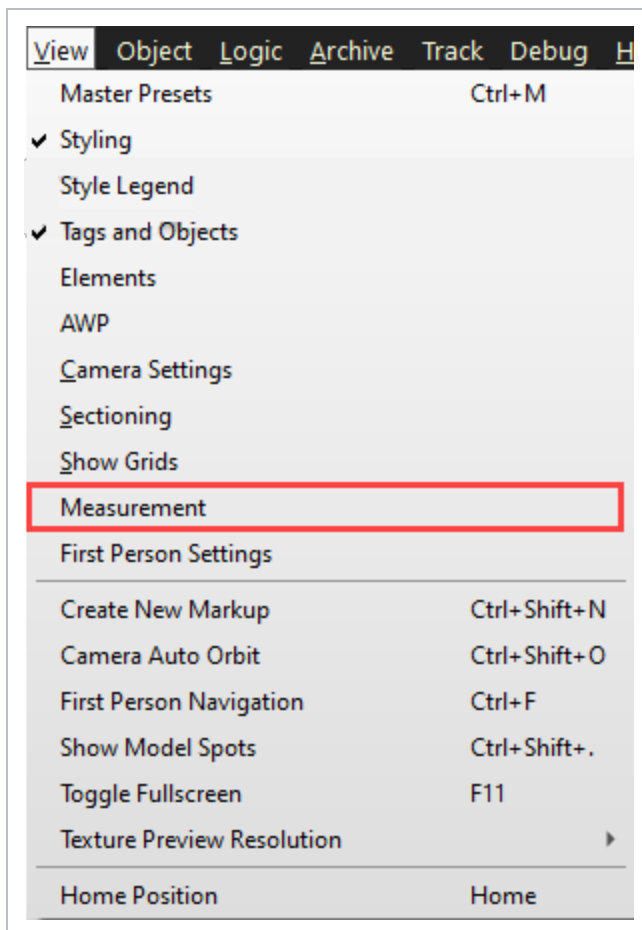

The Measurement window has six sections as shown below:

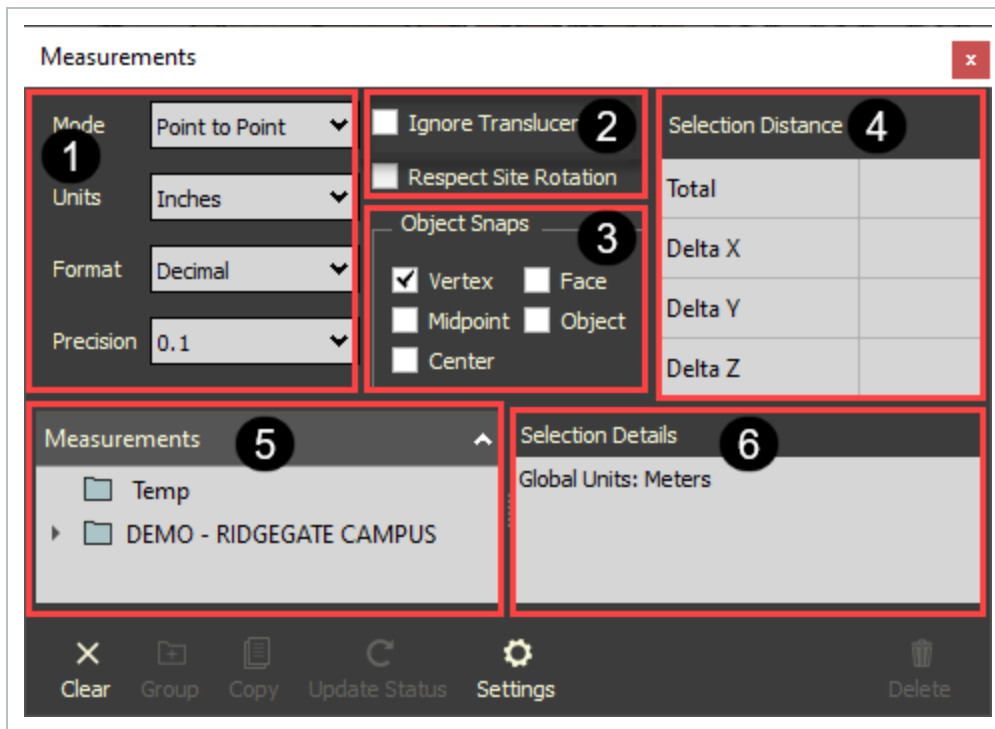

1 Measurement settings - Measurement settings - Lets you manage the mode, units, format, and precision of a measurement.

- **Mode** - Select between different modes to take your measurements:
 - **Point to Point** - Basic Point A to Point B measurement.
 - **Continuous** - Lets you continuously measure along a series of chosen points. Double-click on the last point to end the continuous measurement.
 - **Area** - Select a series of points that define an enclosed area. Close the area measurement by clicking on Point A. Points picked must be on the same plane.
 - **Angle** - Lets you pick three points to find an angle.
 - **Spot ID** - Select a point to show the X, Y, Z coordinates of the point. Spot IDs can be copied to clipboard.
 - **Units** - Select a unit to be shown when taking a measurement. Units are constrained according to the type of mode that is selected and will be denoted in italics and cannot be unselected.
 - **Format** - Select a format to show when taking a measurement. Formats are constrained according to the type of mode that is selected and will be denoted in italics and cannot be unselected.
 - **Precision** - Select the best precision for your measurement.

2 Measurement options - You can adjust how the measurement tools interact with objects

and how measurements are calculated.

- **Ignore Translucent** - You can select or unselect the Ignore Translucent objects during measurement mode. When selected, translucent objects in the view window are ignored. This lets you indicate whether translucent objects, such as room, operation, or maintenance volumes are included in the model project. Measurements do not consider translucent objects.
- **Respect Site Rotation** - Measurement calculations are defined according to the Site Rotation Values defined on Model stream import.


- 3 Object Snaps** - Lets you select one or multiple object snaps to define selection type of taking a measurement. Face and Object are exclusive snaps and cannot be active at the same time.
 - **Vertex** - Snap to any corner or endpoint.
 - **Midpoint** - Snap to the middle of an edge.
 - **Center** - Snap to the center of a face.
 - **Face** - Snap to any face. The measurement is calculated according to the closest point between the face selected and the other objects involved in the measurement.
 - **Object** - Snap to any object. The measurement is calculated according to the closest point between the object selected and the other objects involved in the measurement.
- 4 Selection Distance** - The total value of the measurement is shown, along with the X, Y, Z deltas when applicable.
- 5 Measurements** - There are two root level groups in the Measurement tree. The Temp group captures all measurements as they are created. The other group shows the Project name, so you can create additional groups and organize project measurements.
- 6 Selection Details** - All the details related to the selected measurement are shown. You can copy and paste in the free-form text section.

9.2 APPLY AND MANAGE MEASUREMENTS

Enter the Measurement Mode to start measuring the model.

9.2 Step by Step 1 — Enter Measurement Mode

1. Select the **Ruler** icon in the notification tray to toggle the Measure Mode on and off.
 - Alternatively, press the **M key** on the keyboard to toggle the Measure Mode

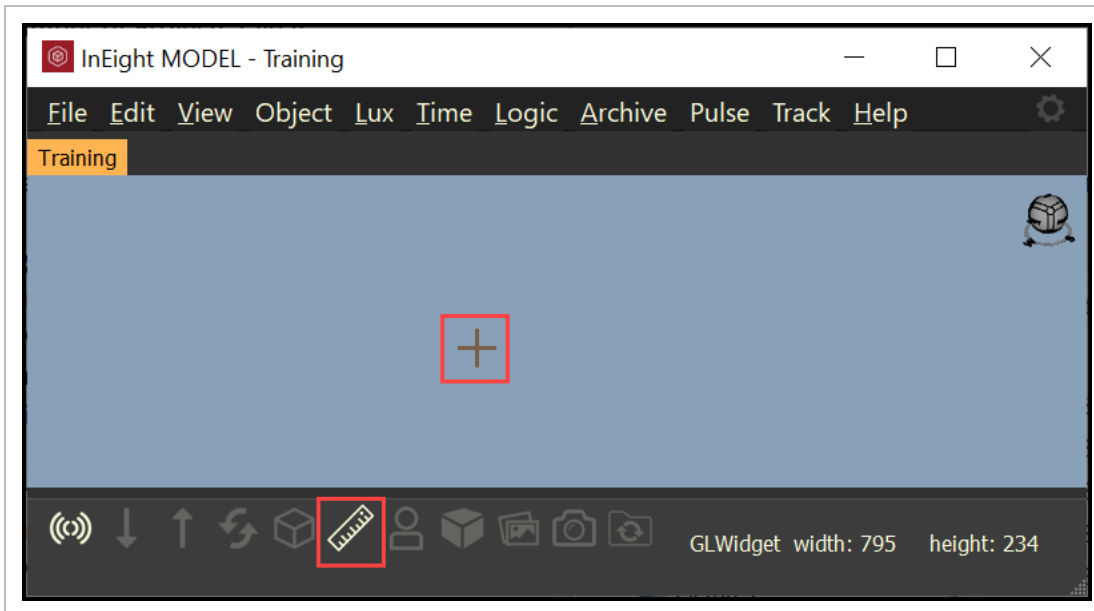**NOTE**

While in Measure Mode the cursor will become a cross hair and the Ruler icon will appear white.

TIP


Right-click on the Ruler icon to Start/Stop Measurement or to open the Measurement panel.

9.2 Step by Step 2 — Take a Measurement

1. Enter Measure Mode.
2. Select the first point (it will be labeled “A”).
3. Select the second point (it will be labeled “B”).

NOTE


This lettering series will continue in order for measurement types consisting of more than two points.

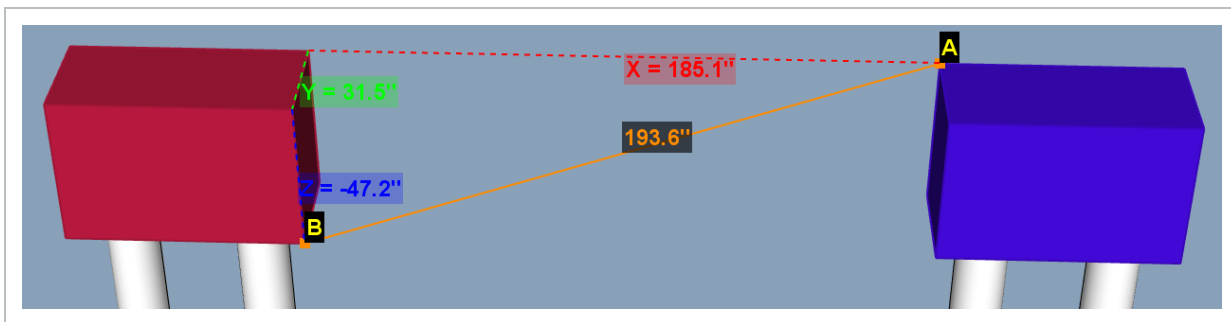

- The first object in the measurement will be highlighted blue
- The second object in the measurement will be highlighted in red
- The total distance between the selected points will be displayed in orange along the orange measurement line, which represents the closest distance between those points
- Additionally, the X, Y, Z details of each axis will be drawn as dotted lines with their respective values displayed along the path of the dotted line. The X, Y, Z axes will be colored red, green, and blue respectively

TIP

While Measure Mode is active, hold control to restore navigation to move without having to exit Measure Mode.

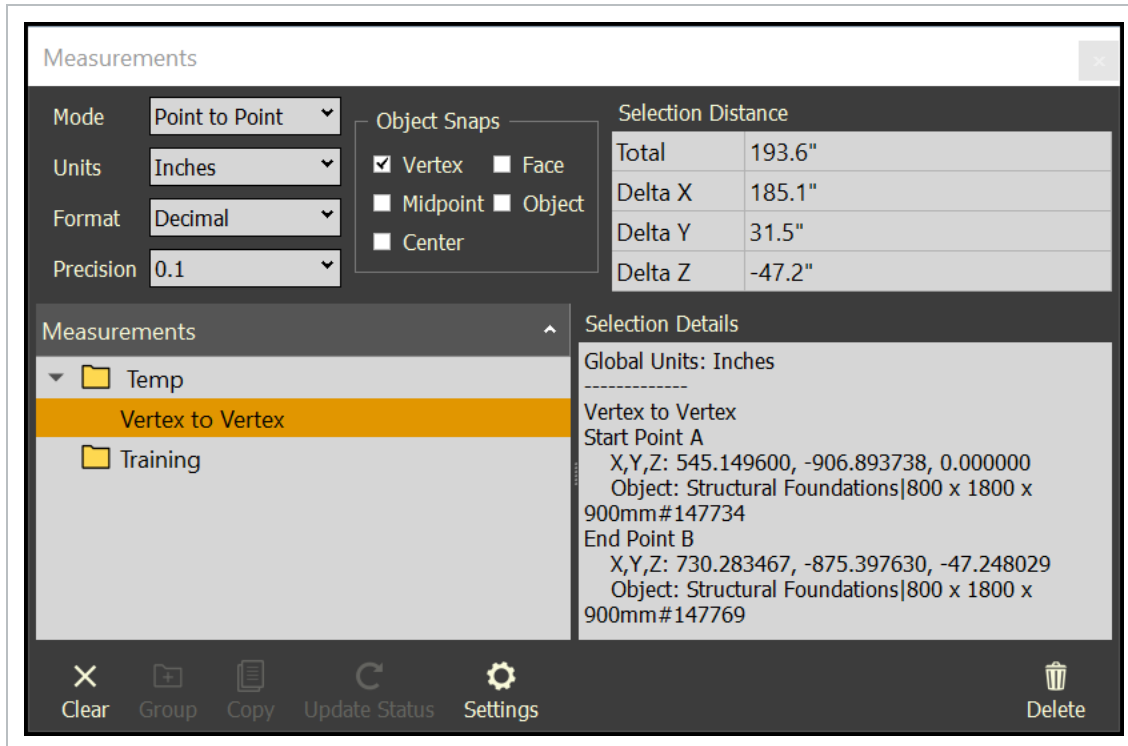

- The first object in the measurement will be highlighted blue
- The second object in the measurement will be highlighted in red
- The total distance between the selected points will be displayed in orange along the orange measurement line, which represents the closest distance between those points
- Additionally, the X, Y, Z details of each axis will be drawn as dotted lines with their respective values displayed along the path of the dotted line. The X, Y, Z axes will be colored red, green, and blue respectively

TIP

While Measure Mode is active, hold control to restore navigation to move without having to exit Measure Mode.


The screenshot displays the 'Measurements' tool interface. It features a top section with configuration options: Mode (Point to Point), Units (Inches), Format (Decimal), and Precision (0.1). An 'Object Snaps' panel includes checkboxes for Vertex (checked), Face, Midpoint, Object, and Center. A 'Selection Distance' table shows Total (193.6"), Delta X (185.1"), Delta Y (31.5"), and Delta Z (-47.2"). Below these are a 'Measurements' list with folders 'Temp' and 'Training', and a 'Vertex to Vertex' measurement highlighted. The 'Selection Details' panel provides coordinates for Start Point A and End Point B. A bottom toolbar contains icons for Clear, Group, Copy, Update Status, Settings, and Delete.

Total	193.6"
Delta X	185.1"
Delta Y	31.5"
Delta Z	-47.2"

Global Units: Inches
Vertex to Vertex
Start Point A
X,Y,Z: 545.149600, -906.893738, 0.000000
Object: Structural Foundations 800 x 1800 x 900mm#147734
End Point B
X,Y,Z: 730.283467, -875.397630, -47.248029
Object: Structural Foundations 800 x 1800 x 900mm#147769

9.2 Step by Step 3 — Delete a Measurement

1. Select a Measurement, then click the **Delete** icon.

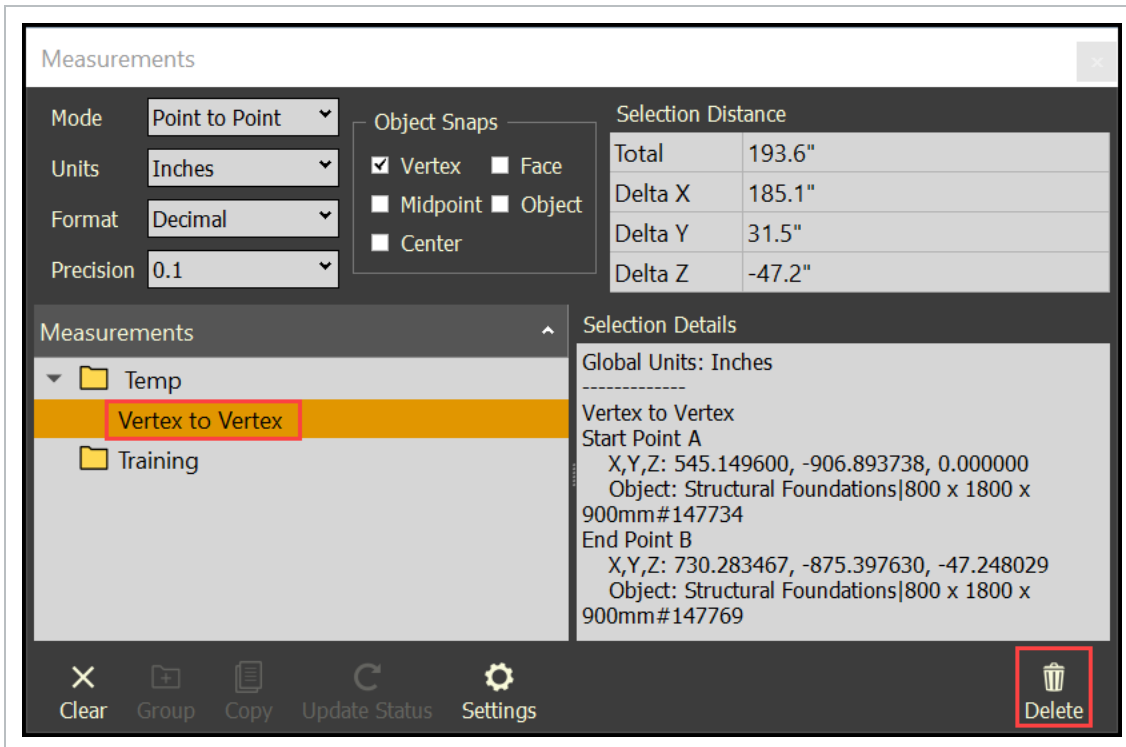
**TIP**

Another option is to right-click on the measurement, then select **Delete**.

9.2 Step by Step 4 — Clear Measurements

Clear allows the user to clear any measurements selected, which also clears the 3D view of displaying measurements.


1. As one or more measurements selected, click the **Clear** icon.

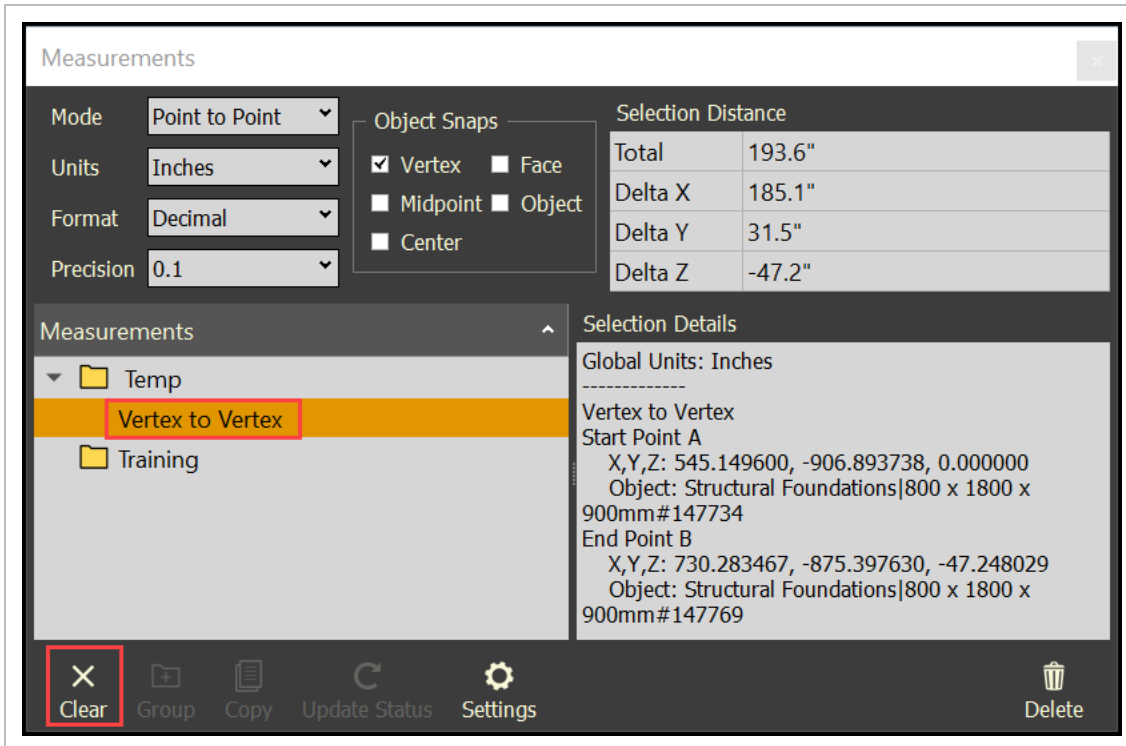

9.2 Step by Step 5 — Organize Measurements


Create groups under the project named folder to move measurements into.

1. Select your project named folder.
2. Select the **Group** icon.

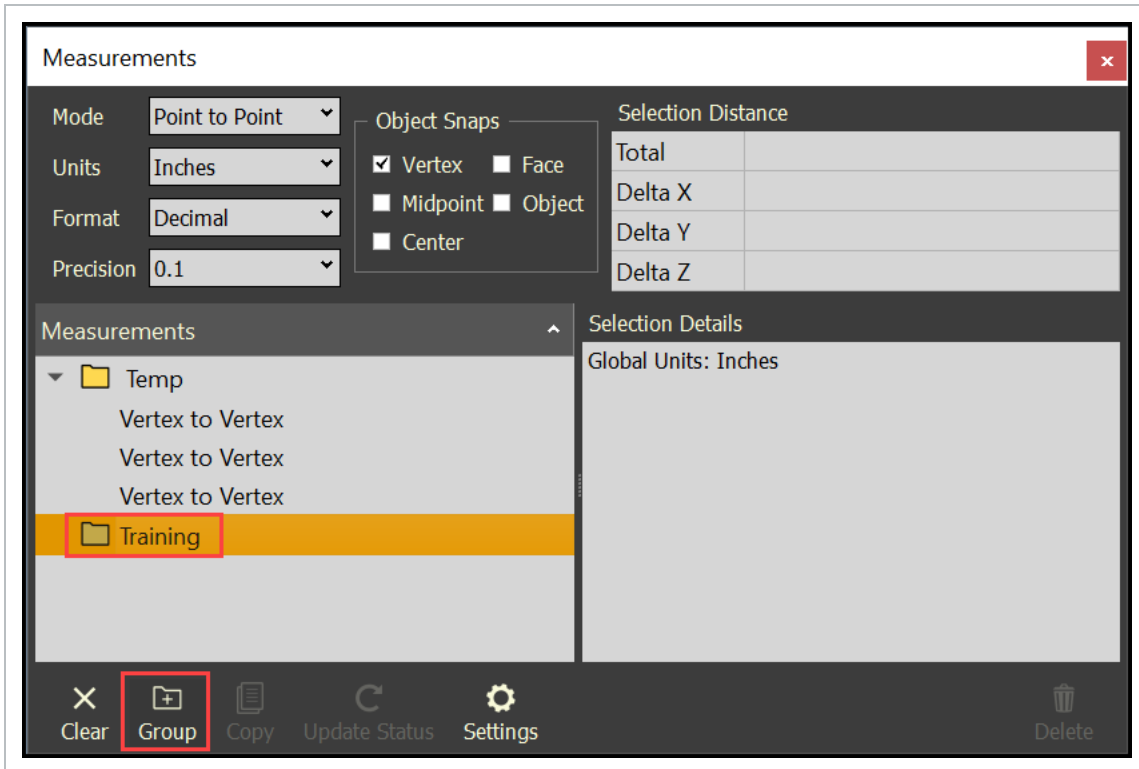


TIP Another option is to right-click on the folder, then select **New Group**.


- The New Folder dialog box will open
3. Enter a folder name, then click **OK**.

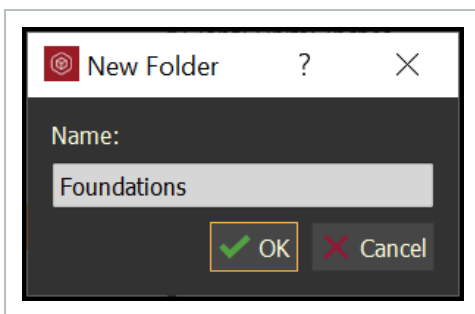

4. Drag and drop measurements into a folder.

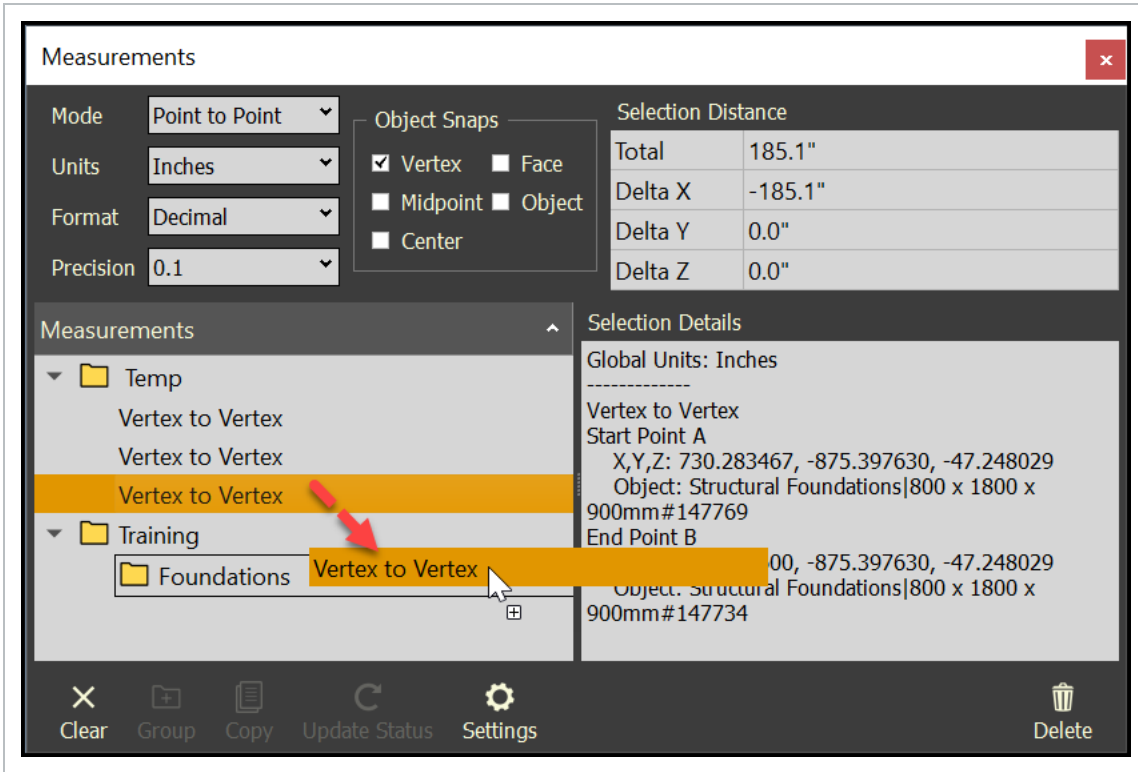

5. Right click on the measurement to rename it and better identify the measurement.

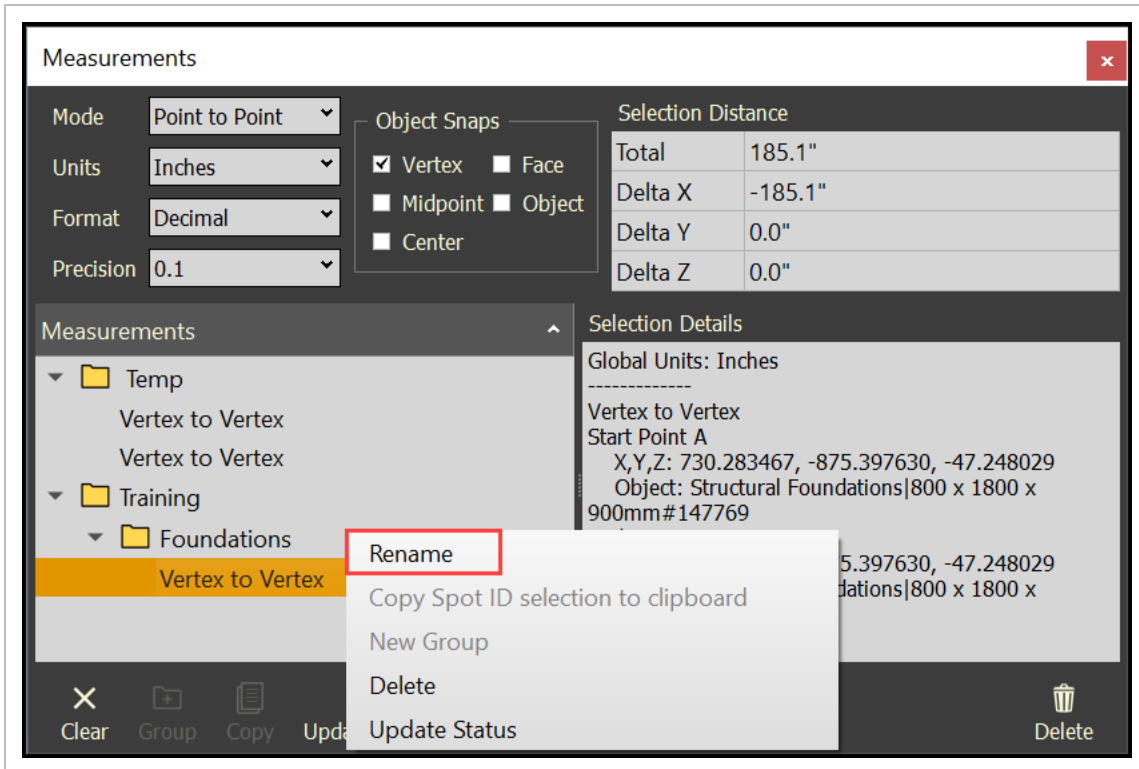

Lesson 9 Review

1. Which of the following is NOT an option on the Measurements panel?
 - a. Master presets
 - b. Object Snaps
 - c. Selection Distance
 - d. Selection Details

2. You cannot save measurements in InEight Model.
 - a. True
 - b. False

3. To begin working with measurements, you must first enter Measurement Mode.
 - a. True
 - b. False

Lesson 9 Summary

As a result of this lesson, you can:

- Navigate the Measurement panel and enter Measuring Mode
- Take and delete measurements
- Organize and clear measurements

LESSON 10 – MODEL EXPORTS

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Navigate the Measurement panel and enter Measuring Mode
- Take and delete measurements
- Organize and clear measurements

Topics in this Lesson


10.1 IFC EXPORT

With IFC Export, you can select model objects and then export selected graphics and related TAG data into an IFC file format. This provides the ability to export collaborative updates to project team members.

IFC 2x3 is the supported file type in Model. IFC files are an open international standard for Building Information Modeling (BIM) data that are exchanged and shared among software applications used by the various participants in the construction or facility management industry sector.


10.1 Step by Step 1 — IFC Export

1. To access IFC Export, select **File** from the menu bar at the top of the screen.
2. Select **Export Selected to IFC...**. The Windows Explorer opens.

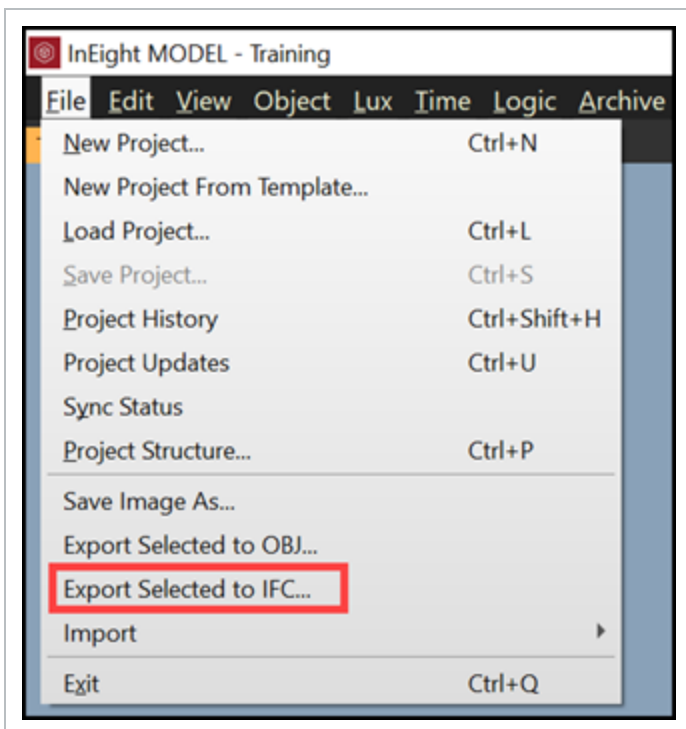

3. Browse to the desired location to store the .ifc file.

4. Name the .ifc file with a relevant name , and then click **Save**.

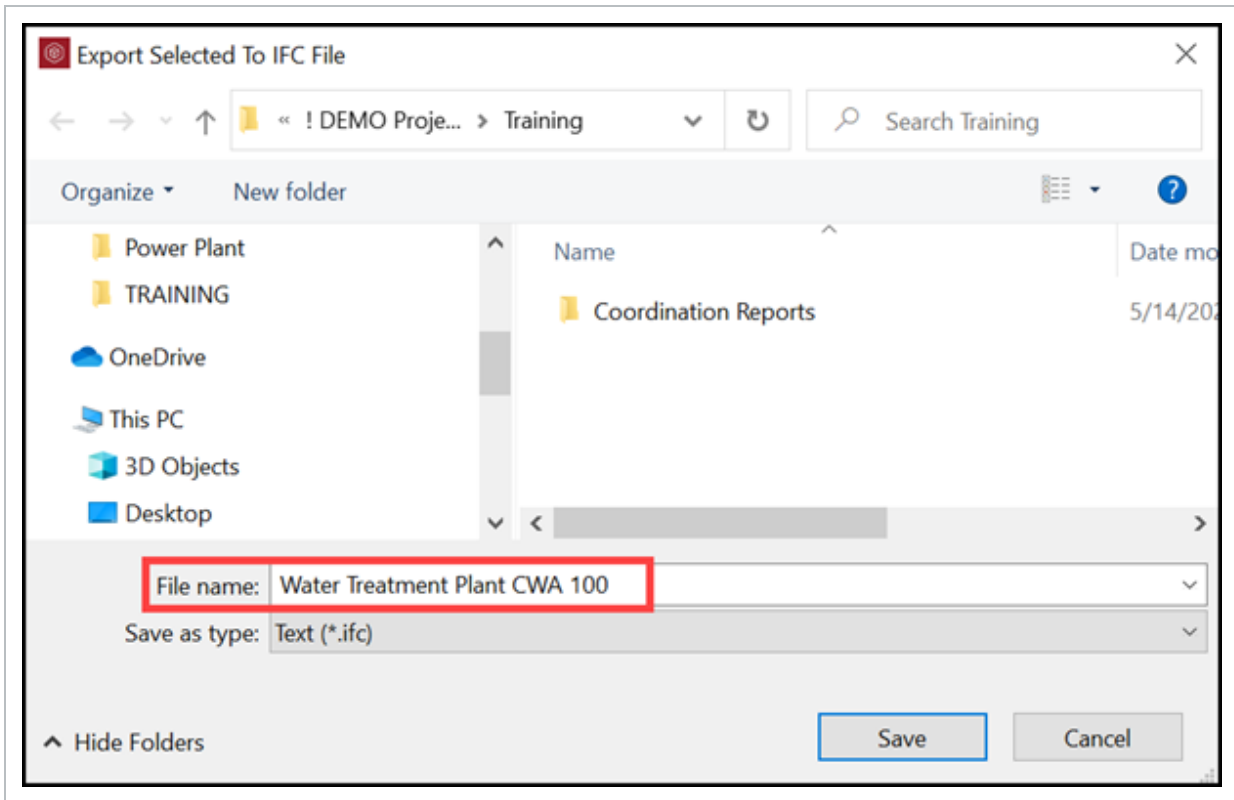


10.2 OBJ EXPORT


With the OBJ Export, you can select model objects, and then export selected graphics and related TAG data into an OBJ file format.

10.2 Step by Step 1 — OBJ Export

1. To access OBJ Export, select File from the menu bar at the top of the screen.
2. Select **Export Selected to OBJ...** Windows Explorer opens.

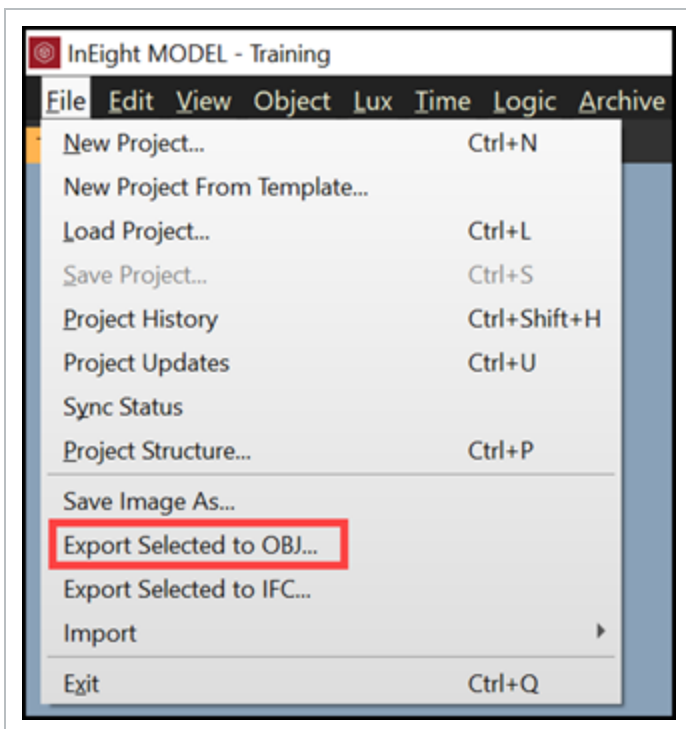

3. Browse to the desired location to store the .obj file.
4. Name the .obj file with a relevant name, and then click **Save**.

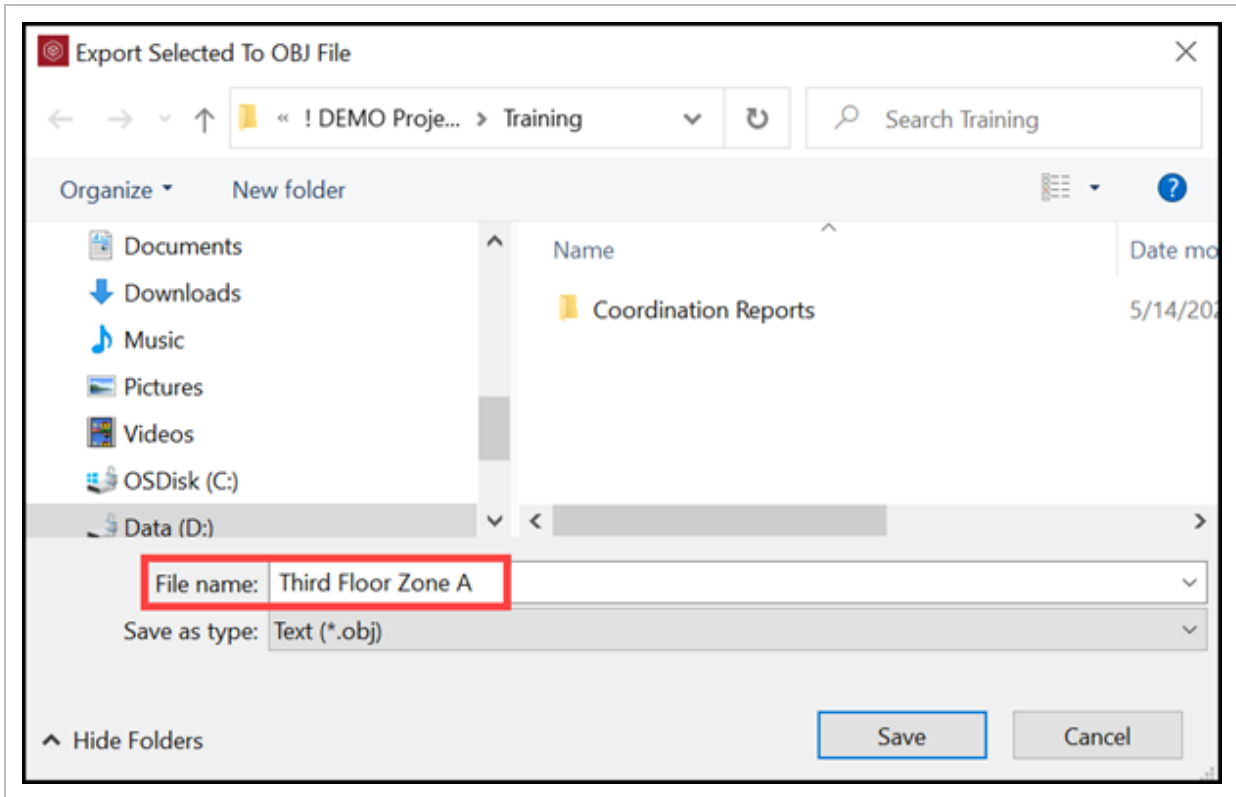

This page intentionally left blank.



LESSON 11 – MODEL-BASED TAKEOFF

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Navigate the Measurement panel and enter Measuring Mode
- Take and delete measurements
- Organize and clear measurements

Topics in this Lesson

11.1 MODEL-BASED TAKEOFF OVERVIEW

There are two methods of utilizing quantities from Model. One way is to use the Quantity function with the DTOs and access the quantities through the Excel Plugin. Another way is through the Model and Estimate integration.

11.1.1 Model and Estimate integration

Model can be utilized to sum object quantities and sync quantities to Estimate.

Estimate has a section of integration functions to communicate with Model. These functionalities are found in the main ribbon under **More Actions** and then in the **Model Connector** area.

Code	Description	CBS Position Code	Description	Optional Code	Forecast (T/O) Quantity	Unit of Measure	Unit Cost	Total Cost (Forecast)	Currency	User Defined 12	User Def... 13	User Def... 14	User Def... 15
	JOB		JOB		1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Prime Bond		Prime Bond	PRIME BOND	1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Price % Add-On		Price % Add-On	PRICE % ADD...	1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Job Financing		Job Financing	FINANCE EXPE...	1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Job Management		Job Management & Equipment	JOB MANAGEM...	1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	General Expense		General Expense	GENERAL EXPE...	1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
1	Piping		Piping		1.00	LF	\$0.00	\$0.00	U.S. Dollar				
1.1	Underground Piping		Underground Piping		1.00	LF	\$0.00	\$0.00	U.S. Dollar				
1.1.1	UG Small Bore Pipe		UG Small Bore Pipe		1.00	LF	\$0.00	\$0.00	U.S. Dollar	z_Piping (LB / SB)	SB	Material	HOPE
2	Valves		Valves		1.00	Each	\$0.00	\$0.00	U.S. Dollar				
2.1	Ball Valves		Ball Valves		1.00	Each	\$0.00	\$0.00	U.S. Dollar	ShortCode		Ball Valve	
					11			\$0.00					

- **Select in Model**- This toggle lets you select a cost item. The linked Model objects are then selected within Model.
- **Frame Selected**- This toggle lets you select a cost item. The linked Model objects are then framed within the Model viewer.
- **Sync Model Quantities**- After the quantities have been summed via a DTO execution, then they can be synced from Model into Estimate.
- **Send Selected CBS to Model**- Whether the parent of cost items or cost items are selected, the whole parent to children CBS structure will be pushed to Model.

There are 4 hardcoded fields that can also be used to pass data information from Estimate to Model, User Defined fields 12 through 15. Any information added to these fields will populate DTO Selector information when the cost item is pushed from Estimate to Model.

- User Defined 12 is used for the Tag / OP Name within the first rule.
- User Defined 13 is used for the Value of the Tag / OP Name within the first rule.
- User Defined 14 is used for the second Tag / OP Name within the second rule. It is also used for modifier with combination of the first and second rule.
- User Defined 15 is used for the Value of the Tag / OP Name within the second rule.

11.1.2 Requirements for Model and Estimate integration

- Estimate version 2023.0 or later must be installed.
- The Estimate add-in for Model Client Plugins must be installed.


- InEight Model must be installed.
- One instance of InEight Model and one instance of InEight Estimate must be open on the same computer.

11.2 MODEL TO ESTIMATE INTEGRATION

The following step-by-step walks you through the basic Model and Estimate integration.

11.2 Step by Step 1 — Estimate to Model integration

1. Create a new estimate or start with a template estimate.
2. Launch Model and select **Load a Project**.
3. Open the DTO panel.
4. In Estimate, select a cost item or parent of a cost item.
5. In the top ribbon, select **More Actions**.
6. In the Model Connector section, select the **Send Select CBS to Model** button.

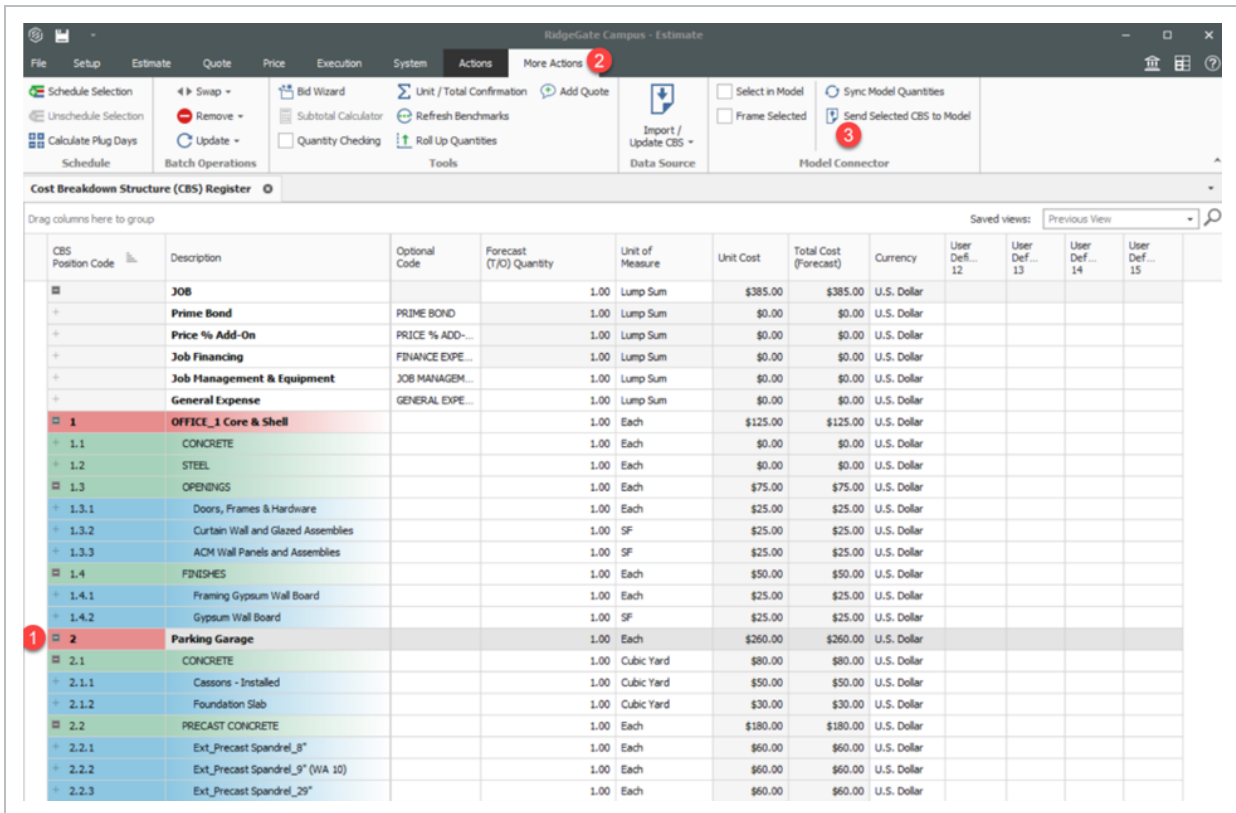


7. Click **OK** to close the Success dialog box when it shows.

The selected CBS structure is now sent over to Model’s DTO panel.

11.2.1 Model integration configuration

The CBS structure of the selected cost item or parent cost item is now represented in the DTO panel. The CBS hierarchy is translated into DTO Groups and DTOs. All levels of the hierarchal tree create DTO Groups, with the last level of the tree creating a DTO.

The DTO utilizes the Selector area to create criteria to select model objects. The Operations area creates the summation of the quantities to share with Estimate.

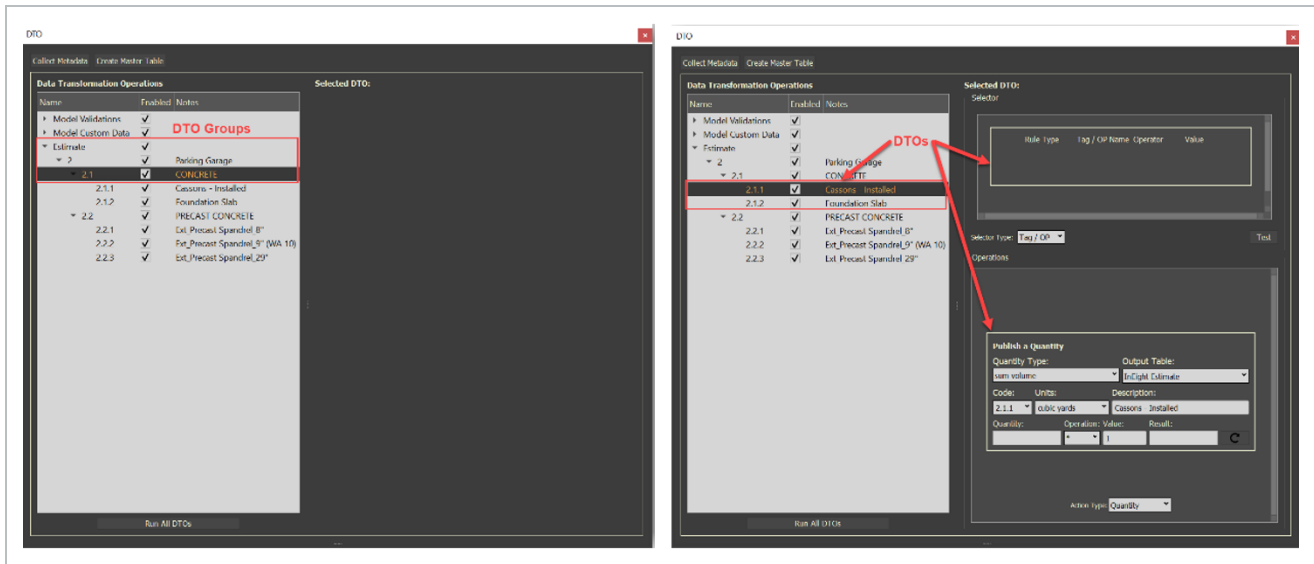


The following step-by-step walks you through how to run Model DTOs.

11.2 Step by Step 2 — Run Model DTOs

1. In Model, select a DTO.

NOTE The Selector area has no predefined rules.

- a. The Operations area has been set to Action Type: Quantity
- b. Quantity Type, Code, Units, and Description fields are populated from Estimate.

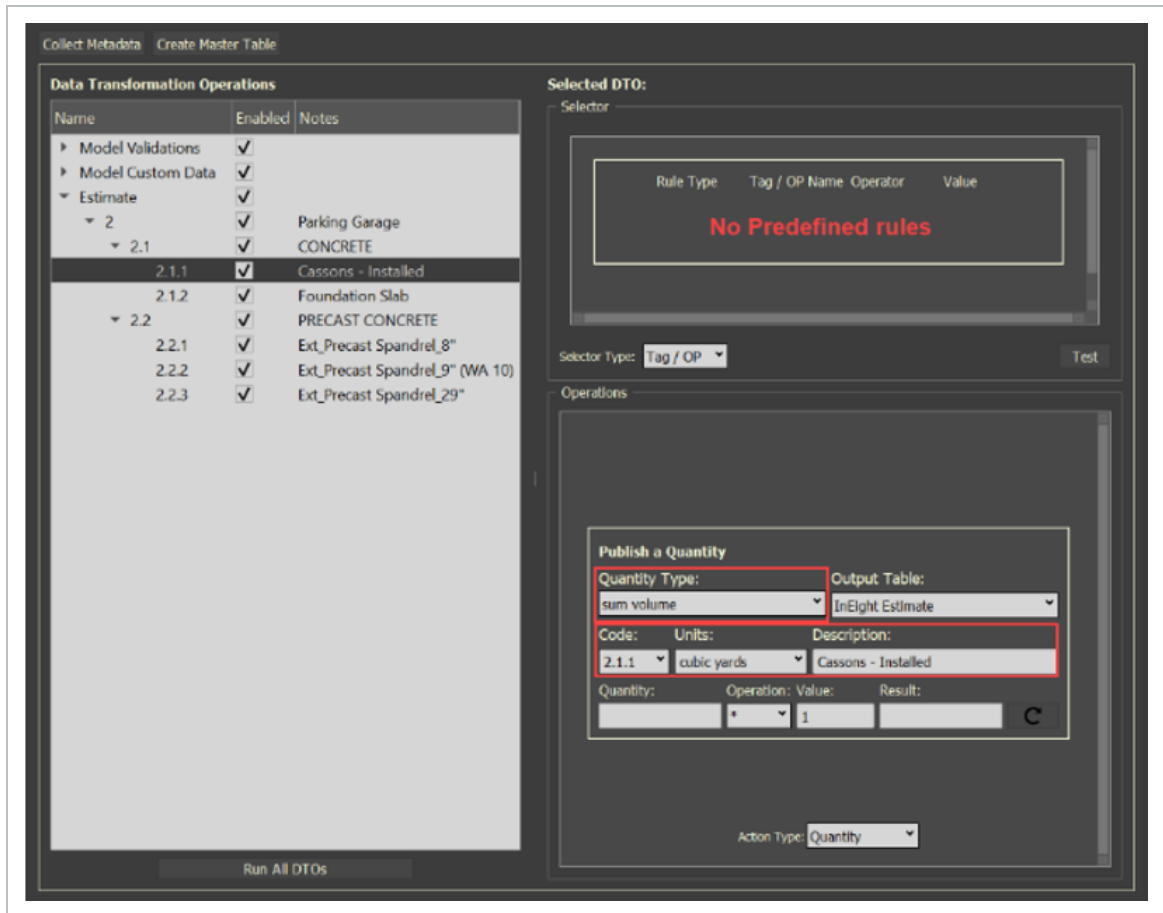

2. Create one or more rules to find Model objects that should be included for the DTO 2.1.1 – Caissons – Installed for the parking garage.



The image shows a software interface titled "Selector". Inside, there is a table with four columns: "Rule Type", "Tag / OP Name", "Operator", and "Value". The first row contains the following values: "Tag", "z_Foundation", "=", and "G1-Foundation Pier". Below the table, there is a "Selector Type:" label followed by a dropdown menu set to "Tag / OP". A "Test" button is located in the bottom right corner of the interface.

Rule Type	Tag / OP Name	Operator	Value
Tag	z_Foundation	=	G1-Foundation Pier

Selector Type: Tag / OP

Test

3. Click **Test** to validate and review all the information for model objects in the Selection Information Panel.
4. Validate that Quantity type is set to the desired summation of the quantities.

Operations

Publish a Quantity


Quantity Type: Output Table:

Code: Units: Description:

Quantity: Operation: Value: Result:

Action Type:

5. Repeat steps 1 thru 4 for the other DTO (Cost Items).
6. Run the individual DTOs or select higher in the hierarchy in which all the DTOs are under.
7. Right-click on a DTO Group, and then select **Run Selected DTO**.

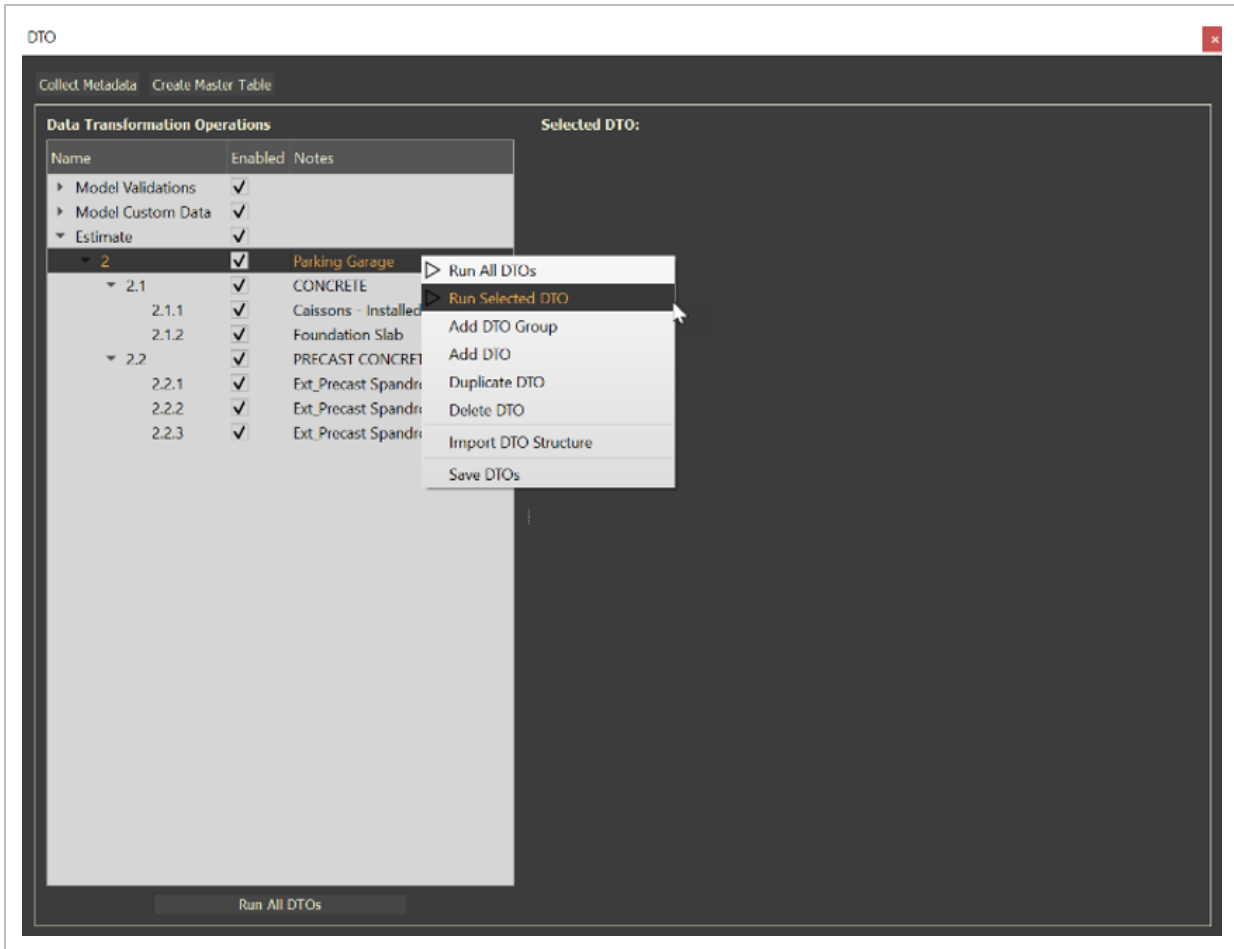


11.2.2 Sync Model Quantities in Estimate

The following step-by-step walks you through how to sync Model quantities in Estimate.


11.2 Step by Step 3 — Sync Model quantities

1. In Estimate, select the **More Actions** tab in the top ribbon.
2. In the **Model Connector** section, select **Sync Model Quantities**.
 - a. The Sync Model Quantities dialog box opens.
 - b. The Model QTY column shows the quantities in Model.

c. The Current QTY column shows the Forecast (T/O) Quantity in Estimate.

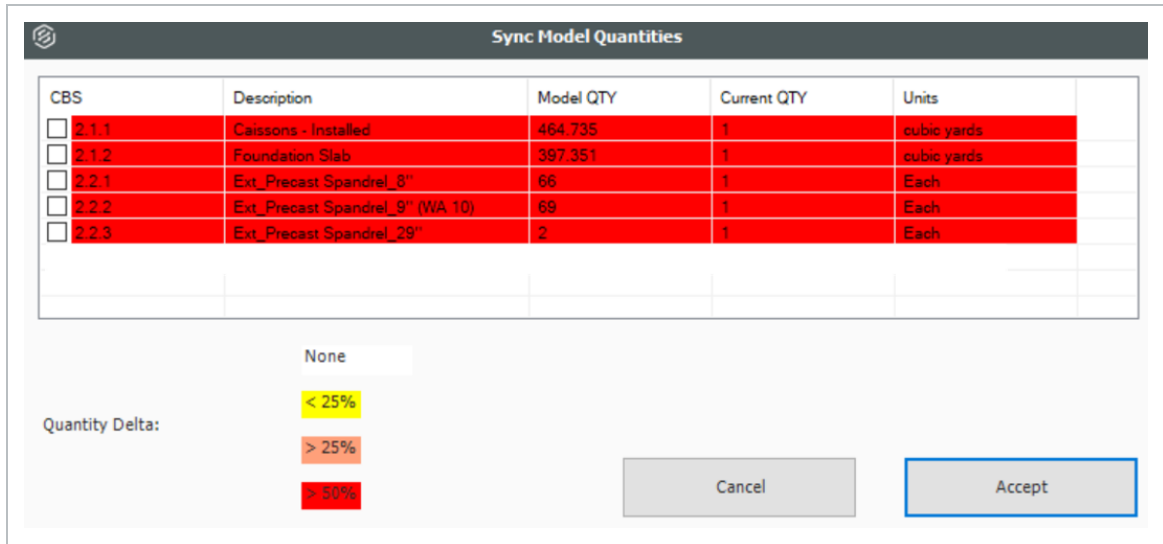

3. Multi-select all cost items, and then select the check boxes.

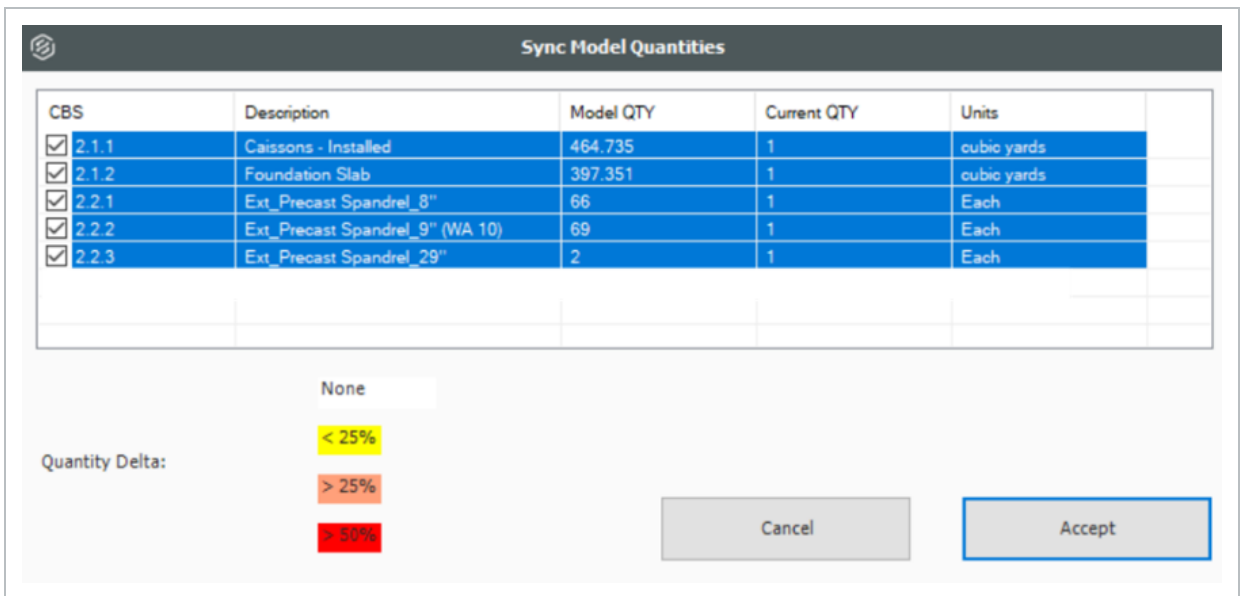

4. Click **Accept**.

The quantities derived from the model are now in Estimate.


CBS Position Code	Description	Optional Code	Forecast (T/O) Quantity	Unit of Measure	Unit Cost	Total Cost (Forecast)	Currency	User Def... 12	User Def... 13	User Def... 14	User Def... 15	
	JOB			1.00	Lump Sum	\$43,502.28	\$43,502.28	U.S. Dollar				
	Prime Bond	PRIME BOND		1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Price % Add-On	PRICE % ADD...		1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Job Financing	FINANCE EXPE...		1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	Job Management & Equipment	JOB MANAGEM...		1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
	General Expense	GENERAL EXPE...		1.00	Lump Sum	\$0.00	\$0.00	U.S. Dollar				
1	OFFICE_1 Core & Shell			1.00	Each	\$125.00	\$125.00	U.S. Dollar				
1.1	CONCRETE			1.00	Each	\$0.00	\$0.00	U.S. Dollar				
1.2	STEEL			1.00	Each	\$0.00	\$0.00	U.S. Dollar				
1.3	OPENINGS			1.00	Each	\$75.00	\$75.00	U.S. Dollar				
1.3.1	Doors, Frames & Hardware			1.00	Each	\$25.00	\$25.00	U.S. Dollar				
1.3.2	Curtain Wall and Glazed Assemblies			1.00	SF	\$25.00	\$25.00	U.S. Dollar				
1.3.3	ADM Wall Panels and Assemblies			1.00	SF	\$25.00	\$25.00	U.S. Dollar				
1.4	FINISHES			1.00	Each	\$50.00	\$50.00	U.S. Dollar				
1.4.1	Framing Gypsum Wall Board			1.00	Each	\$25.00	\$25.00	U.S. Dollar				
1.4.2	Gypsum Wall Board			1.00	SF	\$25.00	\$25.00	U.S. Dollar				
2	Parking Garage			1.00	Each	\$43,377.28	\$43,377.28	U.S. Dollar				
2.1	CONCRETE			1.00	Cubic Yard	\$35,157.28	\$35,157.28	U.S. Dollar				
2.1.1	Cassons - Installed		464.74	Cubic Yard	\$50.00	\$23,236.75	U.S. Dollar					
2.1.2	Foundation Slab		397.35	Cubic Yard	\$30.00	\$11,920.53	U.S. Dollar					
2.2	PRECAST CONCRETE			1.00	Each	\$8,220.00	\$8,220.00	U.S. Dollar				
2.2.1	Ext_Precast Spandrel_B"		66.00	Each	\$60.00	\$3,960.00	U.S. Dollar					
2.2.2	Ext_Precast Spandrel_9" (WA 10)		69.00	Each	\$60.00	\$4,140.00	U.S. Dollar					
2.2.3	Ext_Precast Spandrel_29"		2.00	Each	\$60.00	\$120.00	U.S. Dollar					

11.2.3 Select and frame Model objects



The following step-by-step walks you through how to select and frame Model objects.

11.2 Step by Step 4 — Select and frame Model objects

1. In Estimate, select the **More Actions** tab in the top ribbon.
2. In the Model Connector section, select the check boxes for **Select in Model** and **Frame Selected**.

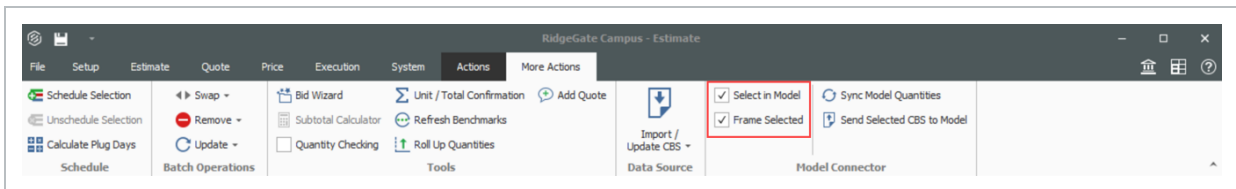

3. Select a cost item in Estimate and see the model in Model reflect which model objects were used to create the quantities.

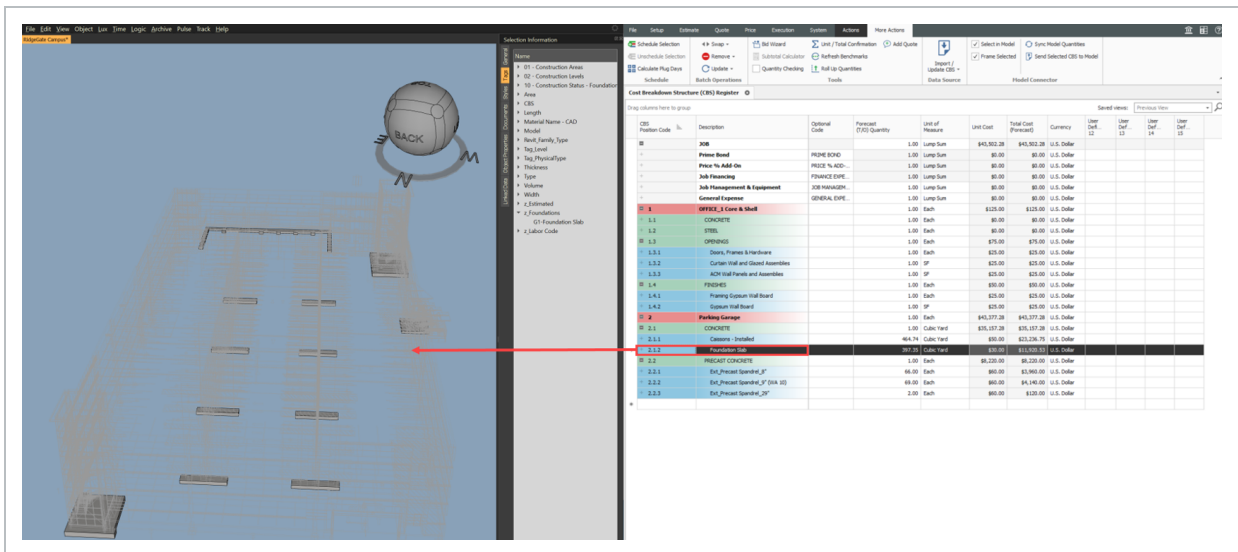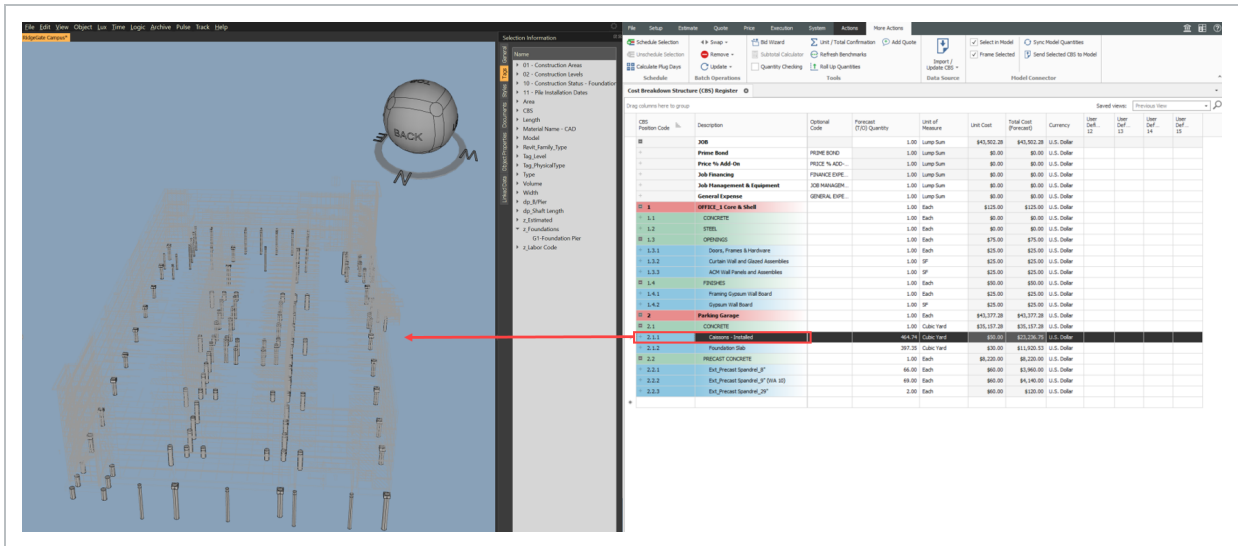

11.2.4 User Defined Fields

User Defined Fields (UDF) in Estimate align with Tag Category and Tag value in Model.

- UDF 12 = Tag Category
- UDF 13 = Tag Value from UDF 12 Tag Category

- UDF 14 = Tag Category
- UDF 15 = Tag Value from UDF 14 Tag Category

If UDF 12 and UDF 13 are populated and UDF 14 and UDF 15 are not populated, then only one rule is created in the DTO Selector area. If all four UDFs are populated, then two rules are created.

The following step-by-step walks you through rule setup for UDF fields 12 and 13.

NOTE The **Tag / OP Name** must exist within the model or it will be set to a random Tag / OP. The **Operator** is set to = by default. The **Value** must exist within the model or it will be set to a random value.


11.2 Step by Step 5 — Rule setup UDF fields 12 and 13

1. In Estimate for cost item 2.1.1, type **z_Foundations** into UDF field 12.
2. For cost item 2.1.1, type **G1-Foundation Pier** into UDF field 13.

CBS Position Code	Description	Forec... (T/O) Quant...	Unit of Measure	Unit Cost	Total Cost (Forecast)	Currency	User Defined 12	User Defined 13	User Defined 14	User Defined 15
→ 2	Parking Garage	1.00	Each	\$43,377.28	\$43,377.28	U.S. Dollar				
2.1	CONCRETE	1.00	Cubic Yard	\$35,157.28	\$35,157.28	U.S. Dollar				
+ 2.1.1	Caissons - Installed	464.74	Cubic Yard	\$50.00	\$23,236.75	U.S. Dollar	z_Foundations	G1-Foundation Pier		
+ 2.1.2	Foundation Slab	397.35	Cubic Yard	\$30.00	\$11,920.53	U.S. Dollar	z_Foundations	G1-Foundation Slab		
2.2	PRECAST CONCRETE	1.00	Each	\$8,220.00	\$8,220.00	U.S. Dollar				
+ 2.2.1	Ext_Precast Spandrel_8"	66.00	Each	\$60.00	\$3,960.00	U.S. Dollar	Family	Ext_Precast Spandrel_8"		
+ 2.2.2	Ext_Precast Spandrel_9" (WA 10)	69.00	Each	\$60.00	\$4,140.00	U.S. Dollar	Family	Ext_Precast Spandrel_9" (WA 10)		
+ 2.2.3	Ext_Precast Spandrel_29"	2.00	Each	\$60.00	\$120.00	U.S. Dollar	Family	Ext_Precast Spandrel_29"		

3. In the ribbon, select the **More Actions** tab.
4. Select the **Send Selected CBS to Model** button.
5. When the Success dialog box opens, click **OK**.

The Model DTO Selector then automatically creates a rule from the info provided in the UDF fields.

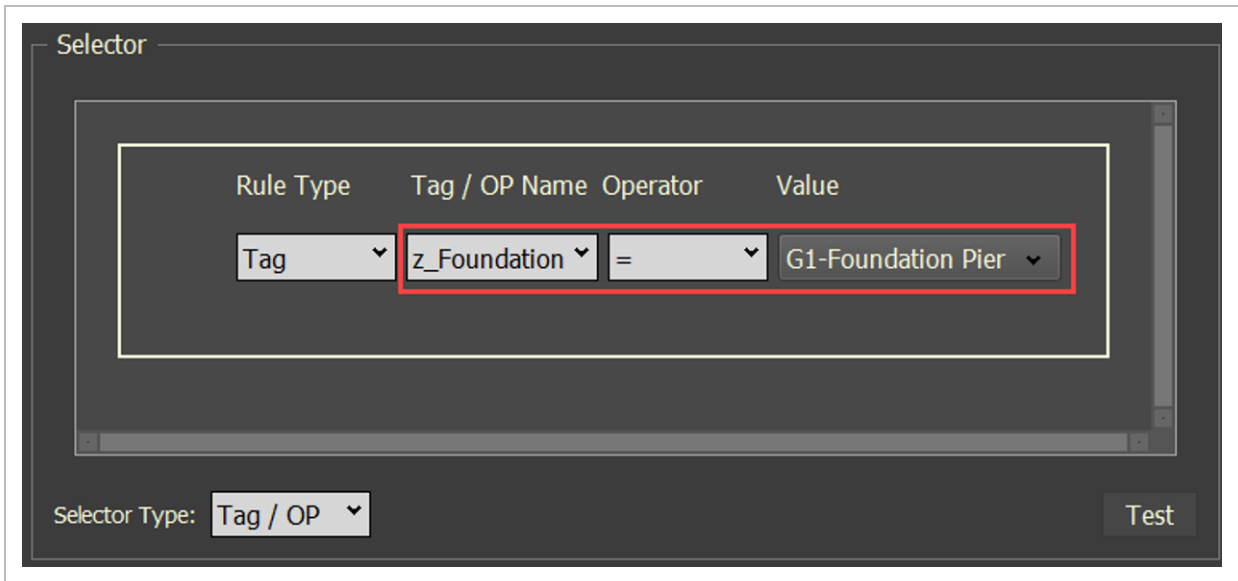

The following step-by-step walks you through rule setup for UDF fields 12 through 15.

NOTE The **Tag / OP Name** must exist within the model or it will be set to a random Tag / OP. The **Operator** is set to = by default. The **Value** must exist within the model or it will be set to a random value.


11.2 Step by Step 6 — Rule setup UDF fields 12 through 15

1. In Estimate for cost item 2.1.1, type **z_Foundations** into UDF field 12.
2. For cost item 2.1.1, type **G1-Foundation Pier** into UDF field 13.
3. For cost item 2.1.1, type **Model** into UDF field 14.
4. For cost item 2.1.1, type **STRUCT_Parking** into UDF field 15.

Drag columns here to group							Saved views: Previous View			
CBS Position Code	Description	Forec... (T/O) Quant...	Unit of Measure	Unit Cost	Total Cost (Forecast)	Currency	User Defined 12	User Defined 13	User Defined 14	User Defined 15
2	Parking Garage	1.00	Each	\$43,377.28	\$43,377.28	U.S. Dollar				
2.1	CONCRETE	1.00	Cubic Yard	\$35,157.28	\$35,157.28	U.S. Dollar				
2.1.1	Caissons - Installed	464.74	Cubic Yard	\$50.00	\$23,236.75	U.S. Dollar	z_Foundations	G1-Foundation Pier	Model	STRUCT_Parking
2.1.2	Foundation Slab	397.35	Cubic Yard	\$30.00	\$11,920.53	U.S. Dollar	z_Foundations	G1-Foundation Slab		
2.2	PRECAST CONCRETE	1.00	Each	\$8,220.00	\$8,220.00	U.S. Dollar				
2.2.1	Ext_Precast Spandrel_8"	66.00	Each	\$60.00	\$3,960.00	U.S. Dollar	Family	Ext_Precast Spandrel_8"		
2.2.2	Ext_Precast Spandrel_9" (WA 10)	69.00	Each	\$60.00	\$4,140.00	U.S. Dollar	Family	Ext_Precast Spandrel_9" (WA 10)		
2.2.3	Ext_Precast Spandrel_29"	2.00	Each	\$60.00	\$120.00	U.S. Dollar	Family	Ext_Precast Spandrel_29"		

- 5. In the ribbon, select the **More Actions** tab.
- 6. Select the **Send Selected CBS to Model** button.
- 7. When the Success dialog box appears, click **OK**.

The Model DTO Selector then automatically creates a rule from the info provided in the UDF fields.

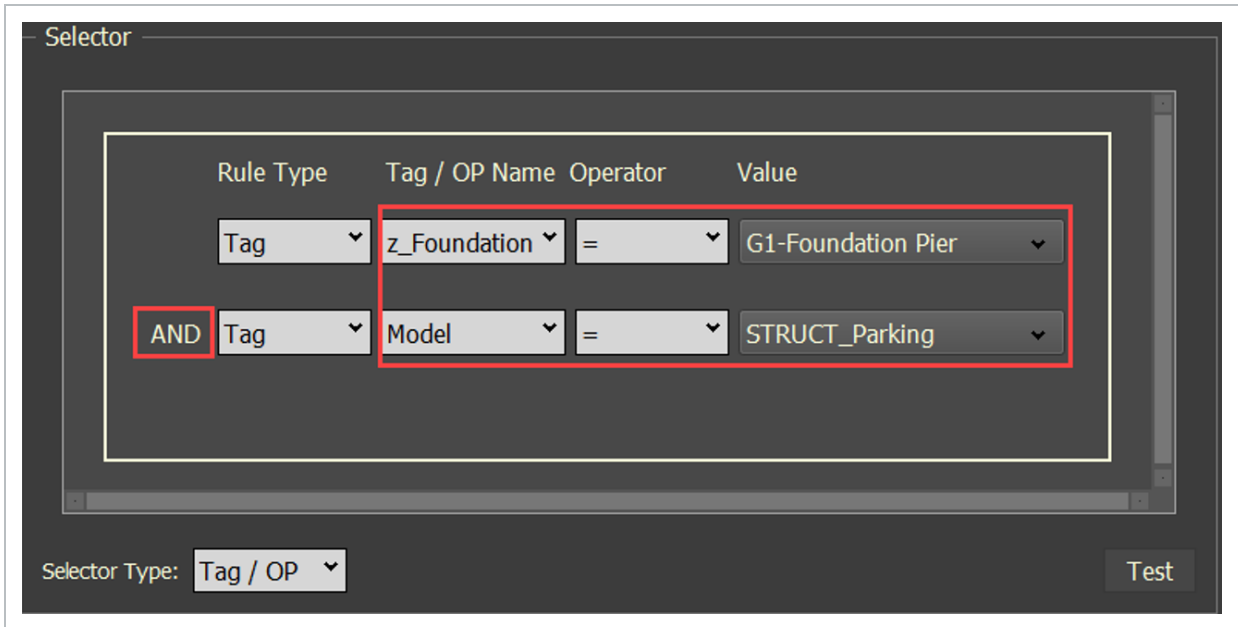

This page intentionally left blank.



LESSON 12 – ELEMENTS

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Navigate the Elements panels and dialogs
- Know how to create an Element
- Create Elements from objects
- Unlink objects from an Element
- Delete an Element

Topics in this Lesson

12.1 ELEMENTS OVERVIEW

Elements formalize relationships between components, equipment, systems, subsystems, etc. Maintaining the thread of data from Design to Construction to Quality to Closeout; customizable based on project requirements and participating in an Advanced Work Packaging process.


The new Elements panel within InEight model provides the capability to create Material Components (individual or combined model objects). The Material Components created in Model are linked to the AWP process (Model <-> Plan and Model <-> Schedule) and to the Completions applications.

Within Completions, Assets have been transitioned into Elements, which provides a direct link from Completions to Model. In a general sense, Elements created in Completions are now visible within Model and Elements created in Model are visible in Completions


Elements are more flexible than Assets in that they can have a hierarchical relationship and display different data based on Element type or classification (system, subsystem, building intersection, engineered equipment, etc.) With this transition, users can access Elements data from Completions HQ, Mobile, and Model applications.

12.1.1 Elements Panel

To access the Elements Panel, select **View** from the menu bar at the top of the screen. Then, select **Elements**.

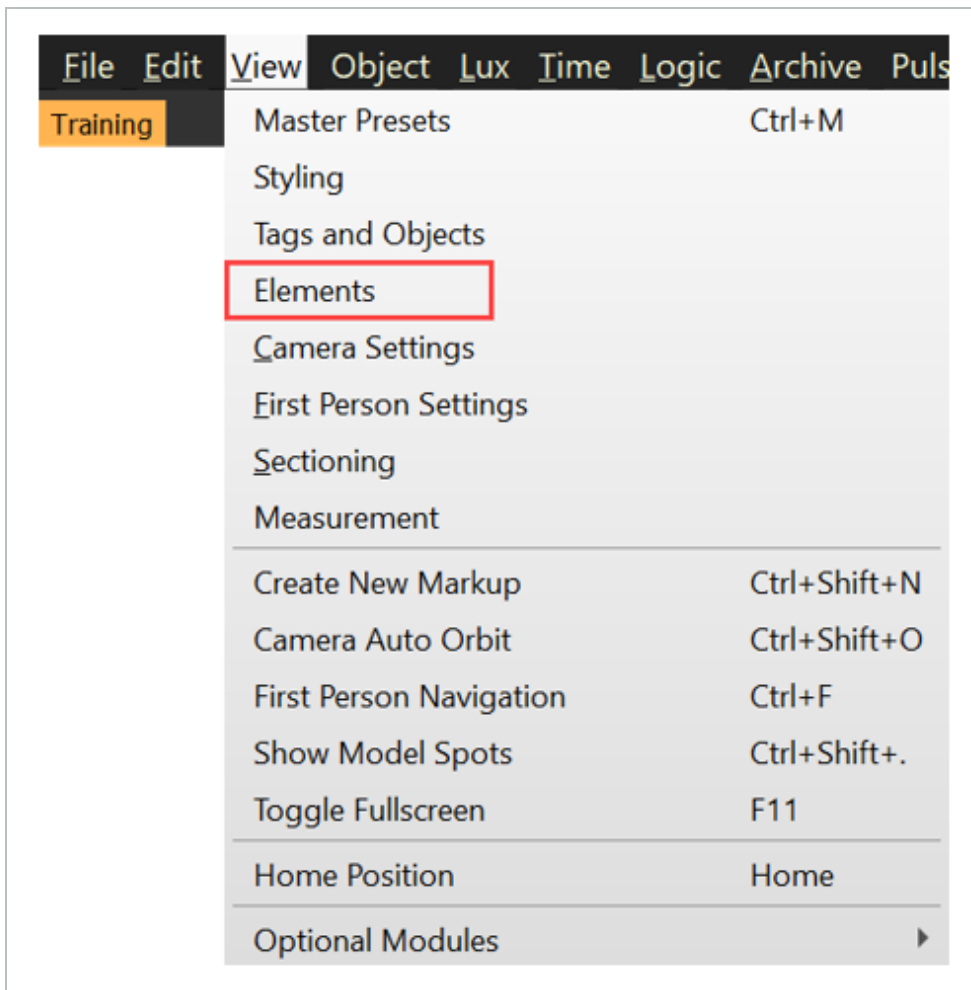

This will open the Elements Panel.

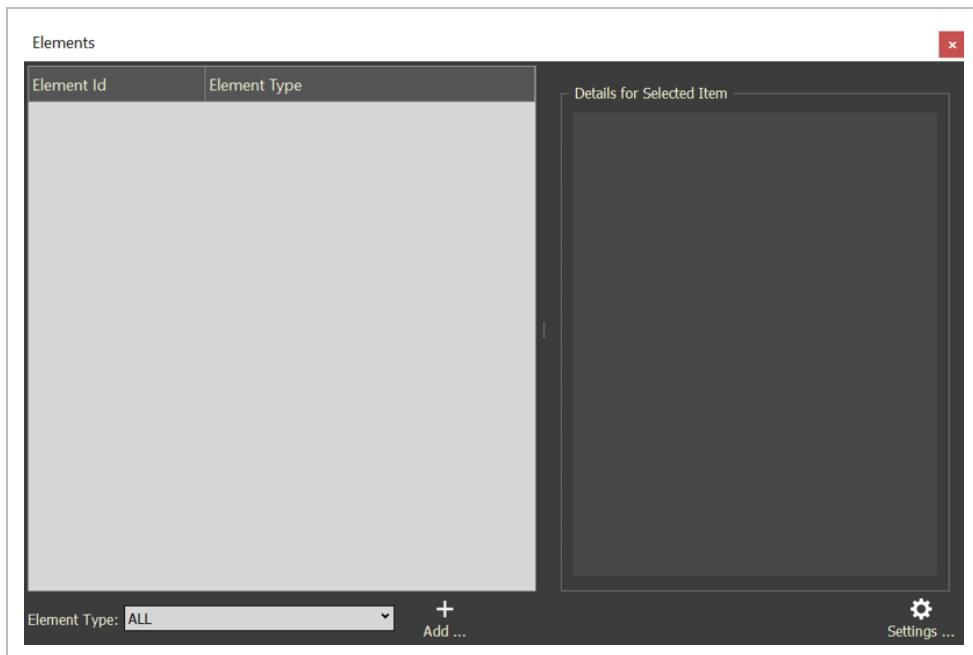

Elements created within the Model application or the Completions application will be displayed.


- **Element Type:** A dropdown selection to filter displayed Elements
- **Add...:** provides the ability to:
 - Create a single Component
 - Create multiple Components from a selection
- **Settings...:** provides the ability to:
 - Toggle on/off the **Auto-select model elements** feature
 - Toggle on/off the **Show linked model elements** feature
 - Toggle on/off the **Drop from Object Tree creates single Material Component** feature
 - Toggle on/off the **Compact Mode** feature

12.2 CREATE AND MANAGE ELEMENTS


You can create elements and link tags or objects to those elements by clicking the **Add** icon or moving tags and objects to the Elements panel.

12.2 Step by Step 1 — Create an element

1. Click the **Add** icon.

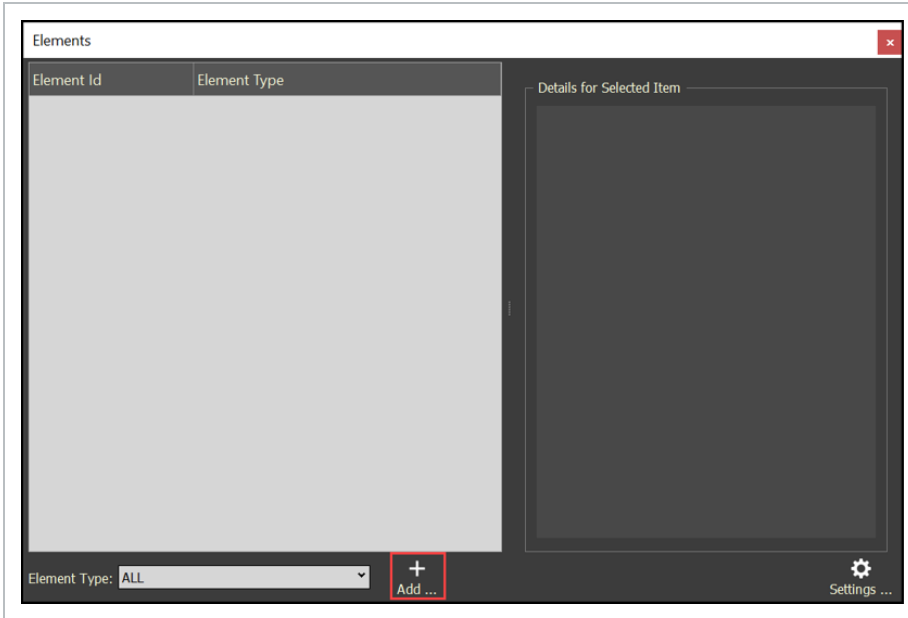


2. Select **Add Component**.

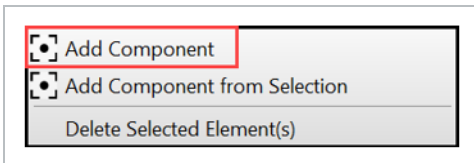


3. Fill in the component fields.

	Field name	Value
1	Element Type	Select Material Component.
2	Element Name	Type in a name that represents the material component to be created.
3	Description	Enter a description for the material component.
4	Linked model item	This is used only when <i>Add Component from Selection</i> option is selected.
5	use Field mapping	N/A

You can see the new completed component in the Create Element dialog box.

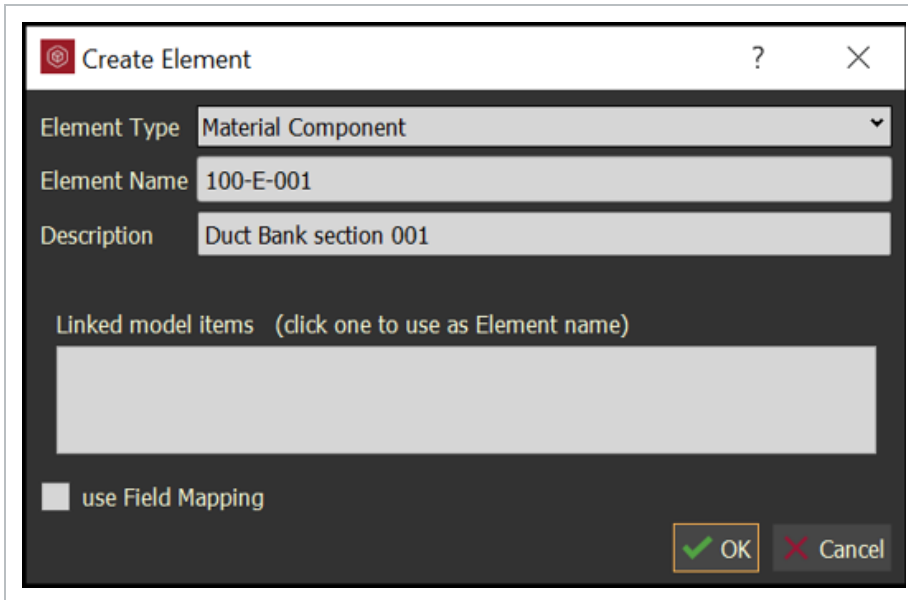


4. Click **OK**, and then the new Material Component shows in the Elements panel.

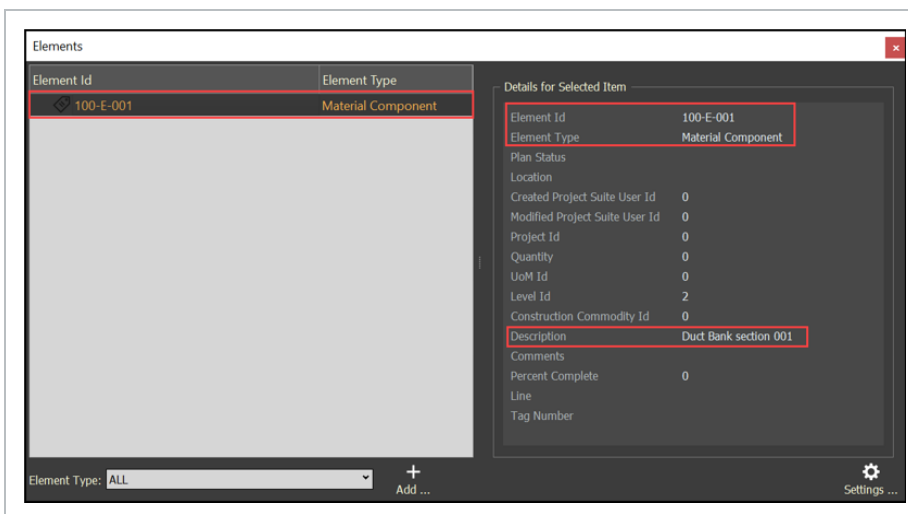


NOTE The Element ID, Element Type, and Description cannot be changed. You must delete and recreate a new element.

5. You can add a model object to the element two different ways:


- Drag one or more tags into the element from the Tags tab.

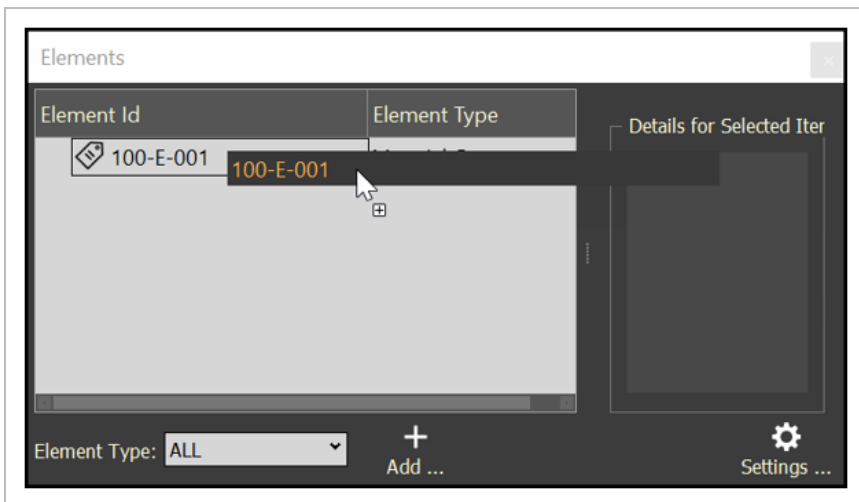


The tags show below the element.

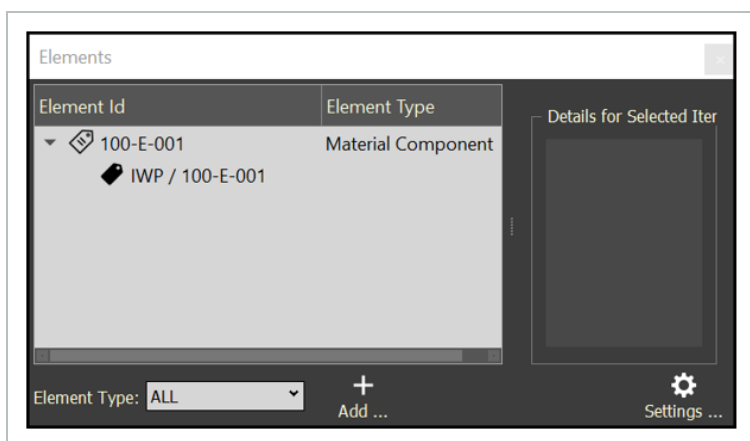

- Drag objects into the element by selecting one or more model objects from the Objects tab.

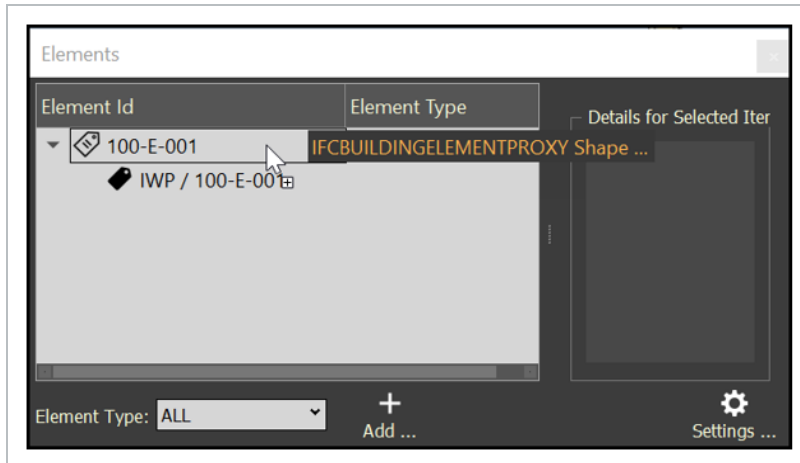


The objects show below the element.

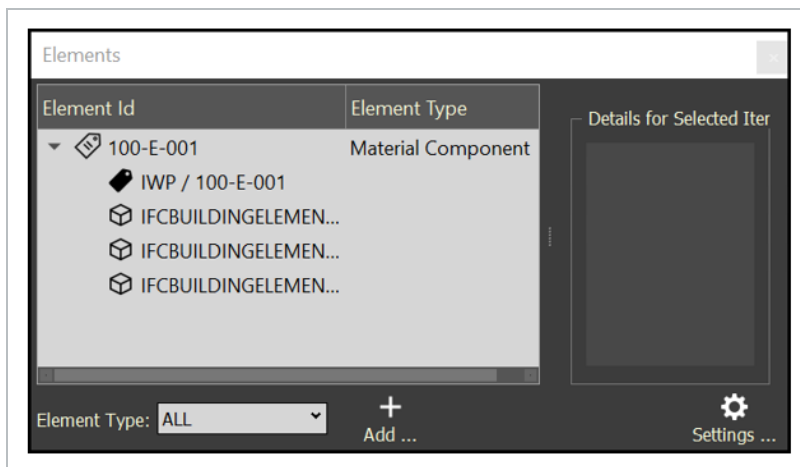


NOTE The object values or tag values are linked to the element. When selecting values in the Elements panel, those values are also selected in the Tags and Objects tree.

12.2 Step by Step 2 — Create elements from a selection of objects


1. Select one or more model objects.
2. Click the **Add** icon.

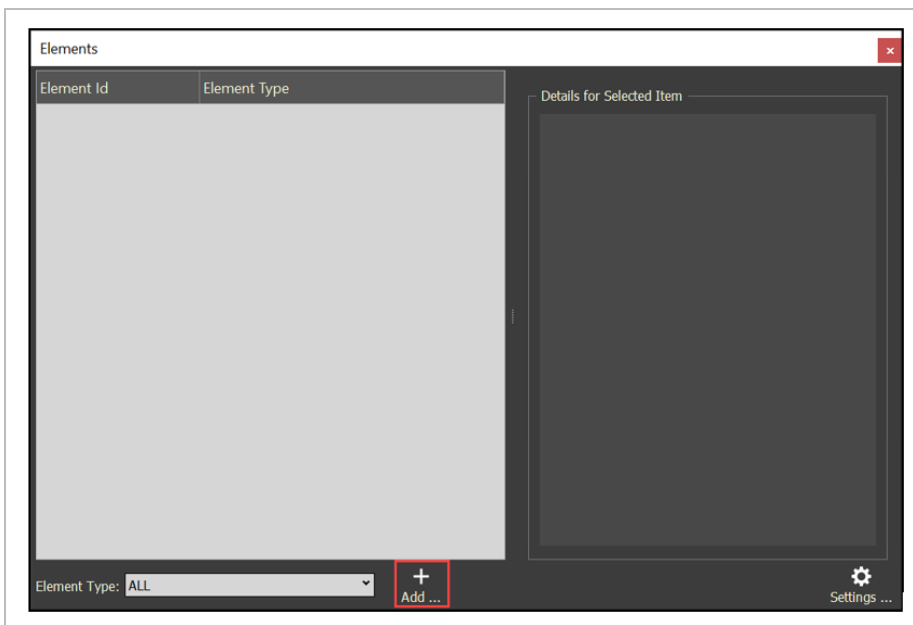


3. Click **Add Components from Selection**.

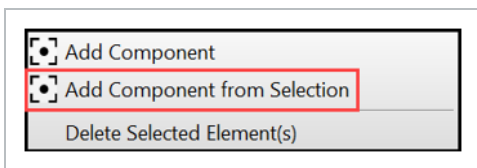


The Create Element dialog box is populated.

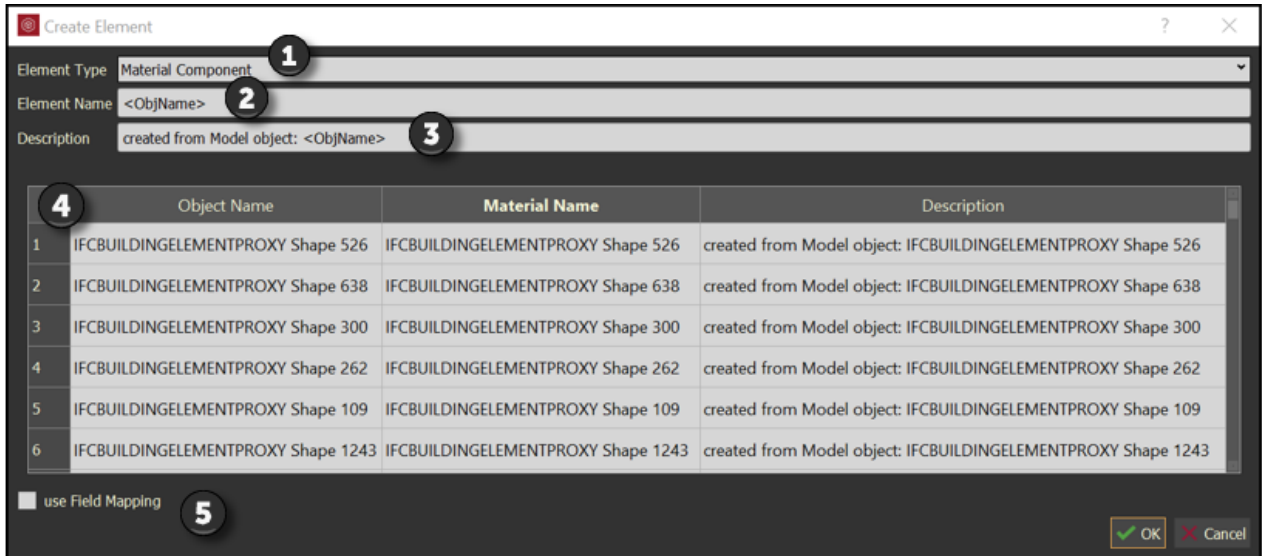

	Field name	Value
1	Element Type	Select Material Component.
2	Element Name	Do not delete <ObjName>. This ensures that all the added objects are unique. You can add any text after the <ObjName> if needed.
3	Description	Optionally type a description for the material component.
4	Linked model items	This is used only when <i>Add Component from Selection</i> option is selected.
5	use Field Mapping	N/A

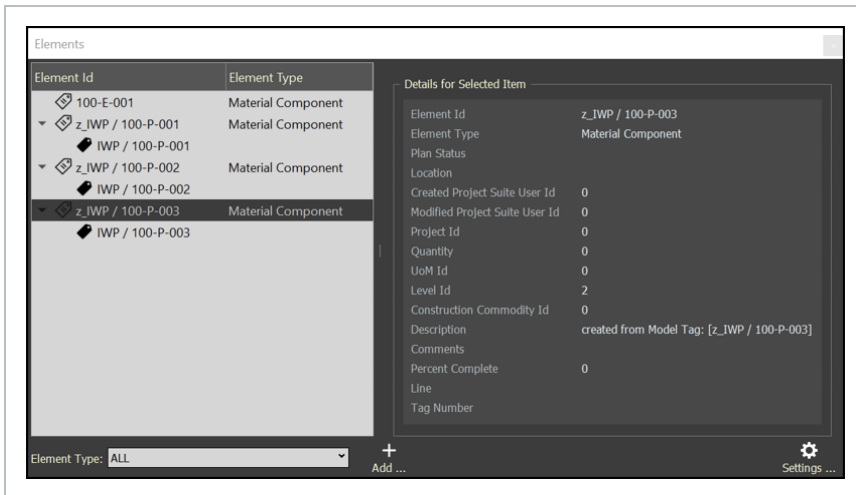

4. Click **OK**, and then the new Elements show in the Elements panel.

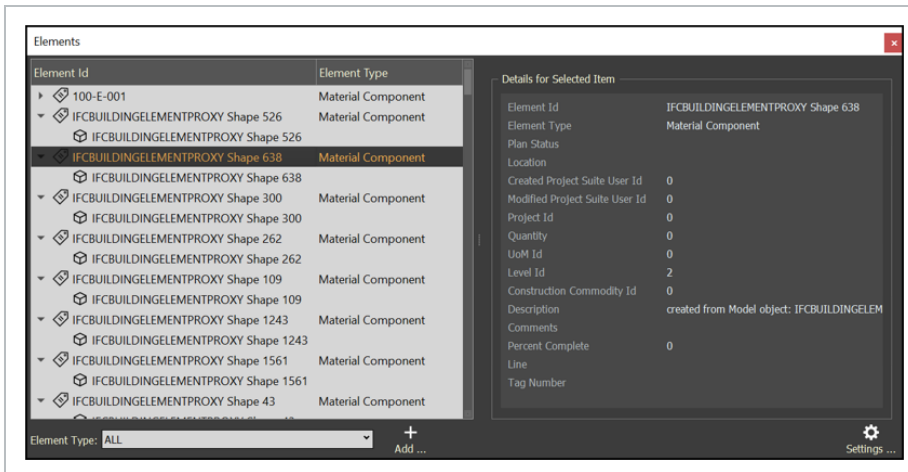


NOTE


Each model object will have an element created with the individual model object linked to that element.

12.2 Step by Step 3 — Create elements from the tags

1. To create elements from tags, in the Tags tab, drag one or more tags into the Elements panel.

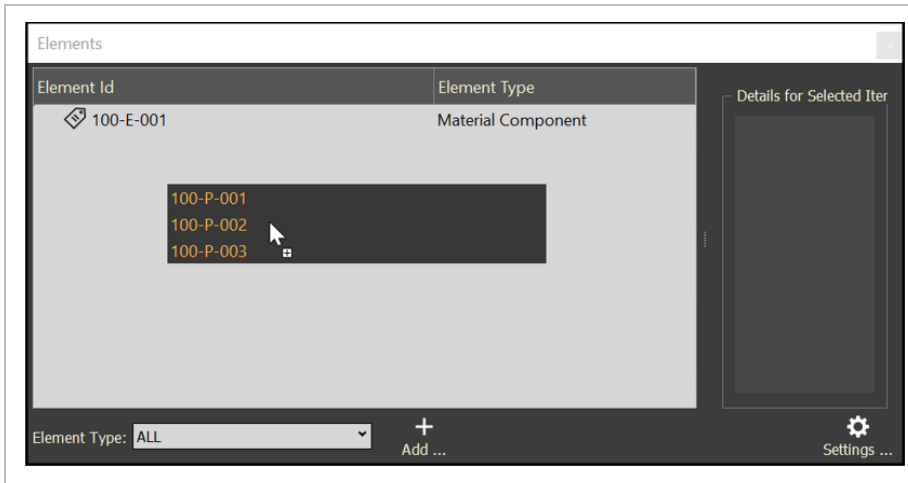

The tags show below the element.

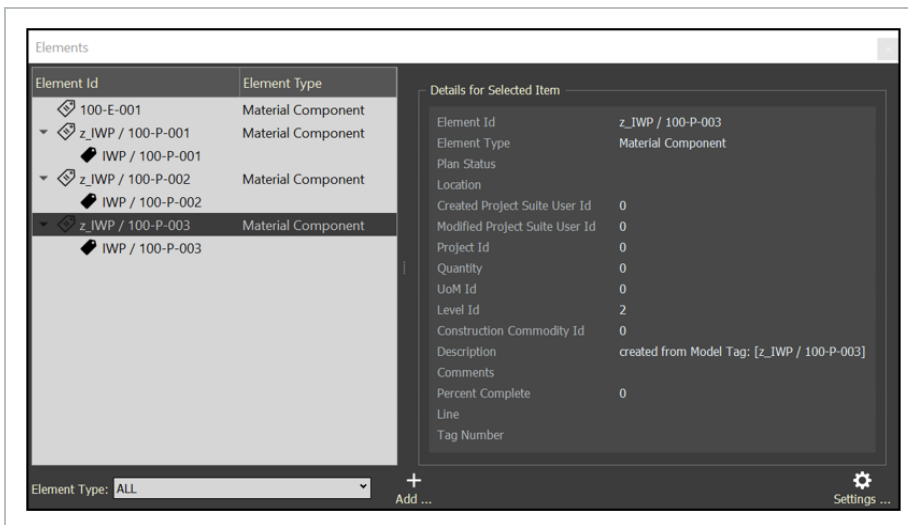

NOTE The element name will be derived from the tag, and the tag value is linked to the respective element.

12.2 Step by Step 4 — Edit an element

1. In the Elements panel, right-click an element, and then select **Edit Element**.

The Edit Element panel opens and shows the associated element data.

2. Edit the element as needed.

The screenshot shows the 'Edit Element' dialog box with the following fields and values:


- Element Type: Component
- Location: (dropdown menu)
- Position: A2-077P-0866-01-02
- Location: (dropdown menu)
- Id: A2-077P-0866-01-02
- person test: (dropdown menu)
- Hierarchy Position: A2-077P-0866-01-02
- Component Core Data
 - Id: 749004
 - Name: A2-077P-0866-01-02

Buttons: OK, Cancel

3. Click **OK** to save your changes. Fields that cannot be edited show in a solid color.


12.2 Step by Step 5 — Unlink objects from an element

1. Select an object or objects in one or more elements.
2. Right-click on the selected items, and then select **Unlink item**.

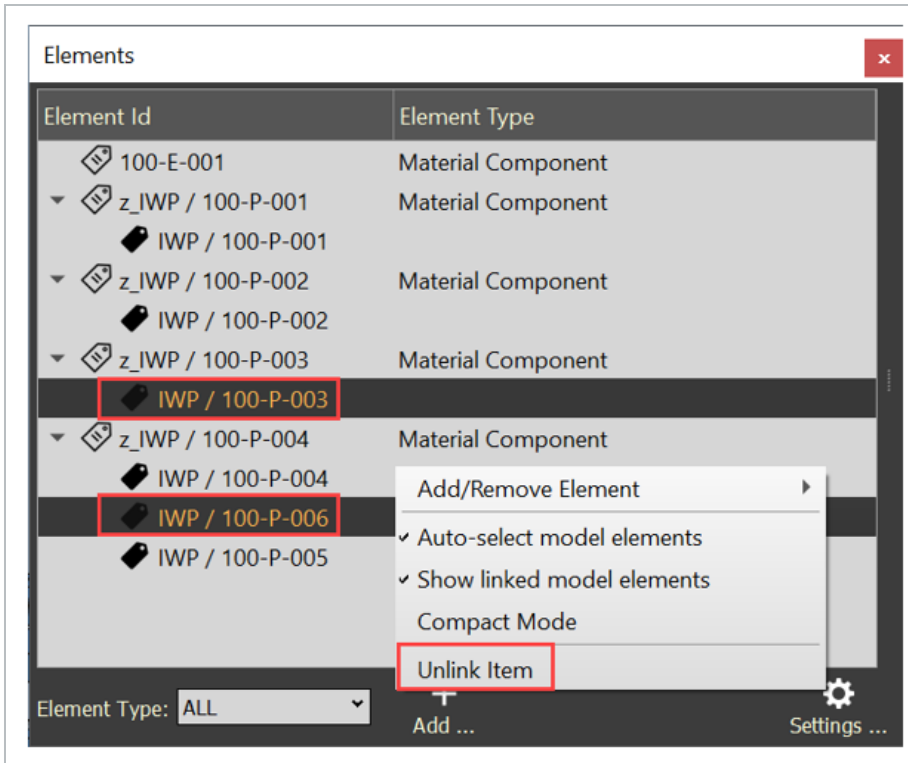

12.2 Step by Step 6 – Delete an element

1. Select one or more elements.
2. Right-click on the selected items, and then select Add/Remove Element > **Delete Selected Elements**.

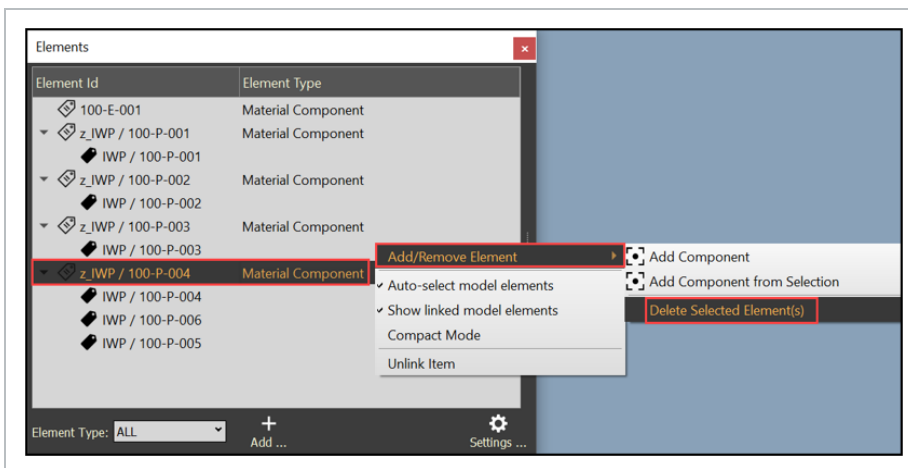

Lesson 12 Review

1. The Material created are linked to the AWP process.
 - a. True
 - b. False

2. Elements have more _____ than Assets in that they have a _____ relationship and display different data based on Element type.
 - a. information, variety
 - b. flexible, hierarchical
 - c. relationship, classification

3. Elements formalize relationships between these: (select all that apply)
 - a. tags
 - b. components
 - c. equipment
 - d. assets
 - e. data
 - f. systems
 - g. subsystems

Lesson 12 Summary

As a result of this lesson, you can:

- Navigate the Elements panels and dialogs
- Know how to create an Element
- Create Elements from objects
- Unlink objects from an Element
- Delete an Element

LESSON 13 – ADVANCED WORK PACKAGING & WORKFACE PLANNING

Lesson Duration: 40 minutes

Lesson Objectives

After completing this lesson, you will be able to:

- Work Packaging Overview
- Creating & Managing CWAs, CWPs, & IWPs

Topics in this Lesson

13.1 WORK PACKAGING OVERVIEW


InEight Model allows visual work packaging to support an Advanced Work Packaging (AWP), Work Face Planning (WFP), or any other work scoping process.

Work Packaging breaks down projects into small, manageable scopes of work so that operation can be assigned to responsible supervision, executed, and tracked effectively. Within InEight, our approach is to break the work of your project into Construction Work Areas (CWAs), Construction Work Packages (CWPs), and Installation Work Packages (IWPs).

AWP activities span the entire project. Front-end planning and detailed engineering activities support enhanced execution at the work front. Project set-up and planning sessions establish the basis for coordinated construction, procurement, and engineering work packages (CWPs, PWP, and EWP).


AWP drives the WFP concepts to Engineering and Procurement. Drawings are issued to construction and vendors as complete Engineering Work Packages (EWP) and Procurement Work Packages (PWP)

instead of individual drawing releases. The objective is to ensure all parties follow the project Path of Construction.

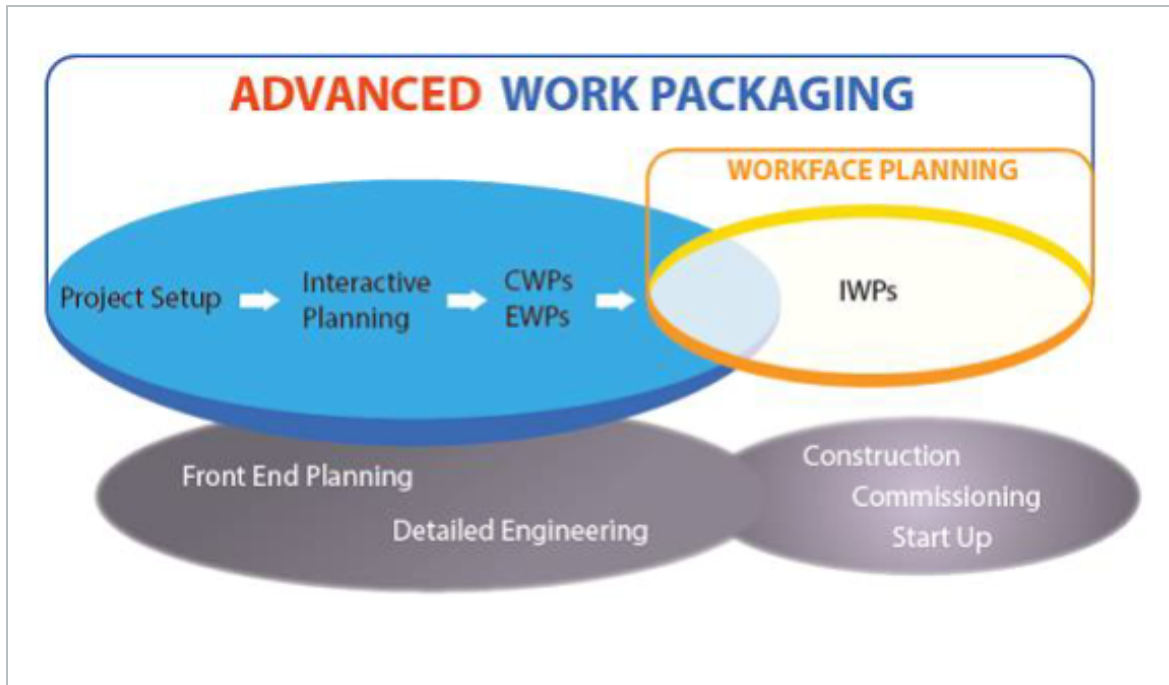

13.1.1 AWP Panel

To access the AWP Panel, select View from the menu bar at the top of the screen. Then, go to the Optional Modules and then select AWP.

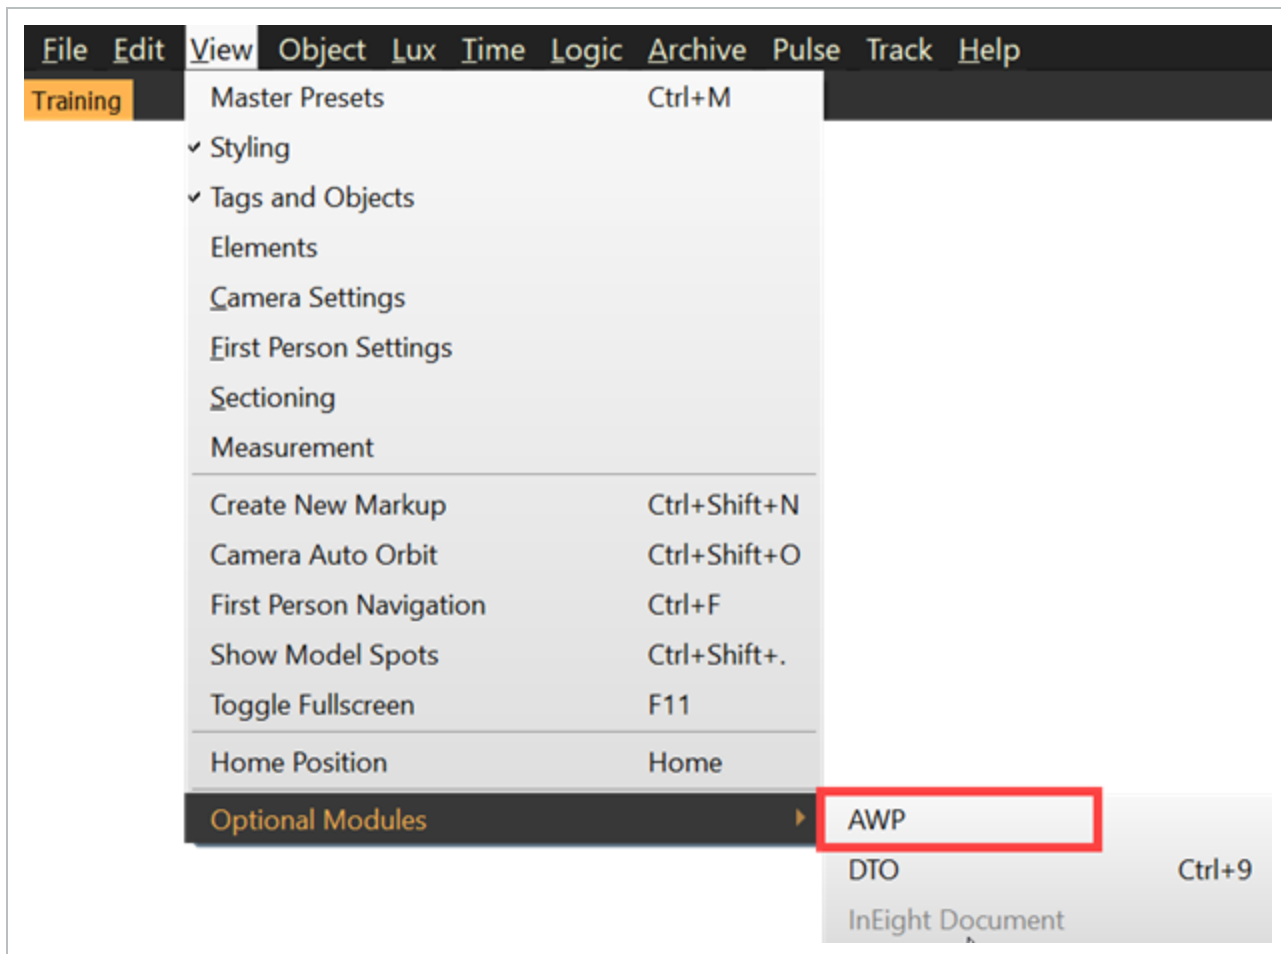

This opens the AWP Panel.

- AWP Panel will display Work Packaging structure items (CWA, CWP, IWP) created in InEight Model, InEight Plan, or InEight Schedule applications
- Name: Work Package unique name or code
- Description: Brief work package description
- Start: Schedule start date
- Finish: Schedule finish date
- % Complete: Percent complete (earned work-hour basis)
- Platform: Identifies which platform (Model, Plan, Schedule) created work package structure item
- Add: provides the ability to:
 - Add CWA
 - Add CWP

- Add IWP
- Remove Item
- Settings: provides the ability to:
 - Toggle on/off the Auto-select material components feature
 - Visually select model objects that are assigned to work package structure
 - Toggle on/off the Show % complete feature
 - Activates progress visualization mode
 - Toggle on/off the Compact Mode feature
 - Reduces AWP panel down to only show CWA/CWP/IWP names
 - Toggle on/off the Edit RUID feature
 - Opens the AWP panel column customization widget


13.2 CREATING & MANAGING CWA, CWP & IWP

The InEight platform allows users to generate AWP structure components (Construction Work Areas (CWAs), Construction Work Packages (CWPs), and Installation Work Packages (IWPs)) within Schedule, Plan, and Model. InEight's cloud-based platform allows real-time synchronization between the solutions.


Adding to the existing AWP structure or creating a new structure to reflect the current project status is available in the Model.

13.2 Step by Step 1 — Create a Construction Work Area (CWA)


1. Select **Add**.

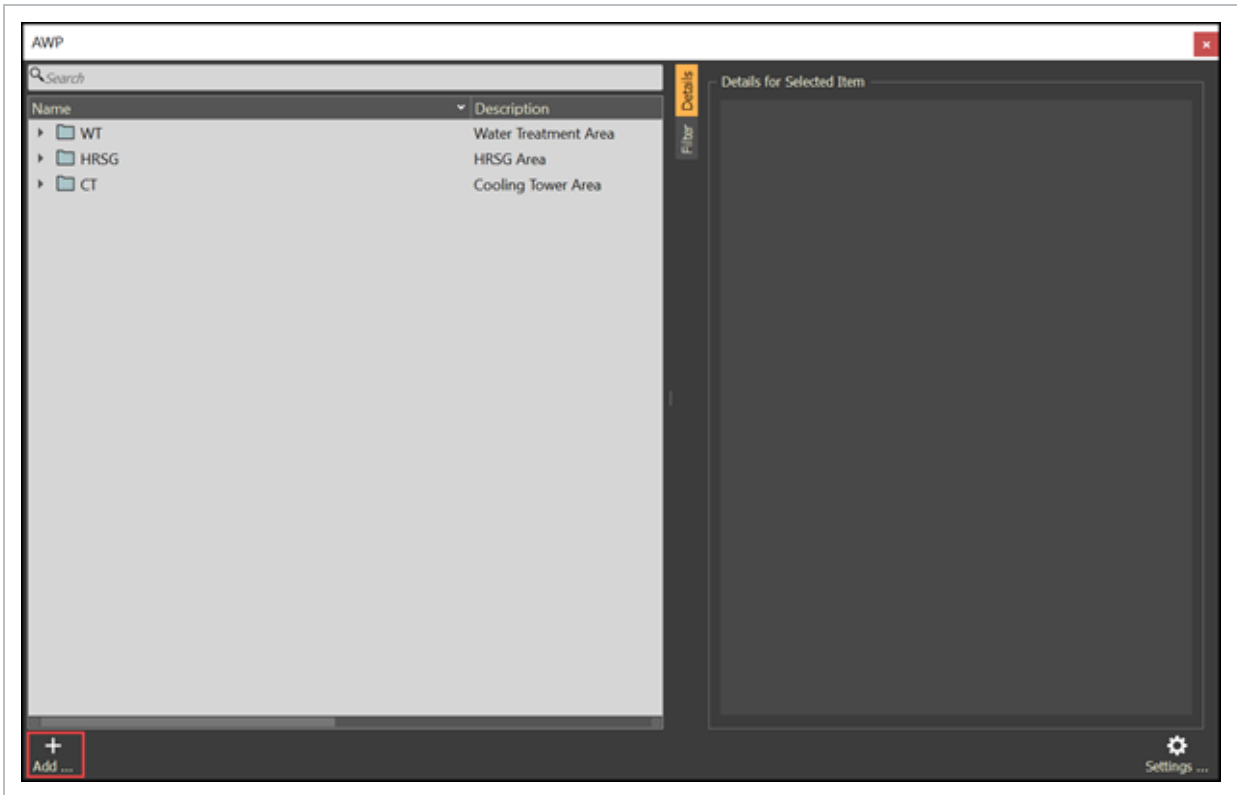

2. Click **Add CWA**.

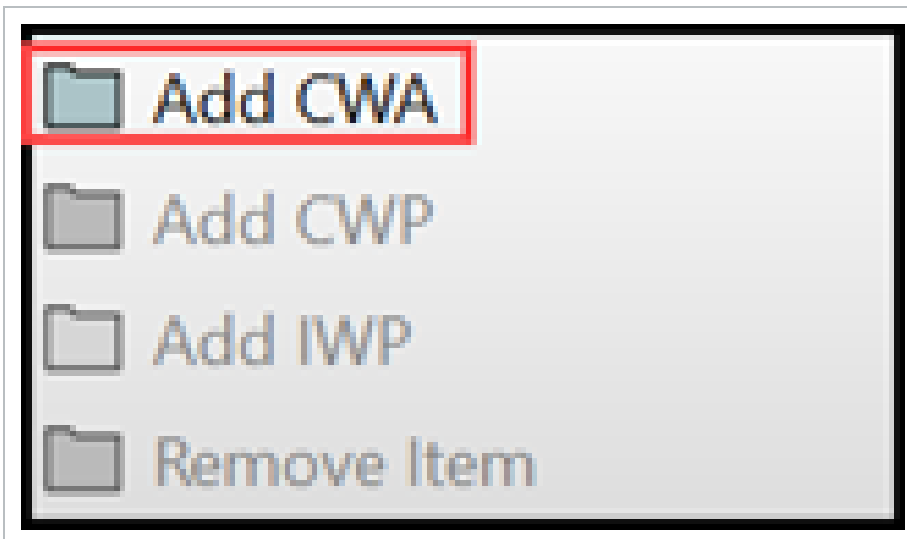


- Fill out the CWA ID (project unique code or identifier).

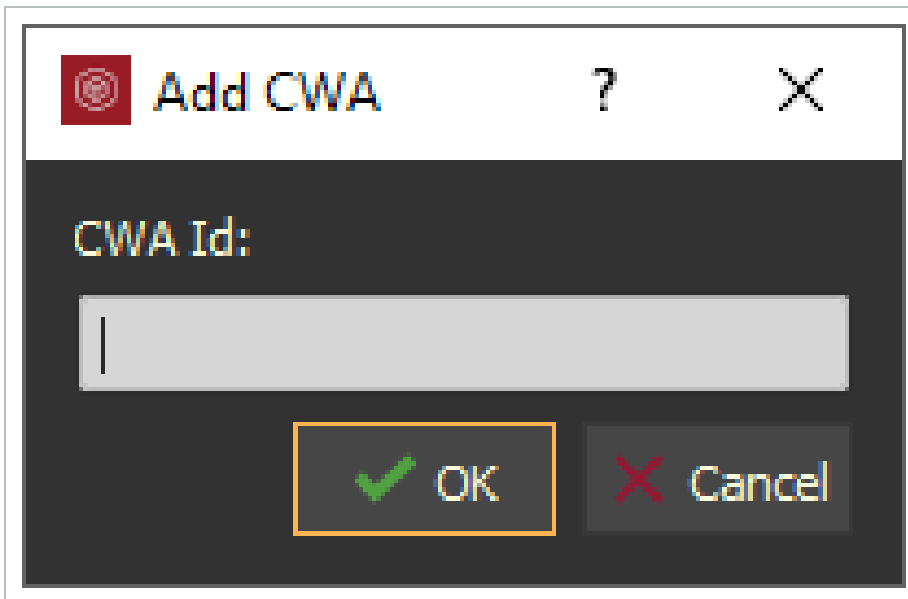

The screenshot shows a dialog box titled "Add CWA". It features a search icon, the title "Add CWA", a help icon (?), and a close icon (X). The main content area contains the label "CWA Id:" and a text input field. At the bottom, there are two buttons: "OK" (with a green checkmark) and "Cancel" (with a red X). The "OK" button is highlighted with a yellow border.

- Click **OK**, then the new CWA will display within the AWP panel.

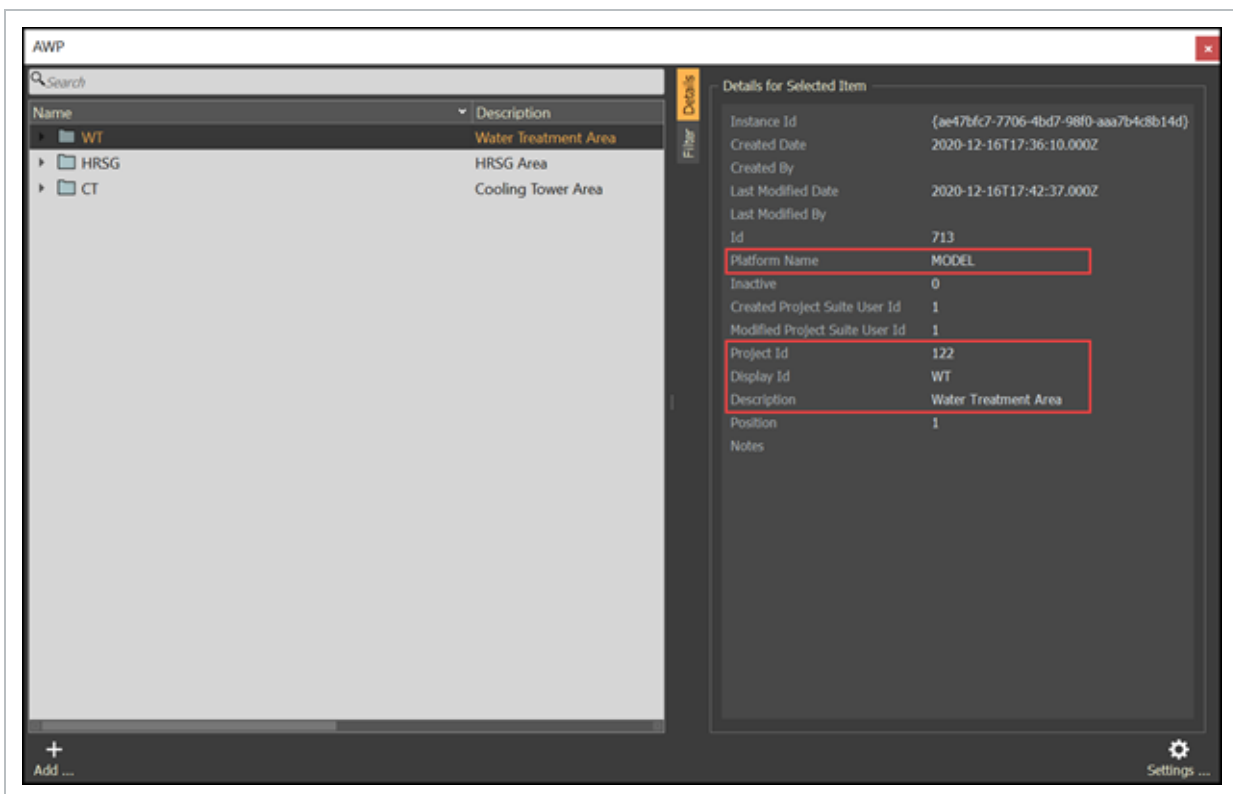

The screenshot shows the AWP (Asset Work Panel) interface. The left pane displays a tree view with the following structure:

Name	Description
WT	Water Treatment Area
HRSG	HRSG Area
CT	Cooling Tower Area


The right pane shows the "Details for Selected Item" for the "WT" area. The following fields are highlighted in red:

Field	Value
Instance Id	{ae47efc7-7706-4bd7-98f0-aaa7b4c8b14d}
Created Date	2020-12-16T17:36:10.000Z
Created By	
Last Modified Date	2020-12-16T17:42:37.000Z
Last Modified By	
Id	713
Platform Name	MODEL
Inactive	0
Created Project Suite User Id	1
Modified Project Suite User Id	1
Project Id	122
Display Id	WT
Description	Water Treatment Area
Position	1
Notes	


NOTE The platform name highlights which of the InEight solutions generated the CWA. Any CWA created in InEight Plan or Schedule will be available within Model.

13.2 Step by Step 2 — Create a Construction Work Package (CWP)


1. Select an existing CWP item, then Select **Add**.

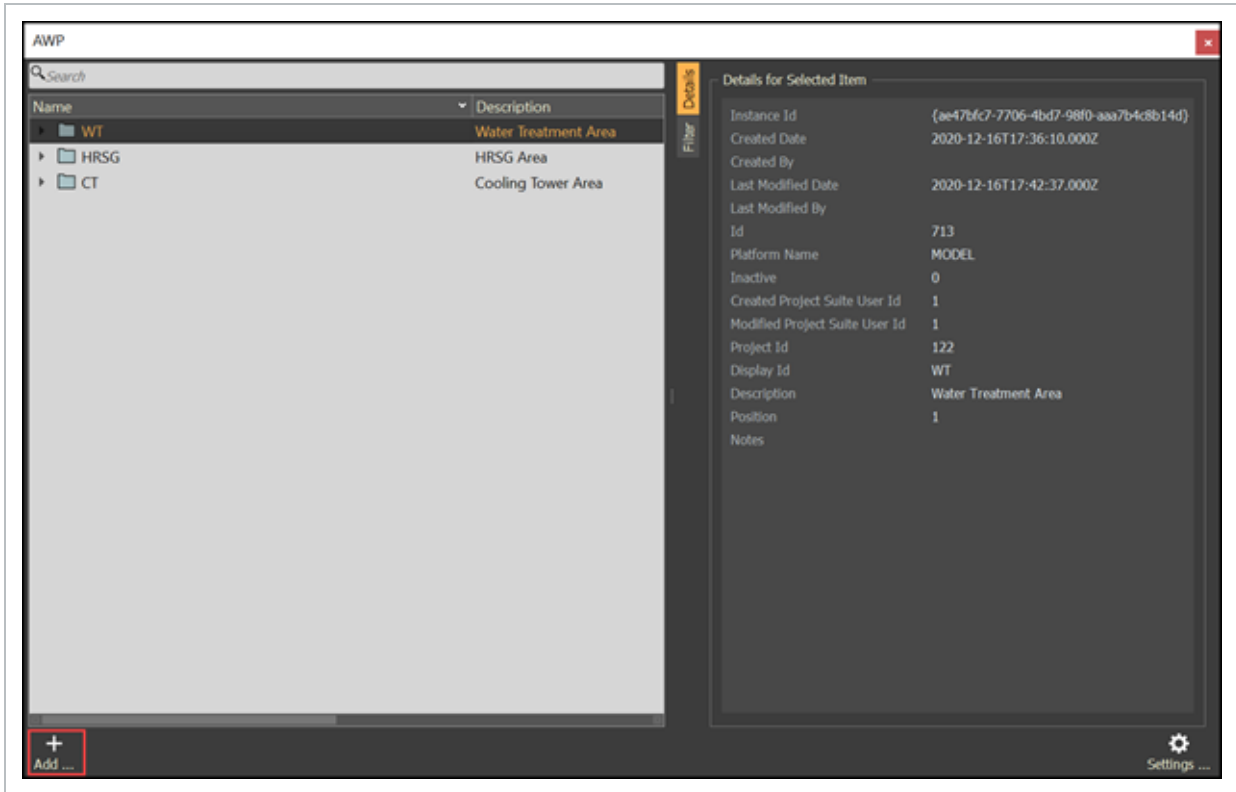


2. Click **Add AWP**.

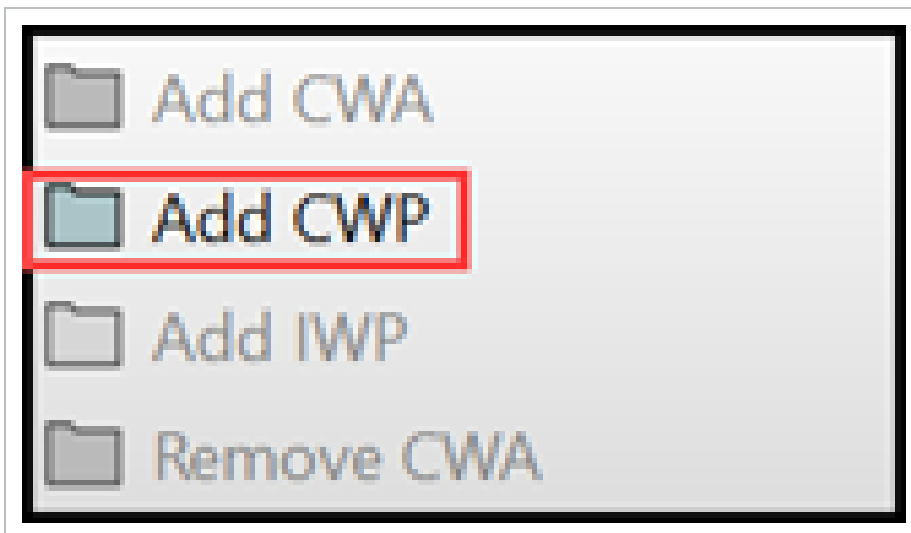

3. Fill out the CWP ID (project unique code or identifier).

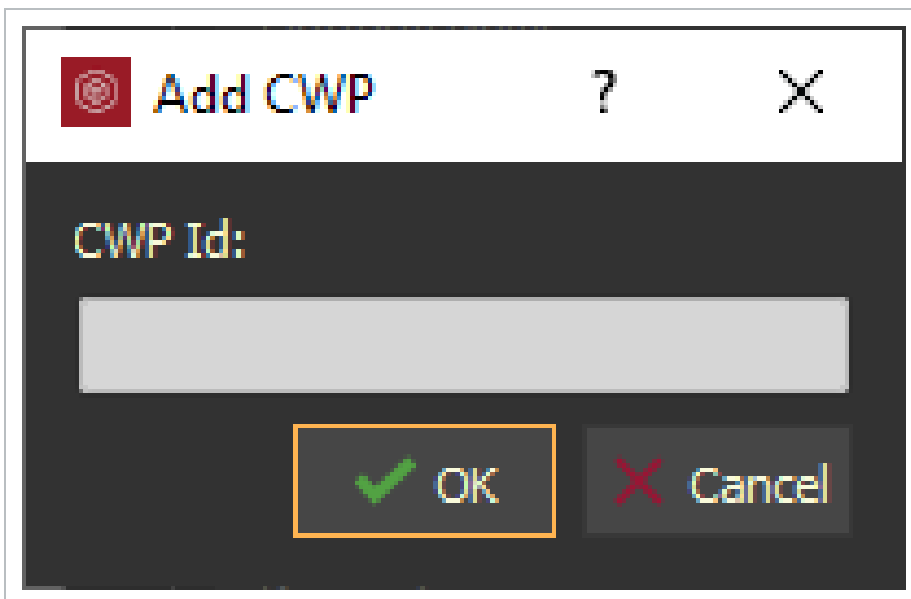


4. Click **OK**, then the new CWP will display within the AWP panel.

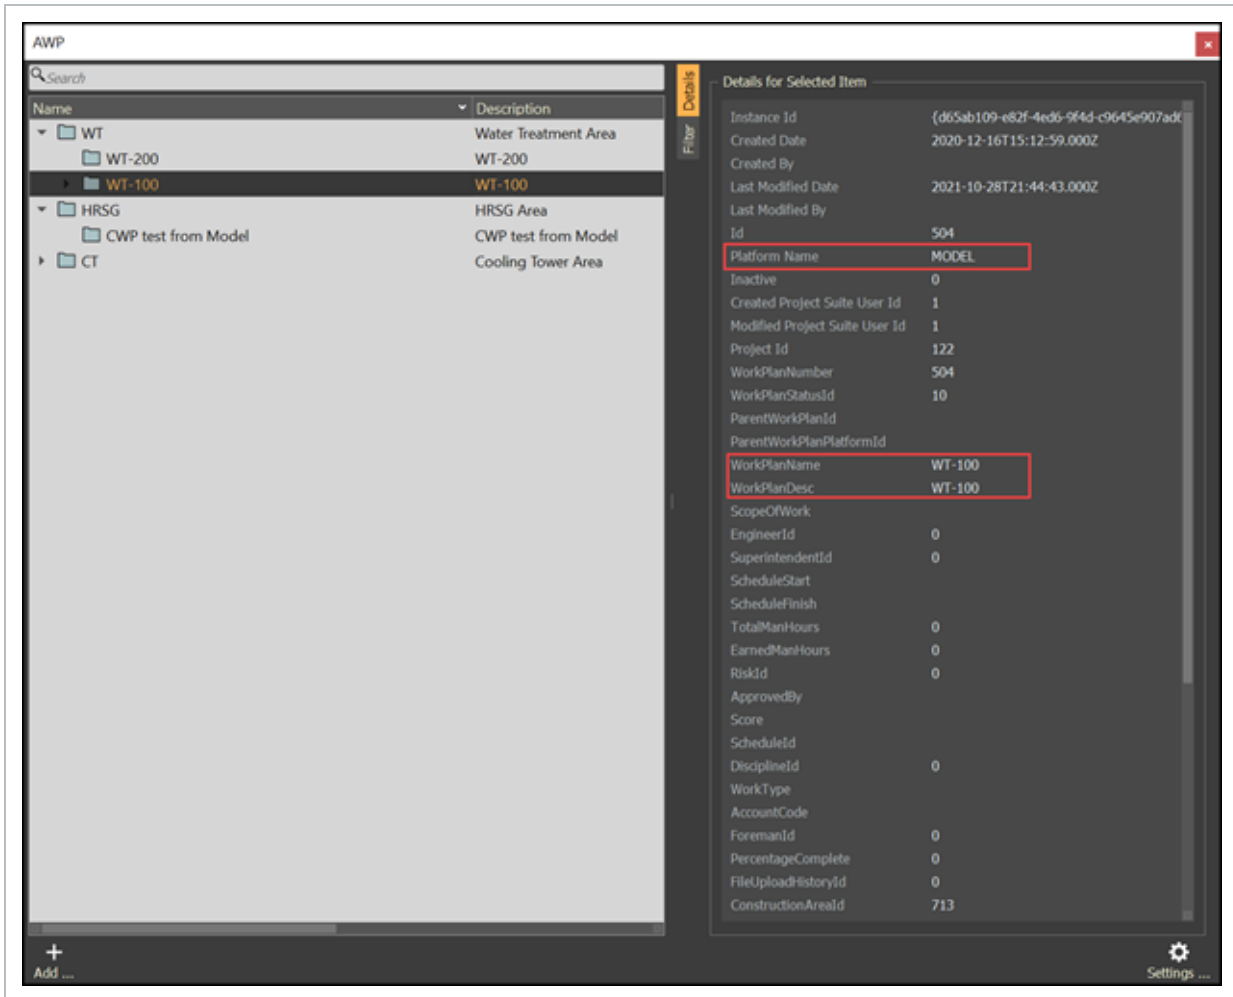


NOTE The platform name highlights which of the InEight solutions generated the CWP. Any CWP created in InEight Plan or Schedule will be available within Model. With the InEight platform, additional metadata associated with the CWP will be visible within the InEight Model. Connecting AWP structure with InEight Schedule allows for schedule metadata to be visible within the InEight Model. Connecting AWP with InEight Plan & Progress allows for work-hours, progress percent complete, and other metadata to be visible within the InEight Model.

13.2 Step by Step 3 — Create a Installatoin Work Package (IWP)


1. Select an existing CWP item, then Select **Add**.

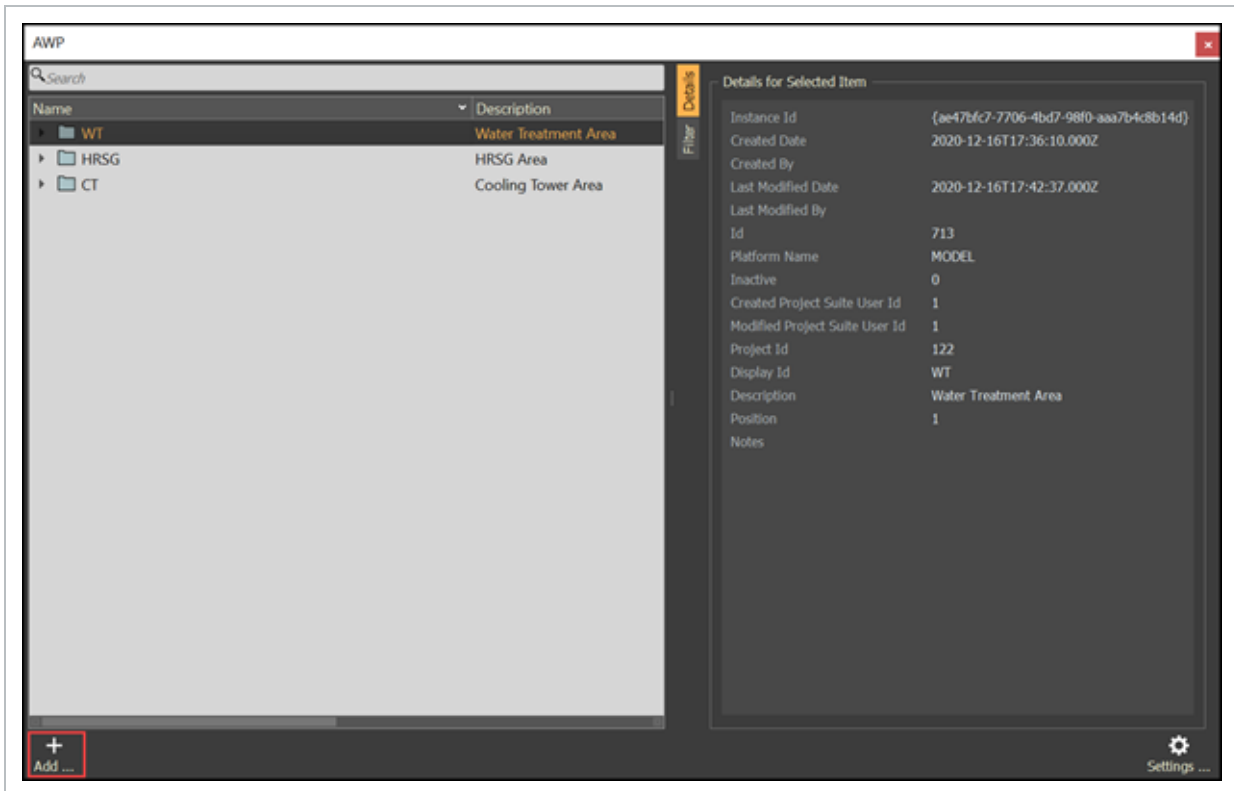


2. Click **Add IWP**.

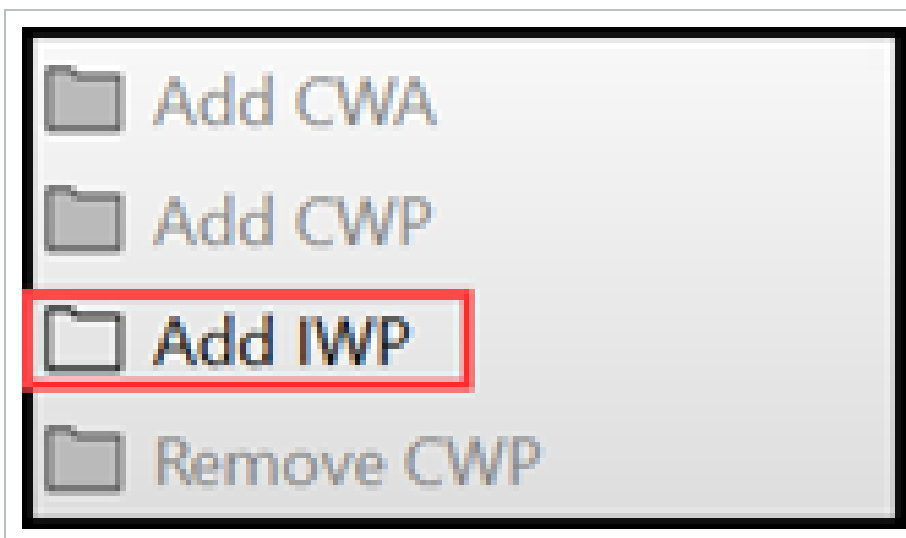

3. Fill out the IWP ID (project unique code or identifier).

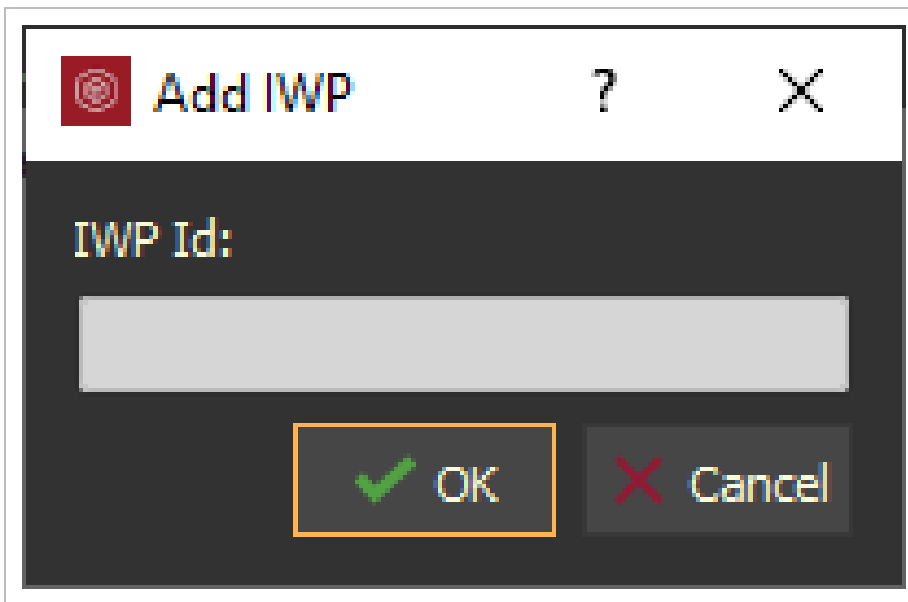

- 4. Click **OK**, then the new IWP will display within the AWP panel.

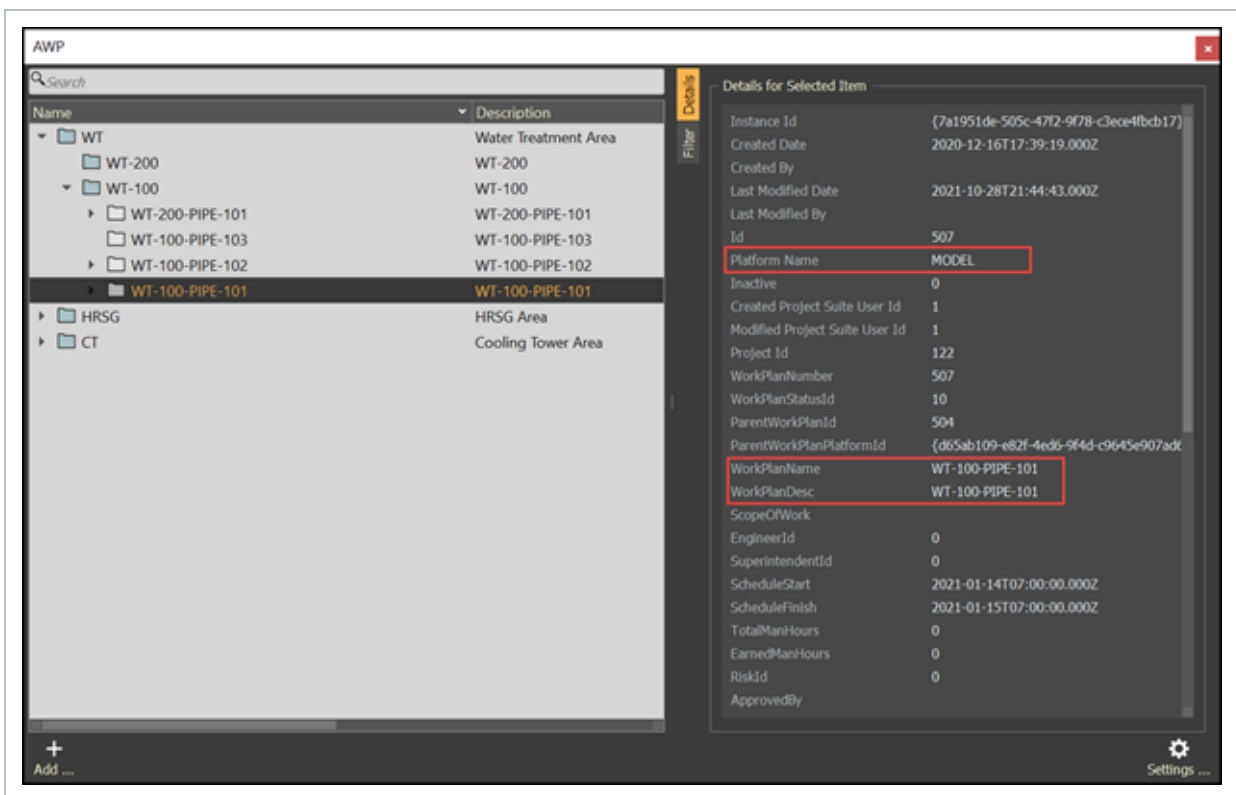


NOTE The platform name highlights which of the InEight solutions generated the IWP. Any IWP created in InEight Plan or Schedule will be available within Model. With the InEight platform, additional metadata associated with the CWP will be visible within the InEight Model. Connecting AWP structure with InEight Schedule allows for schedule metadata to be visible within the InEight Model. Connecting AWP with InEight Plan & Progress allows for work-hours, progress percent complete, and other metadata to be visible within the InEight Model.

13.2 Step by Step 4 — Deleting AWP Structure

1. Select one or multiple AWP structure items.

NOTE Removing AWP structure items (CWA / CWP / IWP) must happen at the lowest level of the structure first. If an IWP has elements associated with it, these elements must be unlinked before deleting. The same logic applies to CWPs and CWAs.

2. Right mouse click on the AWP structure items, then select Remove IWP (or Remove CWP, or Remove CWA).

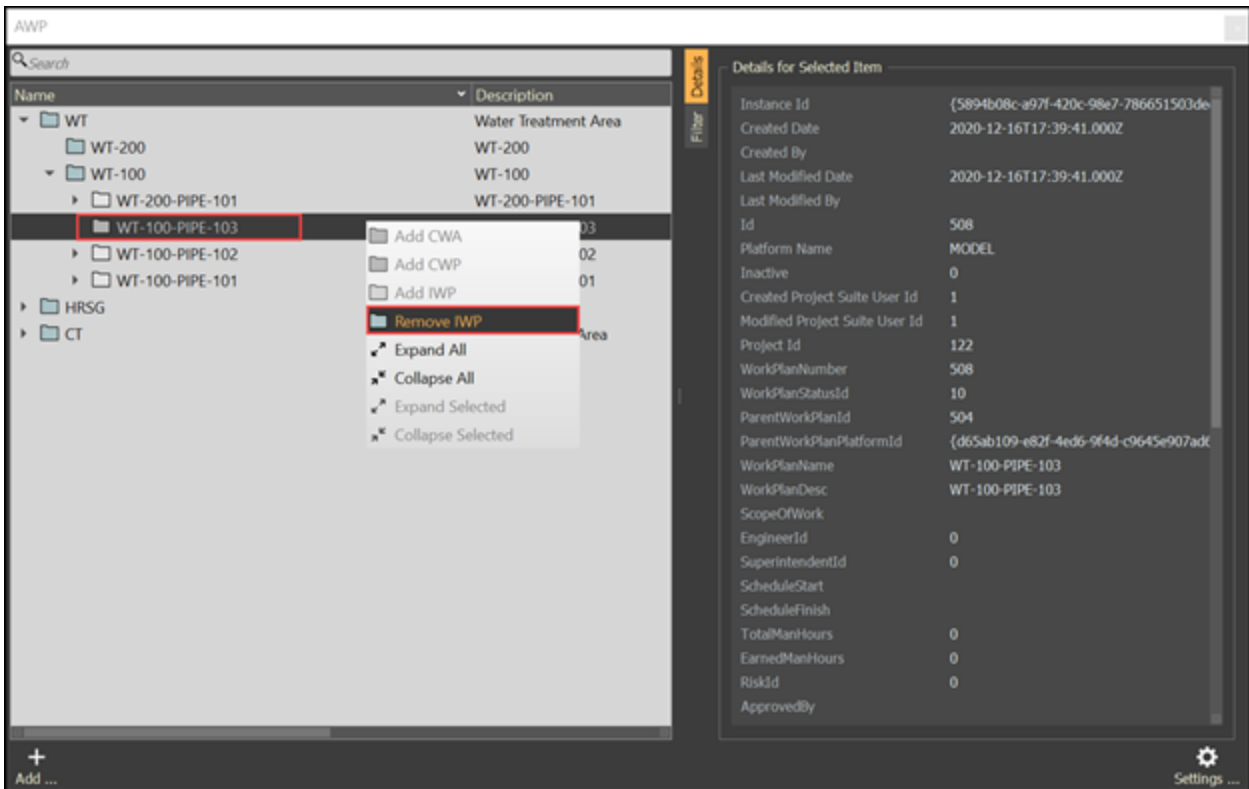


13.2 Step by Step 5 — Filter AWP Structure

Filter the AWP structure per predefined criteria

Select one or multiple AWP structure items.

1. Select the Filter tab, then set the criteria as desired.

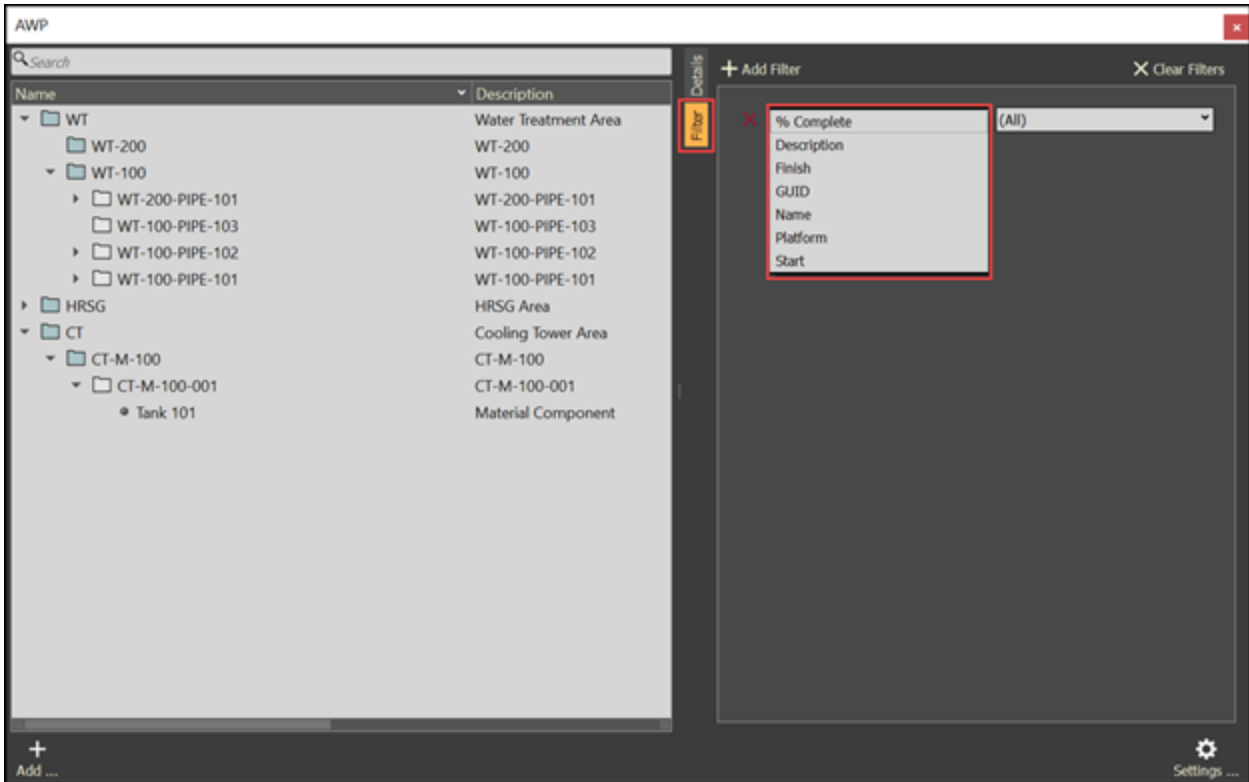

NOTE Additional filters can be added as desired.

14.1 USER MANAGEMENT

14.2 USER MANAGEMENT

When InEight Model is integrated with InEight Platform, users are managed in Platform. For more information, see [User management](#) in Suite administration.

LESSON 15 – ADMIN TOOLS

Topics in this Lesson

15.1 Introduction	479
15.2 Login	480
15.3 Slide-out Panel	484
15.4 Projects	485
15.5 User Access Overview	487
15.6 User Account Management	488

15.1 INTRODUCTION

Admin Tools are not integrated with InEight Platform, therefore it is a central portal for administrators to configure the settings of Legacy Completions, Model projects, and user accounts.

15.1.1 Browser compatibility

Admin Tools is compatible with the following browsers:

- Chrome
- Firefox
- Safari
- Edge

15.2 LOGIN

Single sign-on (SSO) reduces the need to maintain separate credentials to access Admin Tools. You can use existing credentials to open Admin Tools.

NOTE Conversion to single sign-on (SSO) applies across all InEight Model and Completions applications including Admin Tools and the Excel Plugin.


NOTE You must go through your InEight services representative to convert to SSO.

NOTE One SSO user per email address is permitted in an account.

The login screen lets you use a single set of credentials and authenticate with SSO provider (Google or Microsoft) to sign into any projects that you have access to. SSO increases administrative efficiency by mitigating new user creation. Existing users can continue to sign in using their existing user name and password.

SSO authentication reduces the need to maintain separate credentials, and also minimizes the need to maintain a standalone set of credentials.

To enable SSO functionality for your organization, contact your account administrator.

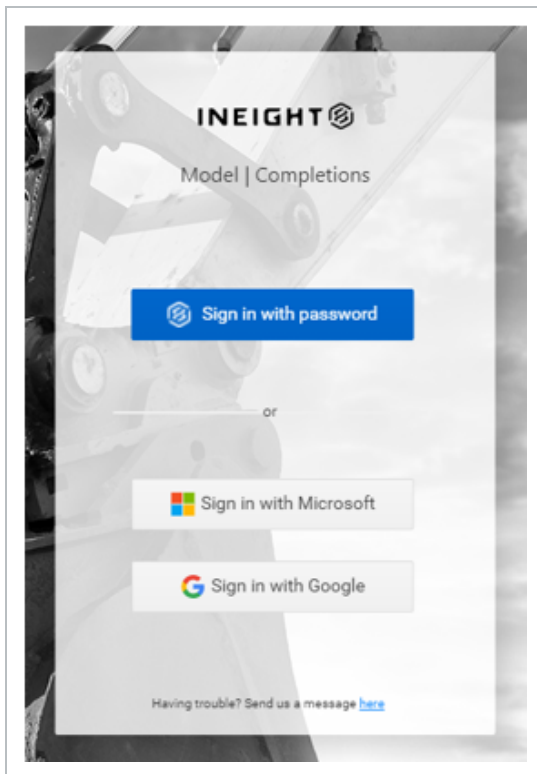


User organizations can integrate with the Excel Plugin authentication service with their own existing authentication servers, which eliminates the need for standalone Excel Plugin user credentials.

Single sign-on recognizes which accounts users have access to, and presents a helpful account drop-down list. Authenticated users are then presented with a list of projects in the selected account that are controlled and assigned by the administrator.

15.2.1 Log-in Options

15.2.1.1 Username and Password Credentials

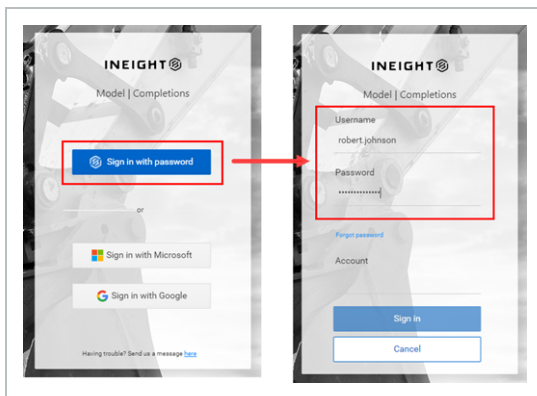


Reset password


If you forget your password, click **Forgot password**. Enter your user name, account, and email address, and then click Submit. If your request is successful, an email is sent to you with instructions to complete your password reset. Return to the login page to enter your new password.

NOTE The Submit button is disabled until you enter a valid email address..

15.2.1.2 SSO by Microsoft

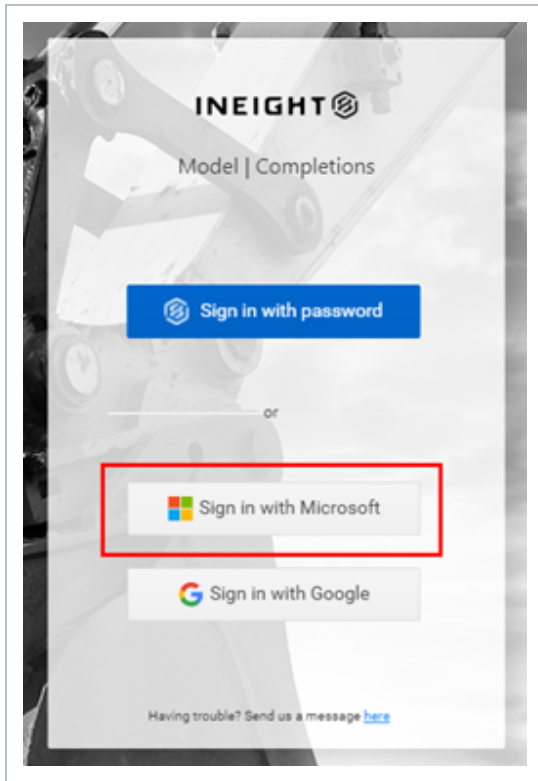


15.2.1.3 SSO by Google

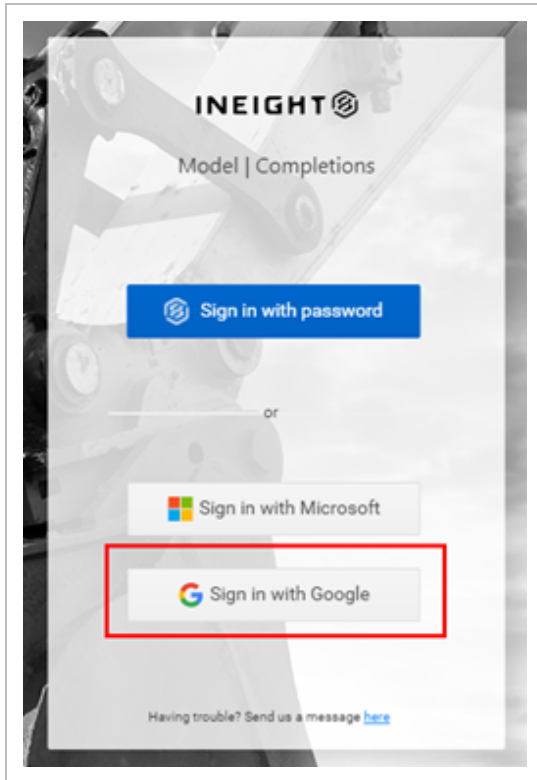


15.2.2 Switch account

The Switch account button, located on the lower left panel, lets SSO users change between accounts to access different project lists.

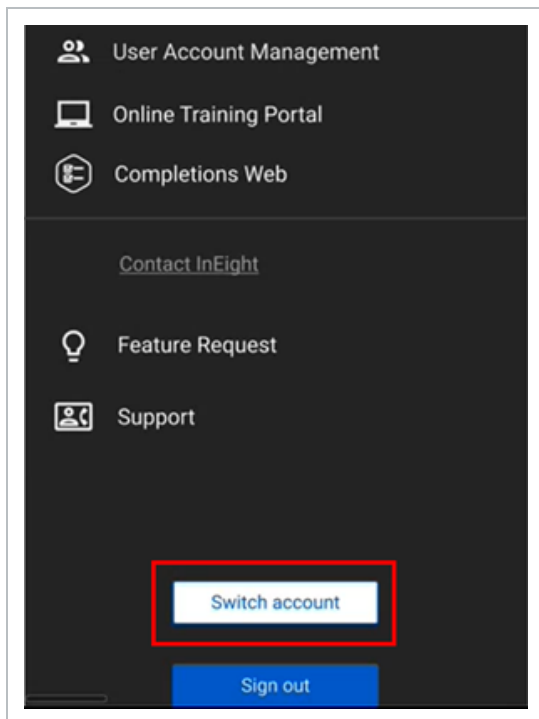

15.3 SLIDE-OUT PANEL

The slide-out panel gives you quick links to pages both inside and outside of Admin Tools. You can also use the slide-out panel to log out of Admin Tools.

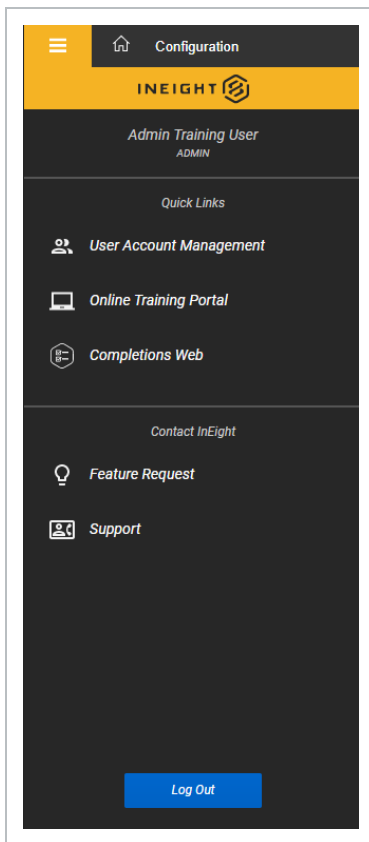

To open the slide-out panel, click the **Main menu** icon.

The slide-out panel contains the following links:


- User Account Management – See [User Account Management](#) for information about this page.
- Online Training Portal – Takes you to the Knowledge Library.
- Completions Web – Opens the Completions web interface in your browser.
- Feature Request – Submit a request for a new feature.
- Support – Opens an email to InEight support.
- Switch Account - Lets SSO users change between accounts to access different project lists.

15.4 PROJECTS

The Projects page shows all available projects. When you log to Admin Tools, the Projects page is the first page that opens. You can also click the Home icon to open the Projects page.

There are several methods to open the Configurations page opens for a specific project:

- Double-click the project **name**.
- Select a project, and then click **Configure**.
- Right-click a project, and then select **Configure** from the drop-down menu.

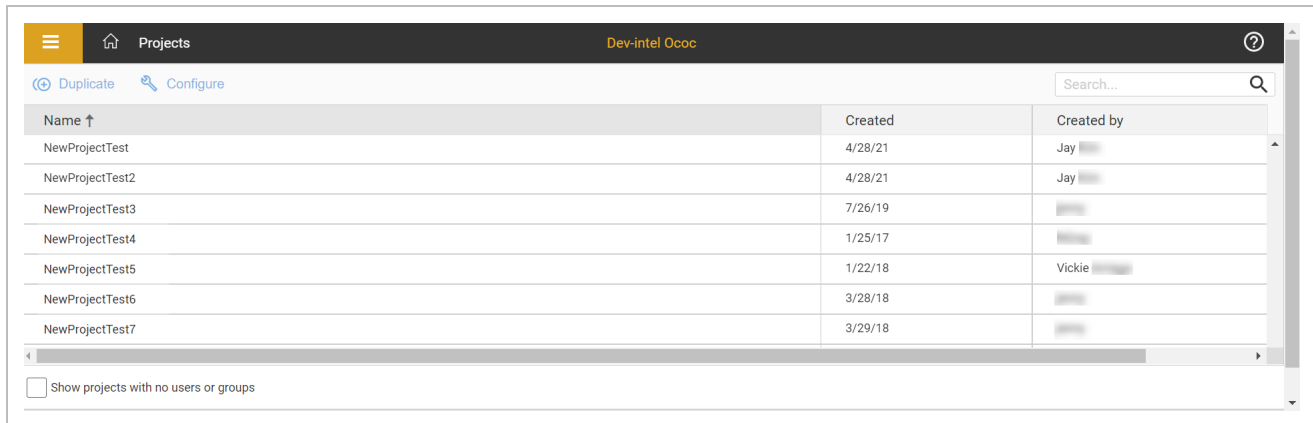

The screenshot shows a web application interface for managing projects. The header includes a home icon, the text 'Projects', and the user 'Dev-intel Oooc'. Below the header are 'Duplicate' and 'Configure' buttons, and a search bar. The main content is a table with the following data:

Name ↑	Created	Created by
NewProjectTest	4/28/21	Jay [avatar]
NewProjectTest2	4/28/21	Jay [avatar]
NewProjectTest3	7/26/19	[avatar]
NewProjectTest4	1/25/17	[avatar]
NewProjectTest5	1/22/18	Vickie [avatar]
NewProjectTest6	3/28/18	[avatar]
NewProjectTest7	3/29/18	[avatar]

Below the table is a checkbox labeled 'Show projects with no users or groups'.

15.5 USER ACCESS OVERVIEW

There are three types of users:

User type	Description
Admin	Allows you to have complete access and control of all functionality in the environment.
Standard	Allows you to have limited access and functionality in a project. You will not be able to: <ul style="list-style-type: none">• Create users.• Create projects.• Delete an object in Viewer.
Read-Only	Allows you to have read-only rights to a project. You can access and utilize all functionality in a project. You will not be able to: <ul style="list-style-type: none">• Save any changes to a project.• Create users.• Create a project.• Publish models.

The default user type is Standard. You can assign a user type when creating a new user.

Users	Admin Portal	InEight Model																						
		Create Projects	Manage Users	Import Model Streams	Import Model Streams - Model Groups	Project Structure	User Interface	Delete Objects	Project Updates	Tags & Objects	Data Transformation Operations	Styles	Master Presets	Coordination Rules	Create Coordination Issues	Manage Coordination Issues	Archive Library	Archive Library Folder Permissions	Selection Info	Sectioning	Measurement	Elements	AWP	
ADMIN	✓	✓	✓	✓	✓ ¹	✓	✓	✓ ²	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
STANDARD	✗	✗	✓	✓	✗	✓	✗	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✓	✓	✓	✓	✓	✓
READ_ONLY	✗	✗	✗	✗	✗	✓	✗	✓	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
*Group (Write)	✗	✗	✓	✓	✗	✓	✗	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✓	✓	✓	✓	✓	✓
*Group (Read)	✗	✗	✗	✗	✗	✓	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗

✓ Denotes User has full Control
 ✗ Denotes User is able to View
 ✗ Denotes User has no Access

Note ¹ Importing of model streams can be restricted for different Model Groups
 Note ² Objects are not truly deleted, objects are turned invisible to all users in the project for current and future revisions
 Note ³ By Default, Standard Users cannot manage Coordination Issues. InEight can toggle the following to have permissions (Standard user, individual users and/or user groups)

NOTE Users can have Read or Write access to a project.

TIP If a Read Only type user is applied to a project with Write access, they will still only have read only rights to the project.

TIP If a Standard or Admin type user is applied to a project with Read Only access, they will only have read only access.

15.6 USER ACCOUNT MANAGEMENT

User Account Management settings let you manage users, user groups, and access to projects. You can navigate to User Account Management through the quick link in the slide-out panel.


NOTE You must be an account administrator to manage user accounts.

The User Account Management has two tabs:

- Users & Groups – Manage users and user groups.
- Project Permissions - Assign users and user groups to projects.

15.6.1 Users & groups tab

The Users & Groups tab has two panels. The Users panel lets you manage users, and the Groups panel lets you manage groups. You can use the buttons in the center of the page to add and remove selected users to and from groups.

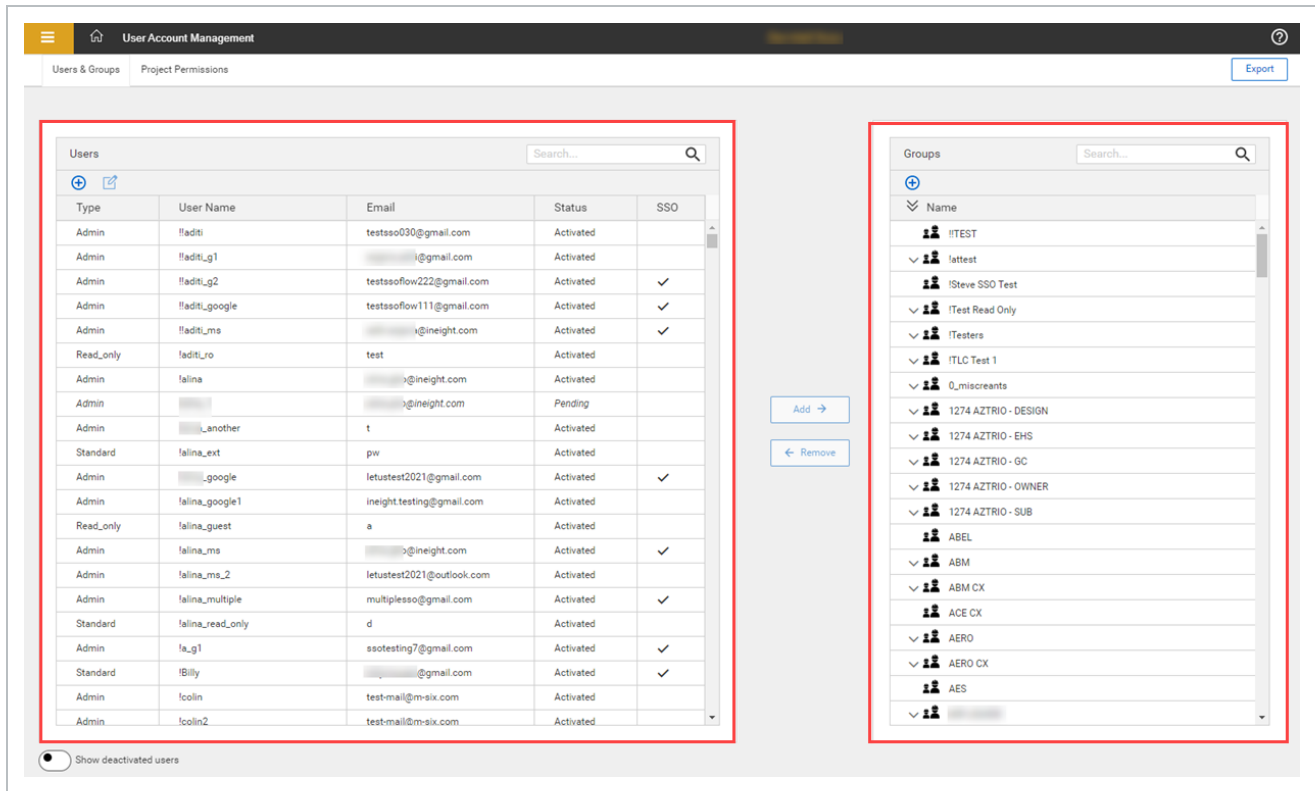

15.6.1.1 Users

You can select the following user types:

User type	Description
Admin	Create and manage users and duplicate projects.
Standard	Limited access and functionality in a project.
Read-Only	Unable to make changes to a project even if you have other roles that would otherwise allow it.

NOTE See [User Access Overview](#) for additional information.

15.6.1.2 Create single sign-on or password user

When creating a new user, the SSO On toggle lets you choose between creating a single sign-on (SSO) user, or a user that logs in using their user name and password. The default setting is *On*. This cannot be changed in edit mode.

The screenshot shows a 'Create User' dialog box with the following fields and controls:

- User Details:**
 - * Email: Text input field
 - * Confirm Email: Text input field
 - * User Name: Text input field
 - * User Type: Dropdown menu with 'STANDARD' selected
- Contact Info:**
 - * First Name: Text input field
 - * Last Name: Text input field
- Work Phone Number:** Text input field
- Mobile Phone Number:** Text input field
- Address:** Text input field
- Title:** Text input field

At the top right of the form, there is an 'SSO On' toggle switch, which is currently turned on (blue). A red arrow points from this toggle to an 'SSO Off' toggle switch shown to the right, which is currently turned off (grey).

At the bottom left of the form, there are two buttons: 'Cancel' and 'Save'.

Add user

15.6 Step by Step 1 — Add user

1. Click the **Add user** icon in the Users panel.

The Create User dialog box opens.

The screenshot shows a 'Create User' dialog box with the following fields and sections:

- User Details:**
 - * Email (text input)
 - * Confirm Email (text input)
 - * User Name (text input)
 - * User Type (dropdown menu, currently set to STANDARD)
- Contact Info:**
 - * First Name (text input)
 - * Last Name (text input)
 - Work Phone Number (text input)
 - Mobile Phone Number (text input)
- Address:**
 - Address (text input)
 - Title (text input)

At the top right, there is an 'SSO On' toggle switch which is currently turned on. At the bottom left, there are 'Cancel' and 'Save' buttons.

2. Fill in the required fields indicated by an asterisk, and then click **Save**.

The SSO toggle lets you choose between creating an SSO user, or as a user that signs in with a user name and password. To add a user that signs in with a user name and password, switch the SSO On toggle to *Off*.

Edit user

15.6 Step by Step 2 — Edit user

1. Select a user from the Users panel.
2. Click the **Edit user** icon at the top of the Users panel.
You can also right-click a user, and then select **Edit User** in the drop-down menu.
3. Make the updates in the dialog box, and then click **Save**.

NOTE The user name cannot be edited, and the SSO toggle cannot be changed in edit mode.

Activate user

To activate a user, right-click the user, and then select **Activate User** in the drop-down menu.

NOTE To see a list of deactivated users that you want to activate, enable the Show deactivated Users toggle at the bottom of the Users and Groups panel.

Deactivate user

To deactivate a user, right-click the user, and then select **Deactivate User** in the drop-down menu. A deactivated user can no longer access their account.

Reset a user's password (SSO off)

To reset a user's password, right-click the user, and then select **Reset Password** in the drop-down menu. The user receives an email with instructions and a link to reset their password.

Set a user's temporary password (SSO off)

To set a temporary password for a user, right-click the user, and then select **Set Temp Password** in the drop-down menu. A temporary password lets you manually set a new password for the user.

Delete a pending user

To delete a pending user right-click the user, and then select **Delete User** in the drop-down menu.

NOTE You can only delete pending users for non-SSO users.

Resend activation email (SSO off)

To resend an activation email to a pending user, right-click the user, and then select **Resend Account Activation Email** in the drop-down menu.

15.6.1.3 Groups

Groups are made up of multiple users. You can assign multiple users to projects using groups.

Add a group

To add a new group, click the **Add group** icon at the top of the Groups panel. In the dialog box enter a group name, and then click **Save**.

Delete a group

To delete a group by right clicking a group, and then selecting **Delete Group** in the drop-down menu.

NOTE A group must be unassigned to be deleted.


Rename a group

To change a group's name, right click a group, and then select **Rename Group** in the drop-down menu.

NOTE The new group name is shown in all historical data about the group.

15.6.2 Project permissions tab

The Project Permissions tab has two panels. You can add and remove selected users and Groups As Teams using the center buttons.

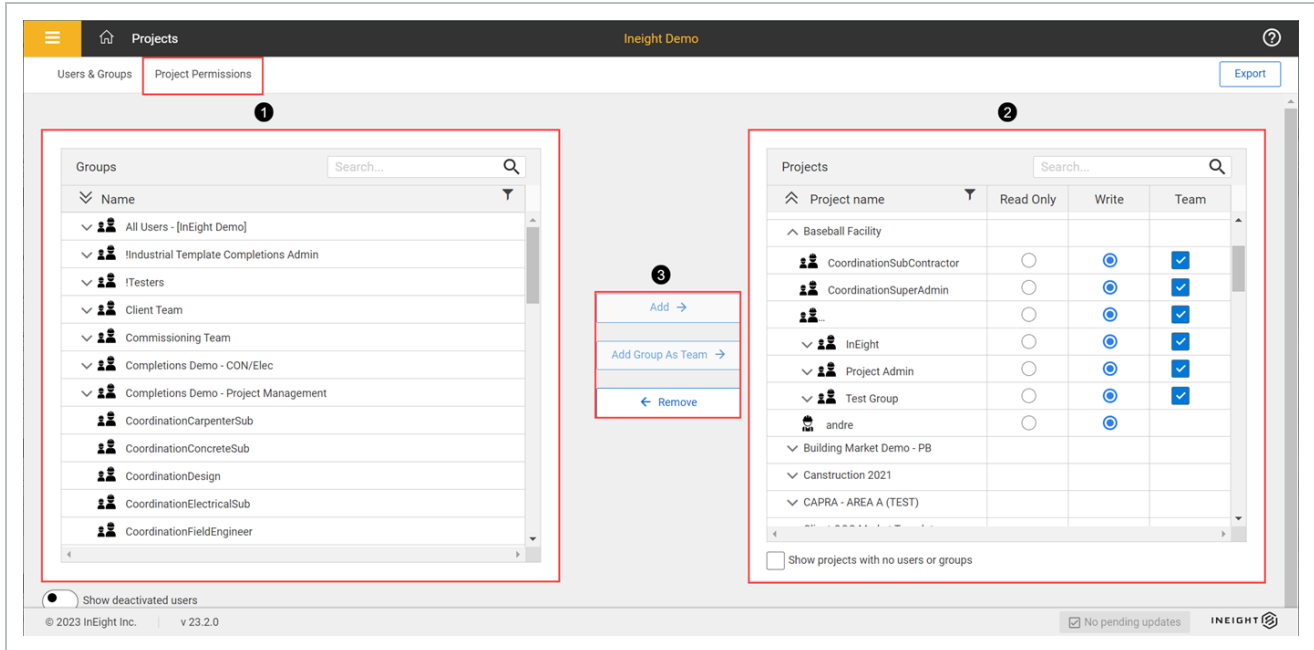

	Item	Description
1	Groups panel	Shows groups and their users.
2	Projects panel	Shows projects and the users and groups assigned to each project. You can manage user and group access to a project
3	Add, Remove, and Add Groups As Team	You can use the buttons in the center of the page to add and remove selected users and Groups As Teams to and from projects.

NOTE Every user must be on a team but can only belong to a single team per project. Failure to assign a user to a team for a given project will result in a misconfiguration error.

NOTE Best practice is to add Groups As Teams to projects instead of adding individual users.

Users and Groups As Teams have the following access types:

- Read Only – Unable to make changes to a project even if they have roles that would otherwise allow it.
- Write - The default access given to a user or group.

NOTE If you used the Add button, you can then simply click the checkbox in the Team column.

15.6.3 Export

You can export a Microsoft Excel file with user information and to which projects users are assigned to. Export files are useful for audits.

To export, click **Export** in the top right of the page to download the file.


This page intentionally left blank.

16.1 MODEL MOBILE


16.2 OVERVIEW

You can support the entire project lifecycle in the office or the worksite with the InEight Model mobile application. In Model mobile, you have access to your model and model data to view and interact using an iOS mobile device. The Model mobile application is available to download from the Apple App Store.

When you open the application, a log in window shows:

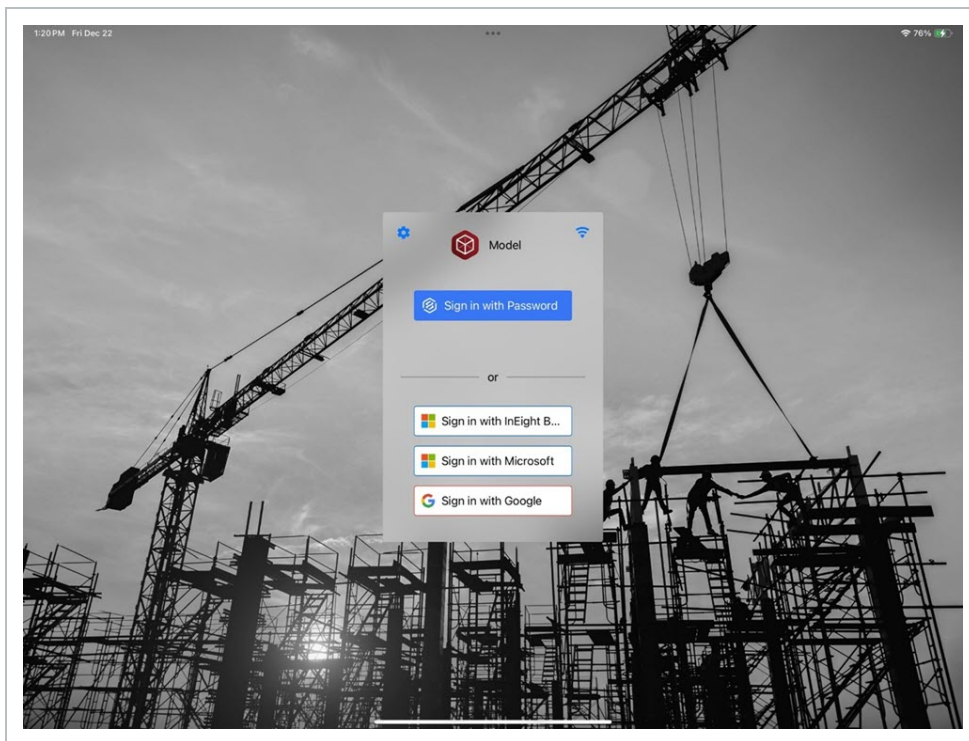


After you log in, a list of the projects you have permissions to is shown:

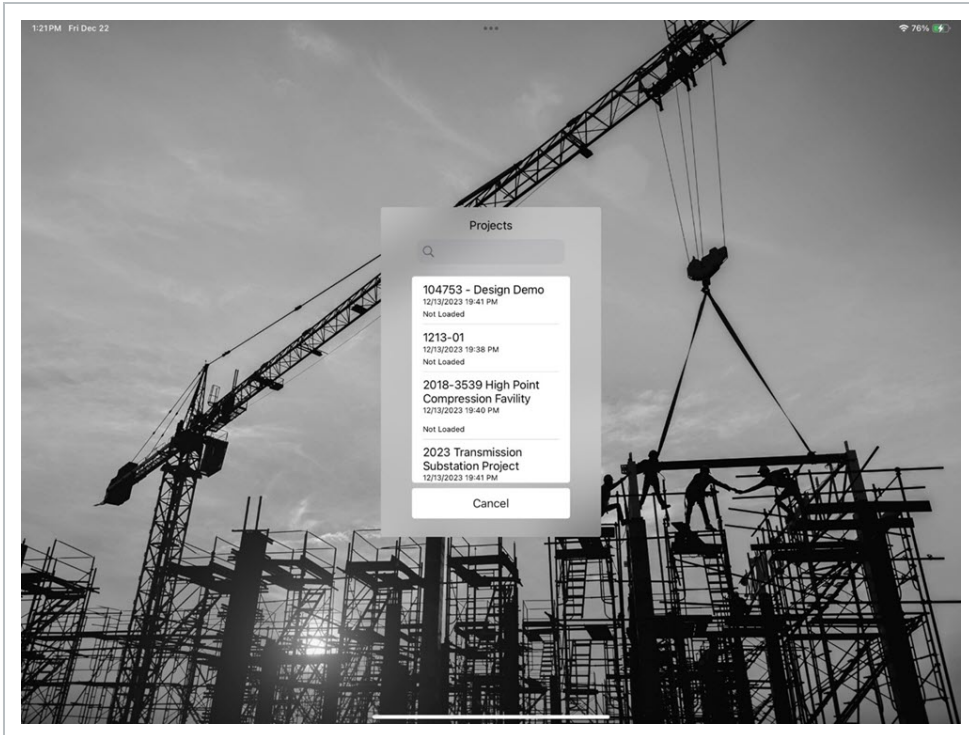


From the list of projects, tap on a project to open it. The project will open to the Model module landing page, which shows items such as Model, Issues, and Archive. The Model module is the default module.

Model geometry will begin to load when an internet connection is active.

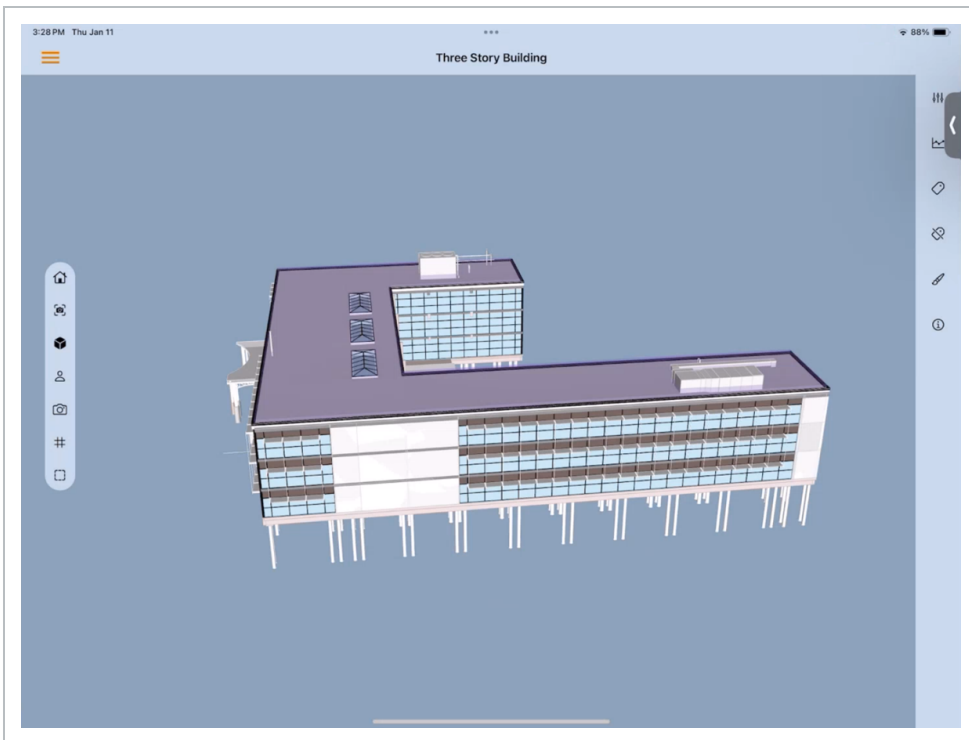


Some features are not fully functional until the entire tag library is downloaded to your device. A warning banner shows at the top of the screen to communicate this state.

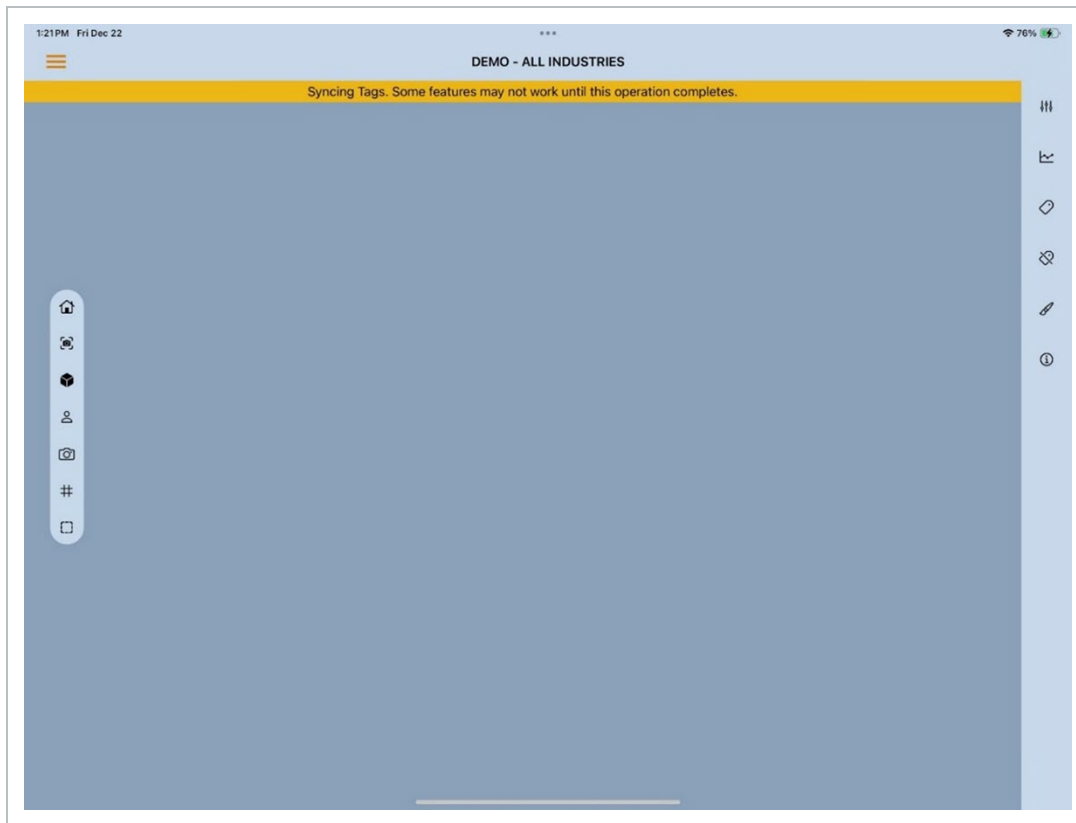


You can switch modules by selecting the Main menu, and then selecting from the list of available project modules.

Features of Model mobile include the following:


- **Navigation** - Typical iOS gestures. [Read more](#)
You can navigate in Model mobile using typical iOS one and two finger gestures such as tap, scroll, select, orbit, pan, pinch open and pinch closed objects or models.
- **Offline Data** - You can download model data to your local device and use Model offline where internet access is not available. [Read more](#)
Select the main menu > Offline Data > **Master Presets** to specify which data is downloaded for offline mode.

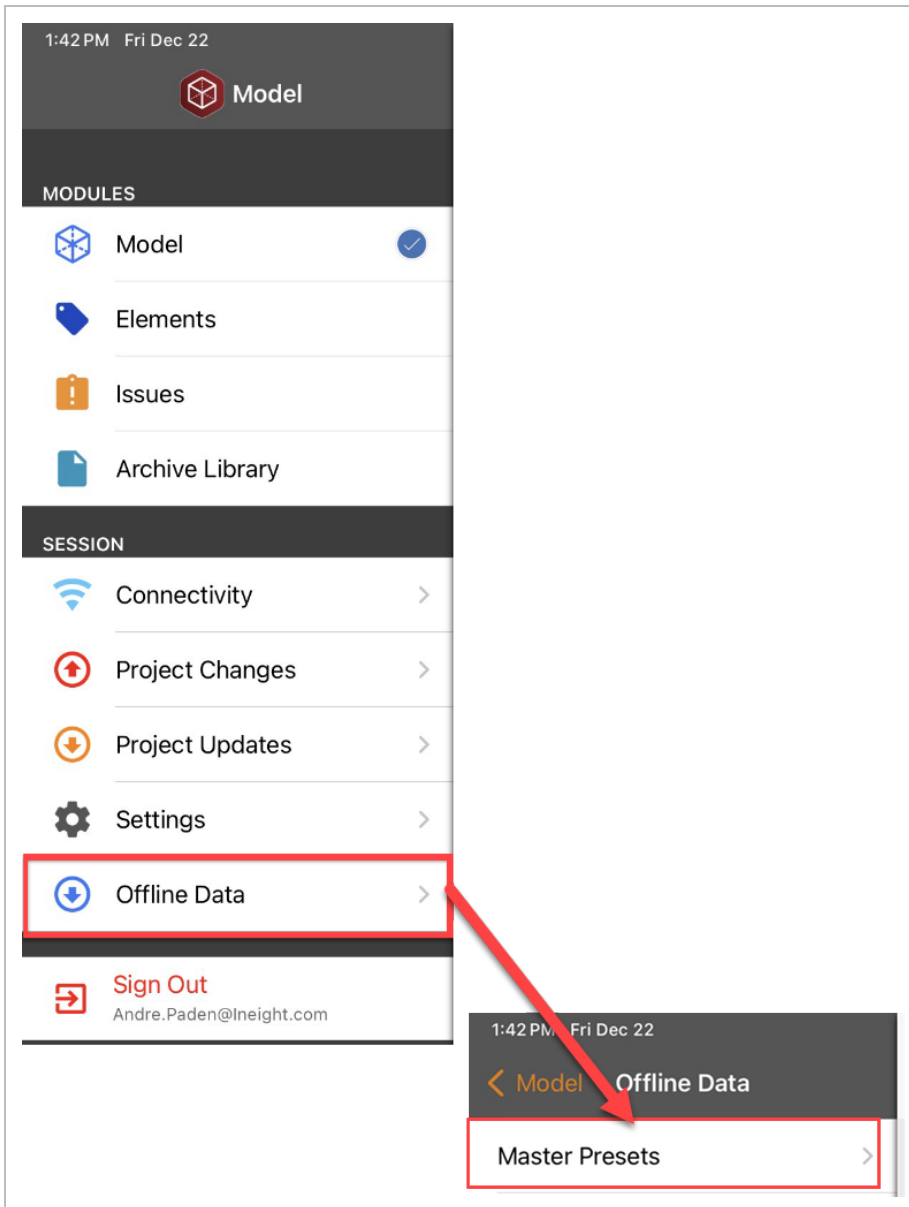


After you select Offline Data, you can choose which data to download in using the Master Presets. You can choose individual master presets or collections of presets for offline mode. Download status is shown next to the master preset.

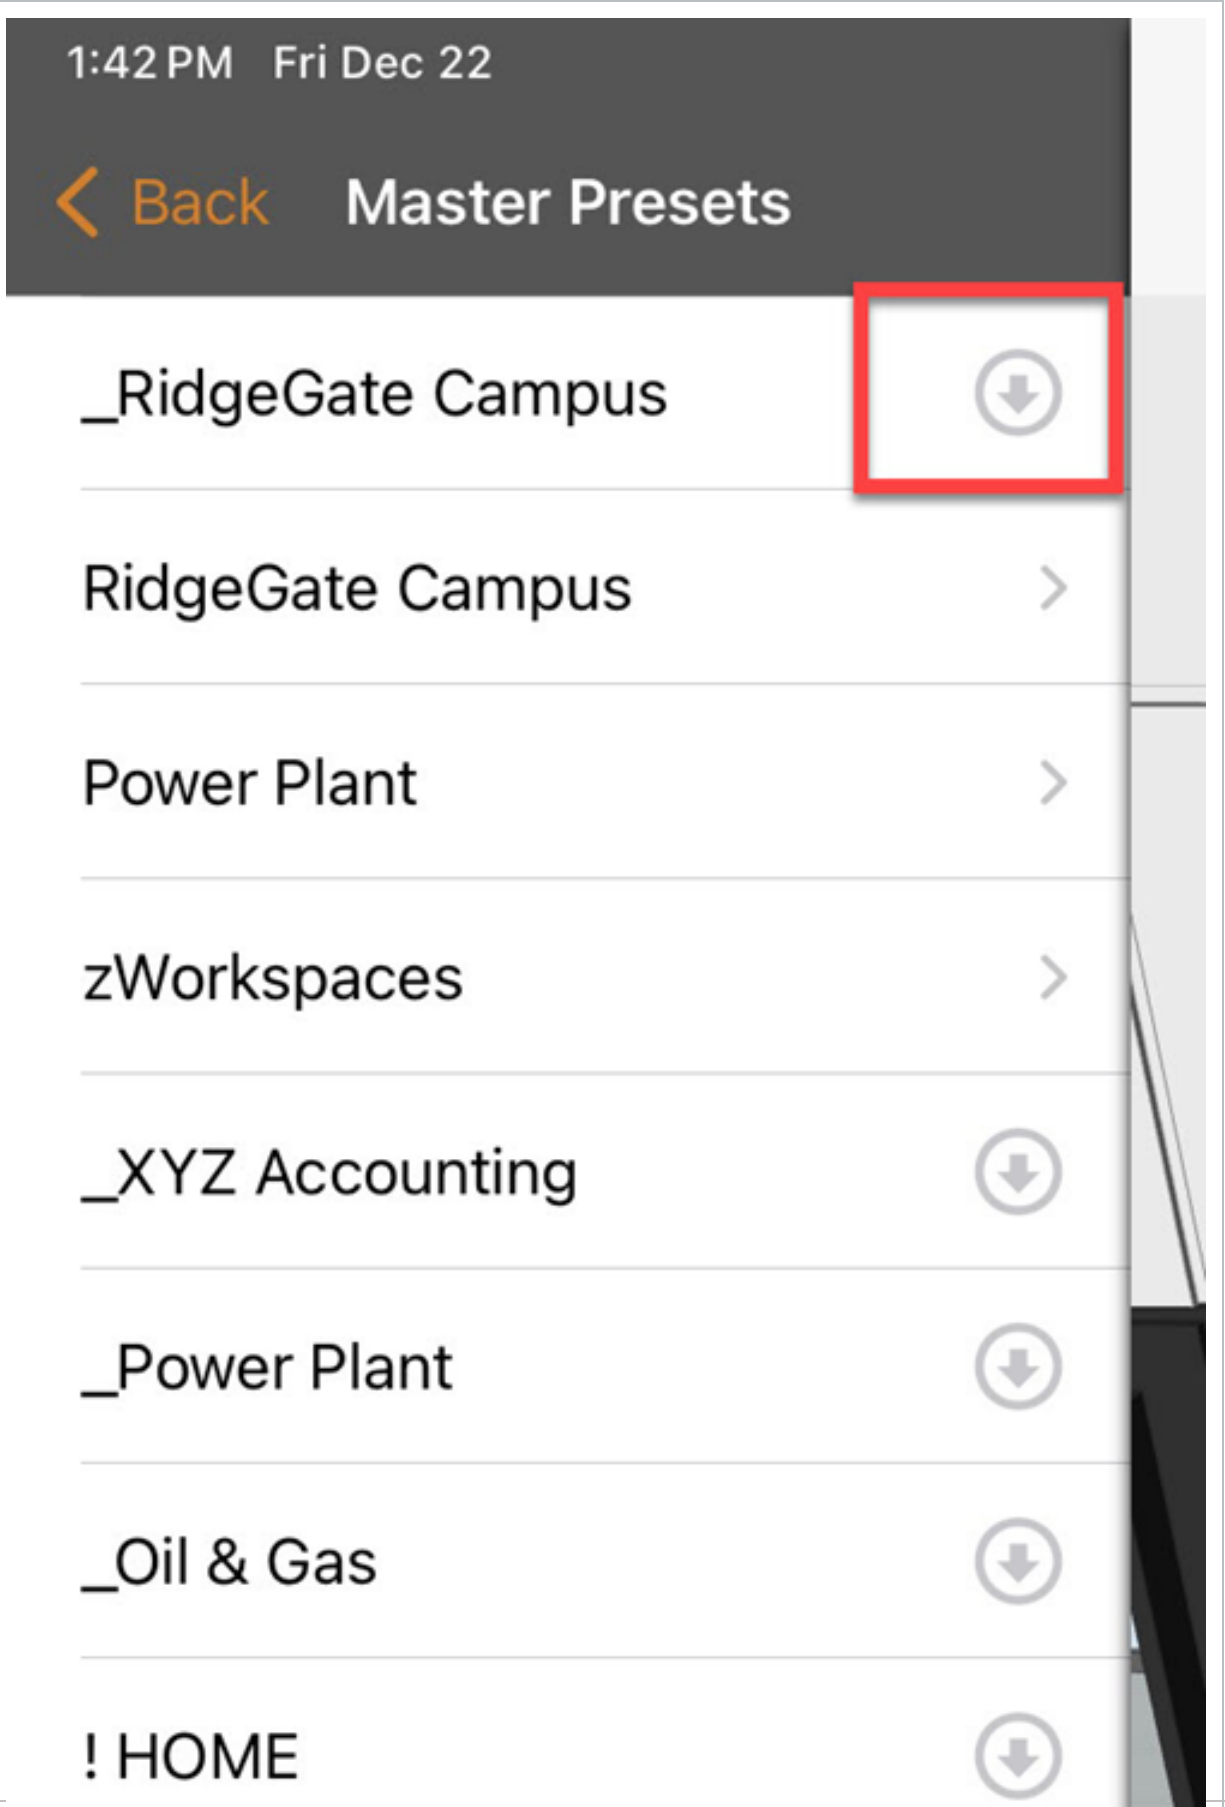

- **Left ribbon menu** - Standard Model functions. [Read more](#)

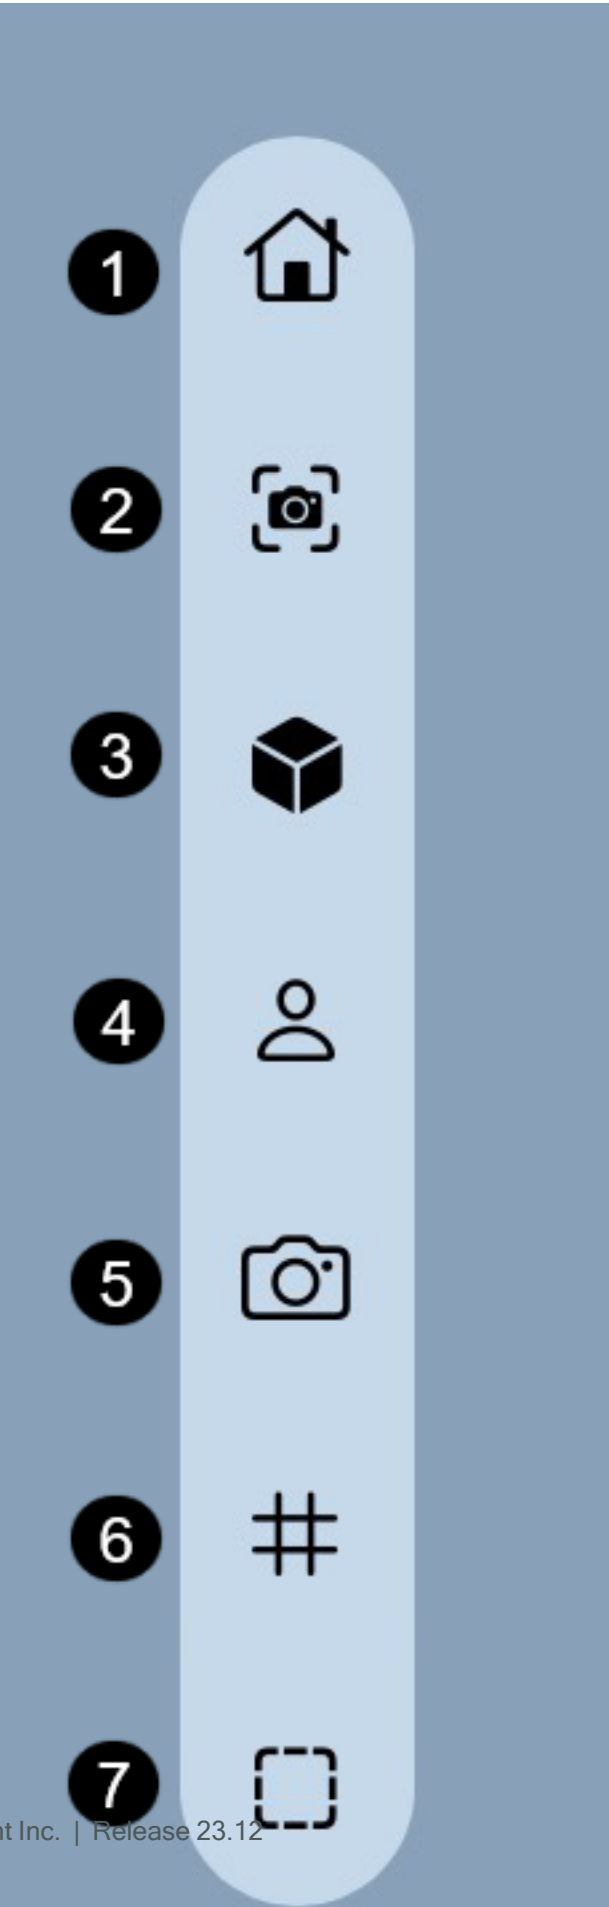


1. **Home** – Applies the default project master preset.
2. **Zoom Selected** – Zooms the camera to frame the selection.
3. **Isolate** – Toggles between the entire model and an isolated view of the selected objects.
4. **First-Person Navigation** – Toggles first-person navigation.
5. **Ortho/Perspective** - Toggles between orthographical and perspective camera.
6. **Grids** – Toggles grid visibility on/off.
7. **Selection Mode** – Provides the ability to select objects related to the active mode.

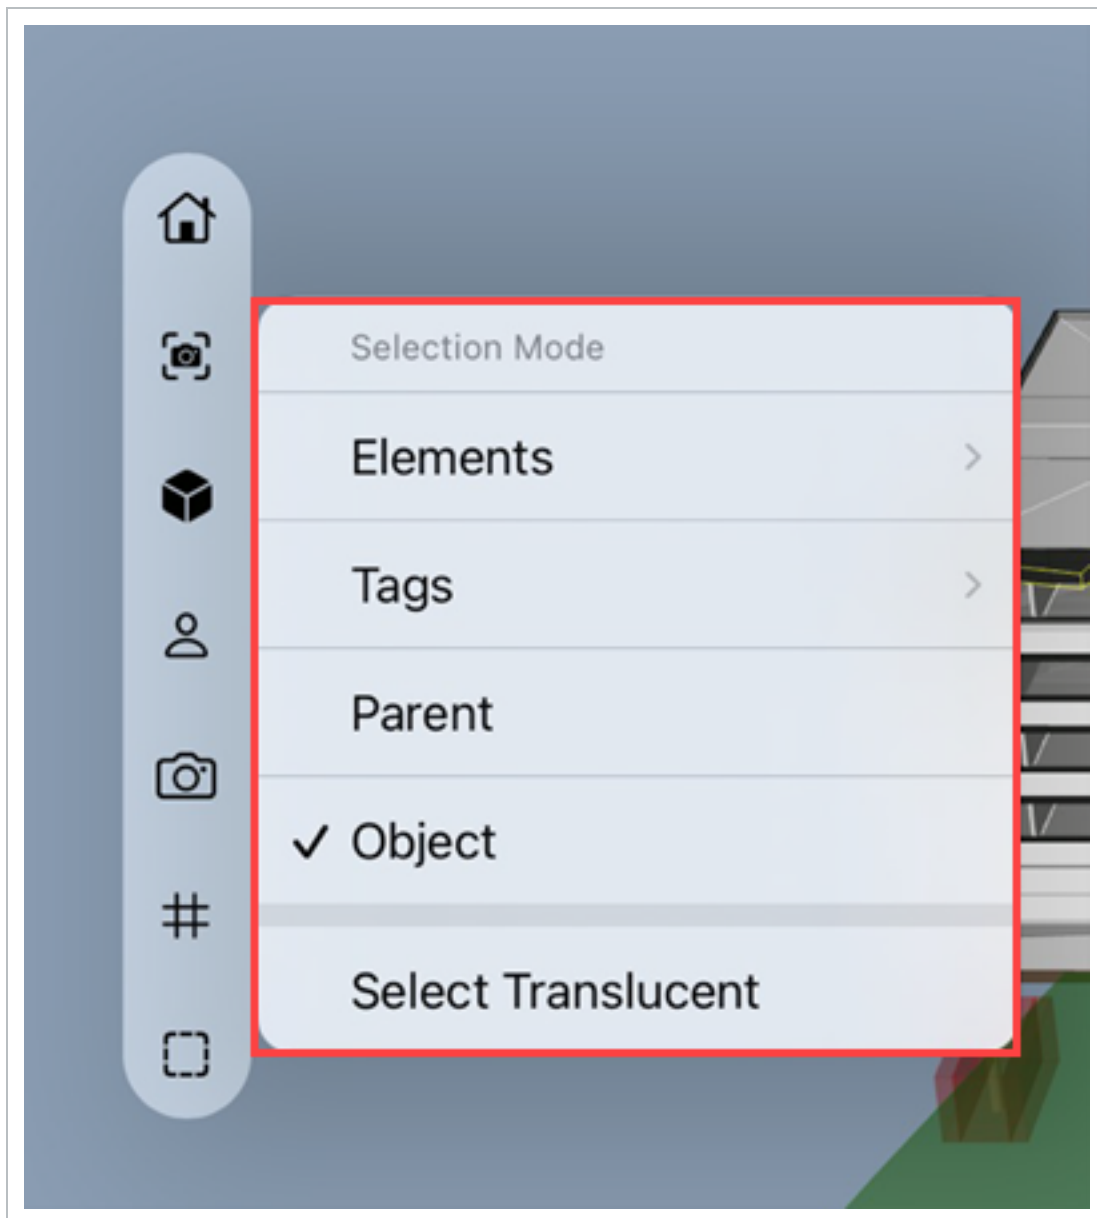





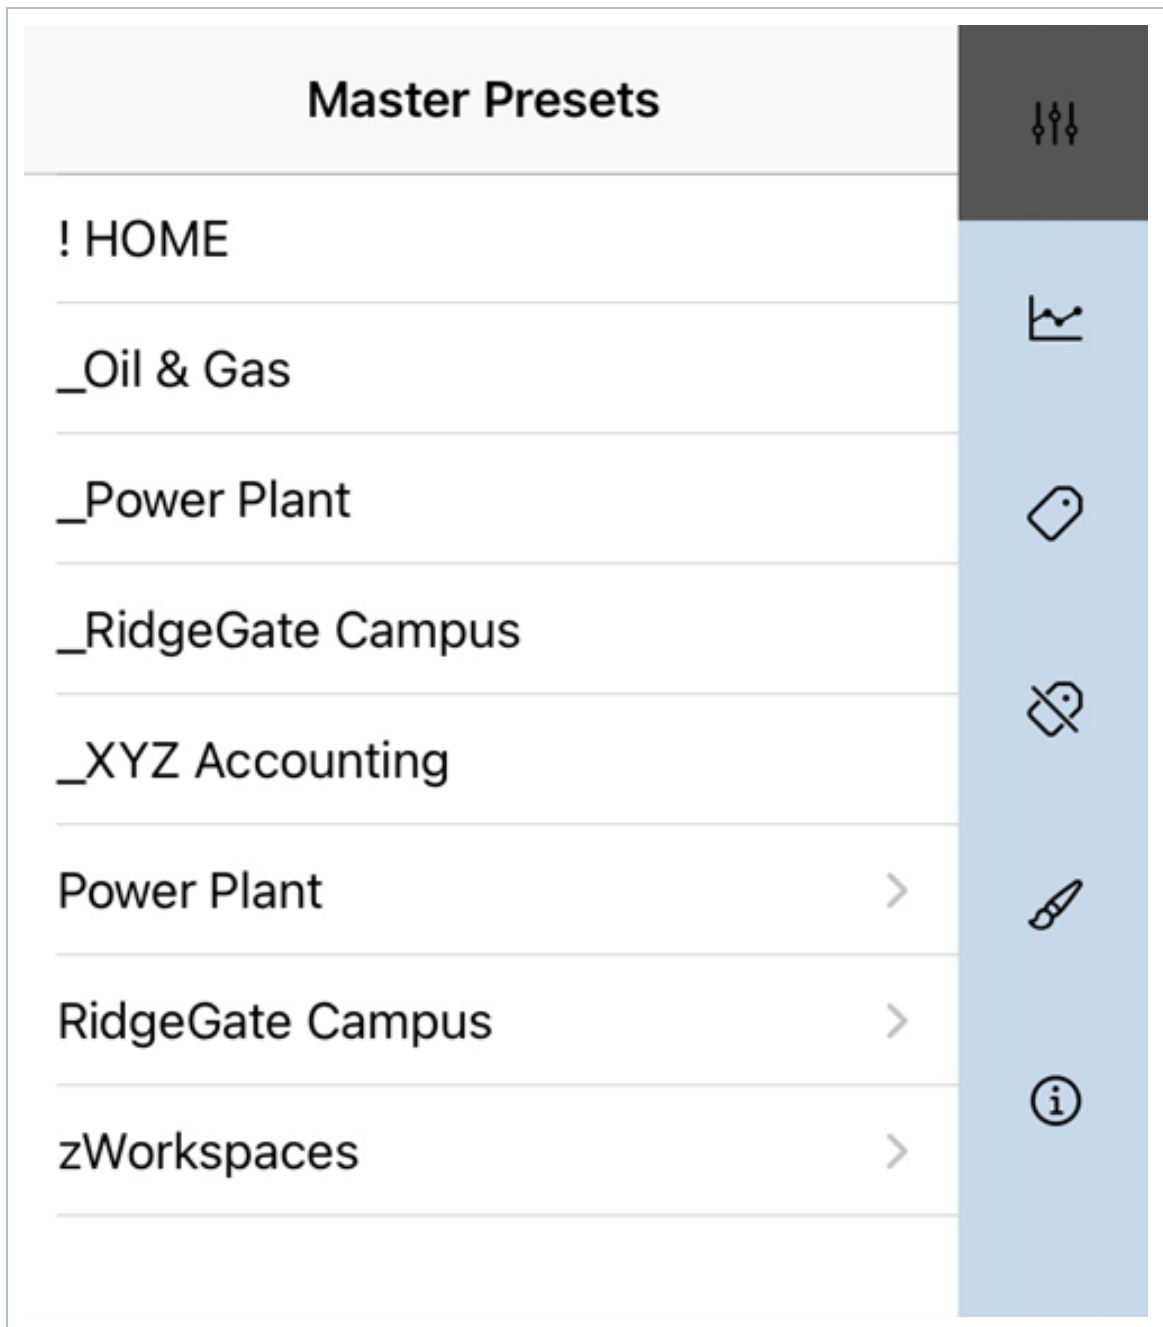

- **Elements** - Select objects that belong to the Element associated with the object being selected.
- **Tags** - Select objects that belong to the tag associated with the object being selected.
- **Parent** - Selects all objects belonging to the highest level.
- **Object** - Select the lowest level of an object.
- **Right navigation menu** - Find familiar model panels in the right vertical menu. [Read more](#)









1. **Master Presets** – Navigate between master presets defined in Model desktop.




2. **Model Streams** – Turn visibility on or off for model streams and groups.

Streams		
<input checked="" type="checkbox"/>	XYZ Accounting >	
<input checked="" type="checkbox"/>	RidgeGate Campus >	
<input checked="" type="checkbox"/>	Power Plant >	
<input checked="" type="checkbox"/>	Oil & Gas >	
<input checked="" type="checkbox"/>	Light Rail >	
		
		


3. **Tags** - You can navigate tag names and values and select associated model objects.

Tags	
00-CWA_PowerPlant >	
30_EstimatingTags_RidgeGate >	
70 - Activities - PowerPlant >	
70 - Activities - RidgeGate >	
CBS >	
Description >	
Material Name - CAD >	
Model_Stream >	
Name >	
Pipeline >	
PipeRun >	
Revit_Family_Type >	
Revit_Function >	
Spool >	
Tag_Level >	
Tag_PhysicalType >	





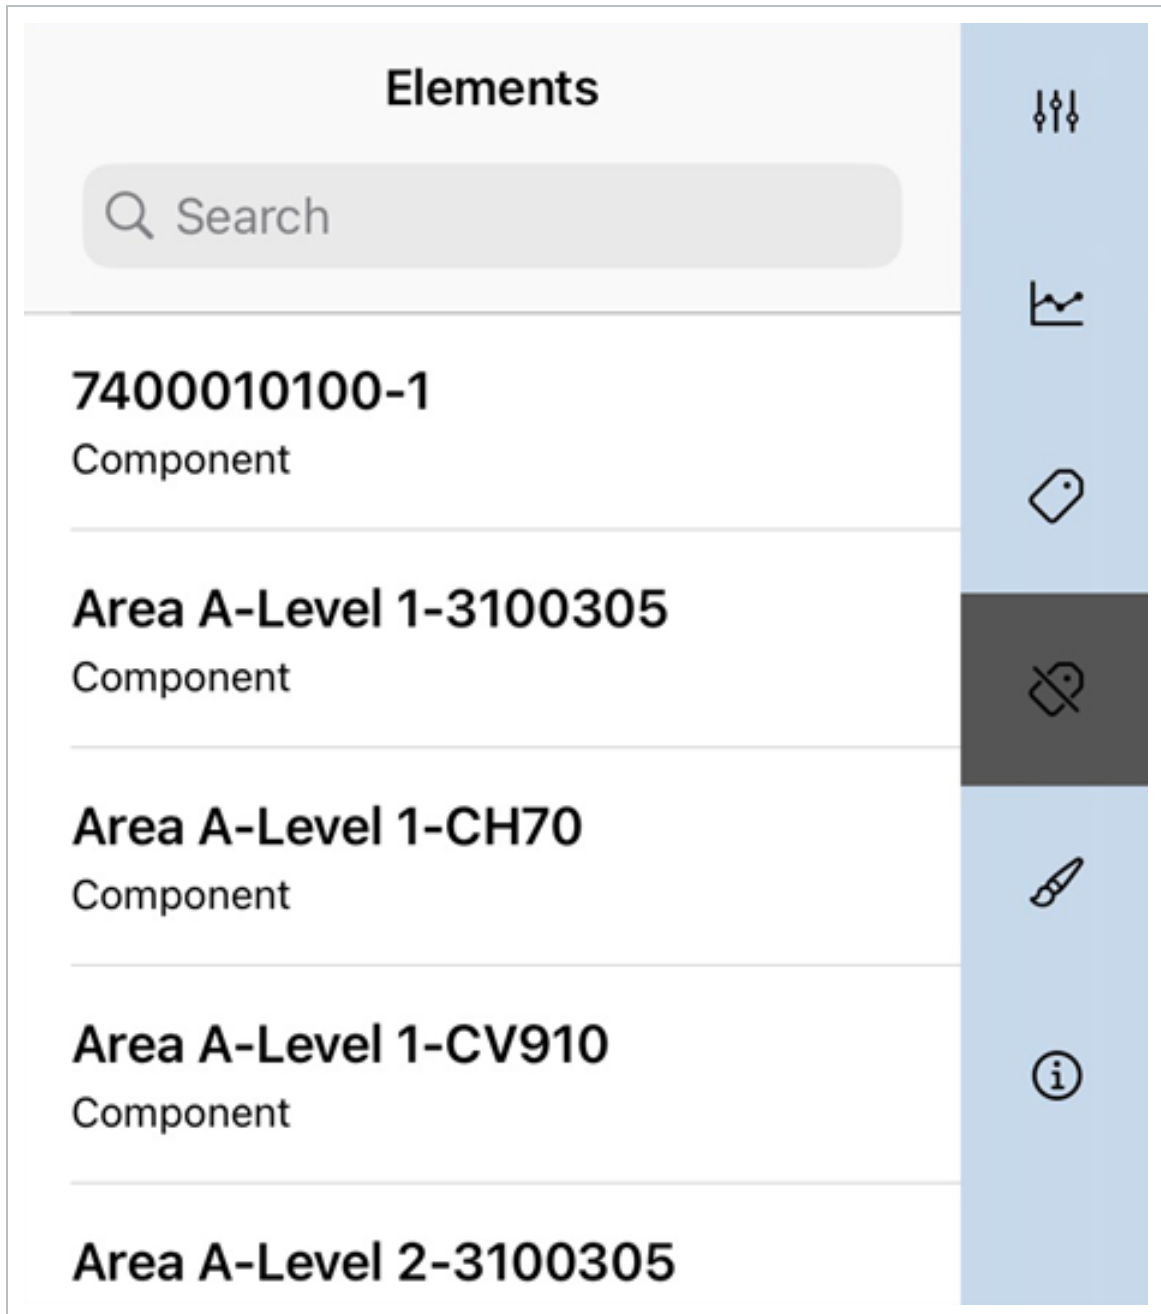

4. **Elements** - Navigate elements and select associated model objects.

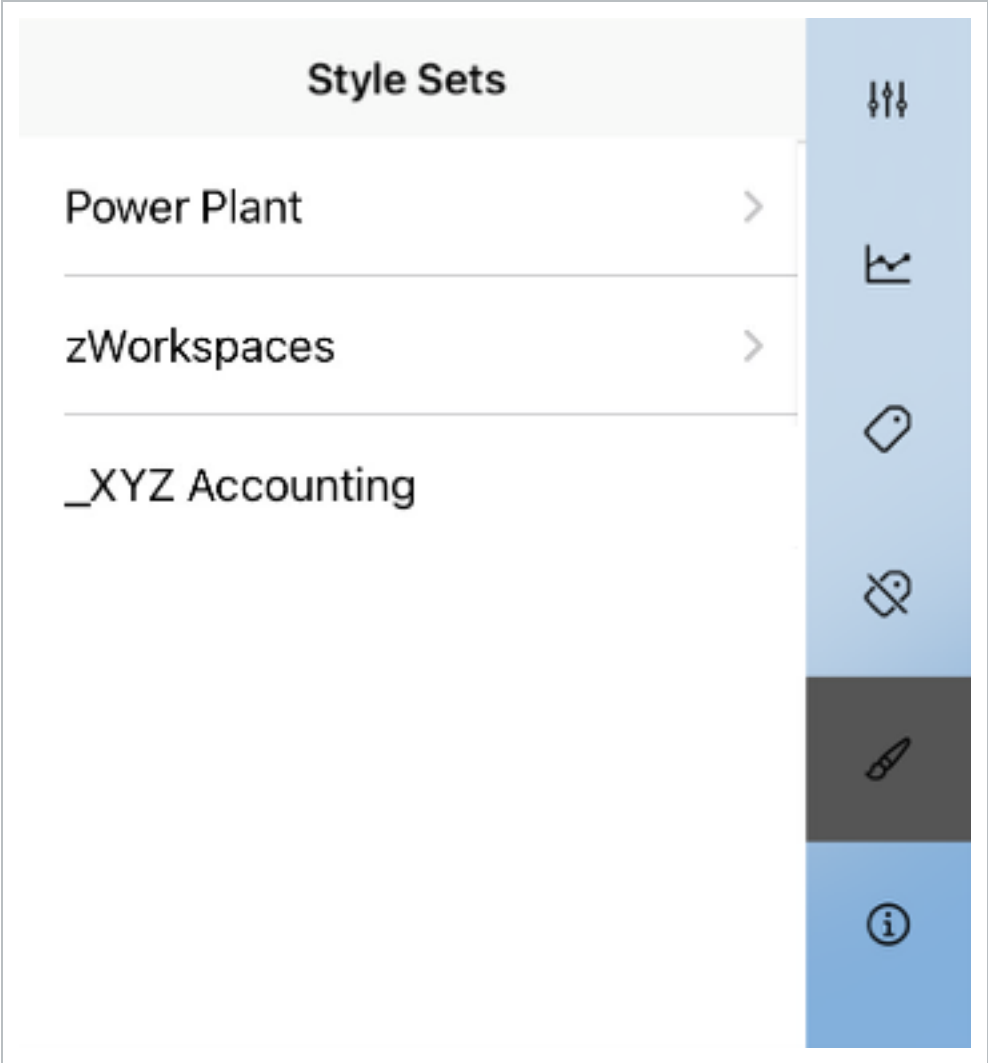

5. **Style sets** - Switch style sets to change how they visualize the model.



6. **Selection Info** - Shows attribute data of actively selected model objects.

Selection Info		
Constraints		
Base Offset	1.0	
Construction		
SMOKE	No	
Wrapping at Ends	None	
Fire Rating In Hours	0	
Wrapping at Inserts	Do not wrap	
Sound Insulation	No	
Function	Exterior	
Width	0.9	
Structure	Unknown Parameter StorageType	

16.2.1 Considerations

You only see projects that you have permission to access.